



STEP 1

WITH SOMEONE'S HELP, PLACE THE COVER ON A FLAT SURFACE AND POSITION THE LEGS TO ALIGN WITH THE HOLES.

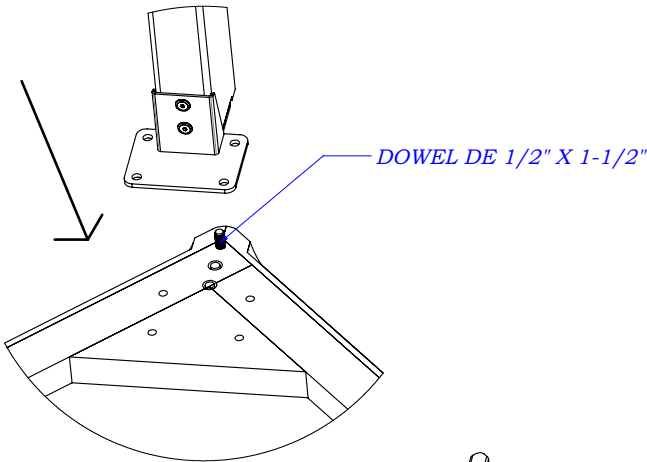


DETAIL A

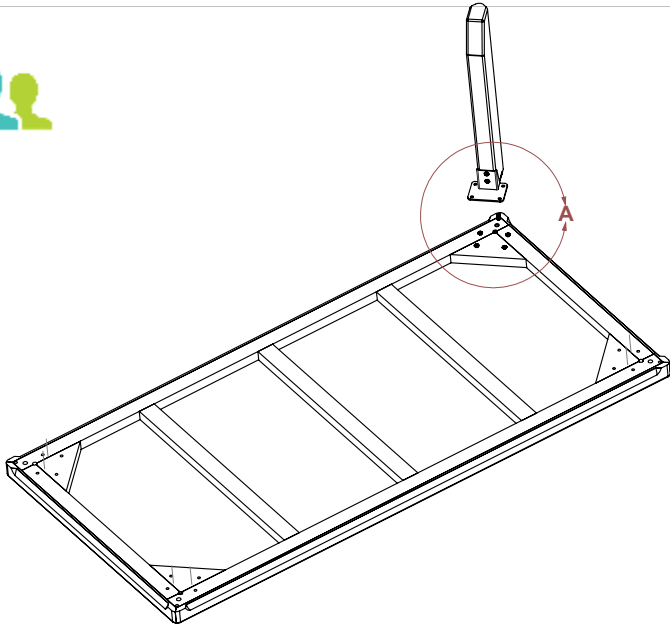


STEP 2

PLACE THE 1/2" X 1-1/2" BOLTS ON THE COVER AND ALIGN THE LEG WITH METALWORK IN THE HOLES SHOWN IN DETAIL [A].

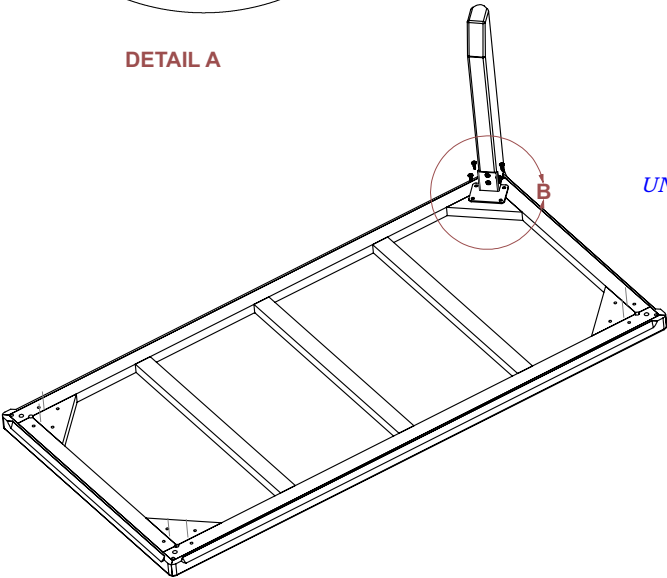

UNION SCREW 1/4" X 3/4"

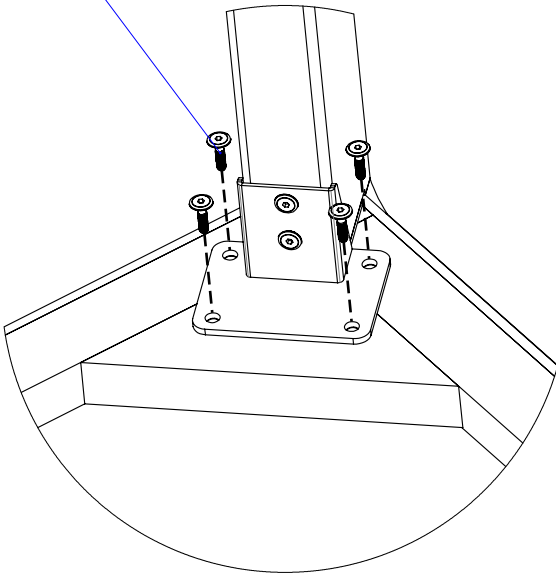

DETAIL B

STEP 3

INSERT THE SCREWS, ALIGNING THE HOLES WITH THE SCREW AS SHOWN IN FIGURE B, THEN REPEAT THE PROCESS FOR THE OTHER 3 REMAINING LEGS

STEP 4

WITH SOMEONE'S HELP, TURN THE TABLE OVER AND PLACE IT IN THE DESIRED LOCATION, AND IT'S READY.



ASSEMBLY
INSTRUCTIONS

I-TBL-E028

DESCRIPTION	#
DOWEL 1/2" X 1-1/2"	4
UNION SCREW 1/4" X 3/4"	16
ALLEN KEY 5/32"	1