


UTTERMOST

ASSEMBLY INSTRUCTIONS

Assembly Instruction STYLE NO:22999

- 1.Take the parts carefully out of the carton, and place it on a flat surface,make sure that the parts will not be damaged.
- 2.Screw the metal rod (B) onto the top of (C)base assembly.
- 3.Screw the (A) table top onto the top of the(B)metal rod.

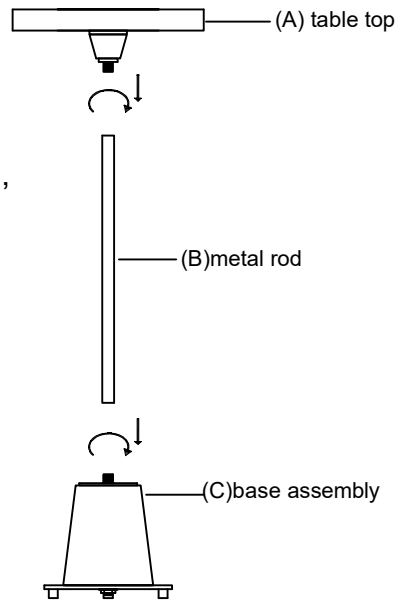


PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT,VIRGINIA 24151
www.uttermost.com

UTTERMOST

ASSEMBLY INSTRUCTIONS

Assembly Instruction STYLE NO:22999

- 1.Take the parts carefully out of the carton, and place it on a flat surface,make sure that the parts will not be damaged.
- 2.Screw the metal rod (B) onto the top of (C)base assembly.
- 3.Screw the (A) table top onto the top of the(B)metal rod.

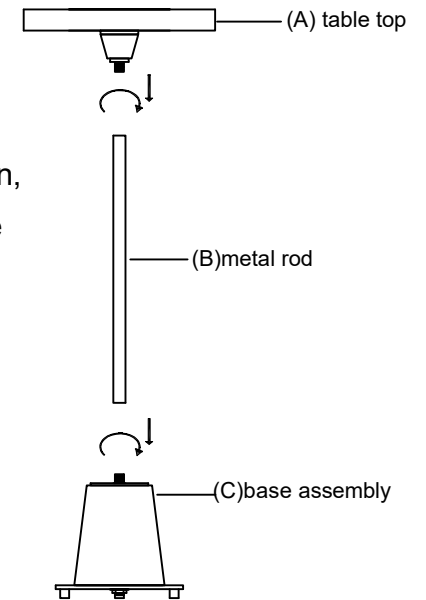

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT,VIRGINIA 24151
www.uttermost.com