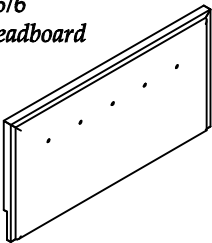

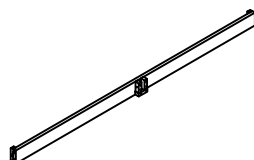

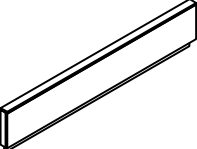
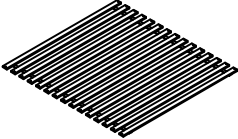













Hardware and Parts packed with the Headboard




58088 6/0-6/6 Uph/Pnl Headboard  (H-A) 1 pc.			Headboard Post  (H-B) One Left & One Right			Headboard Stretcher  (H-C) 1 pc.		
Ø5/16" x 2" Allen Head Bolt  (H-D) 6 pcs.	Ø5/16" x Ø12mm Spring Washer  (H-E) 6 pcs.	Ø5/16" x Ø19mm Flat Washer  (H-F) 6 pcs.	Ø1/4" x 1-1/2" Allen Head Bolt  (H-G) 2 pcs.	Ø1/4" x Ø10mm Spring Washer  (H-H) 2 pcs.	Ø1/4" x Ø16mm Flat Washer  (H-I) 2 pcs.	M4 x 2"-1/2 Allen key  (H-J) 1 pc.	M4 x 4" Straight Allen key  (H-J2) 1 pc.	

Hardware and Parts packed with the Footboard

58081 6/0-6/6 Panel Footboard & Slats  (F-A) 1 pc.		6/6 Roll Slat 76-7/8" long  (F-B) 15 pcs.		Slat Support Leg  (F-C) 1 pc.		Center Slat  (F-D) 2 pcs.		Ø1/4" x 2" Allen Head Bolt  (F-E) 2 pcs.	Ø1/4" x 1-1/2 Allen Head Bolt  (F-F) 2 pcs.	Ø1/4" x Ø10mm Spring Washer  (F-G) 4 pcs.
				Ø1/4" x Ø16 Flat Washer  (F-H) 4 pcs.	M4 x 2-1/2 Allen Key  (F-I) 1 pc.	M4 x 4" Straight Allen key  (F-J) 1 pc.	Ø4 x 30mm Wood Screw  (F-K) 32 pcs.			

Hardware and Parts packed with the Bed Rails

58083 6/0 Storage Rail 1In Top Crown  (R-A) 1 pc.	Ø5/16" x 3" Long Bolt  (R-B) 4 pcs.	Arc Washer 37*17mm  (R-C) 4 pcs.	Nut Ø5/16"-18mm  (R-D) 4 pcs.	12 mm Open Wrench  (R-E) 1 pc.	Ø1/4" x 2" Allen Head Bolt  (R-F) 7 pcs.	Ø1/4" x Ø10mm Spring Washer  (R-G) 7 pcs.	Ø1/4" x Ø16mm Flat Washer  (R-H) 7 pcs.	M4 x 2-1/2" Allen key  (R-I) 1 pc.	M4 x 4" Straight Allen key  (R-J) 1 pc.
58084 6/0 Panel Rail 1In Top Crown  (R-A2) 1 pc.	Ø5/16" x 3" Long Bolt  (R-B) 4 pcs.	Arc Washer 37*17mm  (R-C) 4 pcs.	Nut Ø5/16"-18mm  (R-D) 4 pcs.	12 mm Open Wrench  (R-E) 1 pc.	Ø1/4" x 2" Allen Head Bolt  (R-F) 7 pcs.	Ø1/4" x Ø10mm Spring Washer  (R-G) 7 pcs.	Ø1/4" x Ø16mm Flat Washer  (R-H) 7 pcs.	M4 x 2-1/2" Allen key  (R-I) 1 pc.	M4 x 4" Straight Allen key  (R-J) 1 pc.
58082 6/0 Panel Rails 2In Top Crown  (R-A3) 2 pcs.	Ø5/16" x 3" Long Bolt  (R-B) 8 pcs.	Arc Washer 37*17mm  (R-C) 8 pcs.	Nut Ø5/16"-18mm  (R-D) 8 pcs.	12 mm Open Wrench  (R-E) 1 pc.	Ø1/4" x 2" Allen Head Bolt  (R-F) 14 pcs.	Ø1/4" x Ø10mm Spring Washer  (R-G) 14 pcs.	Ø1/4" x Ø16mm Flat Washer  (R-H) 14 pcs.	M4 x 2-1/2" Allen key  (R-I) 1 pc.	M4 x 4" Straight Allen key  (R-J) 1 pc.
58073 -- 5/0-6/6 Storage Rail 1In  (R-A4) 1 pc.	Ø5/16" x 3" Long Bolt  (R-B) 4 pcs.	Arc Washer 37*17mm  (R-C) 4 pcs.	Nut Ø5/16"-18mm  (R-D) 4 pcs.	12 mm Open Wrench  (R-E) 1 pc.	6/0-6/6 King Standard Bed 58088 -- 6/0-6/6 Uph/Pnl Headboard 58081 -- 6/0-6/6 Panel Footboard&Slats 58072-- 5/0-6/6 Panel Rails 2In 58073 -- 5/0-6/6 Storage Rail 1In 58074 -- 5/0-6/6 Panel Rail 1In 58082 -- 6/0 Panel Rails 2In 58083 -- 6/0 Storage Rail 1In 58084 -- 6/0 Panel Rail 1In				
58074 -- 5/0-6/6 Panel Rail 1In  (R-A5) 1 pc.	Ø5/16" x 3" Long Bolt  (R-B) 4 pcs.	Arc Washer 37*17mm  (R-C) 4 pcs.	Nut Ø5/16"-18mm  (R-D) 4 pcs.	12 mm Open Wrench  (R-E) 1 pc.					
58072-- 5/0-6/6 Panel Rails 2In  (R-A6) 2 pcs.	Ø5/16" x 3" Long Bolt  (R-B) 8 pcs.	Arc Washer 37*17mm  (R-C) 8 pcs.	Nut Ø5/16"-18mm  (R-D) 8 pcs.	12 mm Open Wrench  (R-E) 1 pc.					

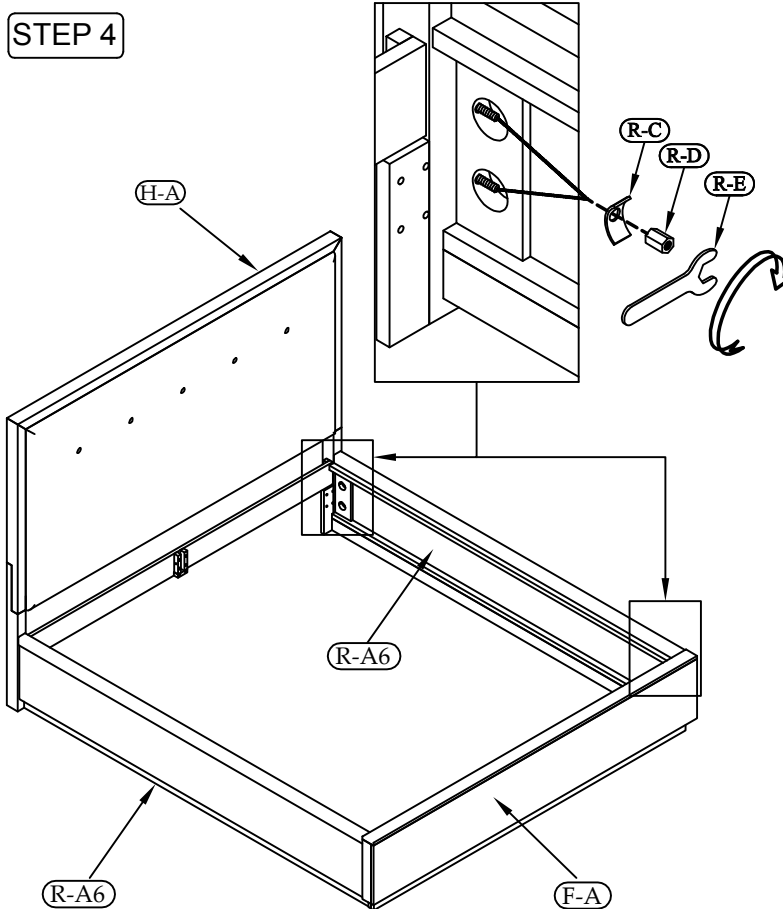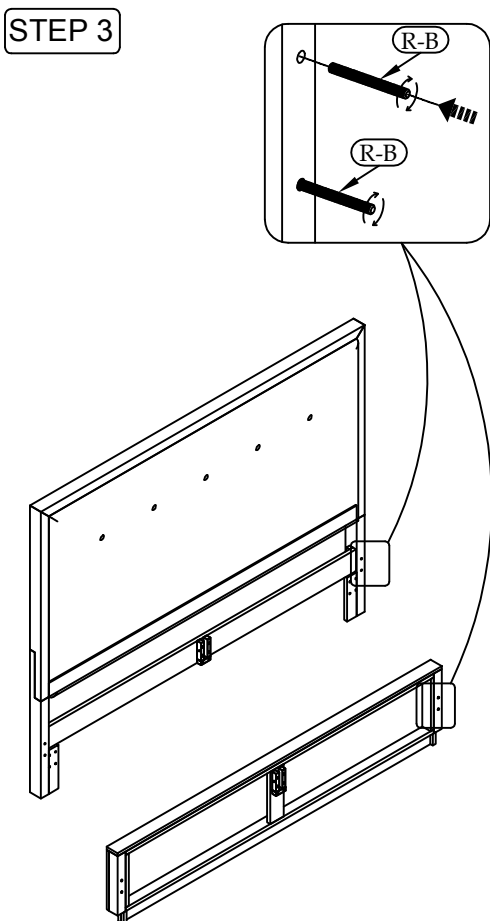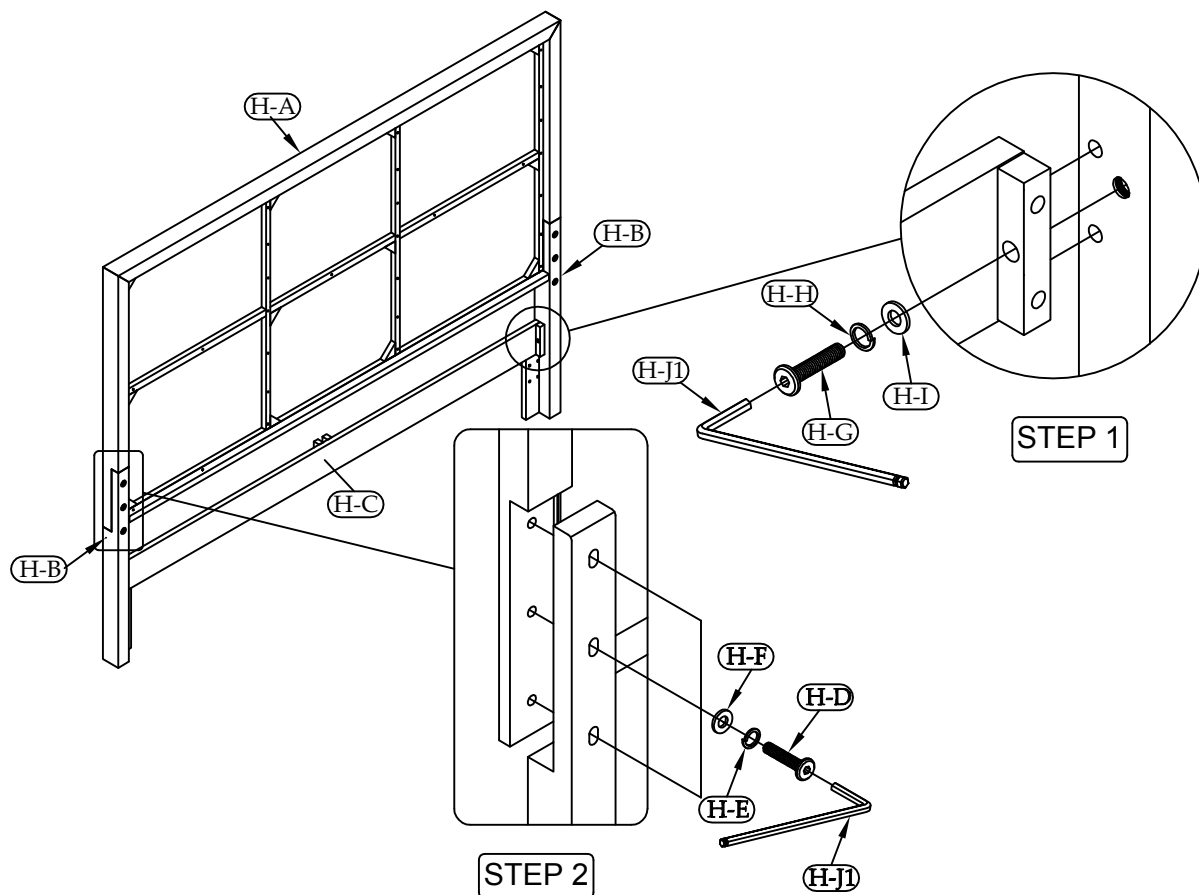


6/0-6/6 King Standard Bed

58088 -- 6/0-6/6 Uph/Pnl Headboard


58081 -- 6/0-6/6 Panel Footboard & Slats

58072-- 5/0-6/6 Panel Rails 2In


58082 -- 6/0 Panel Rails 2In

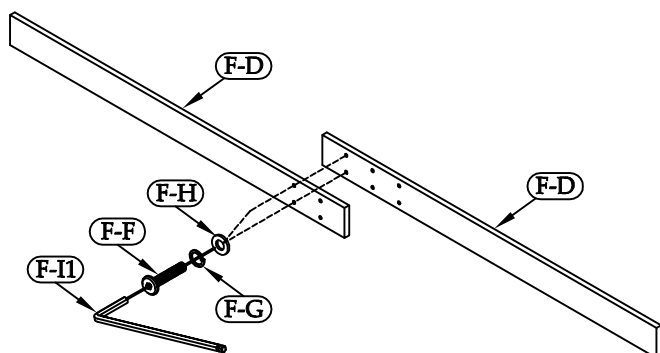

STEP 5

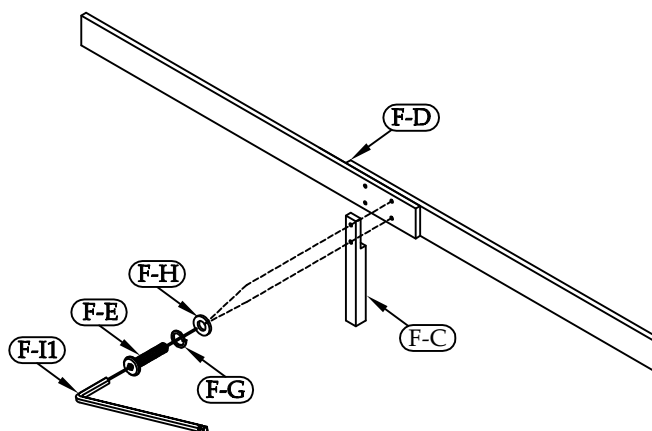


STEP 6

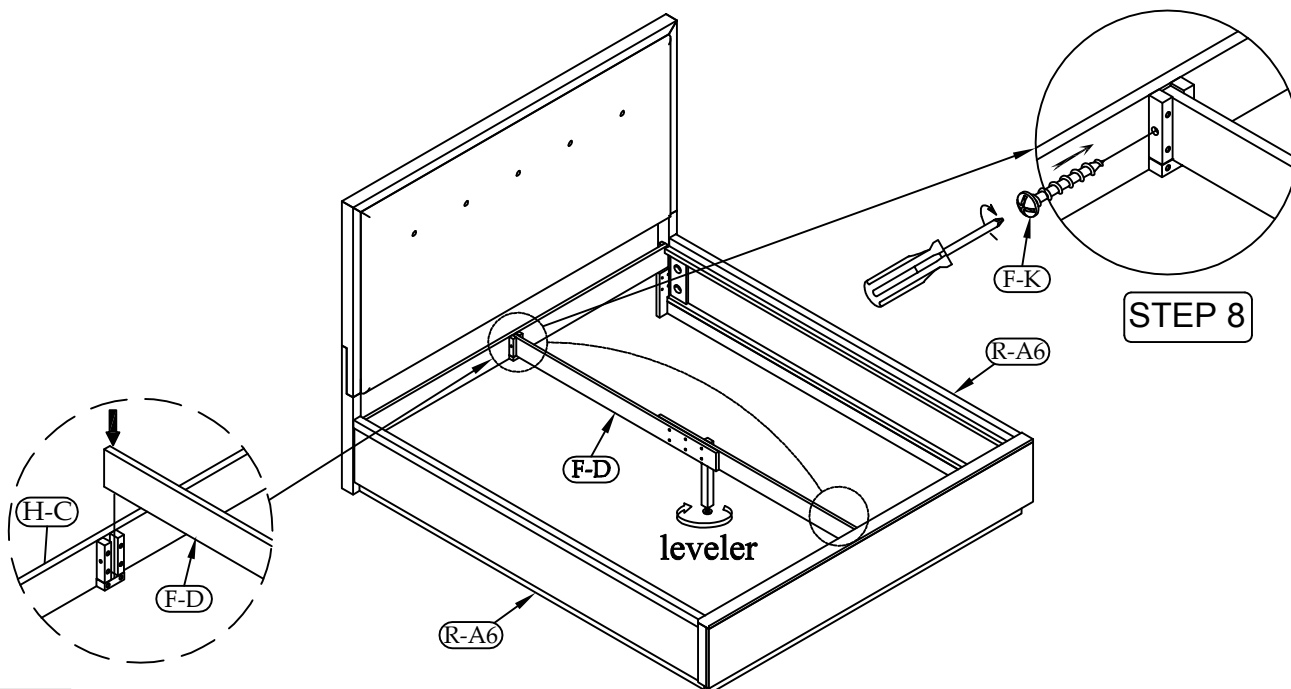


STEP 7

STEP 8

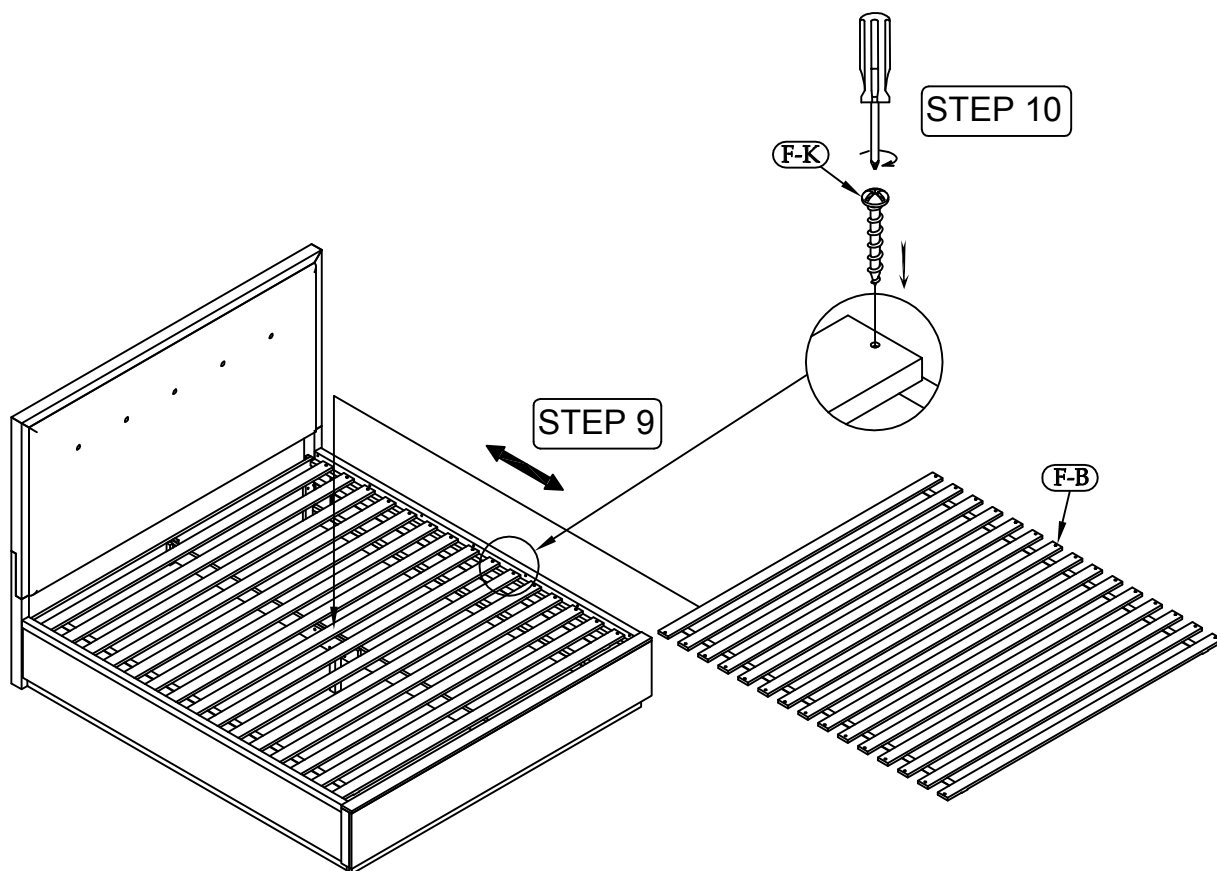

Only use this step for 58082 -- 6/0 Panel Rails 2In

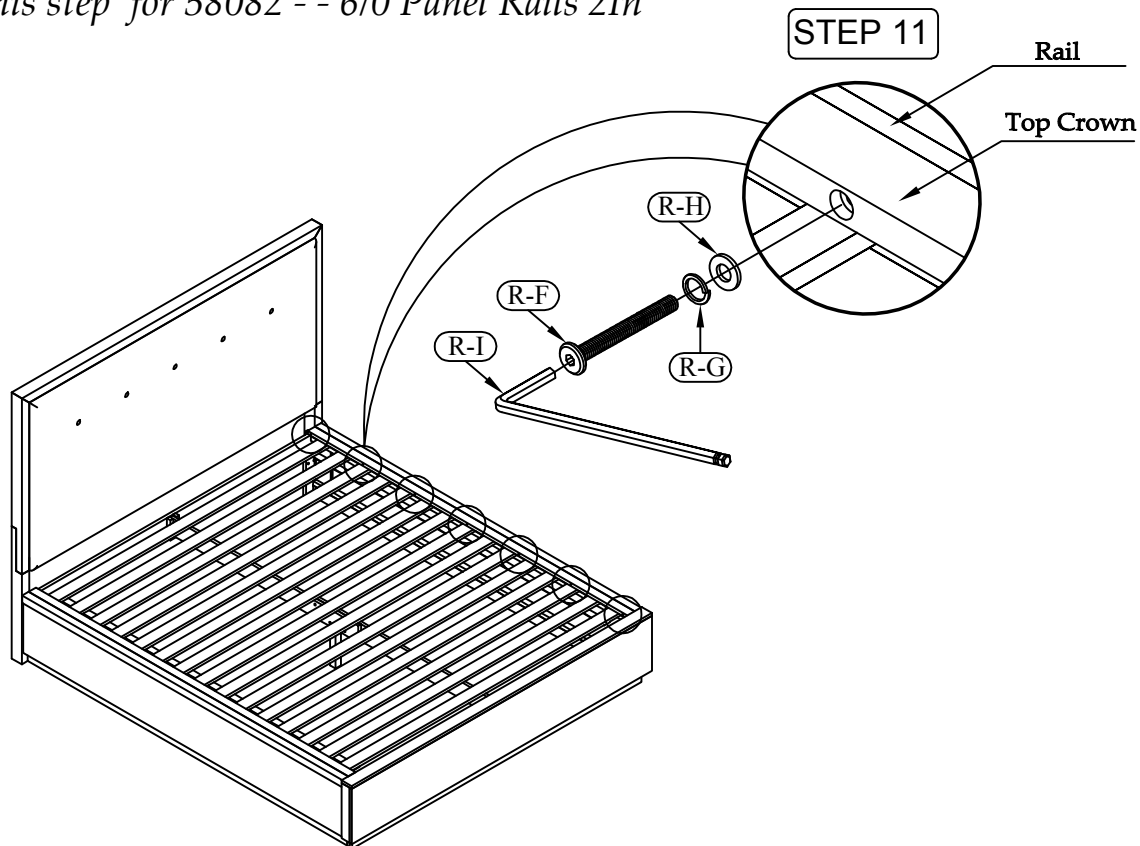

6/0-6/6 King Standard Bed

58088 -- 6/0-6/6 Uph/Pnl Headboard


58081 -- 6/0-6/6 Panel Footboard & Slats


58073 -- 5/0-6/6 Storage Rail 1In

58074 -- 5/0-6/6 Panel Rail 1In


58083 -- 6/0 Storage Rail 1In

58084 -- 6/0 Panel Rail 1In

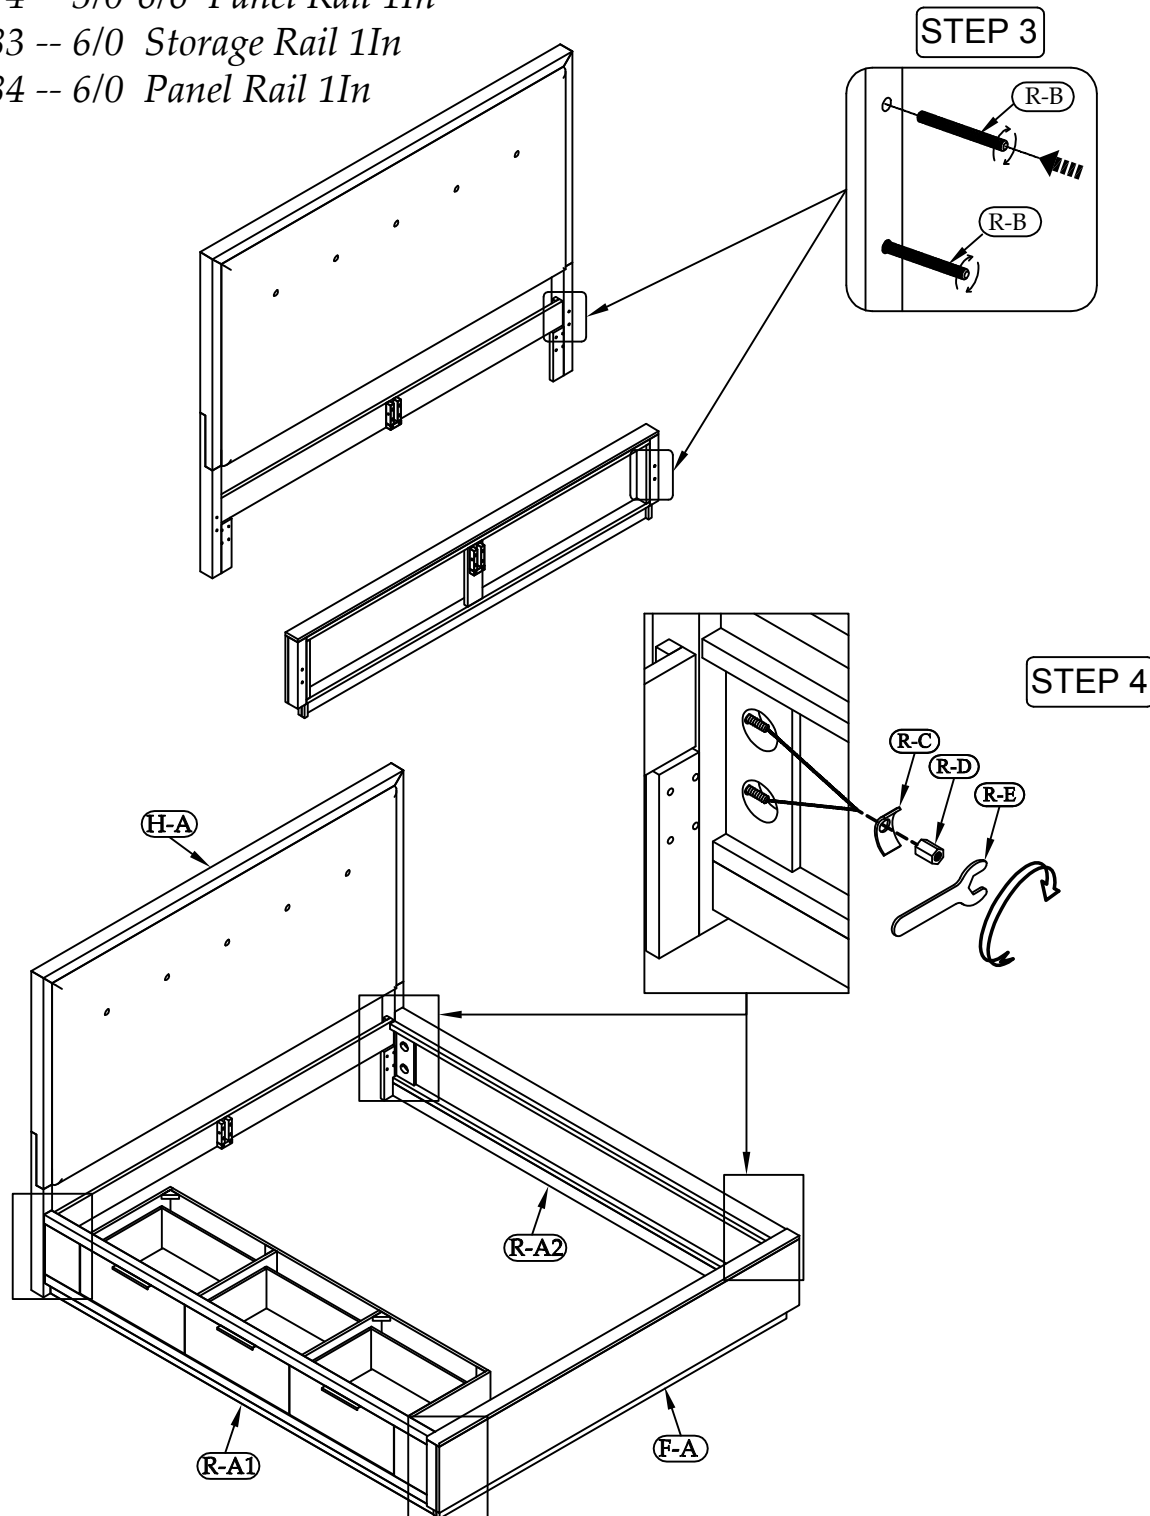


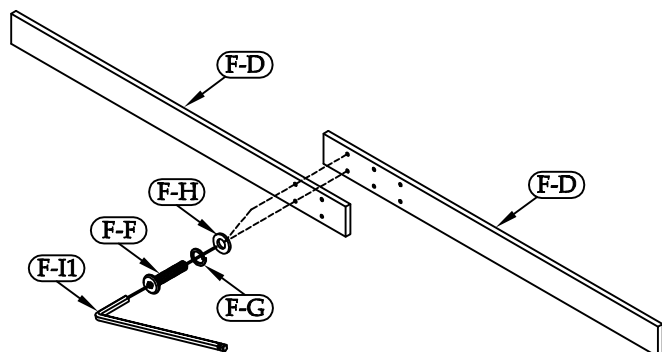

STEP 5

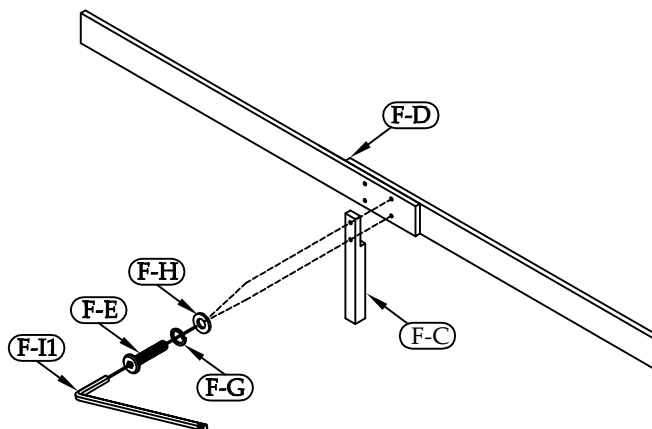


STEP 6

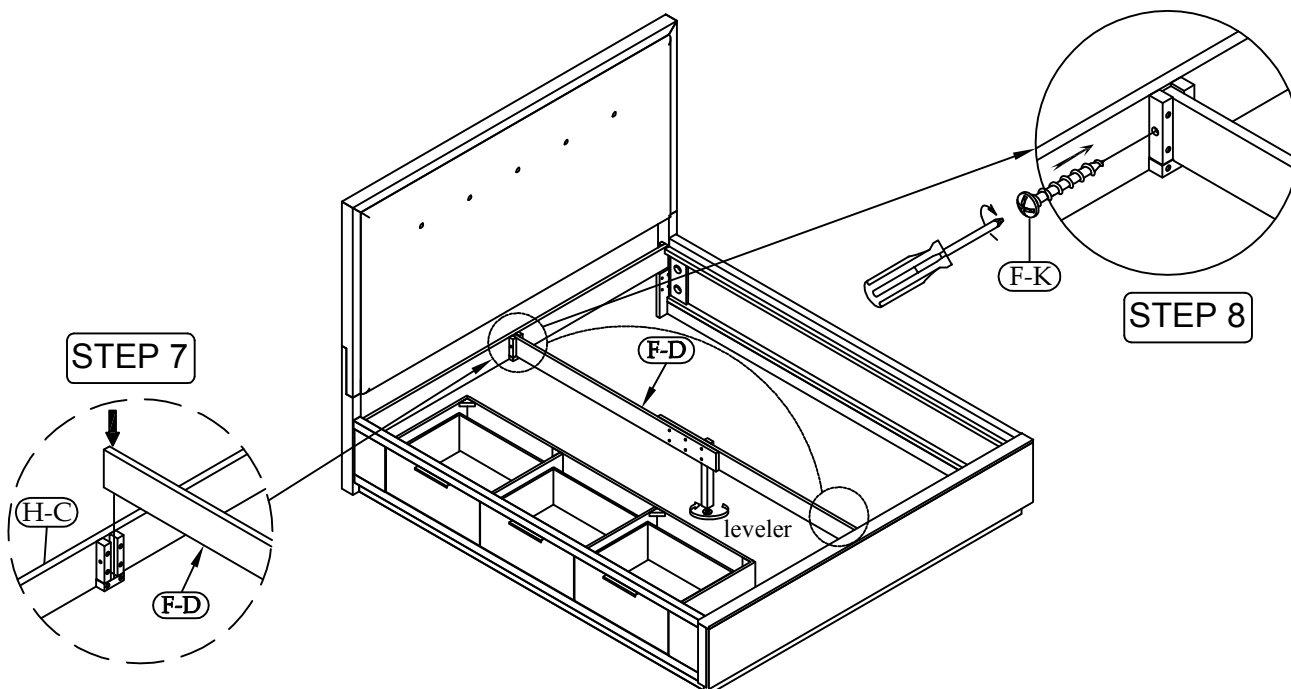


STEP 7


STEP 8

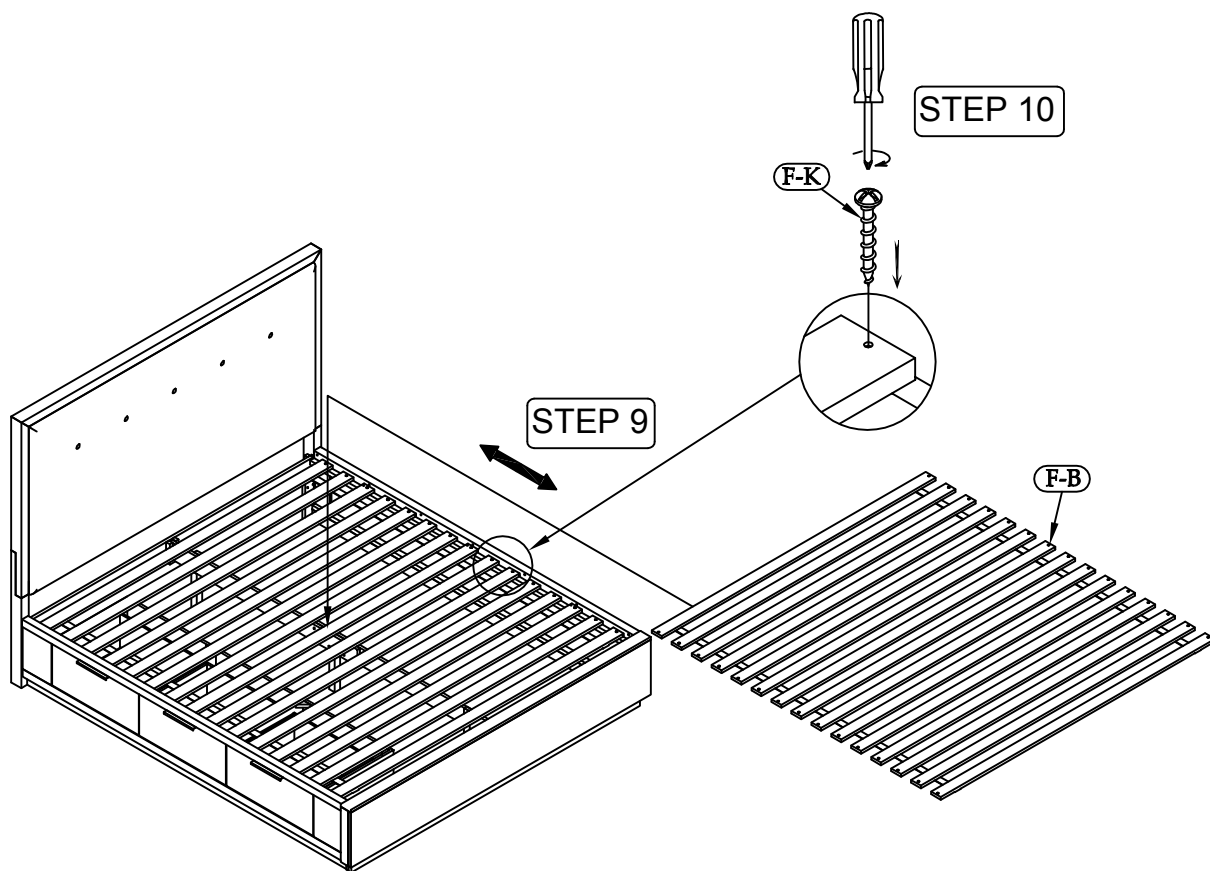

*Only use this step for: 58083 -- 6/0 Storage Rail 1In
58084 -- 6/0 Panel Rail 1In*

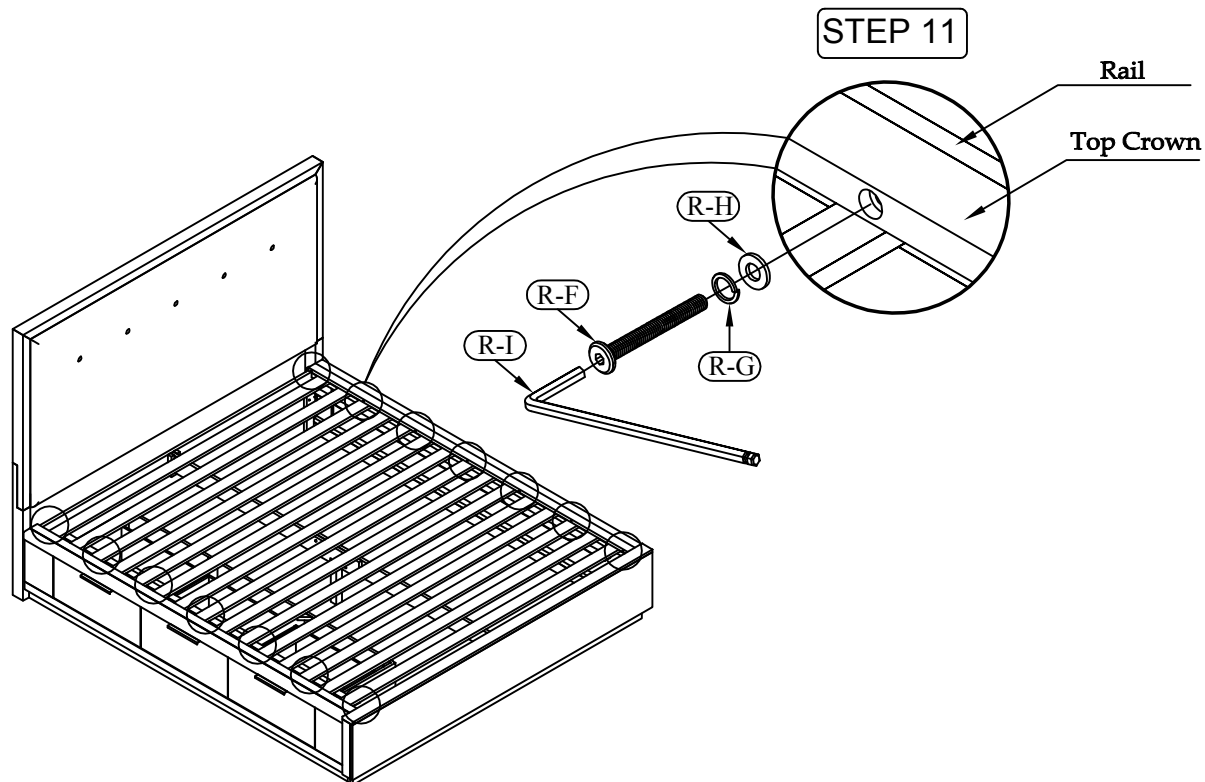

*6/0-6/6 King Standard Bed
58088 -- 6/0-6/6 Uph/Pnl Headboard*

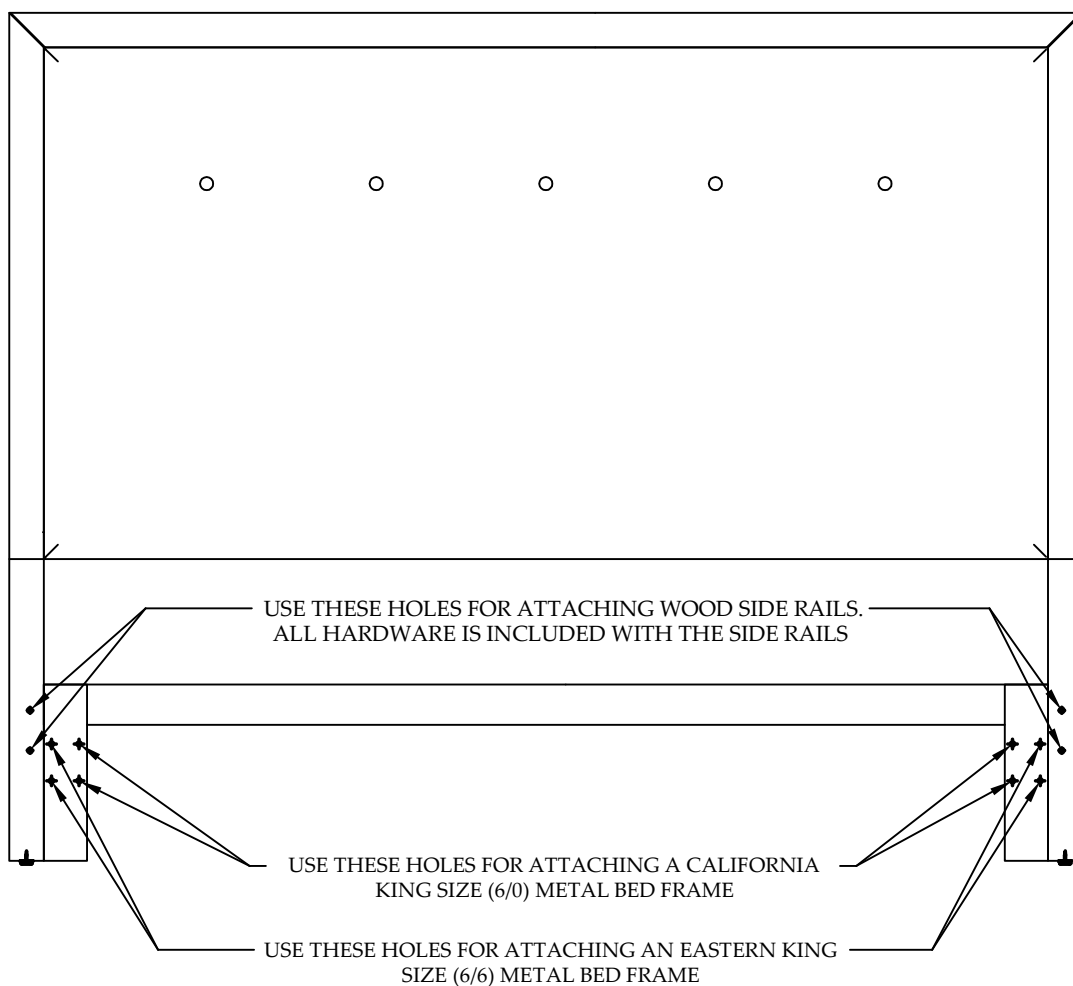

USE THESE HOLES FOR ATTACHING AN EASTERN KING
SIZE (6/6) METAL BED FRAME

CUSTOMER TO PROVIDE 5/16 X 1-1/2" LONG BOLTS, NUTS
& WASHERS TO CONNECT THE METAL BED FRAME