

ASSEMBLY INSTRUCTIONS

DESCRIPTION : KING BED HEADBOARD, FOOTBOARD
AND SLATS / QUEEN BED / KING BED SIDE RAILS

MODEL : CYPRESS-DARK GREY-KB-HB/FB/
SLATS + CYPRESS- DARK GREY-
QB/KB-SR + CYPRESS-DARK
GREY-TW/ FB/QB/KB-LEGS

REVISION : A

NOTE :

MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL
BECOME LOOSE. CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

Component List

Headboard & Footboard

No	Descriptions	Qty
A	Headboard Panel	1
B	Footboard Panel	1

Component List

Post set









No	Descriptions	Qty
C	Headboard Post (L/R)	2


Component List

Side Rail

No	Descriptions	Qty
D	Side Rail	2
E	Slat	4
F	Slat Support	8



Hardware List In Headboard & Footboard

No	Descriptions	Qty
1	Wood Dowel 10mm x 30mm 	4
2	JCBC Screw M6 x 35mm 	6
3	Spring Washer Ø1/4" 	6
4	Flat Washer Ø1/4" x 20mm 	6
5	L Key M4 x 100mm 	1
6	L Key M5 	1
7	CSK M4 x 32mm 	8
8	Dc Adapter 	1

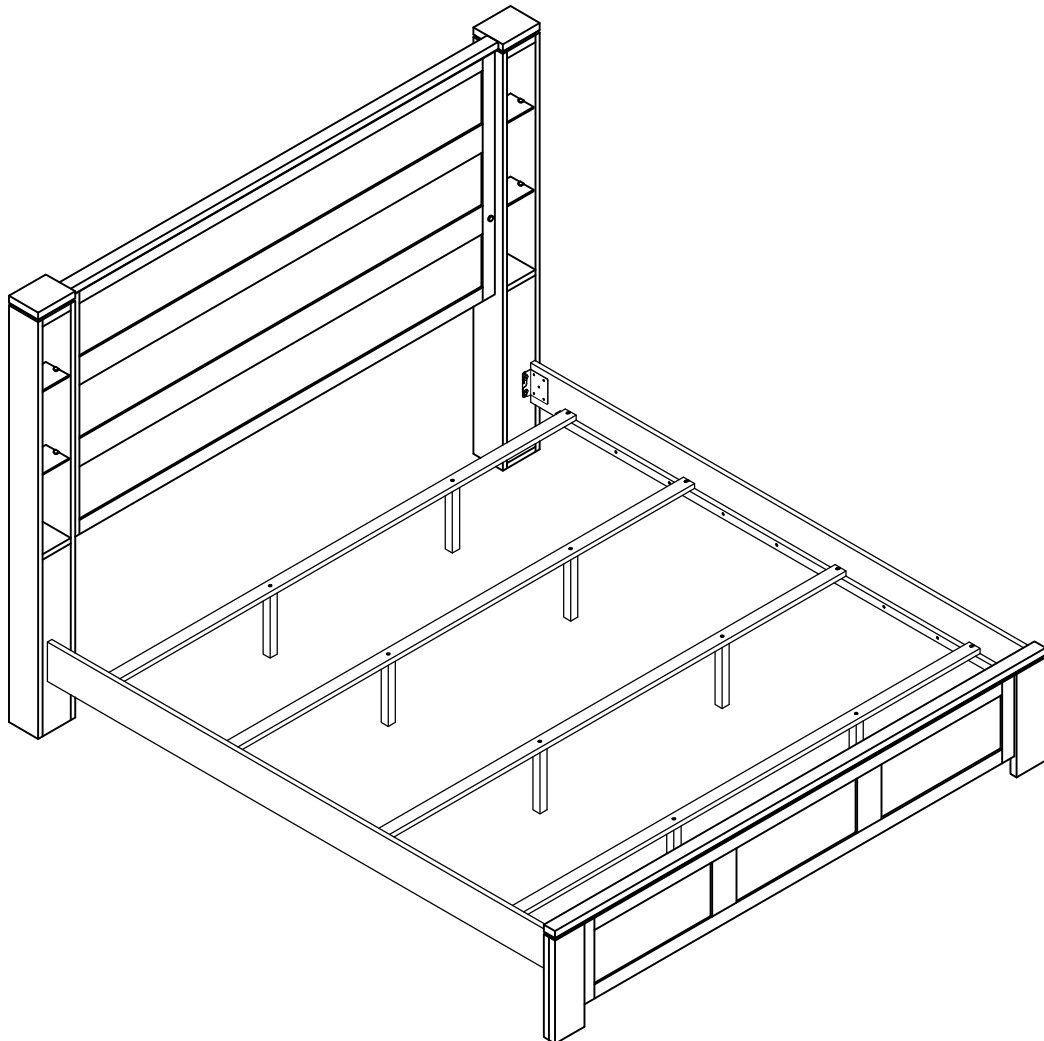



ASSEMBLY INSTRUCTIONS

STEP 1 : Insert wood dowel (1) to the pre-drilled hole of headboard panel (A) and fix with the headboard post (C) by using JCBC Screw M6 x 35mm (2), springwasher (3) and flat washer (4) through the pre-drilled hole of headboard panel (A) then tighten by using Allen key (5).

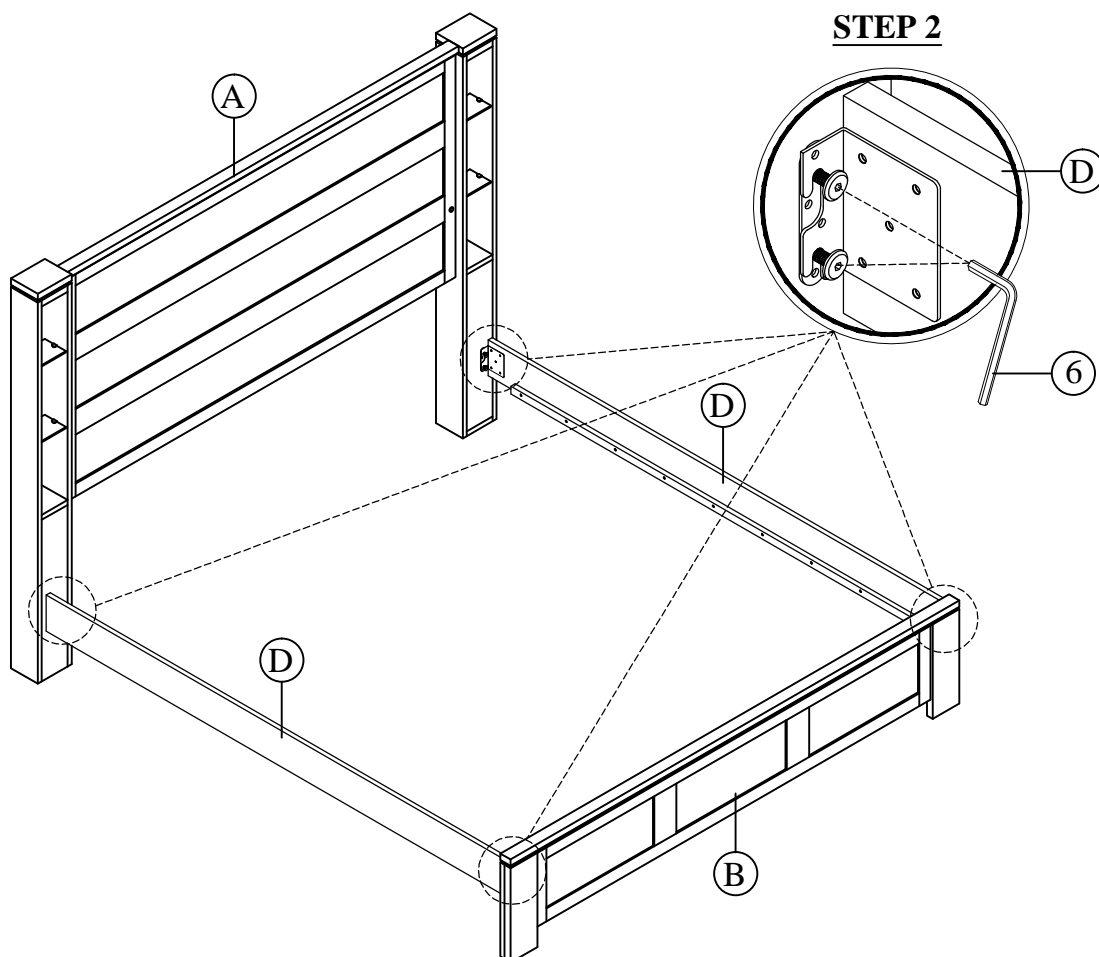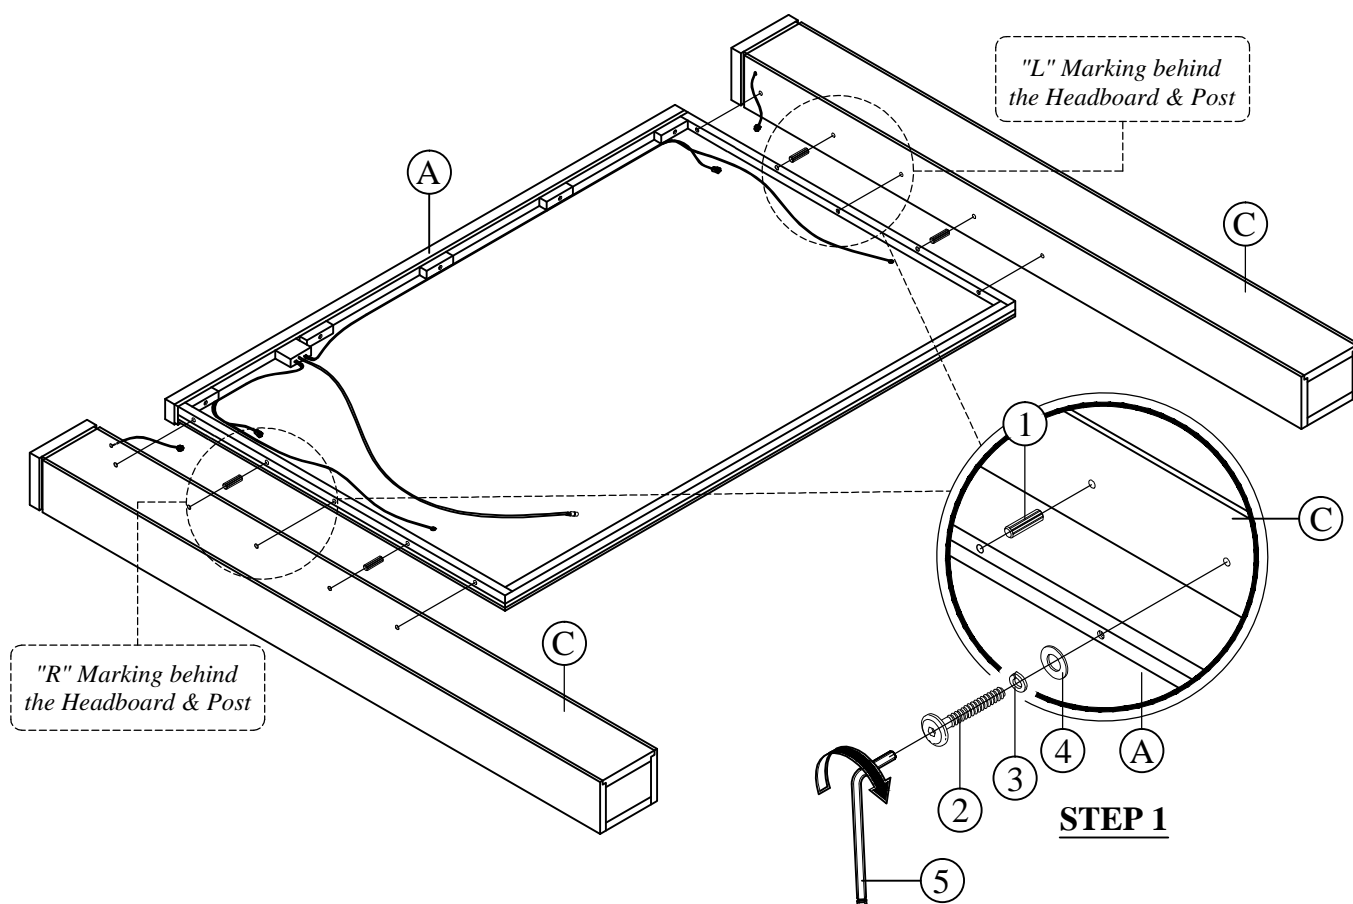




ASSEMBLY INSTRUCTIONS

STEP 3

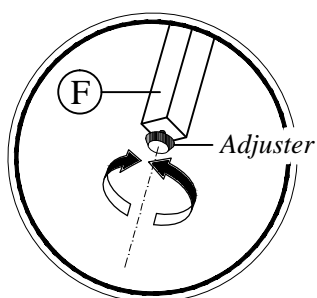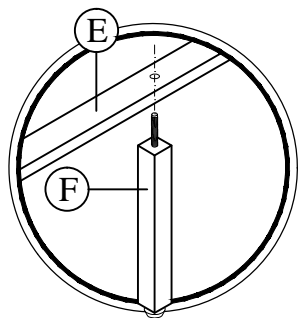


STEP 5

STEP 4

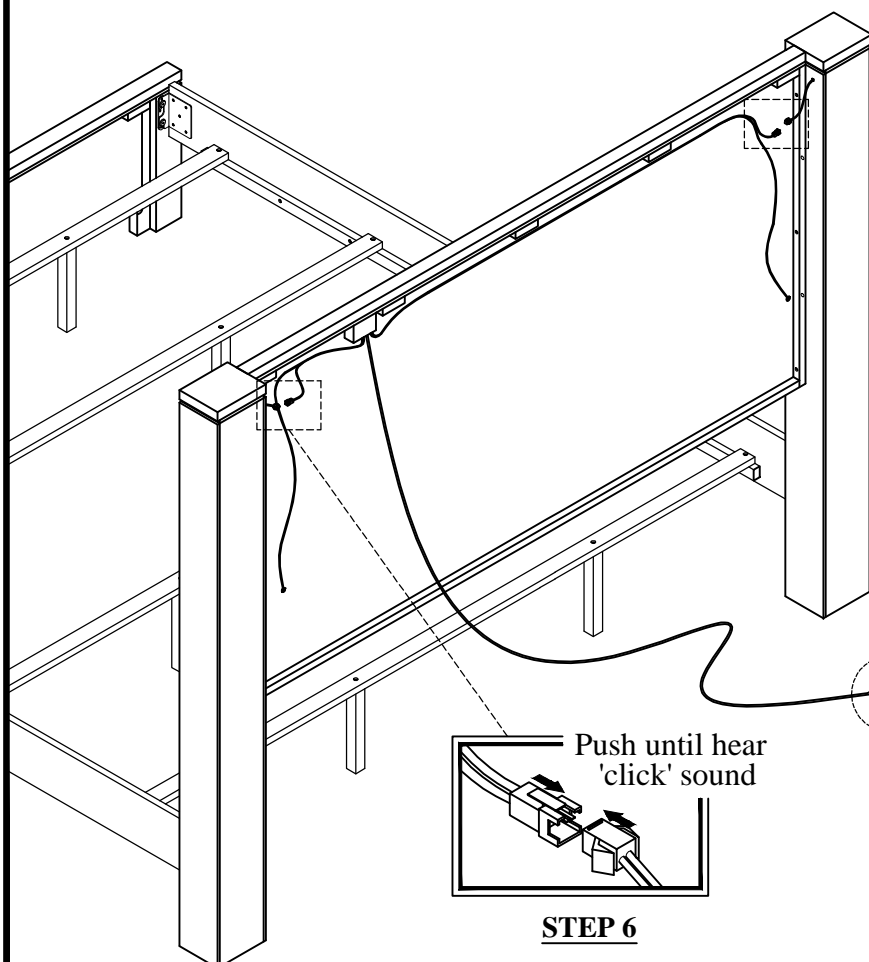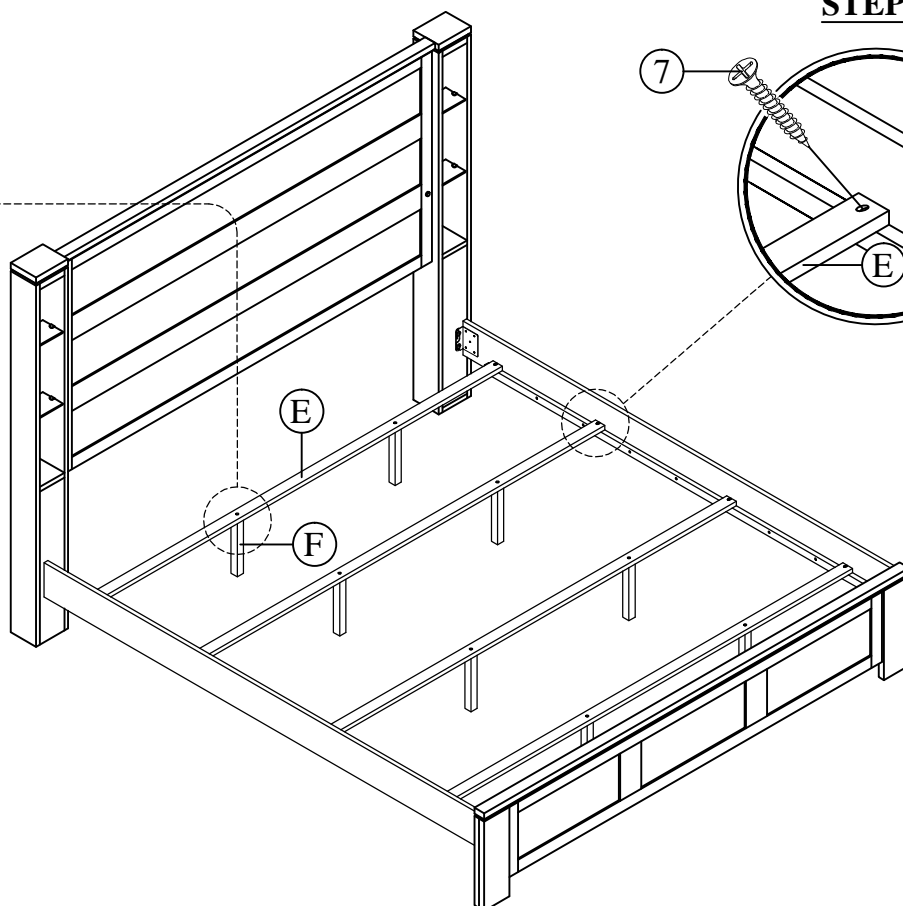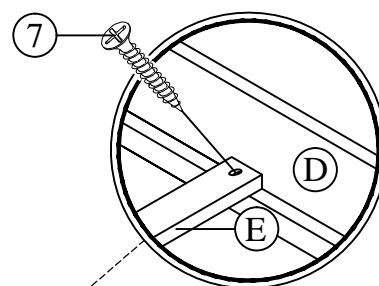


Incoming power head

Connect the sensor box with DC adapter before the power supply is turn on.

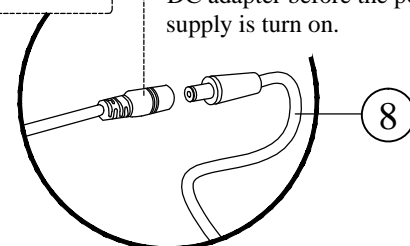

STEP 7

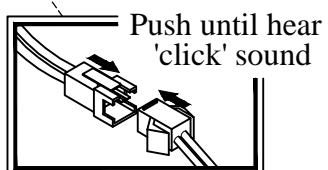

STEP 6

Warning !

Caution ! : Please do not touch the chrome button with wet hand.