


Product Assembly Instructions Insert Factory Item # LCMQDIGR

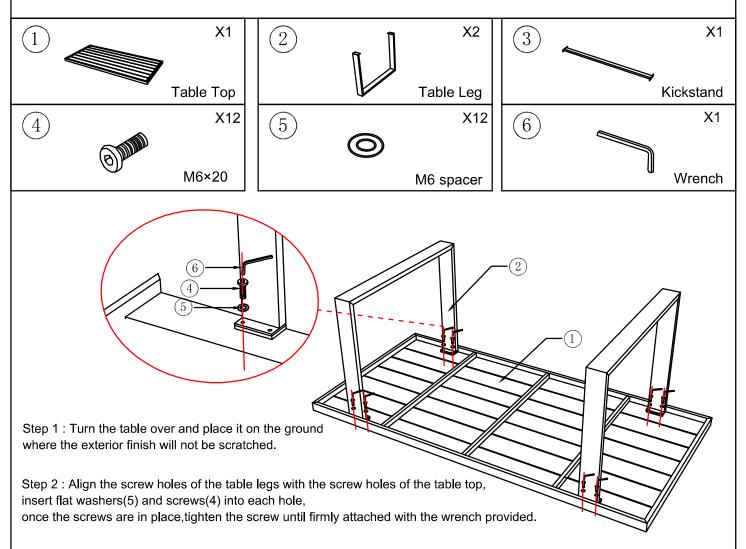

Step 3: Insert the flat washer (5) and screw (4) into each hole, and then install the Kickstand.

