


ASSEMBLY INSTRUCTION

INSTRUCCIONES


HARDWARE LIST:

NO.	SKETCH	DESCRIPTION	Q'ty
A		Bolt with washer $\Phi 5/16" \times 2"$	24 PCS
B		ALLEN WRENCH 1/4"	1PC

STEP 1 : PASO 1

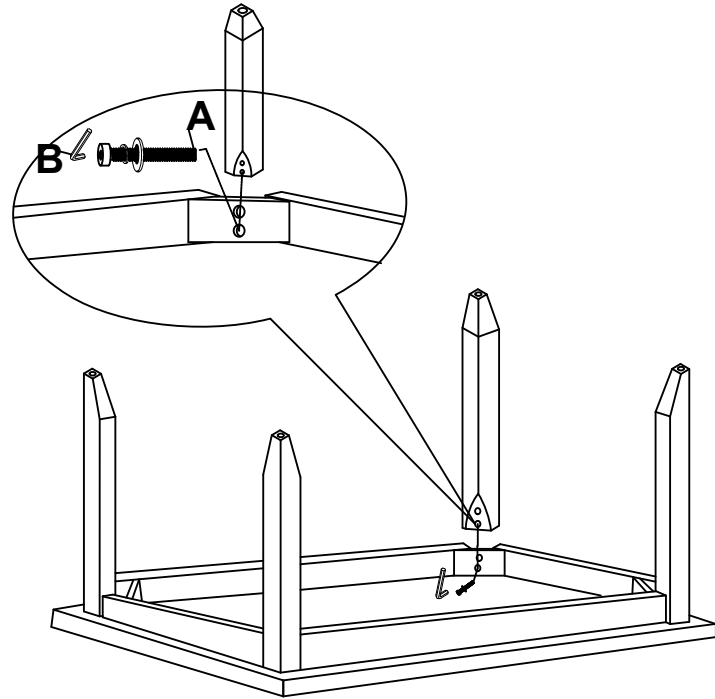

STEP 2: PASO 2

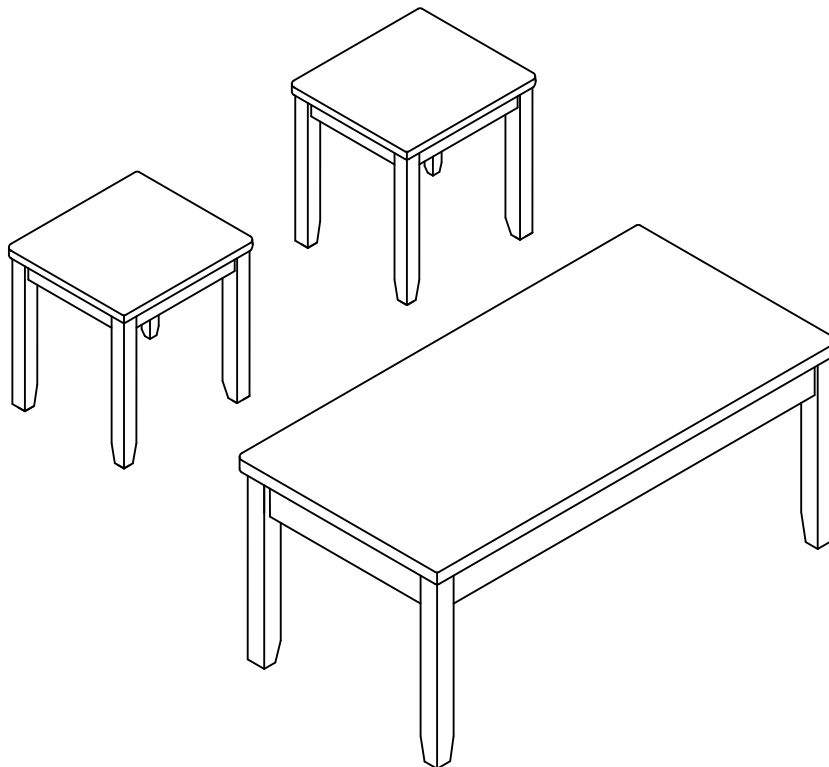

DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED.
NO APRETAR LOS TORNILLOS HASTA ARMAR COMPLETAMENTE.