



ASSEMBLY INSTRUCTIONS

INSTRUCCIONES




Do not tighten screws until completely Assembled
No apretar los tornillos hasta armar completamente



PARTS LIST/LISTA DE PARTES				
A Glass 4Pcs/VIDRIO 4PIEZAS	B Glass 2Pcs/VIDRIO 2PIEZAS	C 2Pcs/VIDRIO 2PIEZAS	D 8Pcs/VIDRIO 8PIEZAS	E 8Pcs/VIDRIO 8PIEZAS
			 ø8#*3/4"	

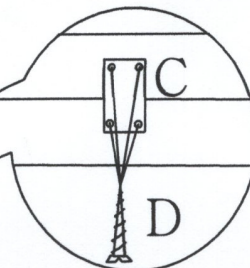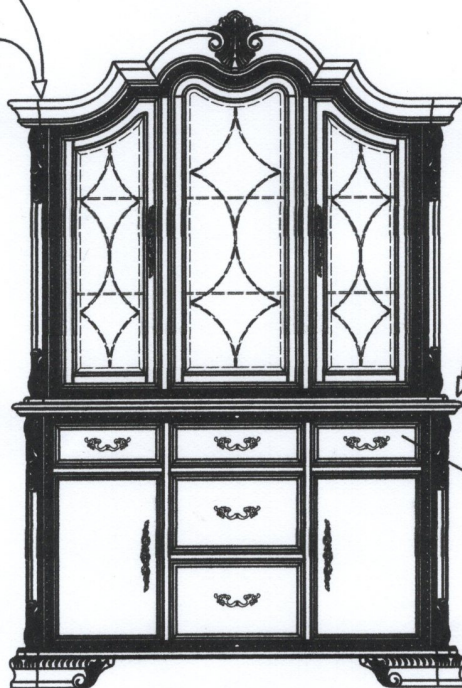

Anti-tipping kit is located inside the top right hand drawer

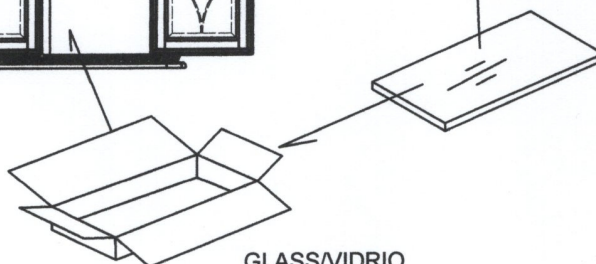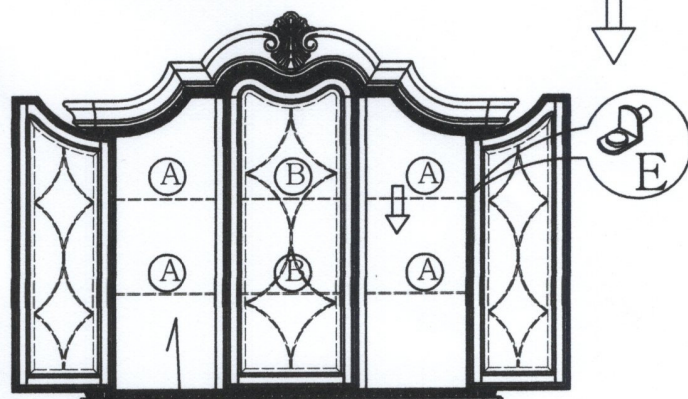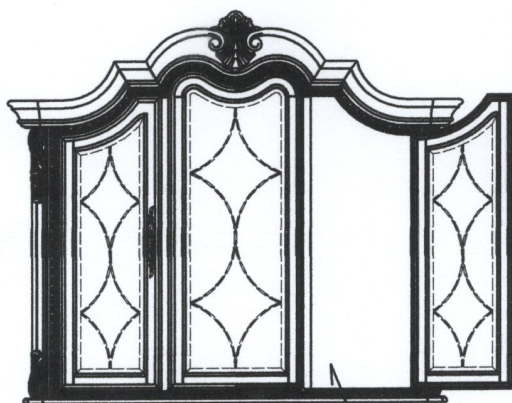

Glass shelves for the hutch are packed inside hutch
Los vidrios de el Hutch estan empacados adentro de el hutch

MADE IN CHINA/HECHO EN CHINA

ANTI-TIPPING STRAP INSTRUCTION

HARDWARE (INCLUDED) :



METAL BRACKETS 12*12*1*2PCS



DRYWALL SCREW $\varnothing$ 5 X50 X1PC



STRAP 297 X5 X1PC



FLATHEAD SCREW $\varnothing$ 5 X16 X1PC


TOOLS NEEDED (NOT INCLUDED) :



DRILL & DRILL BIT


Note: Hardware included only compatible with standard drywalls.

STEP 1

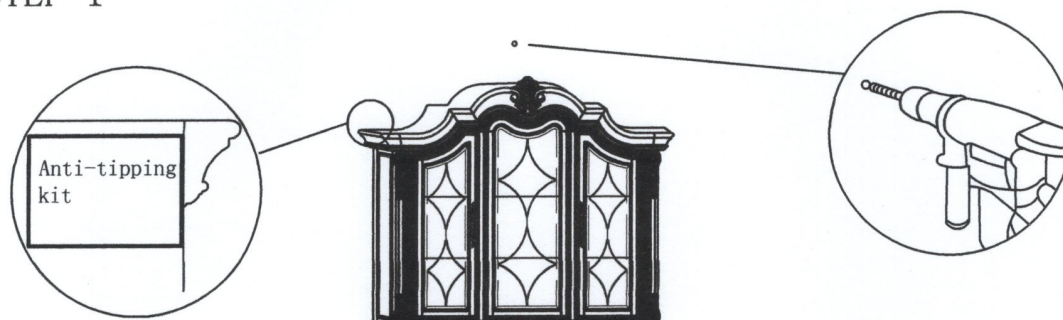


1. To drill a hole (about 1") on the wall.
2. To tap drywall anchor into the hole

STEP 2

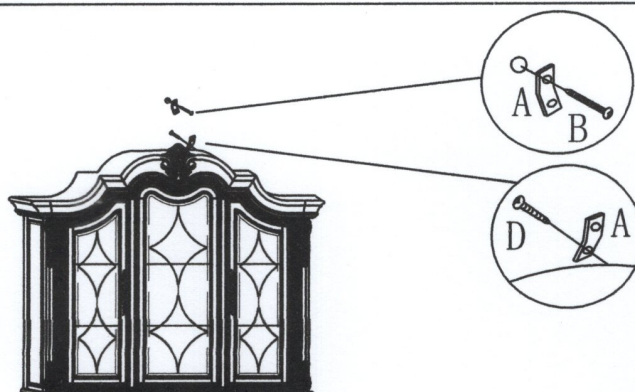

1. To insert the screw into each bracket and hang one on drywall anchor.

STEP 3

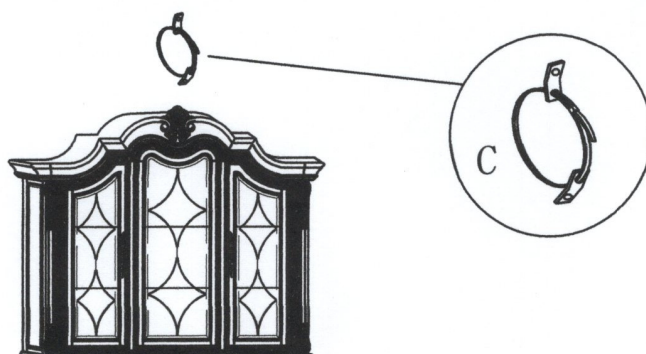

1. To tie the strap through bracket and pull it lightly till it steady.

ANTI-TIPPING STRAP INSTRUCTION

HARDWARE (INCLUDED) :

- A  METAL BRACKETS 12*12*1*2PCS
- B  DRYWALL SCREW $\varnothing$ 5 X50 X1PC
- C  STRAP 297 X5 X1PC
- D  FLATHEAD SCREW $\varnothing$ 5 X16 X1PC


TOOLS NEEDED (NOT INCLUDED) :



DRILL & DRILL BIT


Note: Hardware included only compatible with standard drywalls.

STEP 1

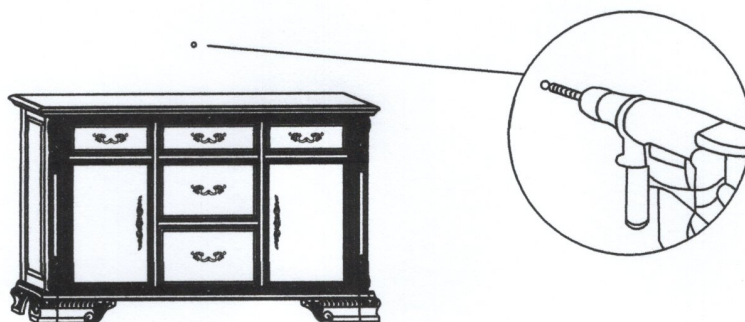

1. To drill a hole (about 1") on the wall.
2. To tap drywall anchor into the hole


STEP 2

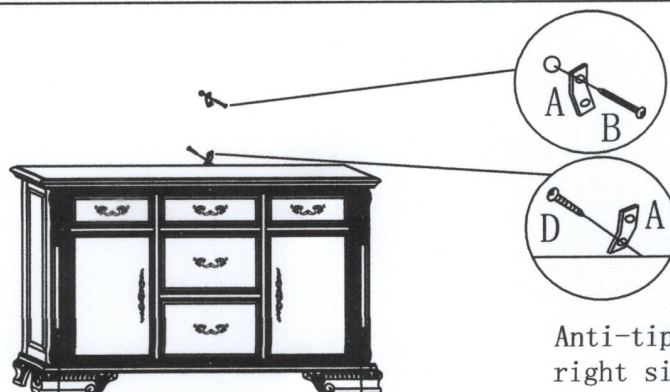

Anti-tipping kit put on right side facing drawer

1. To insert the screw into each bracket and hang one on drywall anchor.

STEP 3

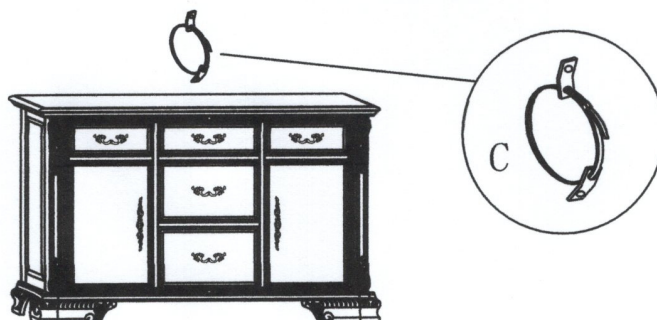

1. To tie the strap through bracket and pull it lightly till it steady.