


# Installation Instructions

## Outdoor Grill Accessory Doors




### NOTES:


Remove the door from the mounting frame prior to installing the frame. Install the front frame utilizing the return flange mounting holes located on the left and right side of the frame. After the frame is in place, level, plumb and install the door. Check for correct latch alignment.

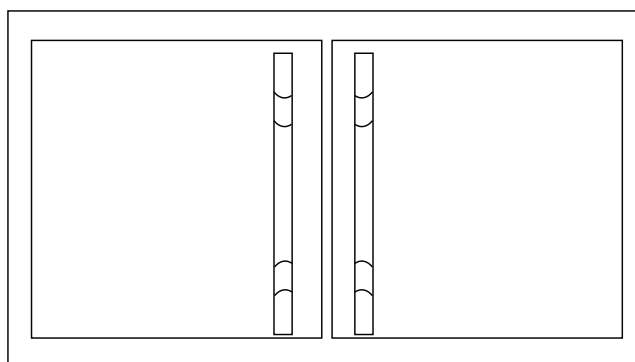


**Front View**  
(OBAD36 shown)

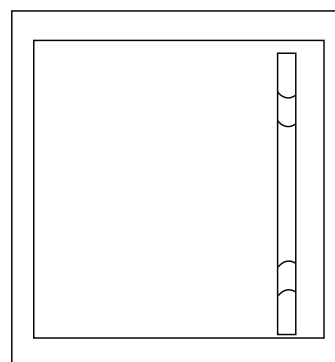

**Front View**  
(OBAD20 shown)

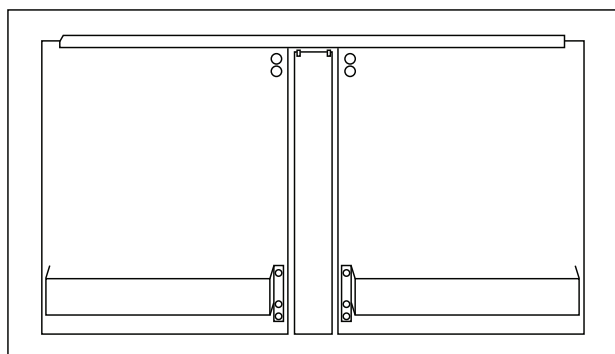

**Rear View**  
(OBAD36 shown)

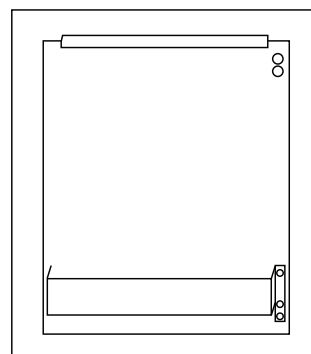

**Rear View**  
(OBAD20 shown)

| SPECIFICATIONS | MEASUREMENTS                                         |
|----------------|------------------------------------------------------|
| Overall Width  | OBAD20 - 19 1/2" (495mm)<br>OBAD36 - 35 7/8" (911mm) |
| Overall Height | 21" (533mm)                                          |
| Overall Depth  | 1/4" (6mm) deep return on frame edge                 |
| Cutout Width   | OBAD20 - 16 3/4" (425mm)<br>OBAD36 - 33 1/8" (841mm) |
| Cutout Height  | 18 3/4" (476mm)                                      |
| Cutout Depth   | 3" (76mm) Minimum                                    |