




ASSEMBLY INSTRUCTION INSTRUCCIONES

4230SET COFFEE TABLE 4230SET MESA DE CENTRO


PARTS LIST

| | | | |
|---|--------------------|---|---|
| A | COFFEE TABLE TOP |  | 1 |
| B | COFFEE TABLE SHELF |  | 1 |
| C | COFFEE TABLE LEG |  | 6 |


HARDWARE LIST

| | | | |
|----------------------------|-----------------------|---|---|
| 1 | WOOD DOWEL (8x30mm) |  | 12 |
| 2 | BOLT Ø1/4"-20x 1-1/2" |  | 12 |
| 3 | CAM BOLT |  | 6 |
| 4 | CAM LOCK |  | 6 |
| 5 | ALLEN WRENCH |  | 1 |
| ASSEMBLY TOOL NOT INCLUDED | | |  |

STEP 1/ PASO 1

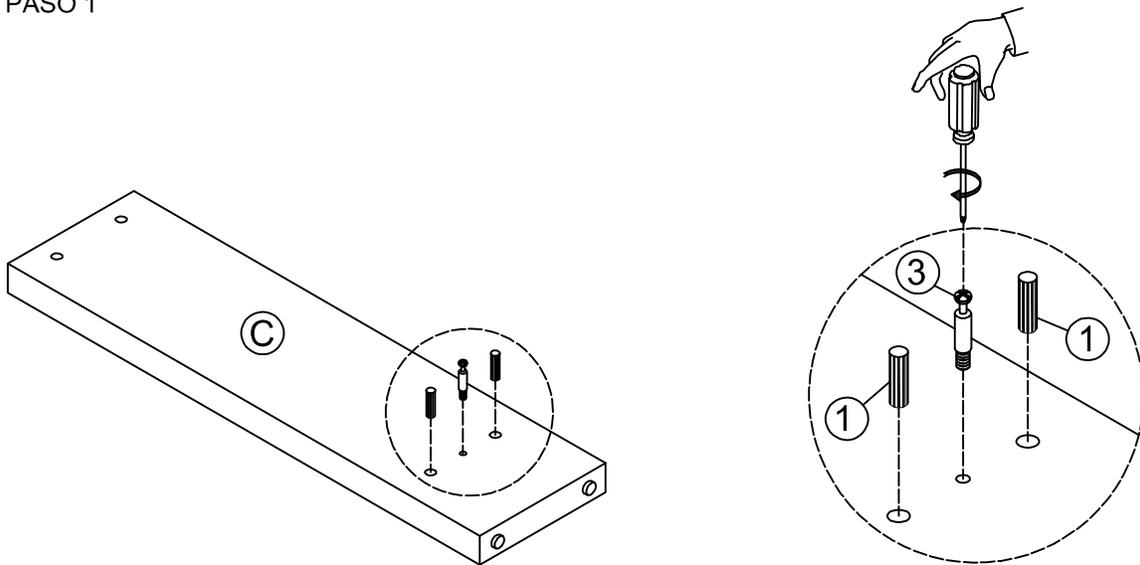

STEP 2/ PASO 2

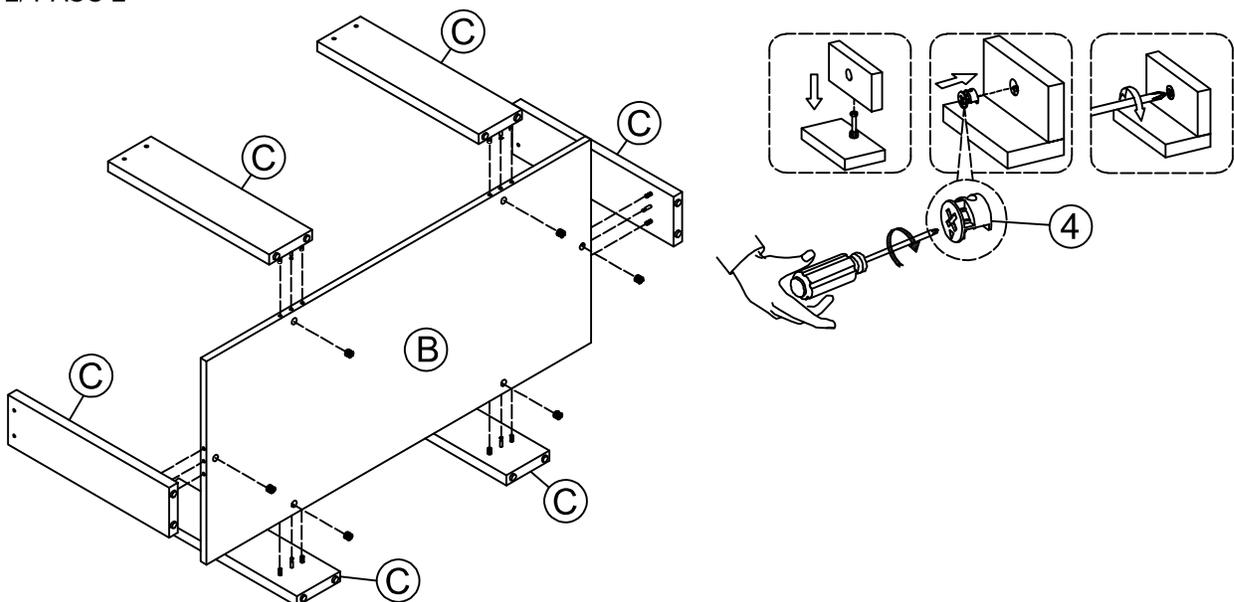

DO NOT TIGHTEN ALL BOLTS UNTIL COMPLETELY ASSEMBLED.

NO APRETAR LOS TORNILLOS HASTA ARMAR COMPLETAMENTE.


NOTE: PERIODICALLY CHECK TO ENSURE THAT ALL CONNECTORS (BOLTS, SCREWS, ETC.) ARE TIGHT.

NOTA: VERIFIQUE PERIÓDICAMENTE QUE TODOS LOS CONECTORES (TUERCAS, TORNILLOS, ETC.) ESTÉN BIEN APRETADOS


**ASSEMBLY INSTRUCTION
INSTRUCCIONES**

**4230SET COFFEE TABLE
4230SET MESA DE CENTRO**

STEP 3/ PASO3

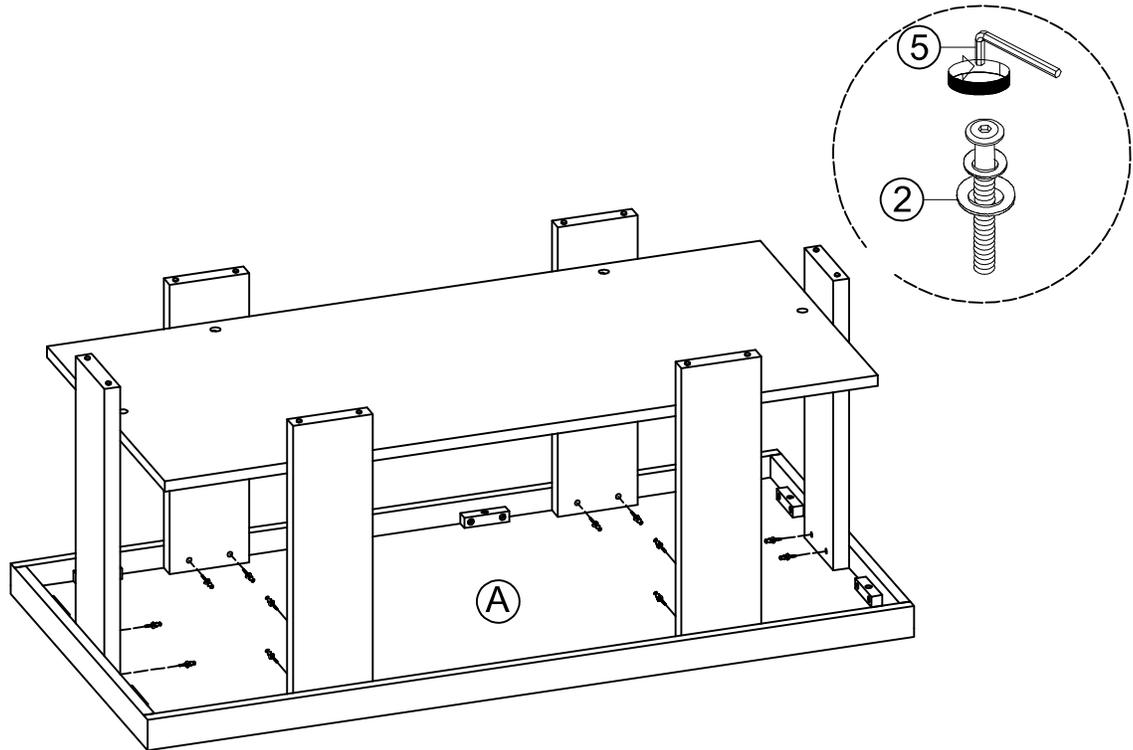

STEP 4/ PASO 4

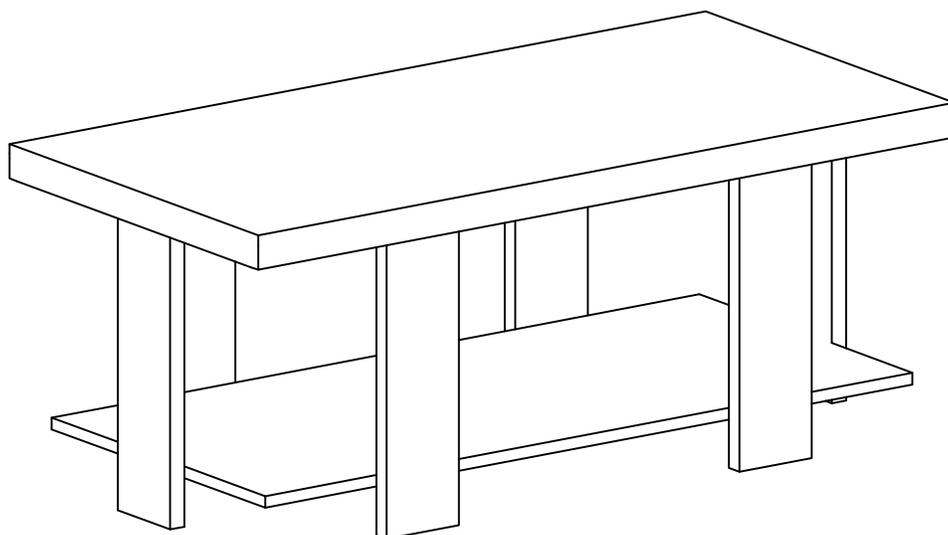

DO NOT TIGHTEN ALL BOLTS UNTIL COMPLETELY ASSEMBLED.

NO APRETAR LOS TORNILLOS HASTA ARMAR COMPLETAMENTE.

NOTE: PERIODICALLY CHECK TO ENSURE THAT ALL CONNECTORS (BOLTS, SCREWS, ETC.) ARE TIGHT.

NOTA: VERIFIQUE PERIÓDICAMENTE QUE TODOS LOS CONECTORES (TUERCAS, TORNILLOS, ETC.) ESTÉN BIEN APRETADOS



ASSEMBLY INSTRUCTION INSTRUCCIONES

4230SET END TABLE 4230SET MESA LATERAL


PARTS LIST

| | | | |
|---|-----------------|---|---|
| D | END TABLE TOP |  | 1 |
| E | END TABLE SHELF |  | 1 |
| F | END TABLE LEG |  | 4 |


HARDWARE LIST

| | | | |
|----------------------------|-----------------------|---|---|
| 1 | WOOD DOWEL (8x30mm) |  | 8 |
| 2 | BOLT Ø1/4"-20x 1-1/2" |  | 8 |
| 3 | CAM BOLT |  | 4 |
| 4 | CAM LOCK |  | 4 |
| 5 | ALLEN WRENCH |  | 1 |
| ASSEMBLY TOOL NOT INCLUDED | | |  |

STEP 1/ PASO 1

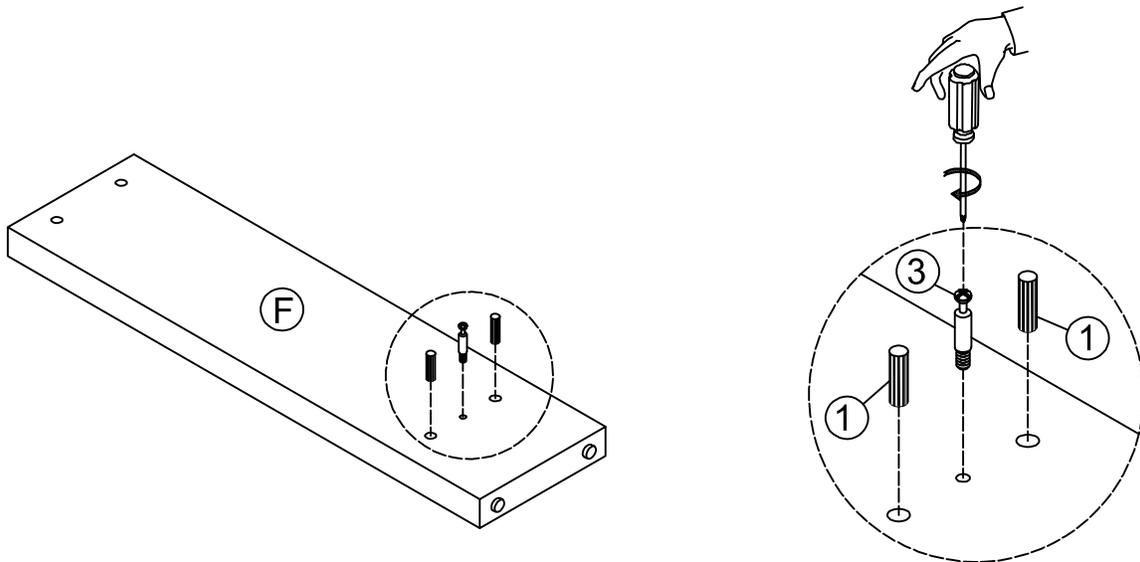

STEP 2/ PASO 2

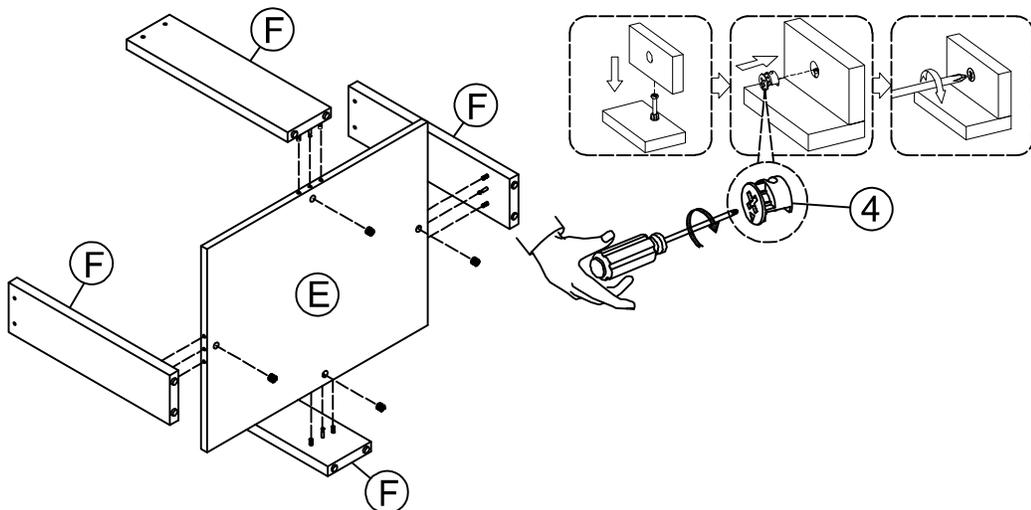


DO NOT TIGHTEN ALL BOLTS UNTIL COMPLETELY ASSEMBLED.

NO APRETAR LOS TORNILLOS HASTA ARMAR COMPLETAMENTE.


NOTE: PERIODICALLY CHECK TO ENSURE THAT ALL CONNECTORS (BOLTS, SCREWS, ETC.) ARE TIGHT.

NOTA: VERIFIQUE PERIÓDICAMENTE QUE TODOS LOS CONECTORES (TUERCAS, TORNILLOS, ETC.) ESTÉN BIEN APRETADOS

STEP 3/ PASO3

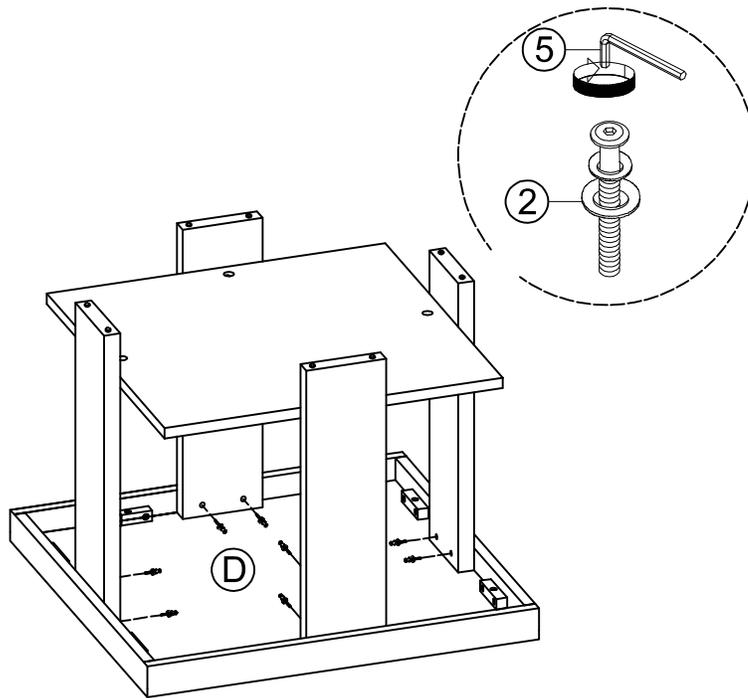

STEP 4/ PASO 4

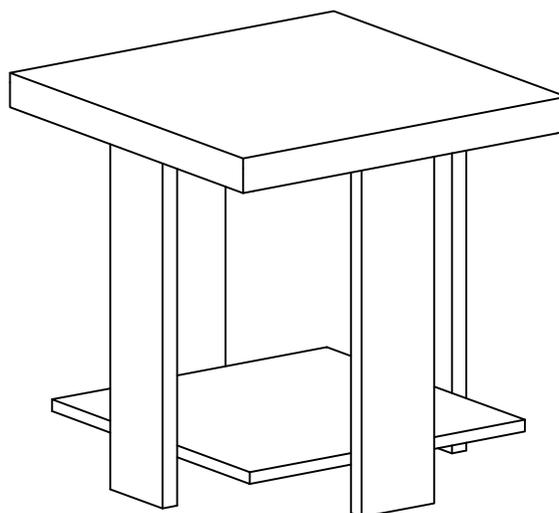

DO NOT TIGHTEN ALL BOLTS UNTIL COMPLETELY ASSEMBLED.

NO APRETAR LOS TORNILLOS HASTA ARMAR COMPLETAMENTE.

NOTE: PERIODICALLY CHECK TO ENSURE THAT ALL CONNECTORS (BOLTS, SCREWS, ETC.) ARE TIGHT.

NOTA: VERIFIQUE PERIÓDICAMENTE QUE TODOS LOS CONECTORES (TUERCAS, TORNILLOS, ETC.) ESTÉN BIEN APRETADOS