

Assembly Directions for the *Classic Terrace Dining Chair*

Item Number: CTDC2744



PACKAGE CONTENTS


1 Hardware Package 1 Back
1 Front Cross Piece 1 Seat
2 Arm Assemblies

HARDWARE PACKAGE

4 • 2" Pan Head Screws
6 • 2" Screws
2 • 3" Screws
4 • 4" Screws • #2 Sq. Drive Bit

TOOLS NEEDED

Cordless Drill

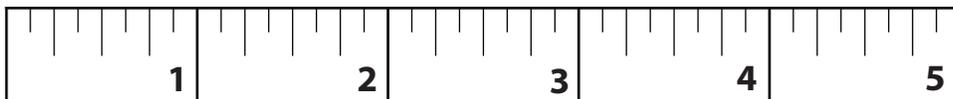

Use to measure bolts

Step #1

Lay Arm Assembly on side, and slide Seat Assembly in slot. Push forward, and upward while fastening with 2" Screws so that the Seat Slats are flush with top, and front of Slot.


Slot



Step #2

Set the Tendon of Front Cross Piece in the Mortise, and fasten using 2" Pan Head Screws.


Mortise

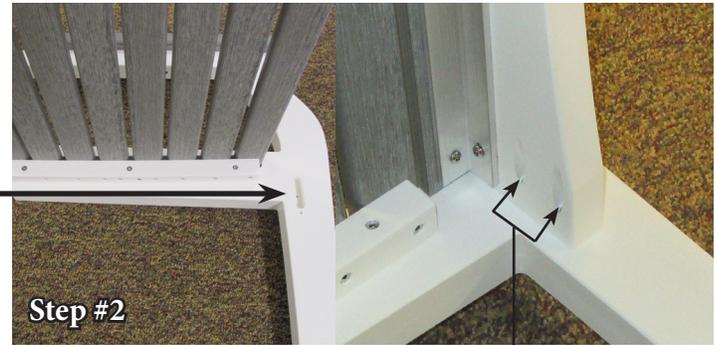

2" Pan Head Screws

Step #3

Lay Remaining Arm Assembly on its side, and set the Assembled Part in the Slot, and the Mortise. Fasten repeating Step #1-2. (Fasten the Front Cross Support first) (Be sure to Push Seat forward, and upward while fastening.)

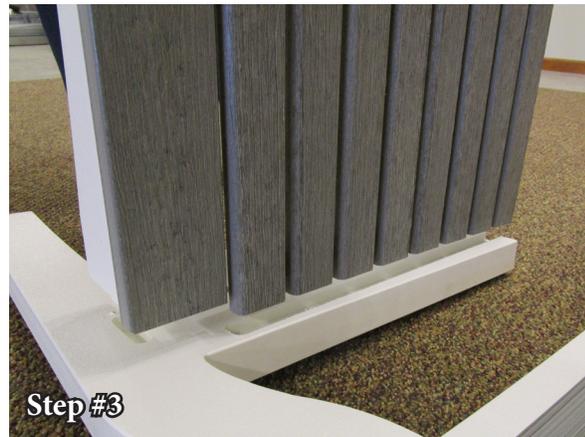

Step #4

Set the Assembled Part forward on the front of the Arms, and set the Back Assembly on top. Fasten the Seat Using 4" Screws. Keep the Arm Flush with edge of Back, & fasten using 3" screws.



4" Screws

3" Screws

Keep Flush

Arm