









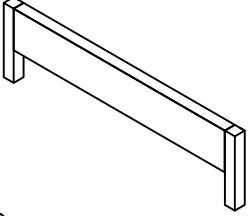
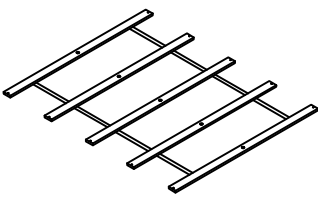


**Warning:**

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.

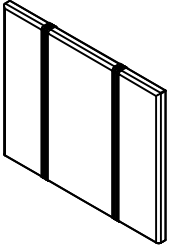






**Hardware and Parts packed with the Headboard**

91070 - Uph Headboard 	Headboard Post (Right) 	Headboard Post (Left) 	Stretcher 
(H-A) 1 pc. Ø5/16" x 1-3/4" Allen Head Bolt	(H-B) 1 pc. Ø5/16" x Ø13 Spring Washer	(H-C) 1 pc. Ø5/16" x Ø19 Flat Washer	(H-D) 1 pc. M4 x 2-1/2 Allen Key
(H-E) 10 pcs. 	(H-F) 10 pcs. 	(H-G) 10 pcs. 	(H-H) 1 pc. 

**Hardware and Parts packed with the Footboard**

91071 - Footboard 	Slat - 60" Long 	#4 x 30mm Wood Screw 	1-1/8" x 1-1/8" x 6-5/16" Support Leg 
(F-A) 1 pc.	(F-B) 1 Set	(F-C) 10 pcs.	(F-D) 5 pcs.

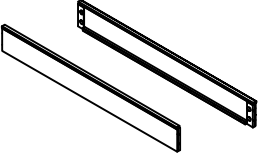**Hardware and Parts packed with the Bed Rails**


91072 - Siderails 	Ø5/16" x 3-1/2" All-Thread Bolt 	Arc Washer 37*17mm 	Ø5/16" x Ø13mm Spring Washer 	Ø5/16" x Ø16mm Flat Washer 	Ø5/16"-18mm Hex Nut 	12 mm Open Wrench 
(R-A) 2 pcs.	(R-B) 8 pcs.	(R-C) 8 pcs.	(R-D) 8 pcs.	(R-E) 8 pcs.	(R-F) 8 pcs.	(R-G) 1 pc.

**4/6-5/0 Queen Bed**


91070 - 4/6 - 5/0 Uph Headboard

91071 - 5/0 Footboard


91072 - 5/0 - 6/0 Siderails

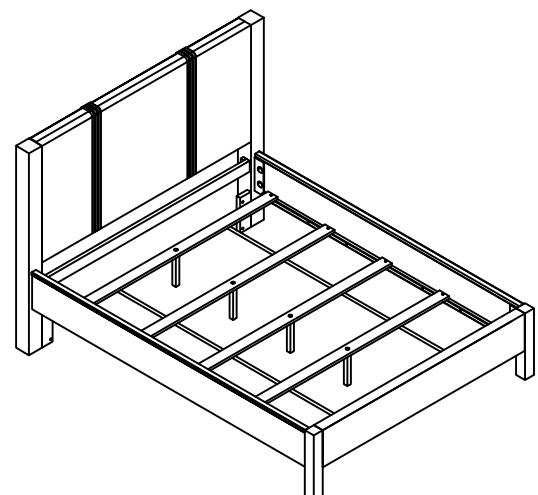


**STEP 1**

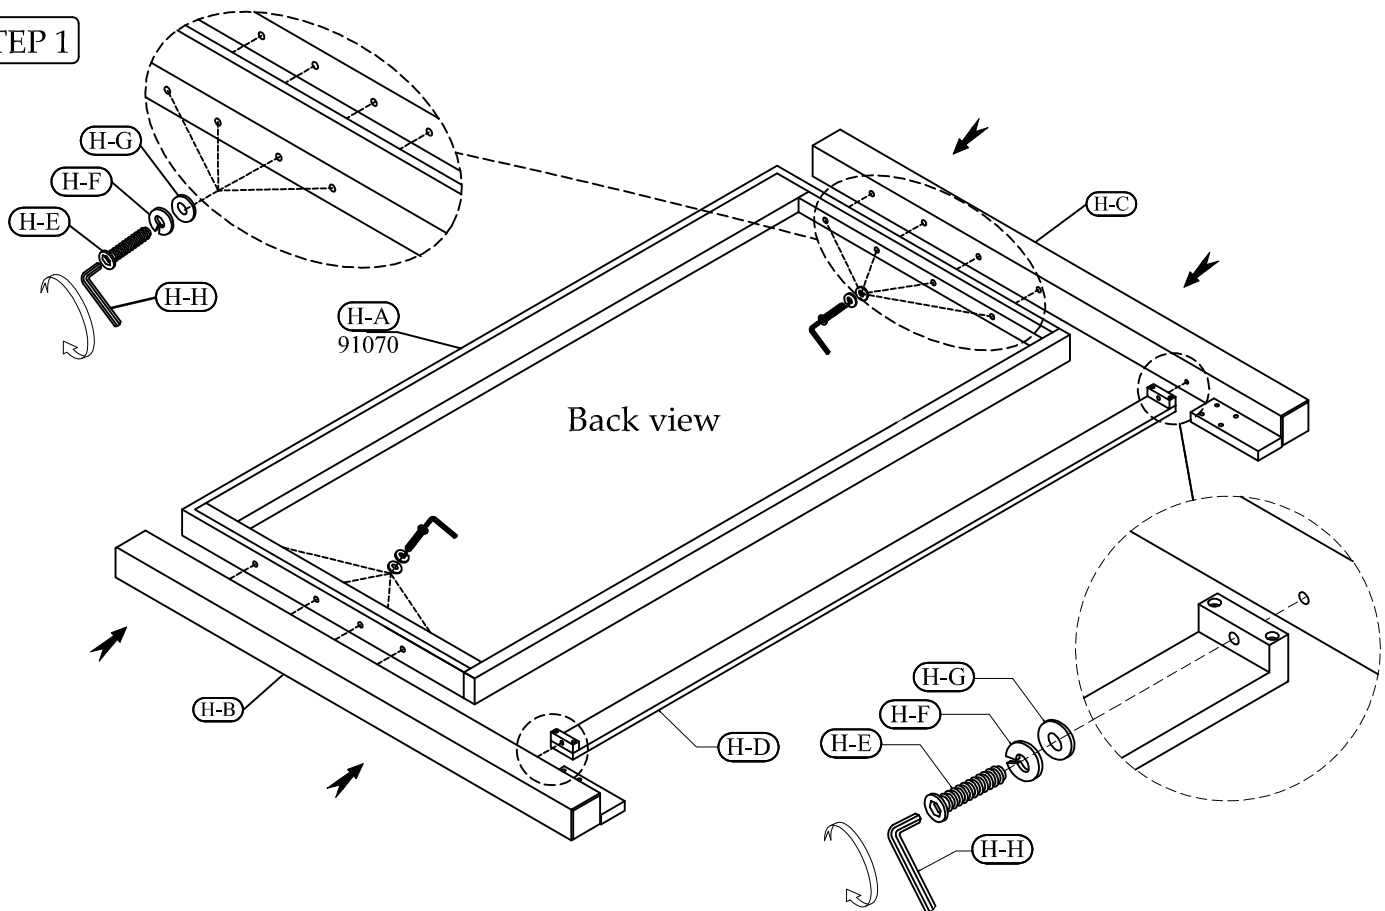


**STEP 2**

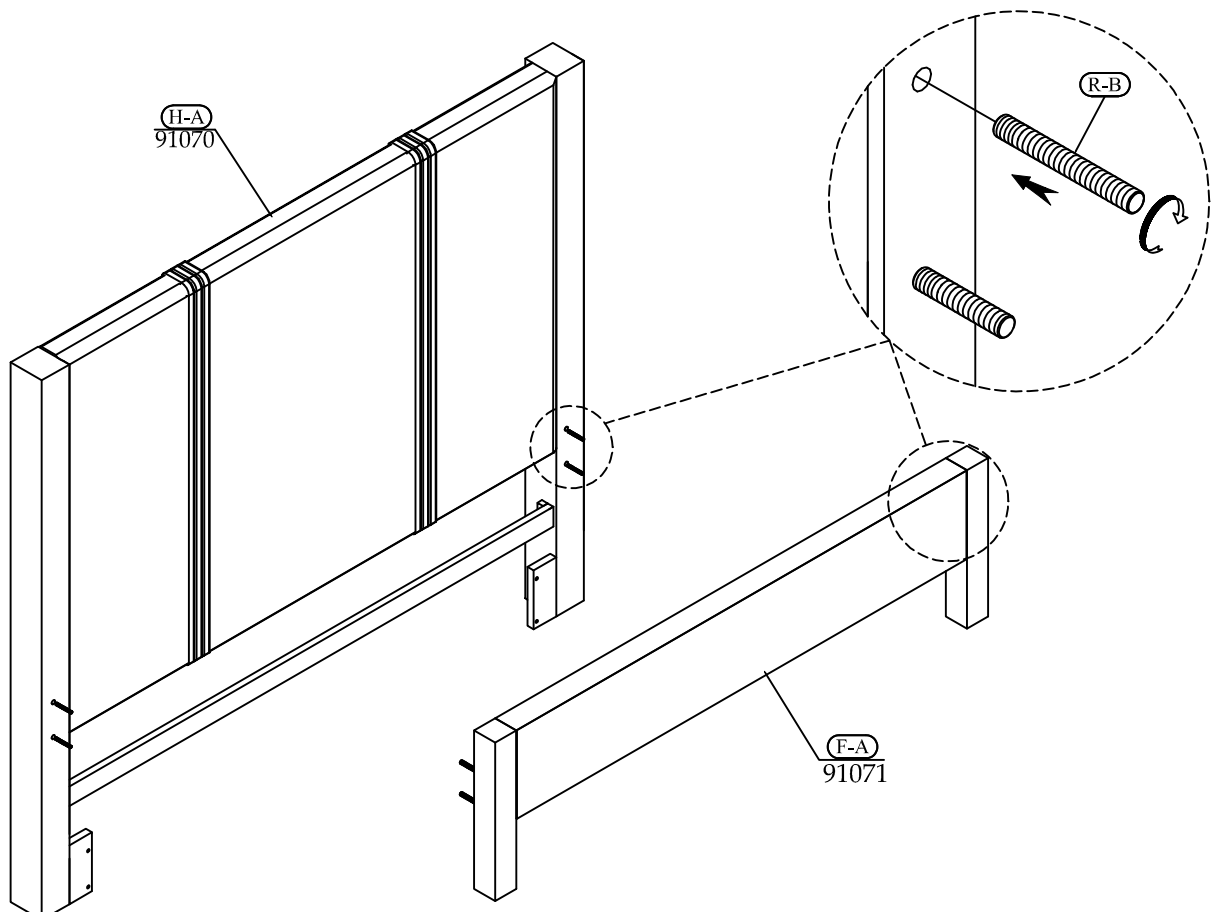


STEP 3

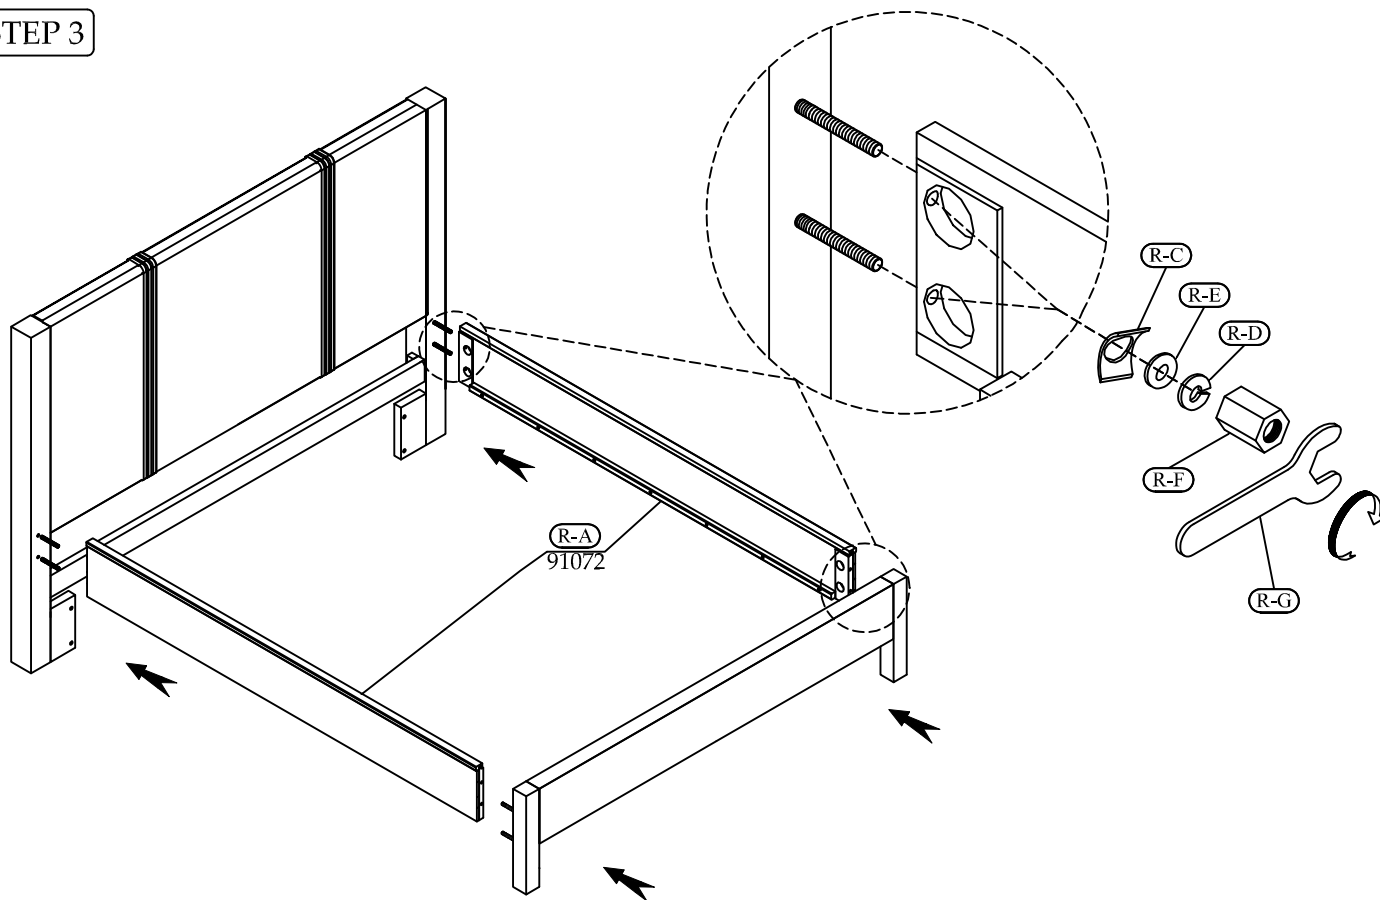

STEP 4

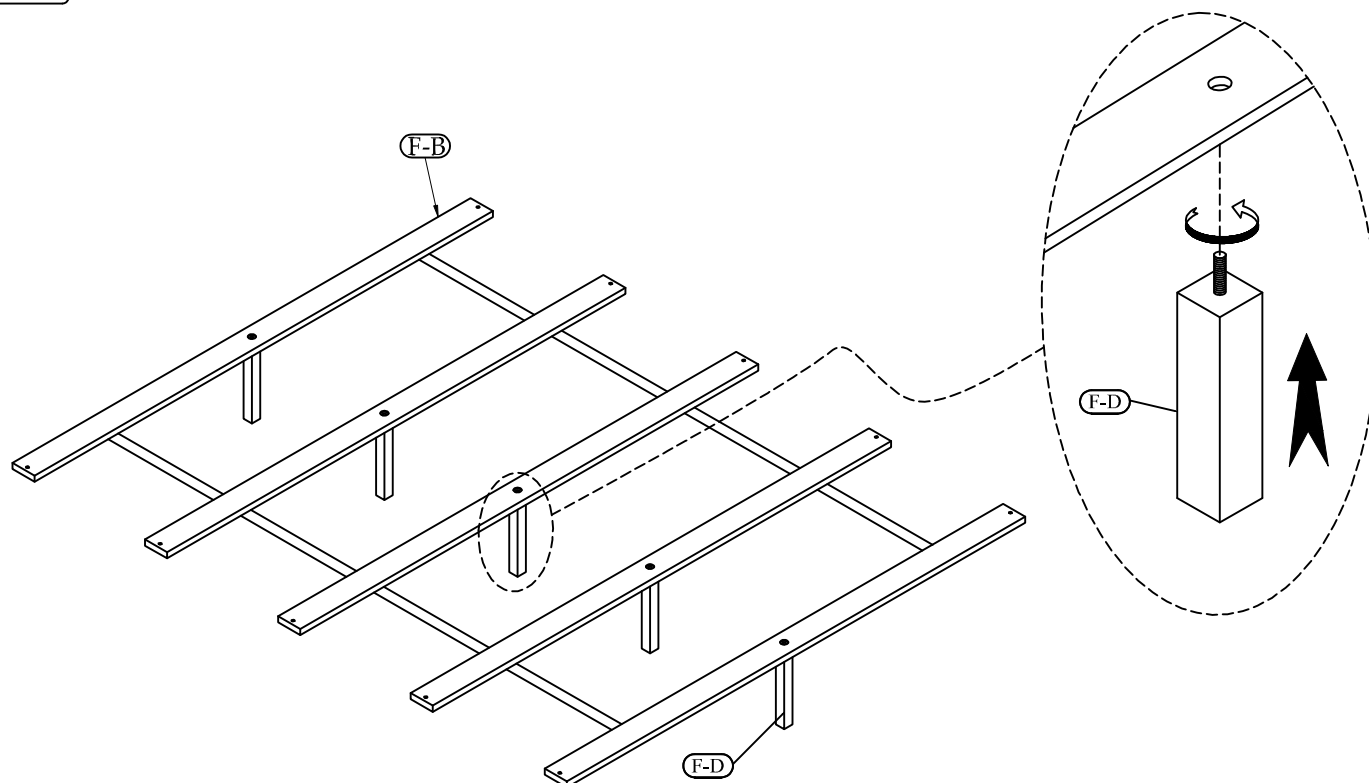


STEP 5

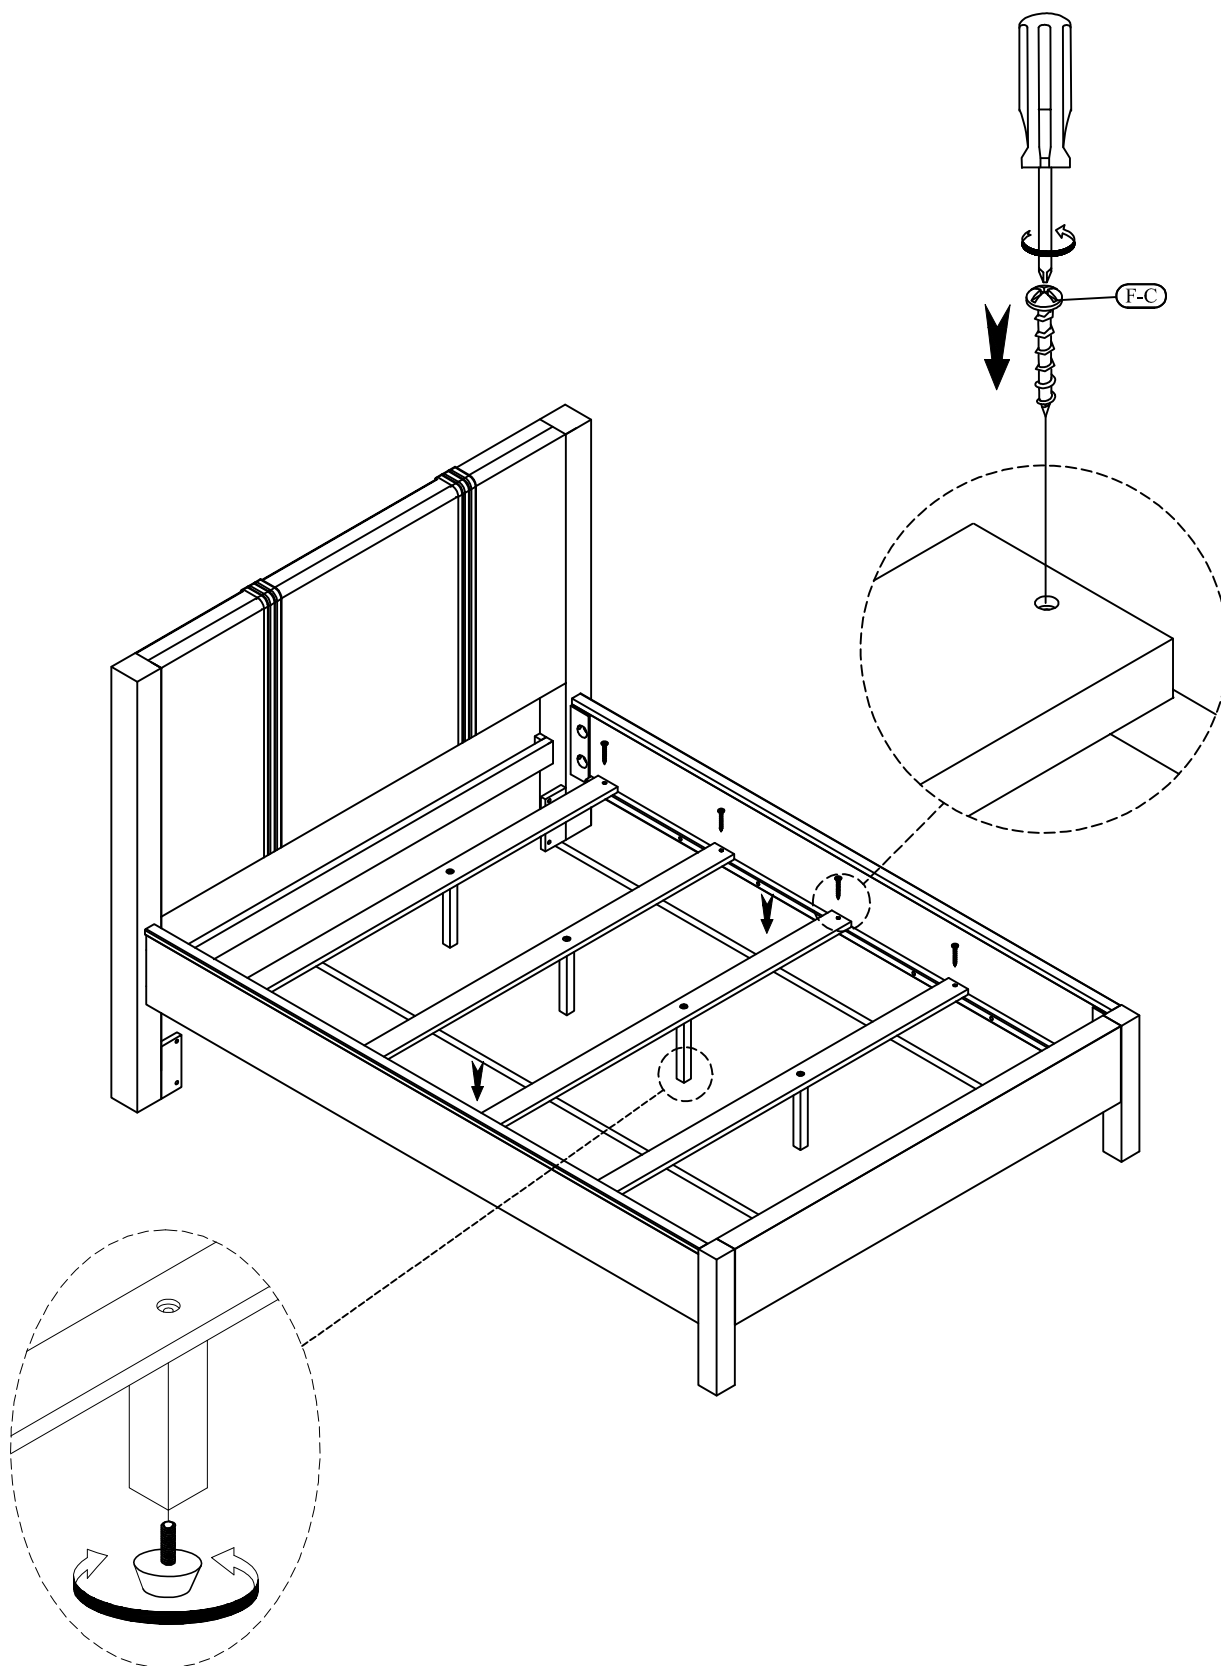

Adjustable leveler.

## 4/6-5/0 Queen Bed

### 91070 - 4/6 - 5/0 Uph Headboard

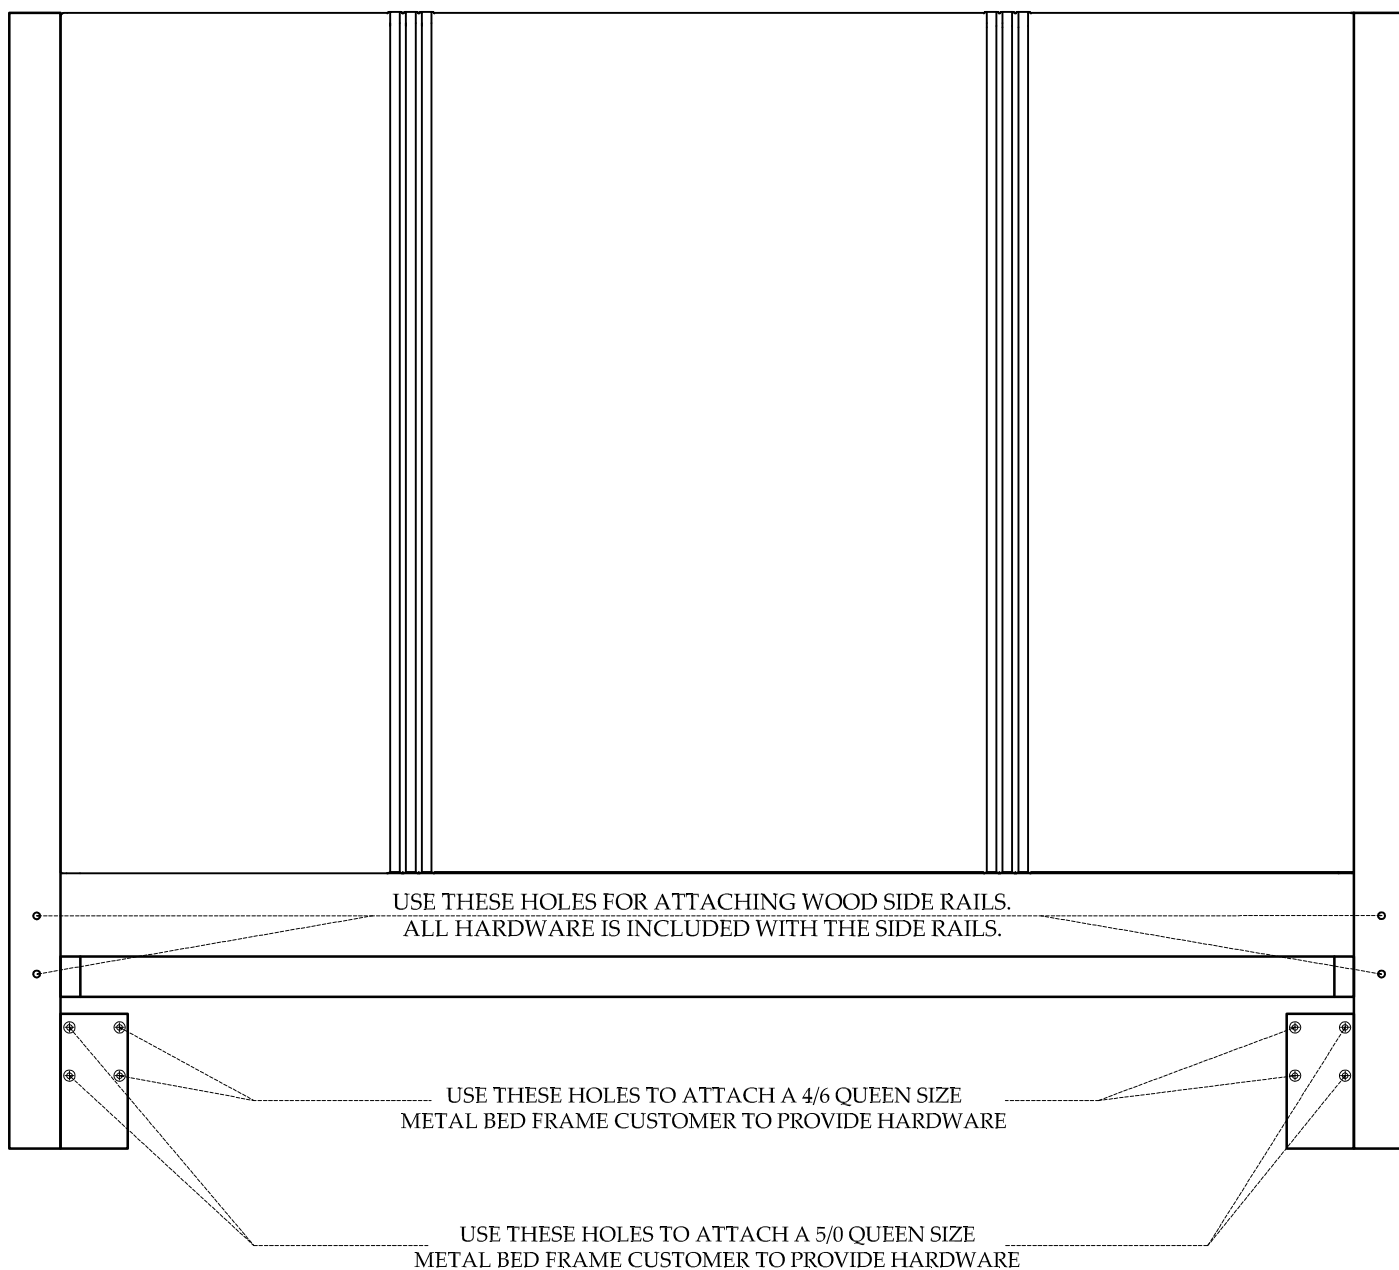

The headboard may be used alone with a Queen size metal bed frame.