
## Assembly Directions for Round End Tables

#PRET-2122 · #PRET2922, #PRET3222



STEP #1 - First fasten the four Legs to the Top using 8- ¼" x 2 ¼" Allen Head Bolts.

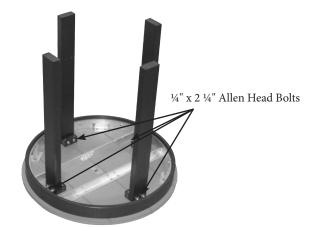

STEP #2 - Second fasten the Shelf to the Legs using 8- ¼" x 1½" Lag Bolts.




## PACKAGE CONTENTS

- 1 Top
- 1 Shelf
- 4 Legs
- 1 Hardware Package

## HARDWARE PACKAGE

- 8 4" x 1½" Lag Bolts
- 8 ¼" x 2 ¼" Allen Head Bolts
- 8 ¼" Flange Nuts
- 1 Allen Wrench

TOOLS NEEDED: Cordless Drill <sup>7</sup>/16" Wrench Allen Wrench (Included)



Use to measure bolts