


Hardware and Parts packed with the Headboard


Headboard Panel

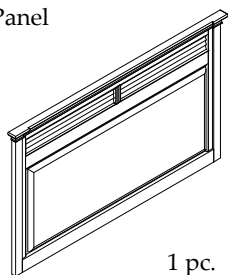

(H-A)

1 pc.


Headboard Post



(H-B)

One Left &
One Right


Headboard Stretcher

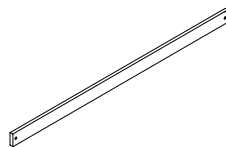

(H-C)

1 pc.

M5/16"-18 x 1-3/4 " Long Allen Head Bolt



(H-D)

8 pcs.

M5/16" Spring Washer



(H-E)

8 pcs.


M5/16" x 19*2mm Flat Washer



(H-F)

8 pcs.

5mm Allen Key




(H-G)

1 pc.

Hardware and Parts packed with the Footboard


Storage Footboard Frame

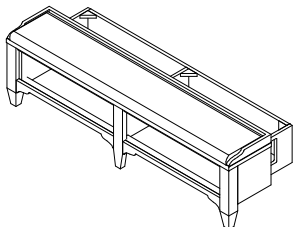

(F-A)

1 pc.


Drawer

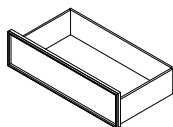

(F-B)

2 pcs.

Drawer Box Support Leg
9-1/4" long with leveler



(F-C)

2 pcs.

6/6 Wood Slat
77" long



(F-D)

4 pcs.


Slat Support Leg
13-1/2" long with leveler



(F-E)

8 pcs.


6/6 Wood Panel with blocks 77" x 20-1/4"

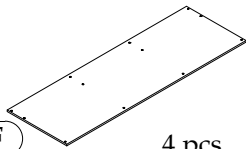

(F-F)

4 pcs.

M5/16"-18 x 1-1/2 " Long Allen Head Bolt



(F-G)

4 pcs.

M5/16" Spring Washer



(F-H)

4 pcs.

M5/16" x 19*2mm Flat Washer



(F-I)

4 pcs.


5mm Allen Key



(F-J)

1 pc.

#8 x 1" Wood Screw




(F-K)

28 pcs.

Hardware and Parts packed with the Bed Rails

Bed Rail
81" Long

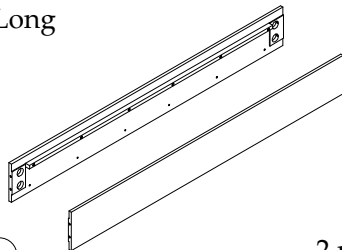

(R-A)

2 pcs.

M5/16"-18 x 3-1/2 " Long All-Thread Bolt



(R-B)

8 pcs.

5/16-18 x L17 Hex Nut



(R-C)

8 pcs.

M5/16" Spring Washer



(R-D)

8 pcs.


M5/16" x 16*2mm Flat Washer



(R-E)

8 pcs.

6/0 California King Bed Rail, 86" Long

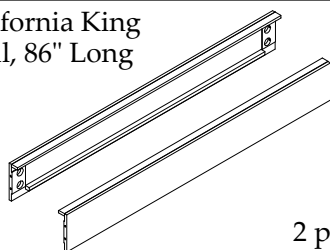

(R-A)

2 pcs.

Ø50mm Arc-Washer



(R-F)

8 pcs.


12mm Open Wrench



(R-G)

1 pc.

4mm Allen Wrench



(R-H)

1 pc.


6/0-6/6 King Storage Bed

59384-59484 6/0-6/6 UPH HEADBOARD

59385-59485 6/0-6/6 UPH BENCH STORAGE FOOTBOARD


59373-59473 5/0-6/6 BED RAILS

59383-59483 6/0 BED RAILS

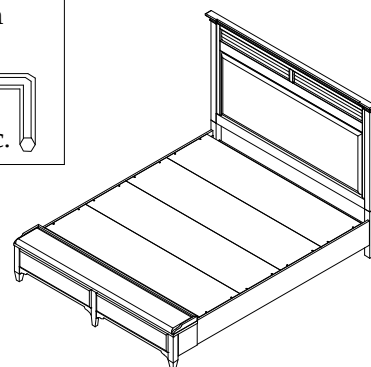

Hardware and Parts packed with the Headboard


Headboard Panel

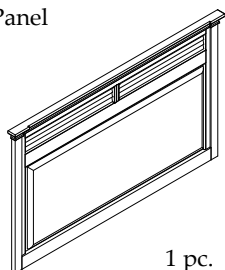

(H-A)

1 pc.


Headboard Post



(H-B)

One Left &
One Right


Headboard Stretcher

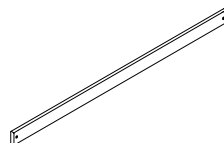

(H-C)

1 pc.

M5/16" -18x 1-3/4 " Long Allen Head Bolt



(H-D)

8 pcs.

M5/16" Spring Washer



(H-E)

8 pcs.


M5/16" x 19*2mm Flat Washer



(H-F)

8 pcs.

5mm Allen Wrench




(H-G)

1 pc.

Hardware and Parts packed with the Footboard

Low Footboard Frame

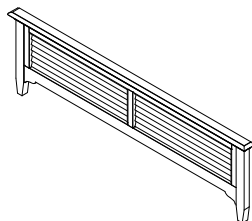

(F-A)

1 pc.


6/6 Wood Slat
77" long



(F-B)

4 pcs.


Slat Support Leg
7-1/2" long with
leveler



(F-C)

8 pcs.

Ø4mm x 1" Wood Screw




(F-D)

8 pcs.

Hardware and Parts packed with the Bed Rails

Bed Rail
81" Long

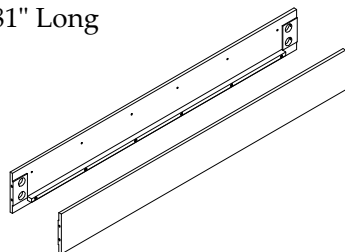

(R-A)

2 pcs.

M5/16" -18x 3-1/2 " Long All-Thread Bolt



(R-B)

8 pcs.

5/16-18 x L17 Hex Nut



(R-C)

8 pcs.

M5/16" Spring Washer



(R-D)

8 pcs.

M5/16" x 16*2mm Flat Washer



(R-E)

8 pcs.

Ø50mm Arc-Washer



(R-F)

8 pcs.

12mm Open Wrench



(R-G)

1 pc.


4mm Allen Wrench



(R-H)


1 pc.

6/0 California King
Bed Rail, 86" Long

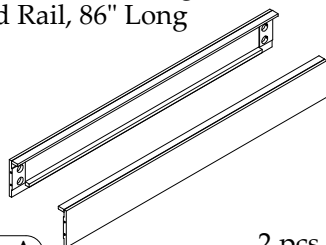

(R-A)

2 pcs.

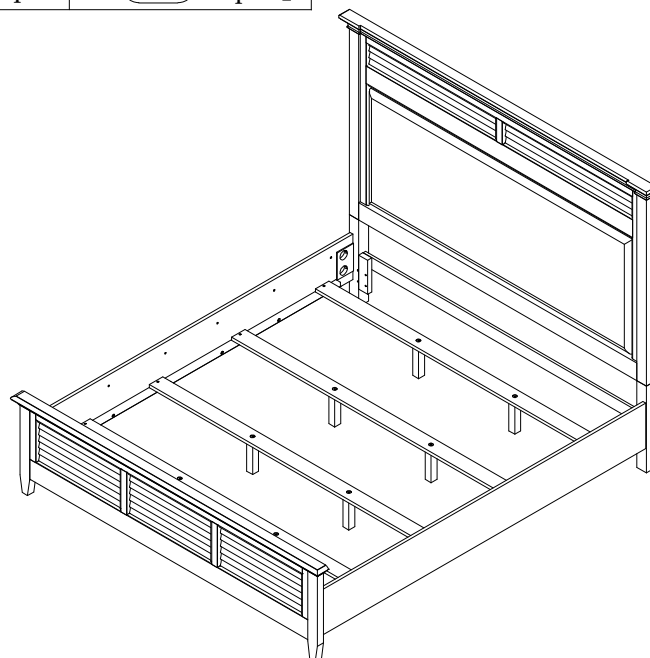


6/0-6/6 King Bed

59384-59484 6/0-6/6 UPH HEADBOARD

59381-59481 6/0-6/6 FOOTBOARD

59373-59473 5/0-6/6 BED RAILS


59383-59483 6/0 BED RAILS

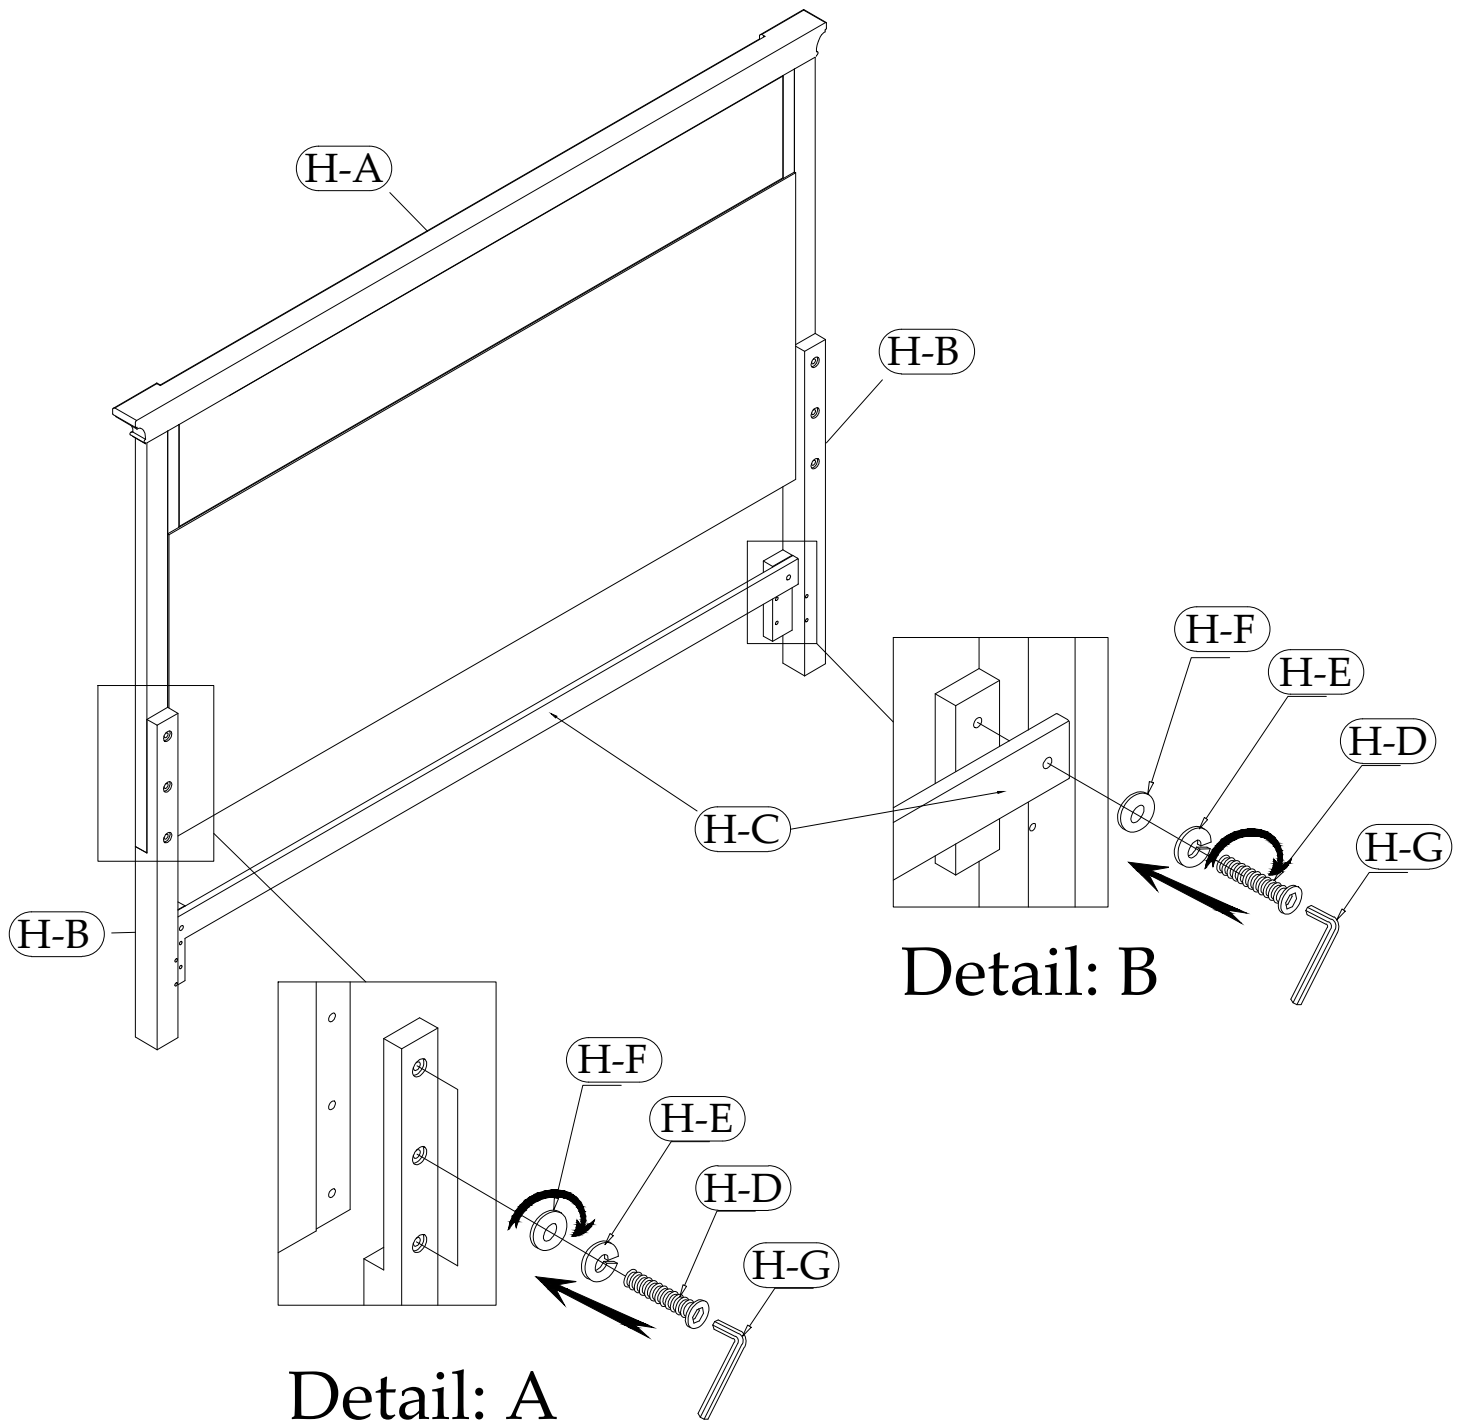

ASSEMBLY STEPS :


1. Place the Headboard Panel (H-A) face down on a clean and soft surface.
2. Attach the Left and Right Headboard Posts (H-B) to the back of the Headboard Panel, using the Flat Washers (H-F), Spring Washers (H-E) and Bolts (H-D). Do not fully tighten until after next step. (see Detail A).
3. Attach the Back Stretcher (H-C) to the Headboard Posts by using the same Washers and Bolts as previous step. (See Detail B). Fully Tighten all the bolts with the Allen Wrench (H-G).

Gently lean the back of the assembled Headboard against the wall where the Bed will be located in the room.

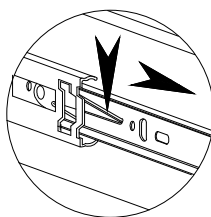


To remove the drawer:

- A. Pull the drawer fully open so the black latch is visible in the inside channel of the guides.
- B. Release the latches by simultaneously pushing one lever up and the other down.
- C. At the same time, pulling the drawer forward until the slides release.

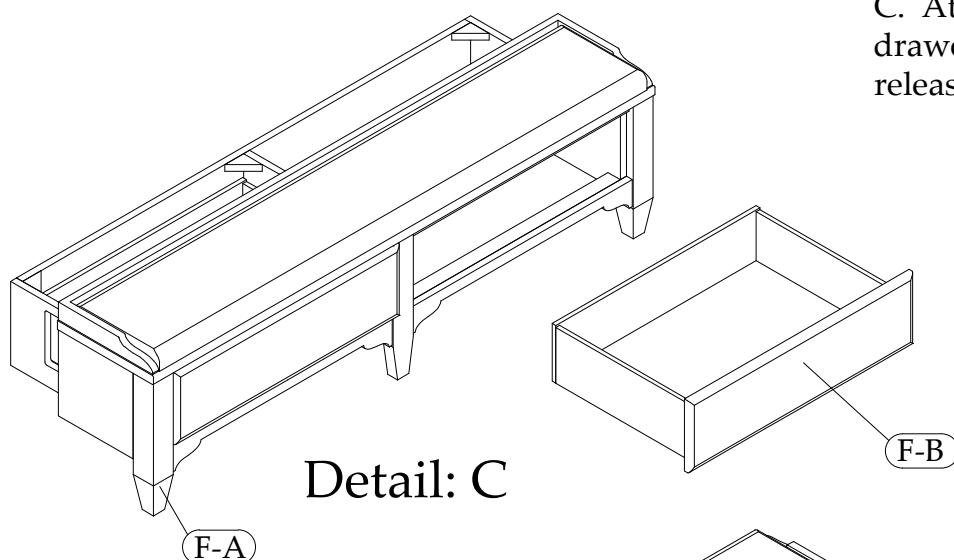

Detail: C

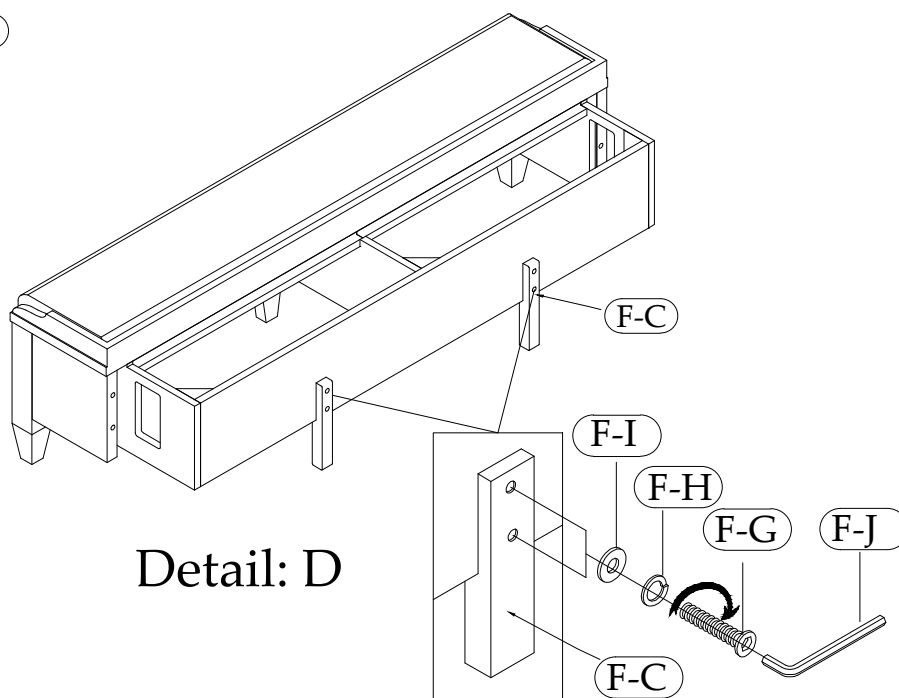

Detail: D


ASSEMBLY STEPS :

1. Remove both drawers from the Storage Footboard. Refer to the steps above.
2. Place the Storage Footboard (F-A) face down on a clean and soft surface.
3. Attach the Support Legs (F-C) using to the Storage footboard by using Flat Washers (F-I), Spring Washers (F-H) and Bolts (F-G). Tighten with the Allen Wrench (F-J).

ASSEMBLY STEPS :

To prevent possible damage to furniture and personal injury, it is recommended that two people are used to perform the following steps.


4. Install All-Thread Bolts (R-B) into the Headboard (H-A) and the Storage Footboard (F-A) before Carefully position one end of one Bed Rail (R-A) onto the All-thread Bolts on the Headboard and connect using the Arc Washers (R-F), Flat Washers (R-E), Spring Washers (R-D), and Hex Nut (R-C). Do not fully tighten the Nuts until the Footboard has been connected. As shown in **(Detail E)**
5. Carefully align the Storage Footboard and headboard to be 'square' with the Side Rails. Fully tighten all the hex nut (R-C) by using the open wrench (R-G). As shown in **(Detail E)**.
6. Attach the eight Slat Support Legs (F-E) to the bottom side of four Wood Slats (F-D). (See Detail F).
7. Using one of the Support Panels (F-F) as a gauge, locate and position the four Slats so there is a Slat underneath, centered at the edge of each Support Panel. Attach using the Wood Screws (F-K).
8. Reinstall the Drawers into the Footboard by aligning the metal channels of the guides and push back into the Footboard.

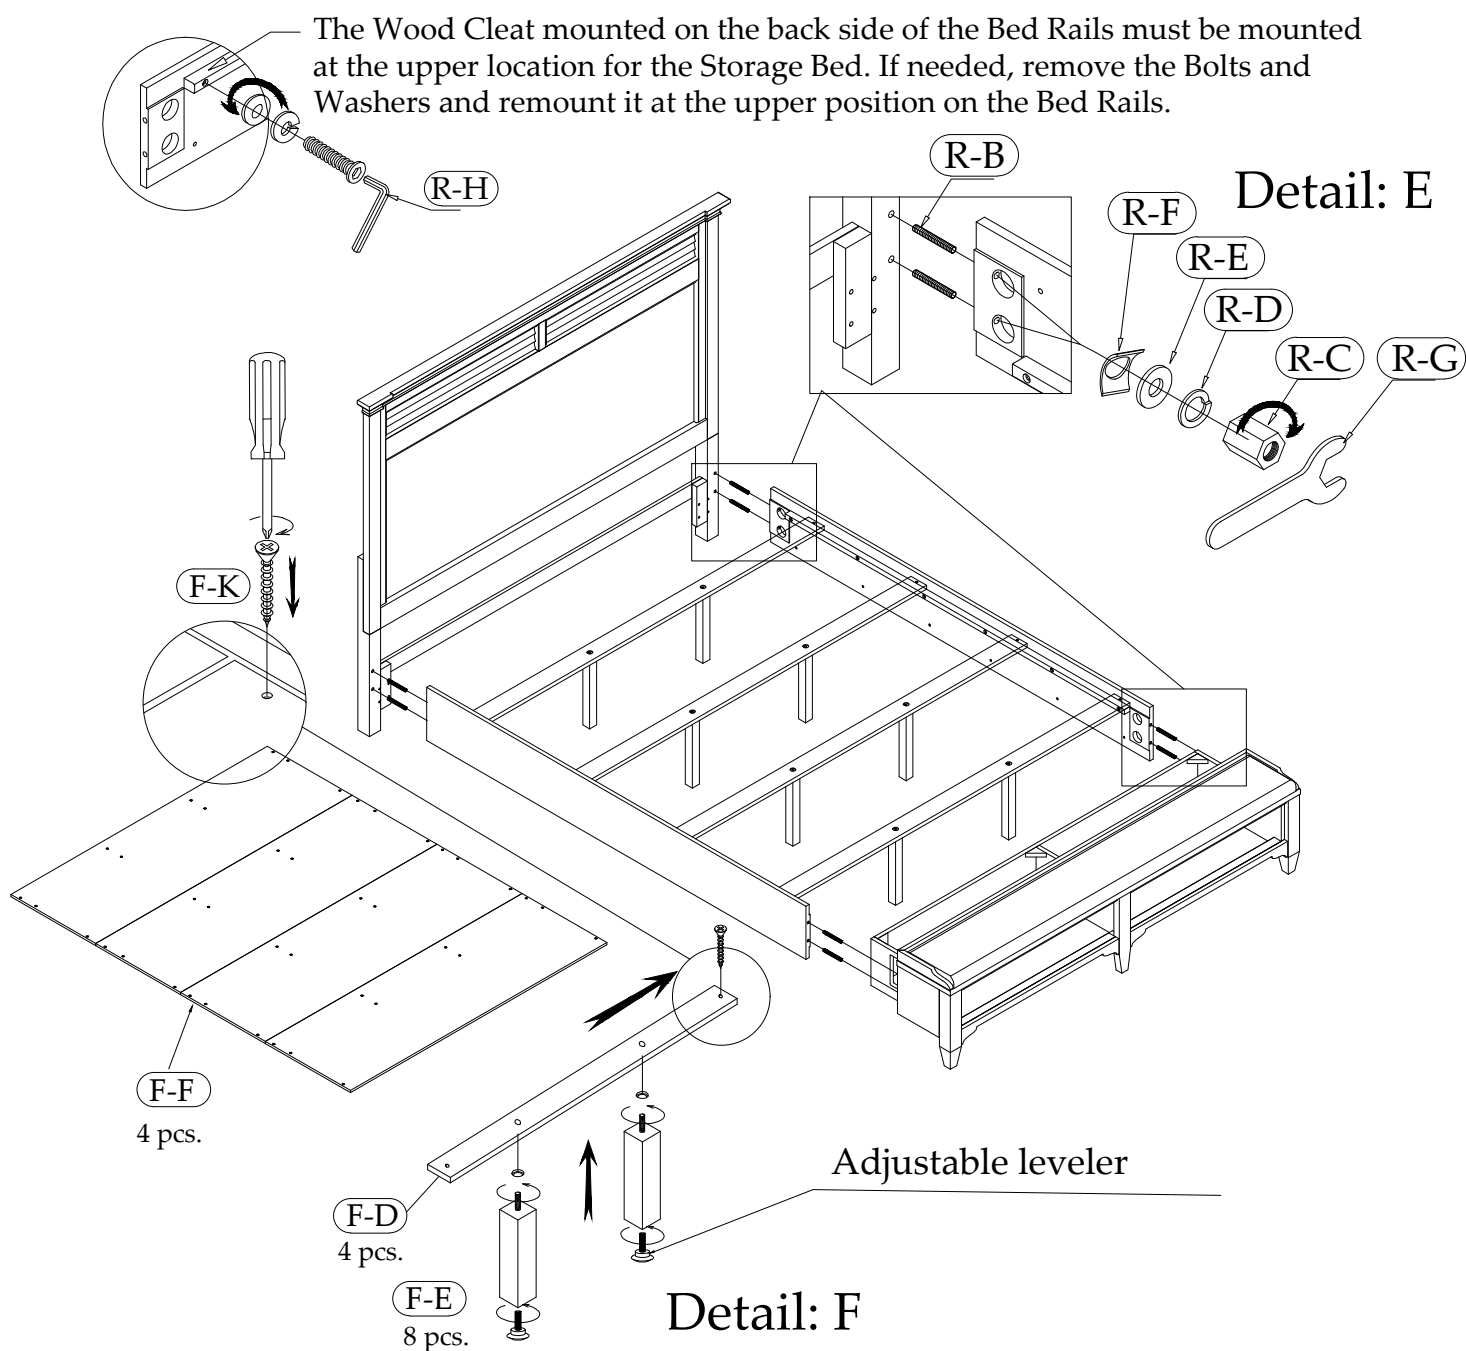

ASSEMBLY STEPS :

To prevent possible damage to furniture and personal injury, it is recommended that two people are used to perform the following steps.

4. Install All-Thread Bolts (R-B) into the Headboard (H-A) and the Footboard (F-A) before Carefully position one end of one Bed Rail (R-A) onto the All-thread Bolts on the Headboard and connect using the Arc Washers (R-F), Flat Washers (R-E), Spring Washers (R-D), and Hex Nut (R-C). Do not fully tighten the Nuts until the Footboard has been connected. As shown in **(Detail E)**
5. Carefully align the Footboard and headboard to be 'square' with the Side Rails. Fully tighten all the hex nut (R-C) by using the open wrench (R-G). As shown in **(Detail E)**.
6. Attach the eight Slat Support Legs (F-C) to the bottom side of four Wood Slats (F-B). (See Detail F).
7. Position and attach the Slats to the Bed Rails using the Wood Screws (F-D).

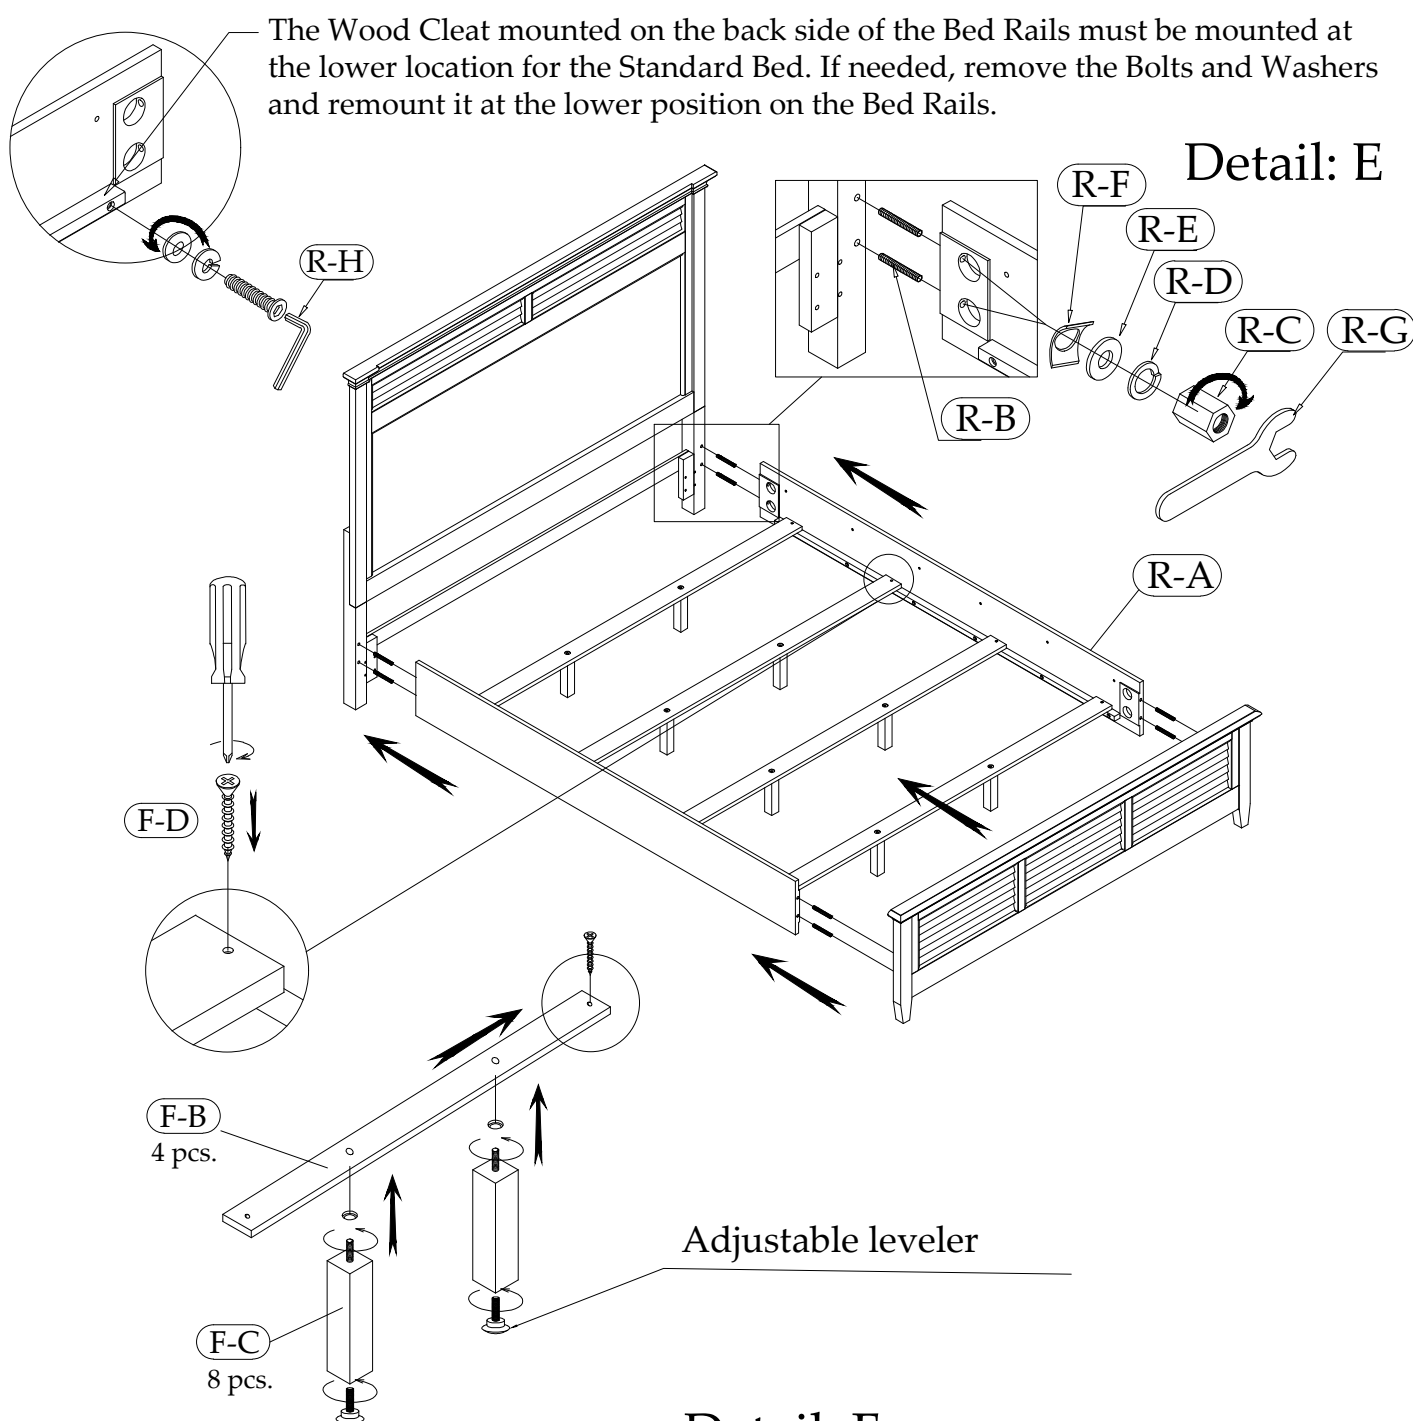

6/0-6/6 King Storage Bed

59384-59484 -- 6/0-6/6 Uph Headboard

59385-59485 -- 6/0-6/6 Uph Bench Storage Footboard

59373-59473 -- 5/0-6/6 Bed Rails

59383-59483 -- 6/0 Bed Rails

6/0-6/6 King Standard Bed




59384-59484 -- 6/0-6/6 Uph Headboard

59373-59473 -- 5/0-6/6 Bed Rails

59381-59481 -- 6/0-6/6 Louver Footboard with Slats

59383-59483 -- 6/0 Bed Rails

*The Headboard may be used alone with
an Eastern or California King Size
Metal Bed Frame*

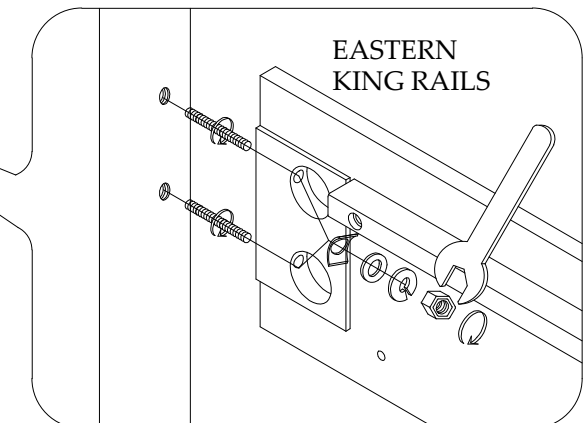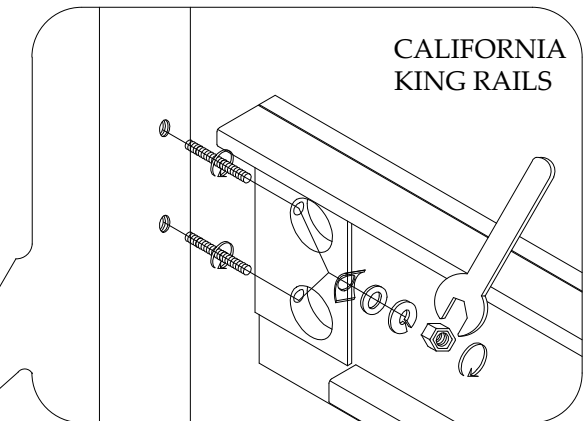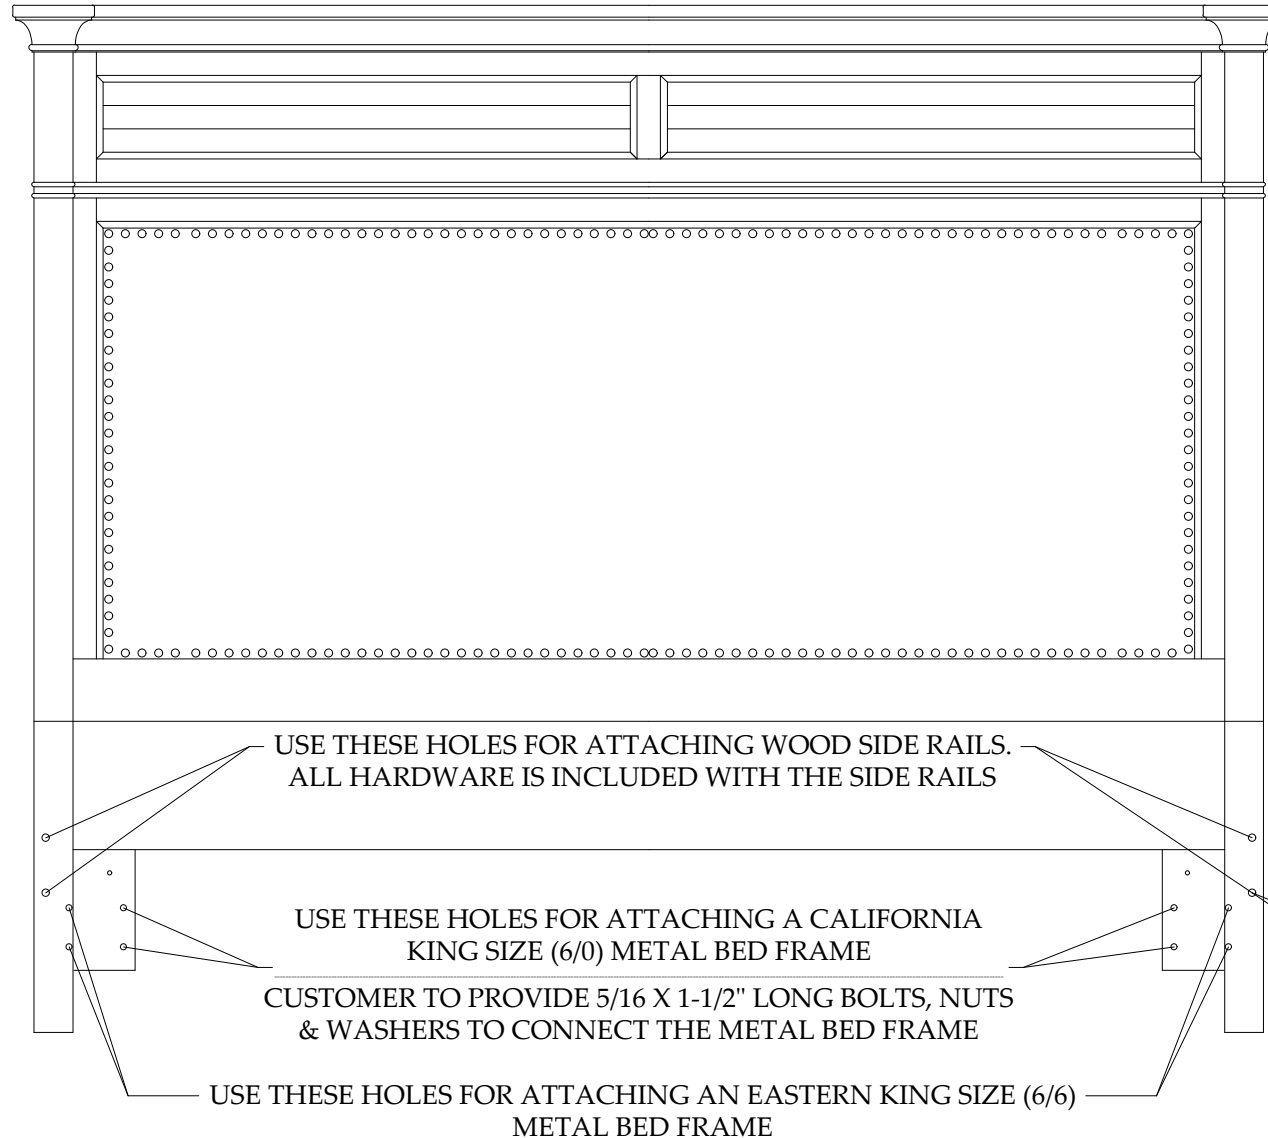

CUSTOMER TO PROVIDE 5/16 X 3-1/2" LONG BOLTS, NUTS &
WASHERS TO CONNECT THE METAL BED FRAME