



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

509961(B1&B2)
Sectional

ITEM:509961(B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.









ASSEMBLY TIME







15 MINUTES

PARTS IDENTIFICATION

B1(BOX 1)

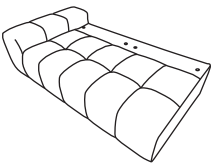A LAF SOFA SEAT		1PC	D BACKREST CUSHION		2PCS
B HEADREST SUPPORT		2PCS	E LEG		4PCS
C HEADREST		2PCS	H PILLOW		1PC

B2 (BOX 2)

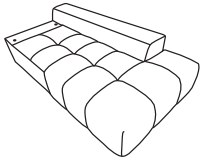F RAF CHAISE SEAT		1PC	D BACKREST CUSHION		1PC
G CHAISE BACKREST		1PC	H PILLOW		2PCS
C HEADREST		1PC	E LEG		4PCS

ITEM: 509961(B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.











WARNING!









1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 509961(B1)

1	BOLT (5/16" X 70mm - RBW)		8PCS	5	THREADED BOLT (5/16" X 90mm - RBW)		4PCS
2	LOCK WASHER (5/16" X 12mm - RBW)		12PCS	6	ALLEN WRENCH (M4 - RBW)		1PC
3	FLAT WASHER (5/16" X 16mm - RBW)		12PCS	7	WRENCH (5/16" - RBW)		1PC
4	HEX NUT (5/16" - RBW)		4PCS	8	HEADREST CONNECTOR		4PCS

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 509961(B2)


1	BOLT (5/16" X 70mm - RBW)		8PCS	5	THREADED BOLT (5/16" X 90mm - RBW)		2PCS
2	LOCK WASHER (5/16" X 12mm - RBW)		10PCS	6	ALLEN WRENCH (M4 - RBW)		1PC
3	FLAT WASHER (5/16" X 16mm - RBW)		10PCS	7	WRENCH (5/16" - RBW)		1PC
4	HEX NUT (5/16" - RBW)		2PCS	8	HEADREST CONNECTOR		2PCS

ITEM: **509961(B1&B2)**


ASSEMBLY INSTRUCTIONS



STEP 1

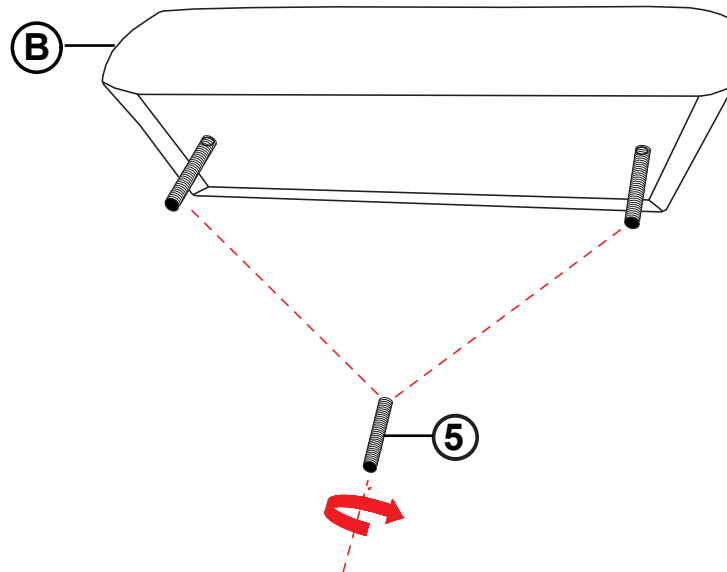

STEP 2

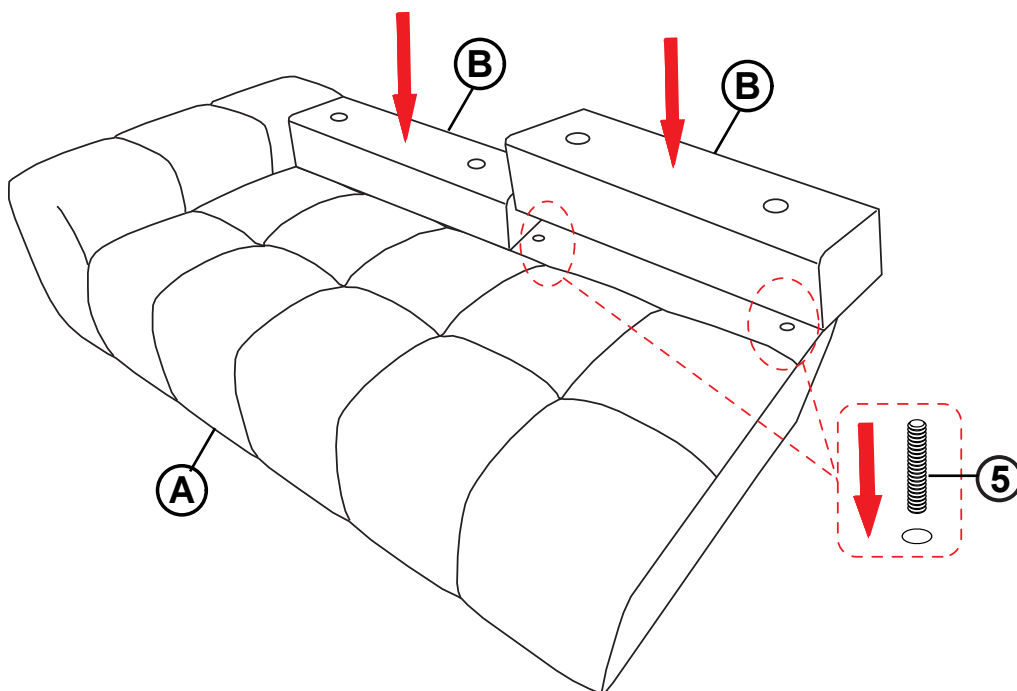


ITEM: **509961(B1&B2)**


ASSEMBLY INSTRUCTIONS



STEP 3

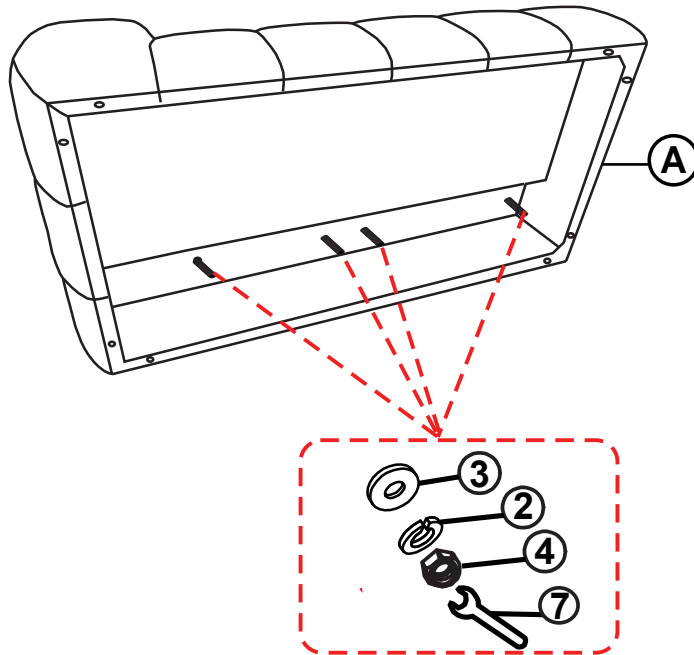

STEP 4

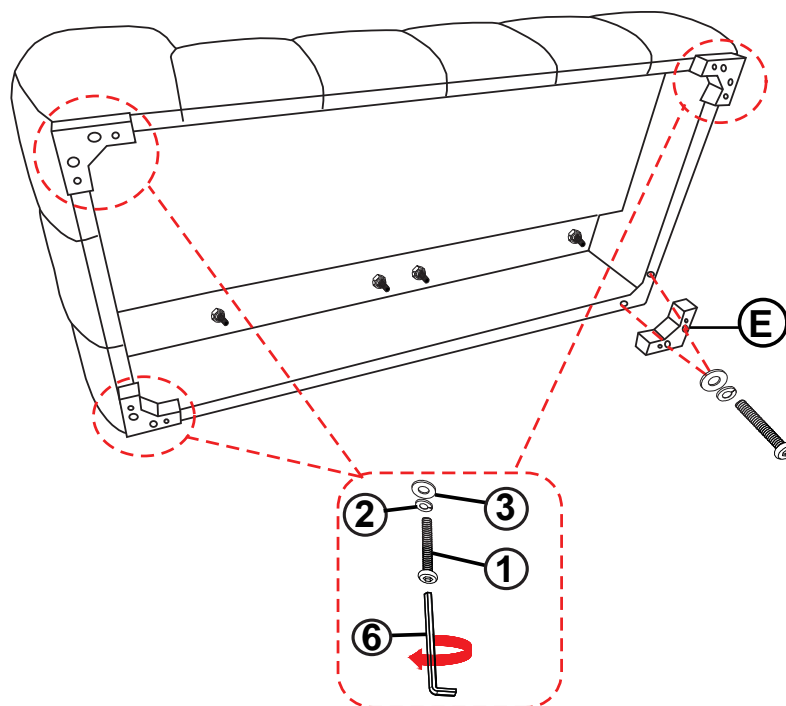


ITEM: **509961(B1&B2)**


ASSEMBLY INSTRUCTIONS



STEP 5

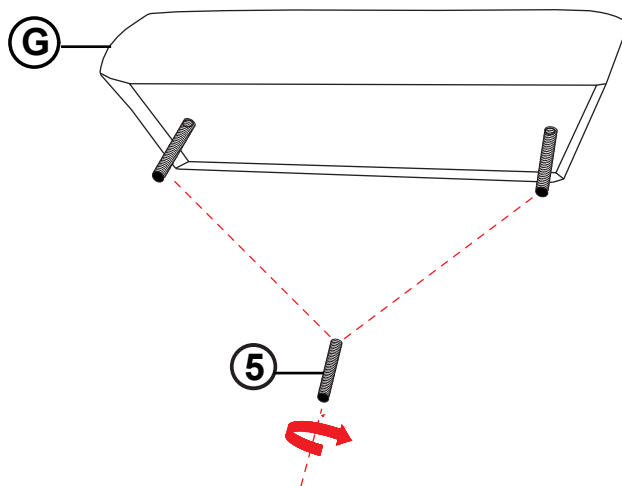

STEP 6

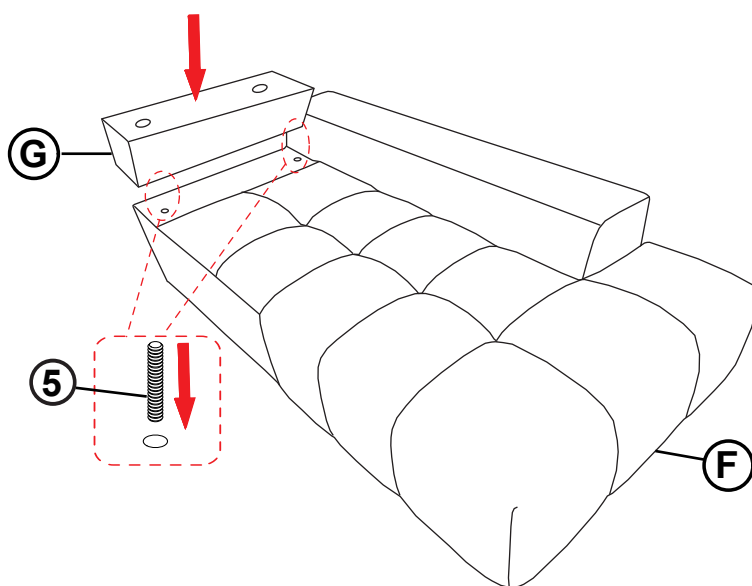


ITEM: **509961(B1&B2)**


ASSEMBLY INSTRUCTIONS



STEP 7

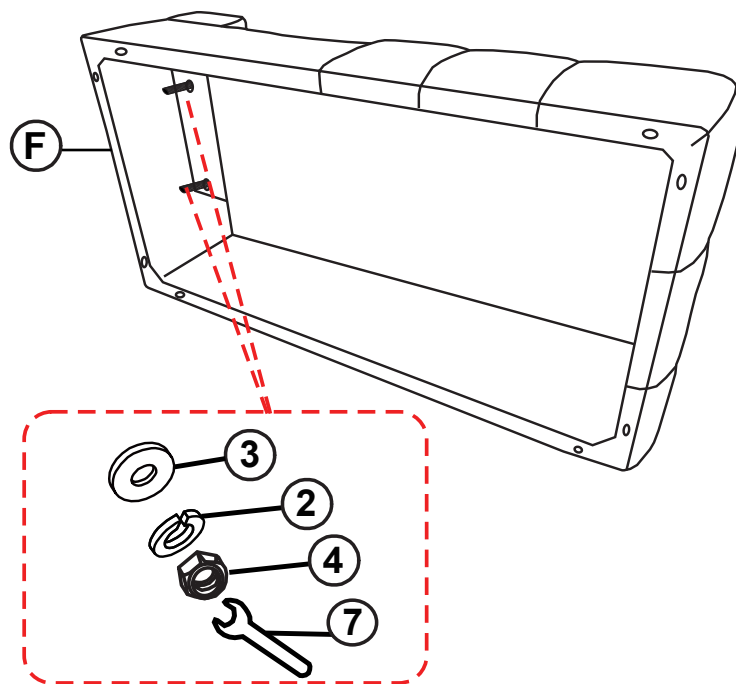

STEP 8

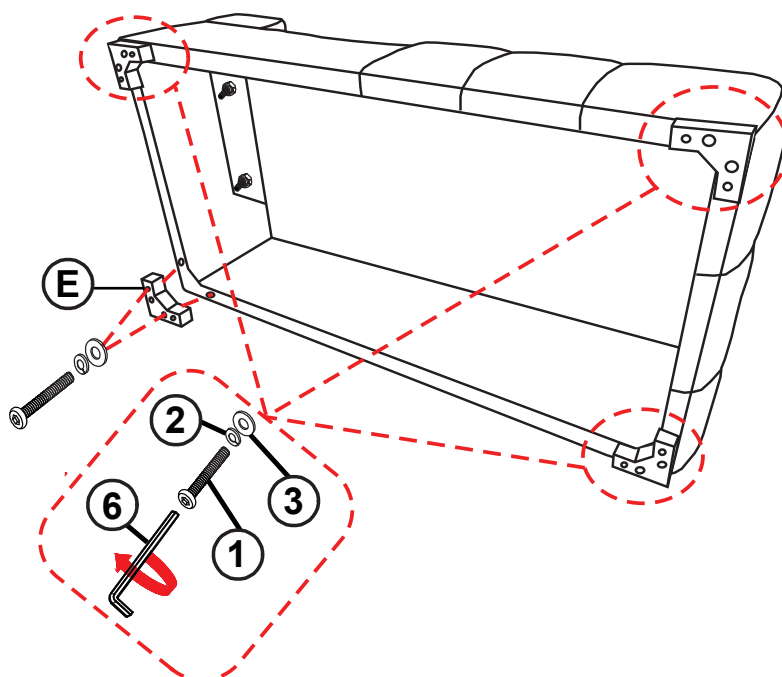


ITEM: **509961(B1&B2)**


ASSEMBLY INSTRUCTIONS



STEP 9

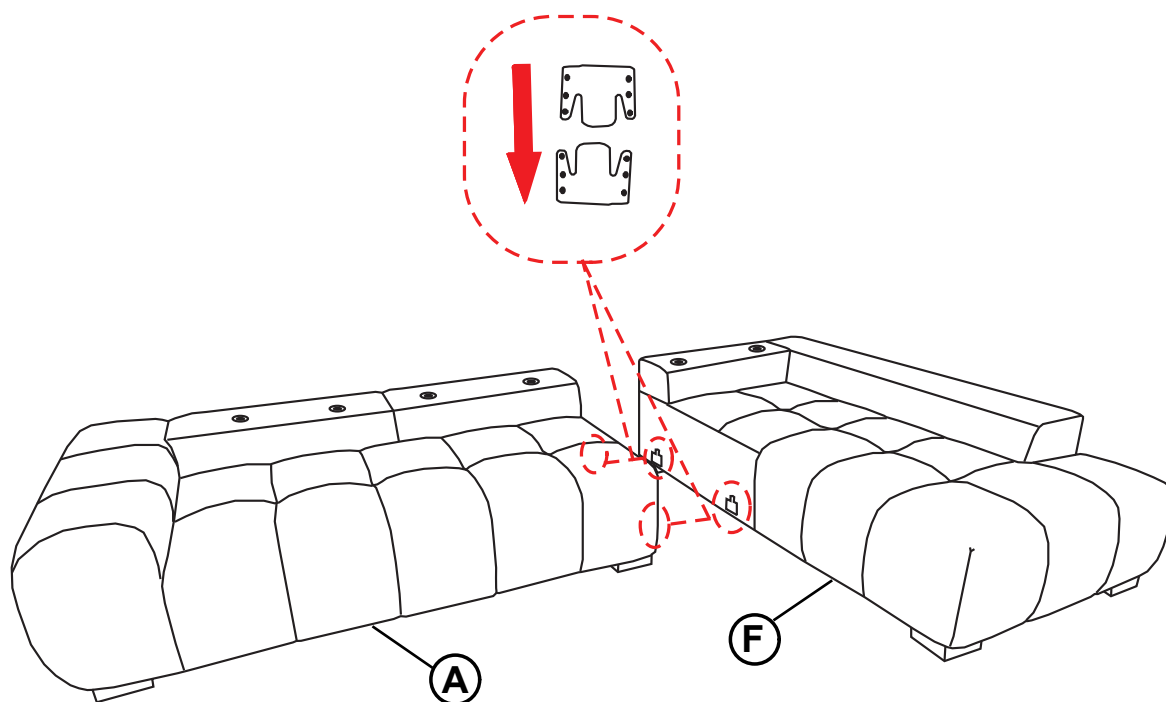

STEP 10

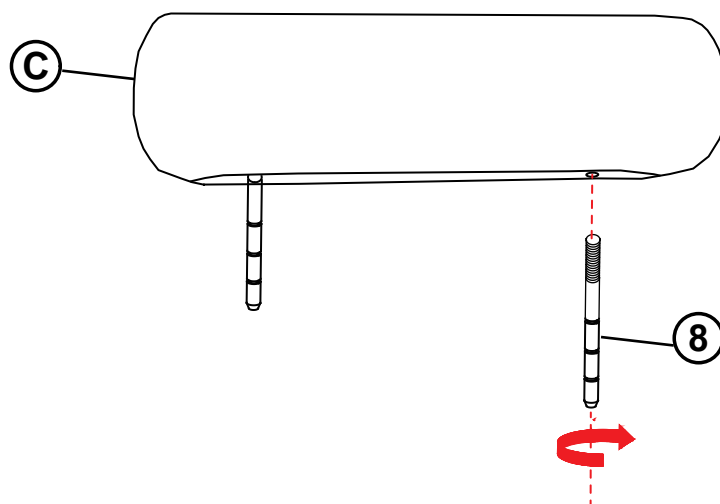


ITEM: **509961(B1&B2)**


ASSEMBLY INSTRUCTIONS




STEP 11

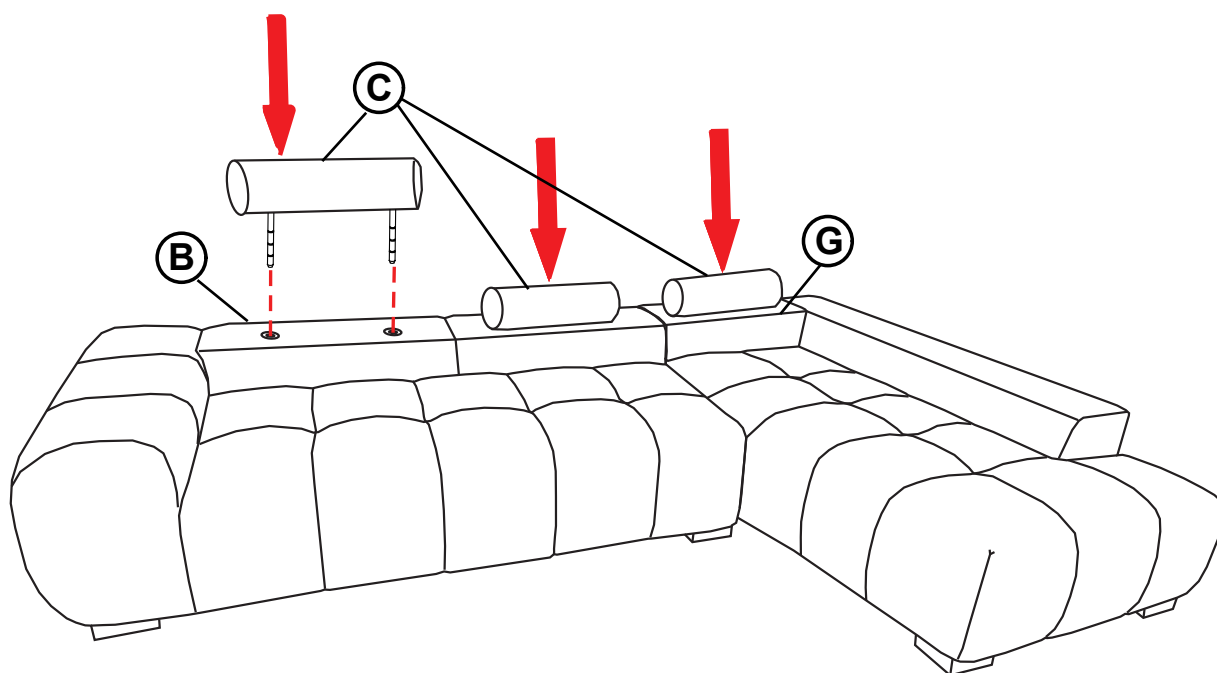

STEP 12 COMPLETE

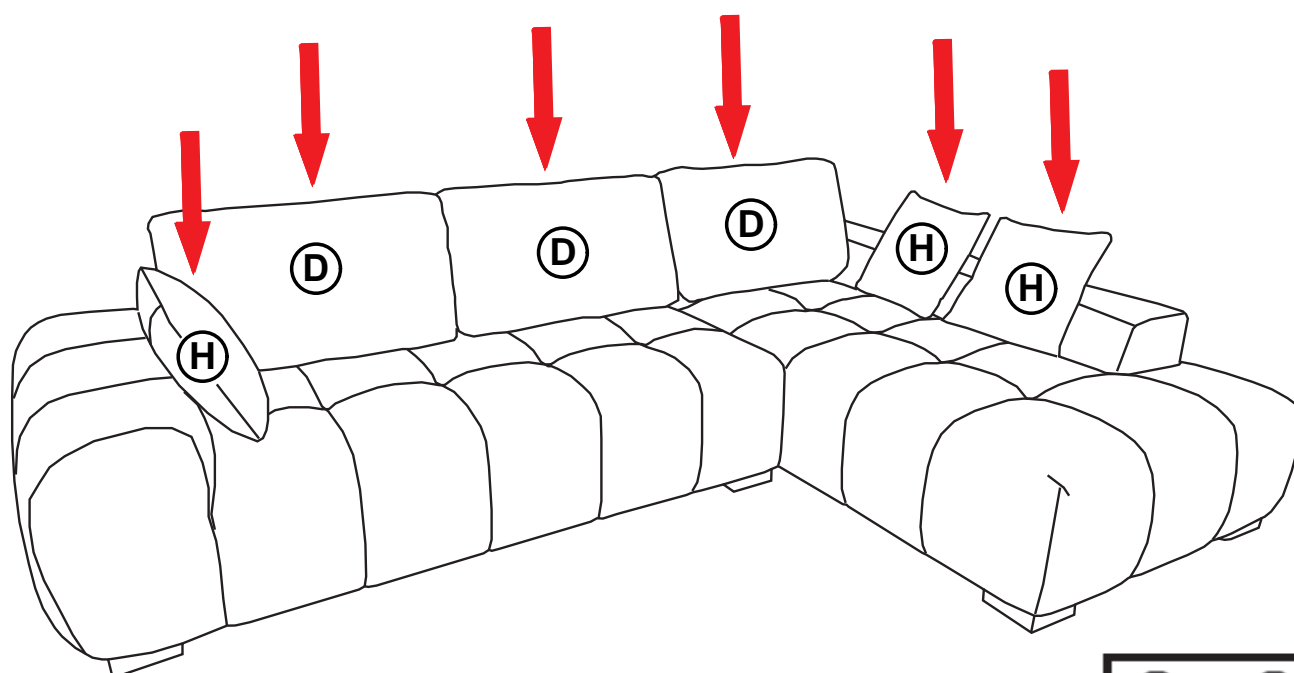

ITEM: **509961(B1&B2)**

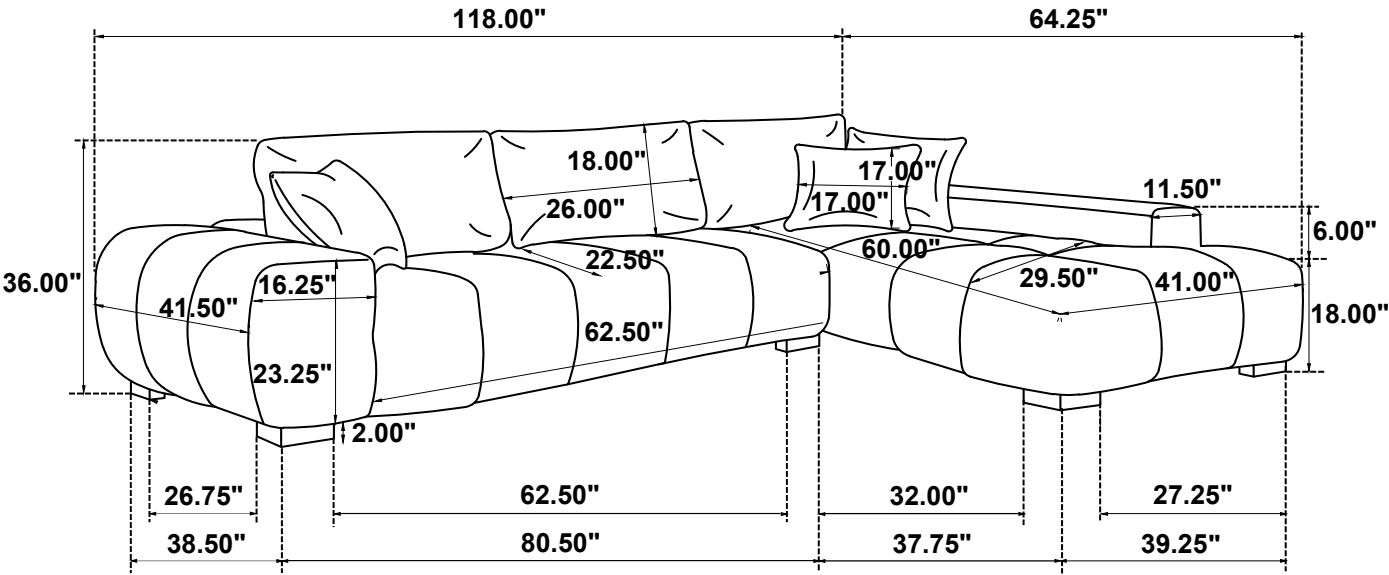

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

509961(B1&B2)
Sectional

ITEM:509961(B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.









ASSEMBLY TIME







15 MINUTES

PARTS IDENTIFICATION

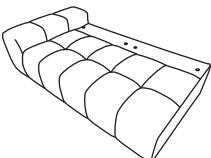B1(BOX 1)

A LAF SOFA SEAT		1PC	D BACKREST CUSHION		2PCS
B HEADREST SUPPORT		2PCS	E LEG		4PCS
C HEADREST		2PCS	H PILLOW		1PC

B2 (BOX 2)

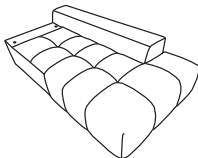F RAF CHAISE SEAT		1PC	D BACKREST CUSHION		1PC
G CHAISE BACKREST		1PC	H PILLOW		2PCS
C HEADREST		1PC	E LEG		4PCS

ITEM: 509961(B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.











WARNING!









1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 509961(B1)

1	BOLT (5/16" X 70mm - RBW)		8PCS	5	THREADED BOLT (5/16" X 90mm - RBW)		4PCS
2	LOCK WASHER (5/16" X 12mm - RBW)		12PCS	6	ALLEN WRENCH (M4 - RBW)		1PC
3	FLAT WASHER (5/16" X 16mm - RBW)		12PCS	7	WRENCH (5/16" - RBW)		1PC
4	HEX NUT (5/16" - RBW)		4PCS	8	HEADREST CONNECTOR		4PCS

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 509961(B2)


1	BOLT (5/16" X 70mm - RBW)		8PCS	5	THREADED BOLT (5/16" X 90mm - RBW)		2PCS
2	LOCK WASHER (5/16" X 12mm - RBW)		10PCS	6	ALLEN WRENCH (M4 - RBW)		1PC
3	FLAT WASHER (5/16" X 16mm - RBW)		10PCS	7	WRENCH (5/16" - RBW)		1PC
4	HEX NUT (5/16" - RBW)		2PCS	8	HEADREST CONNECTOR		2PCS

ITEM: **509961(B1&B2)**


ASSEMBLY INSTRUCTIONS



STEP 1

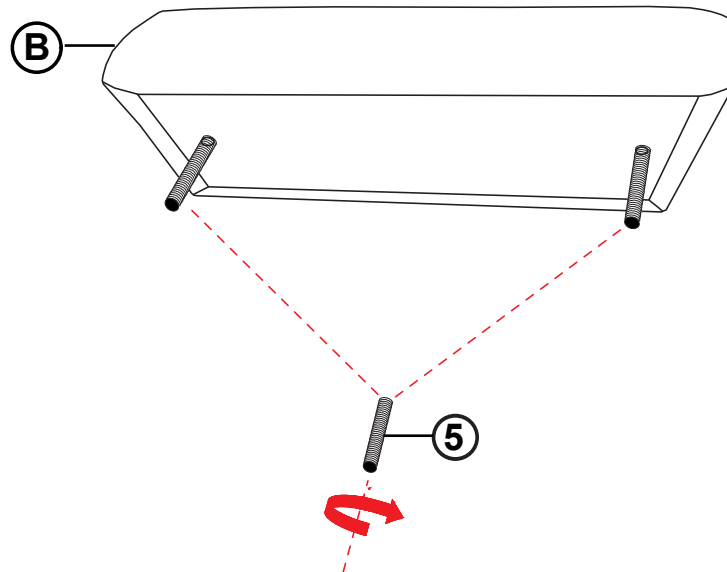

STEP 2

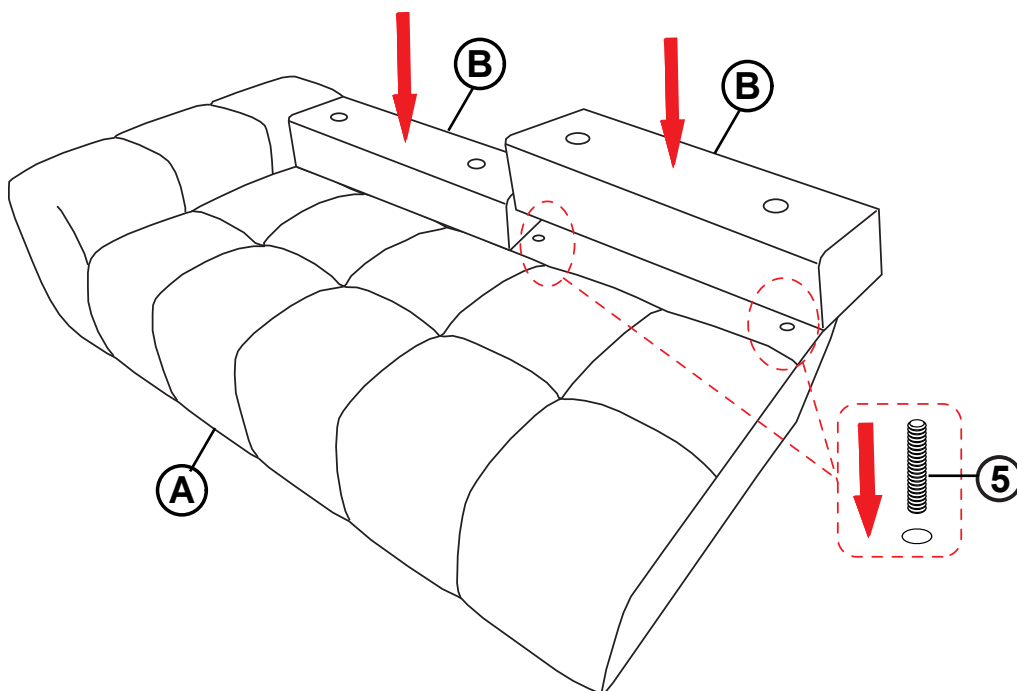


ITEM: **509961(B1&B2)**


ASSEMBLY INSTRUCTIONS



STEP 3

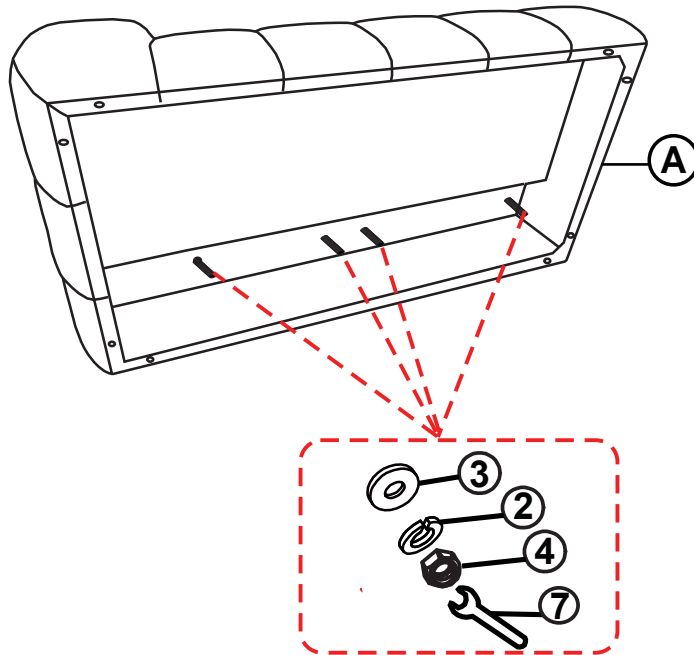

STEP 4

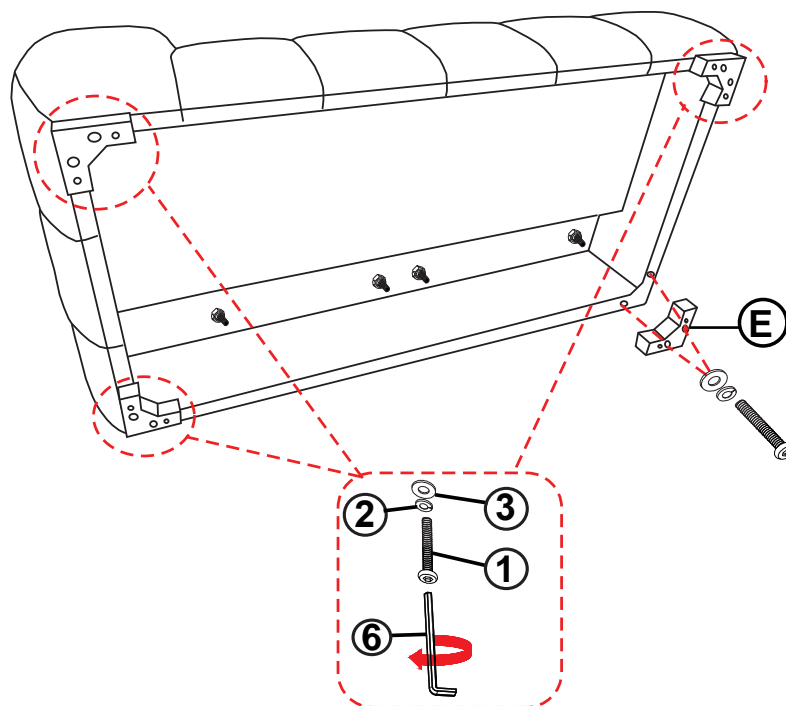


ITEM: **509961(B1&B2)**


ASSEMBLY INSTRUCTIONS



STEP 5

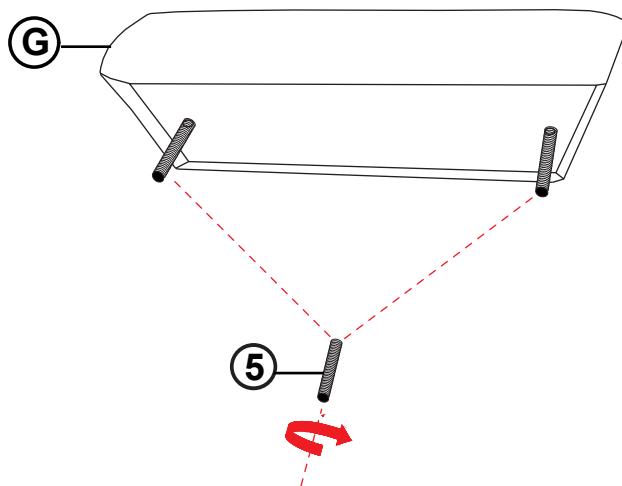

STEP 6

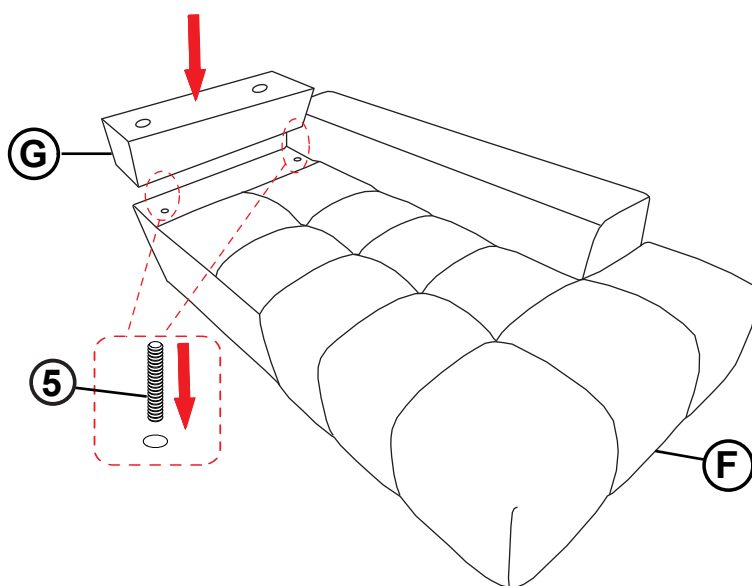


ITEM: **509961(B1&B2)**


ASSEMBLY INSTRUCTIONS



STEP 7

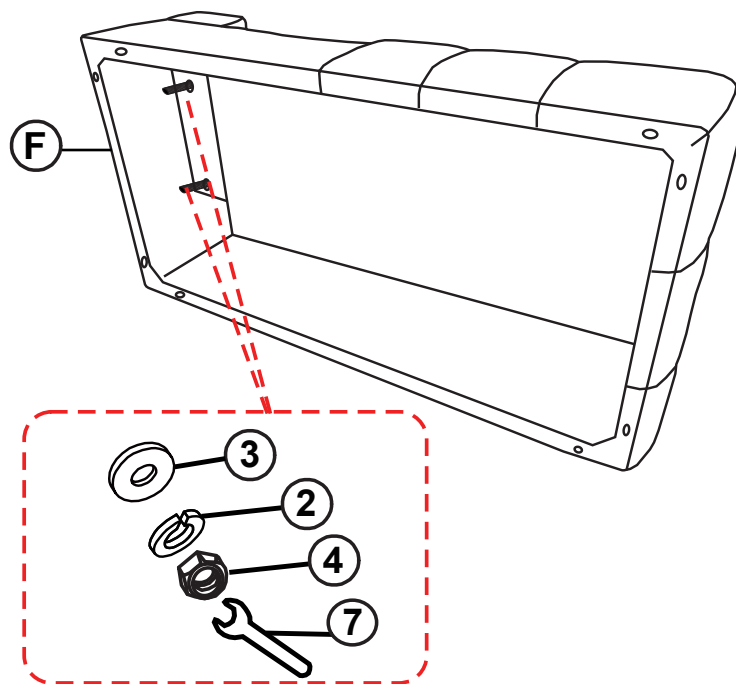

STEP 8

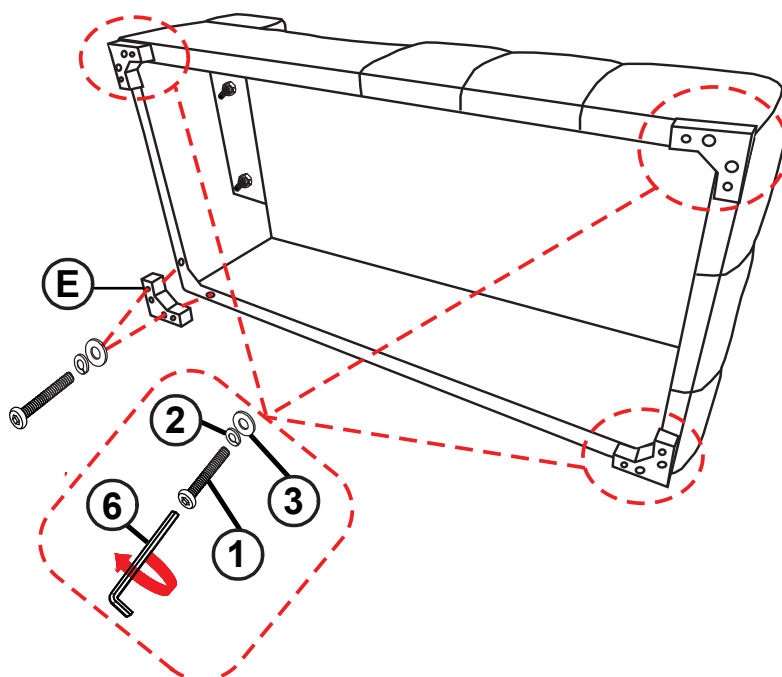


ITEM: **509961(B1&B2)**


ASSEMBLY INSTRUCTIONS



STEP 9

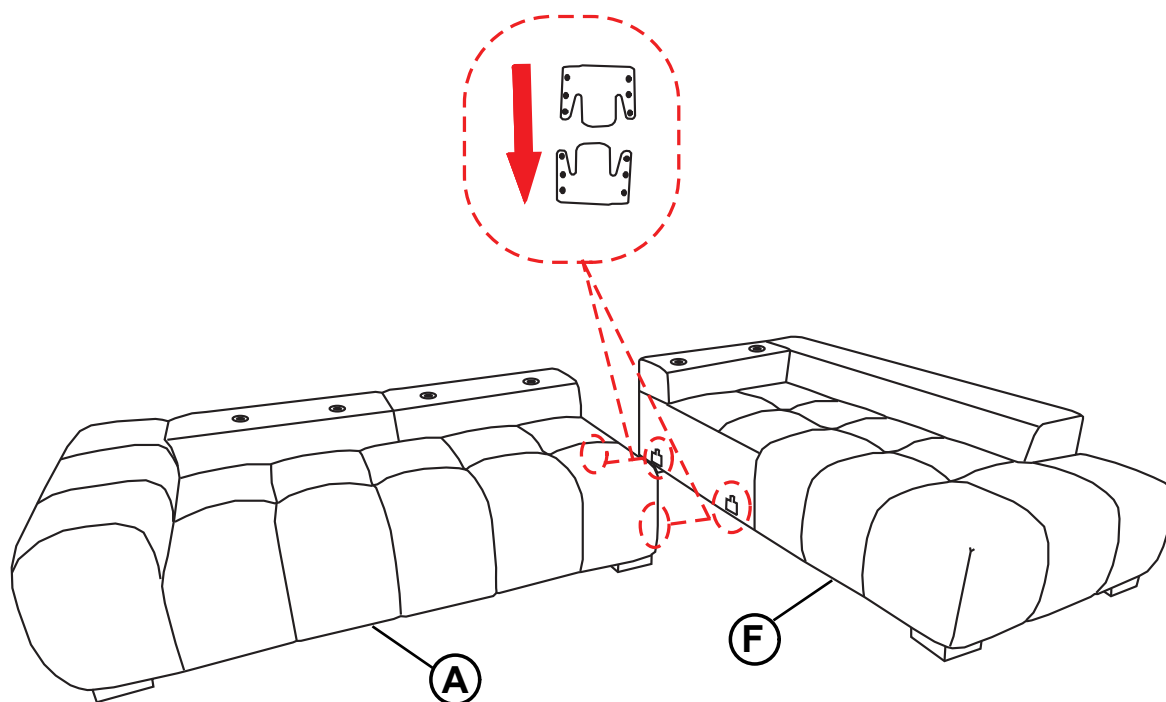

STEP 10

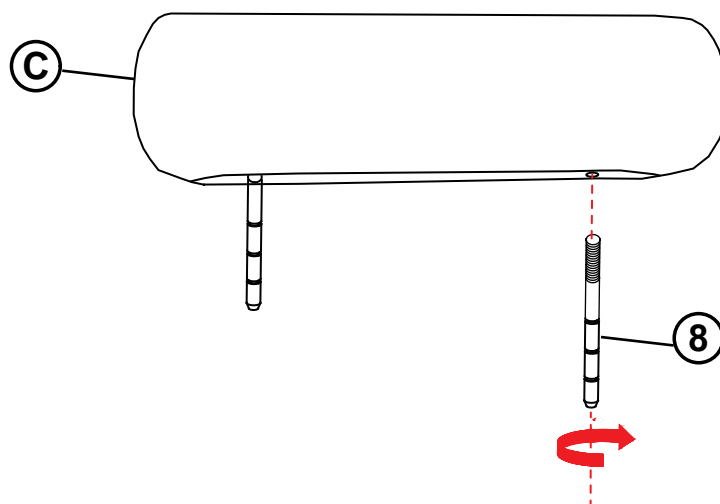


ITEM: **509961(B1&B2)**


ASSEMBLY INSTRUCTIONS




STEP 11

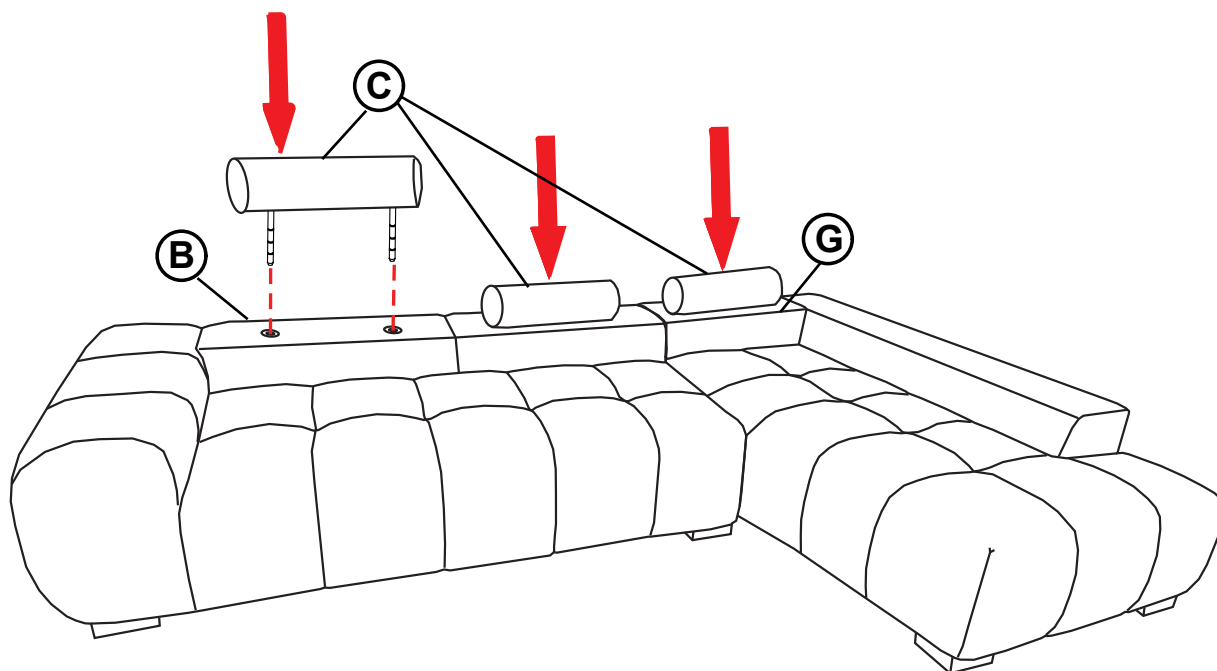

STEP 12 COMPLETE

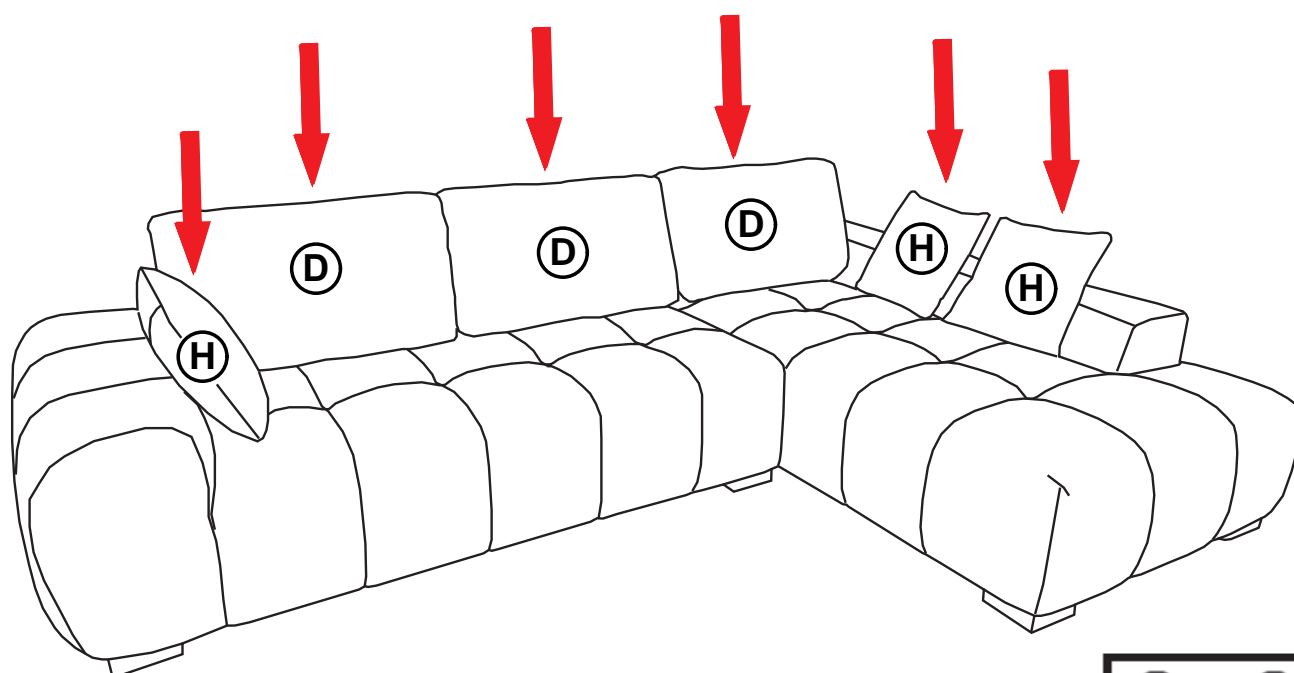

ITEM: **509961(B1&B2)**

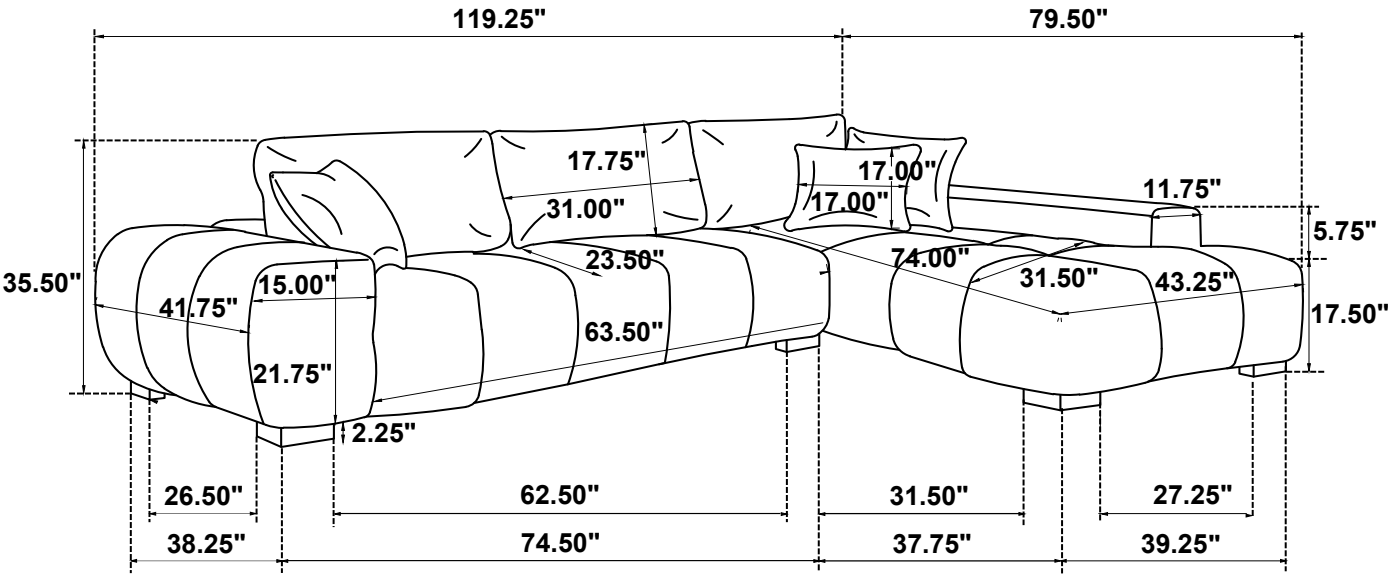

Note: Dimension tolerance $\pm 5\%$