
ASSEMBLY INSTRUCTIONS


8901/6053 WING BED

REQUIRED


Unpack all pieces of bed.

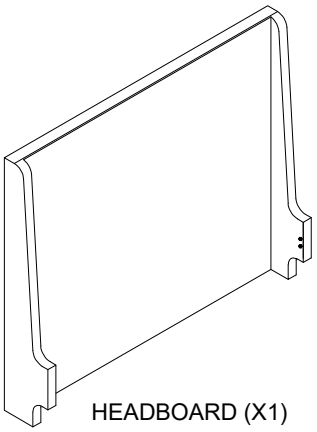

HEADBOARD (X1)

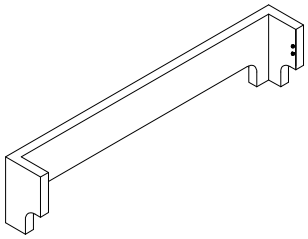


FOOTRAIL (X1)

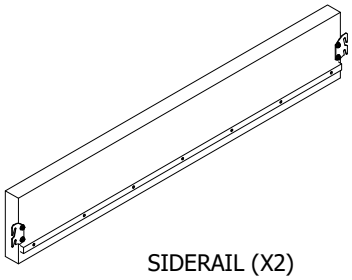

SIDERAIL (X2)

TOOLS REQUIRED

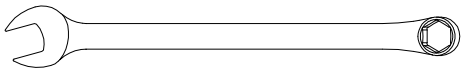

9/16" WRENCH


ALL HARDWARE SHOULD BE PRE-INSTALLED BUT SOME BOLTS MAY BE LOOSE DUE TO SHIPPING AND SOME WILL BE INTENTIONALLY LOOSE FOR EASY ASSEMBLY. CUSTOMER WILL NEED TO ENSURE ALL BOLTS ARE TIGHT AND ALL BED COMPONENTS ARE SECURELY FASTENED ONCE BED IS FULLY ASSEMBLED.




SPLIT LOCK WASHER (X16)




WASHER (X16)

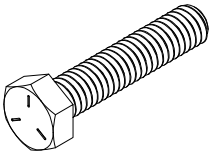

1 1/2" - 5/16"-18 BOLT (X16)

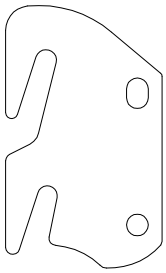

HANGER BRACKET (X4)

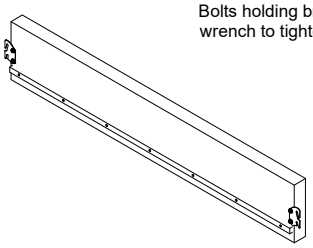

Bolts holding brackets to siderails should be tight. Use 9/16" wrench to tighten bolts if needed.


1


While one person holds the headboard steady, hook siderail bracket (open end) over the bolts of the headboard.

Tighten headboard bolts onto siderail with 9/16" wrench.

Complete these steps for each side.


REQUIRED

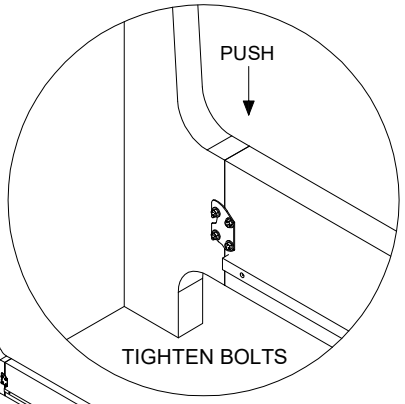

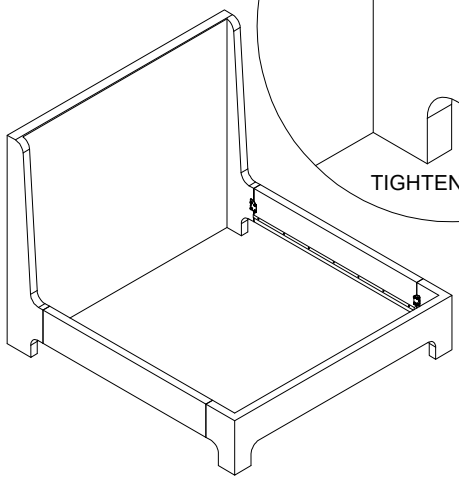

3

Bolts in headboard/footrail should not be tight and should have at least 1/4" gap between washer and side of headboard/footrail.

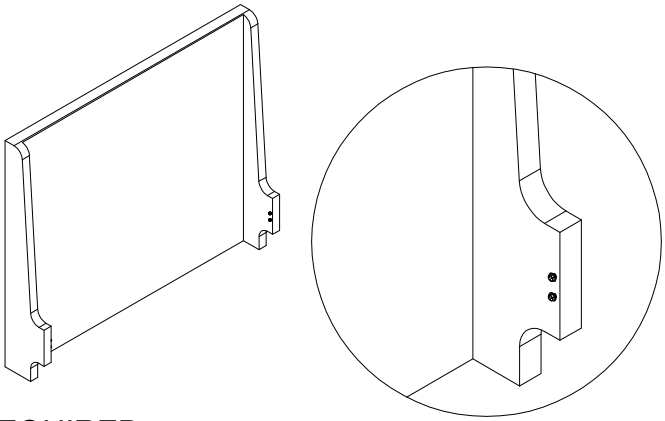

REQUIRED


2


REQUIRED

While one person holds the headboard steady, hook siderail bracket (open end) over the bolts of the footrail.

Tighten footrail bolts onto siderail with 9/16" wrench.

Complete these steps for each side.

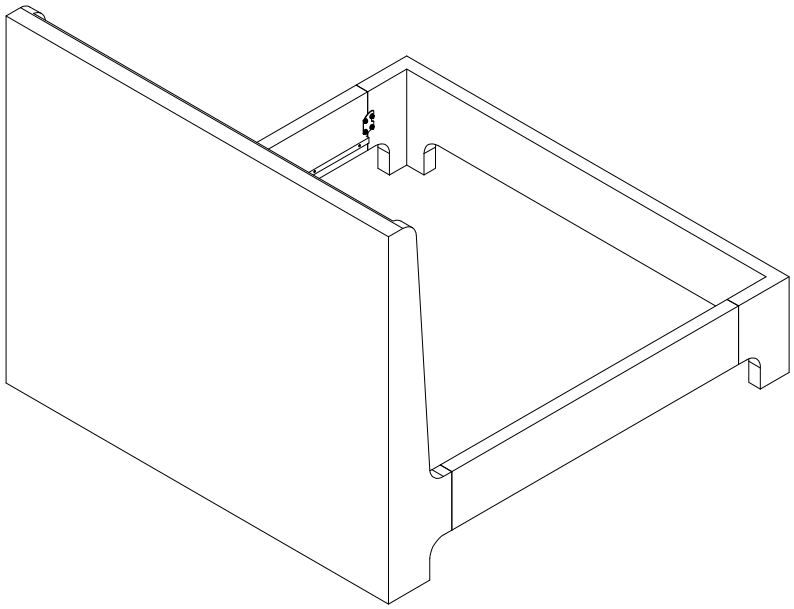

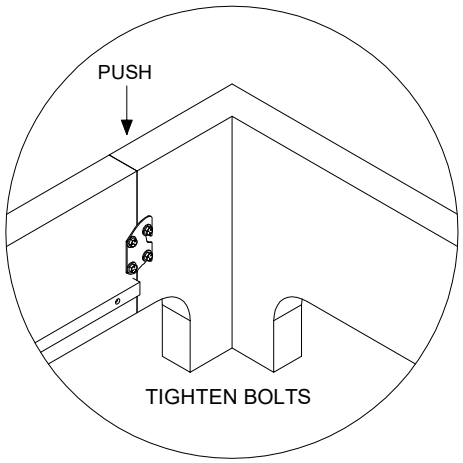


4

After bed has been assembled and all bolts have been tightened, make sure the bed is square prior to installing the strong arm slat rails.

Instructions on how to install the strong arm system are included.

COMPLETED ASSEMBLY

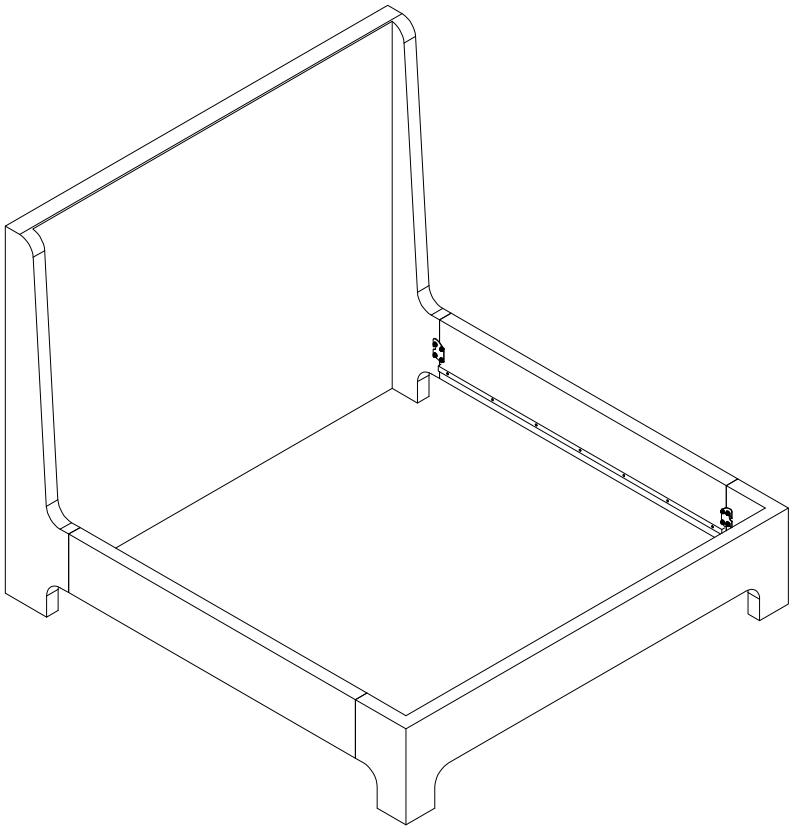

REQUIRED

5