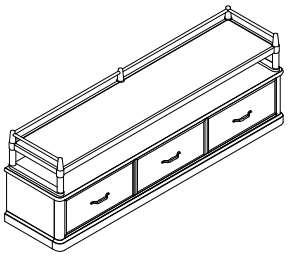
Liberty Furniture INDUSTRIES, INC

ASSEMBLY INSTRUCTION

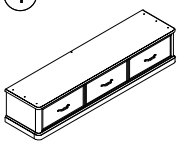

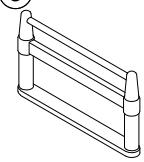
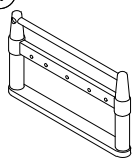

ITEM#: 866-TV82 **DESCRIPTION: 82 INCH TV CONSOLE**

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts List Below:





FINISHED ASSEMBLY




PART LIST:

①	②	③	④	⑤	⑥
					
82 INCH TV CONSOLE: 1 PC	SHELF TOP: 1 PC	LEFT FRAME TOP: 1 PC	RIGHT FRAME TOP: 1 PC	CENTER POST: 1 PC	STRETCHER: 2 PCS

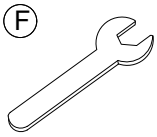HARDWARE LIST:

Ⓐ	Ⓑ	Ⓒ	Ⓓ	Ⓔ	Ⓕ	Ⓖ	Ⓗ
							
WOODEN DOWEL (Ø10X1-1/4") : 4 PCS	BOLT (Ø5/16"-18 X 1-3/4"): 13 PCS	BOLT (Ø5/16"-18 X 2-1/2"): 1 PCS	SPRING WASHER (Ø5/16") : 14 PCS	FLAT WASHER (Ø5/16"X19MM): 14 PCS	WRENCH Ø5/16" (12MM) : 1PC	WOOD SCREW (Ø8X1-1/4") : 4 PCS	FURNITURE TIPPING RESTRAINT: 2PCS

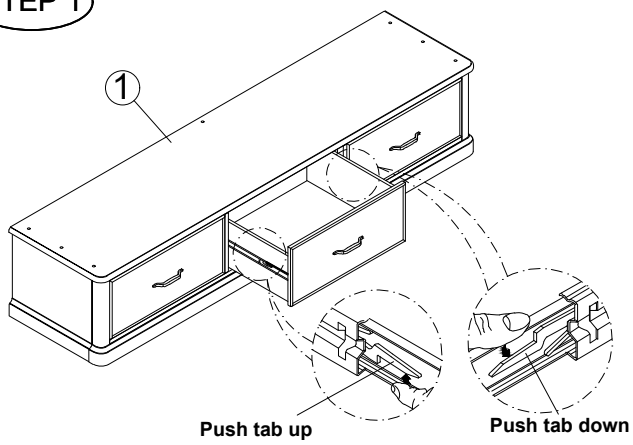
STEP 1




To remove drawer, simultaneously pull tab up on one side and push down on the other and remove drawer.

STEP 2

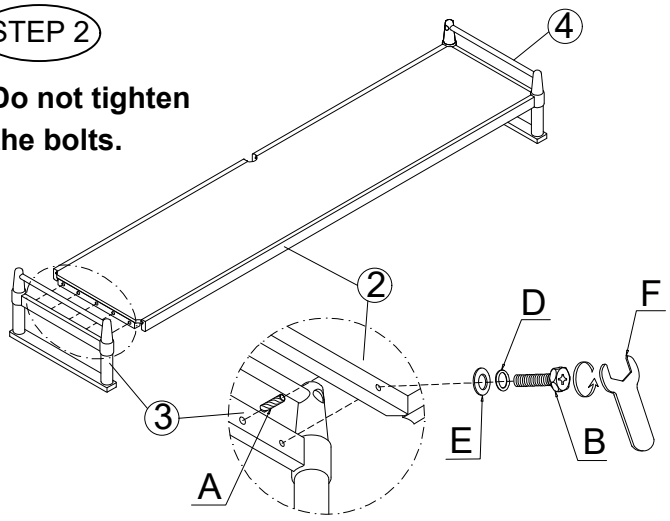
Do not tighten the bolts.



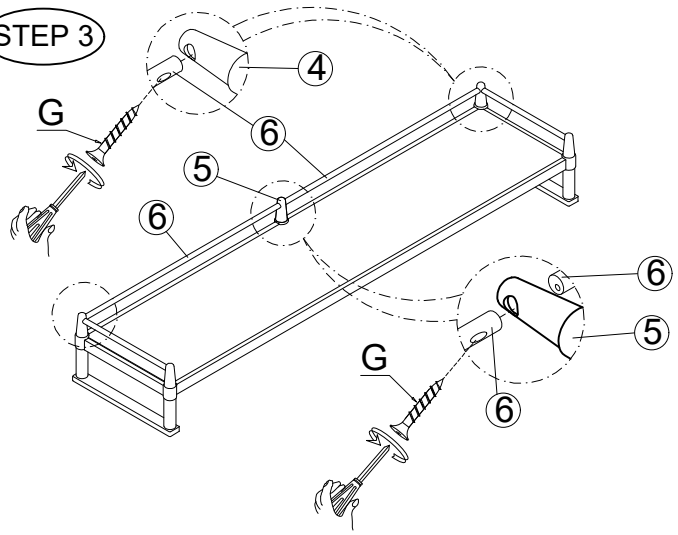STEP 3



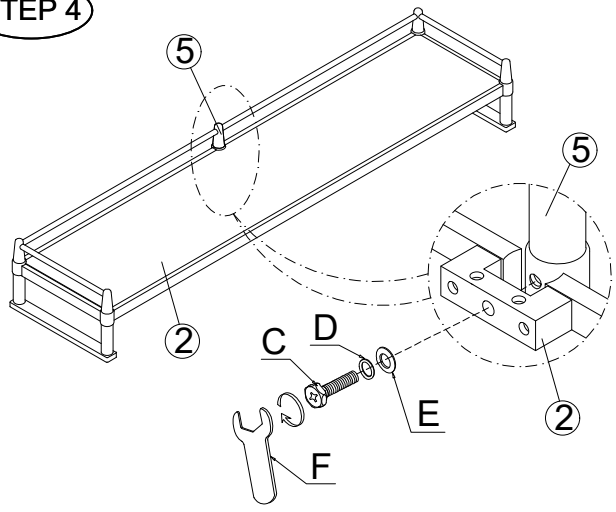STEP 4



Made in VietNam

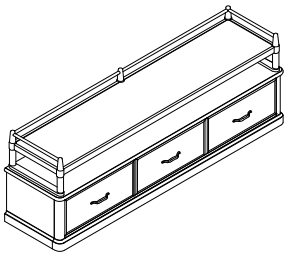
Liberty Furniture INDUSTRIES, INC

ASSEMBLY INSTRUCTION






ITEM#: 866-TV82 **DESCRIPTION: 82 INCH TV CONSOLE**

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts List Below:





FINISHED ASSEMBLY




PART LIST:

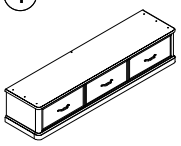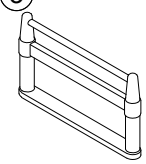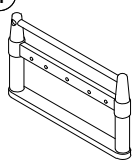①	②	③	④	⑤	⑥
					
82 INCH TV CONSOLE: 1 PC	SHELF TOP: 1 PC	LEFT FRAME TOP: 1 PC	RIGHT FRAME TOP: 1 PC	CENTER POST: 1 PC	STRETCHER: 2 PCS

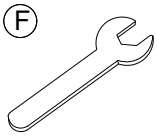
HARDWARE LIST:

Ⓐ	Ⓑ	Ⓒ	Ⓓ	Ⓔ	Ⓕ	Ⓖ	Ⓗ
							
WOODEN DOWEL (Ø10X1-1/4") : 4 PCS	BOLT (Ø5/16"-18 X 1-3/4"): 13 PCS	BOLT (Ø5/16"-18 X 2-1/2"): 1 PCS	SPRING WASHER (Ø5/16") : 14 PCS	FLAT WASHER (Ø5/16"X19MM): 14 PCS	WRENCH Ø5/16" (12MM) : 1PC	WOOD SCREW (Ø8X1-1/4") : 4 PCS	FURNITURE TIPPING RESTRAINT: 2PCS

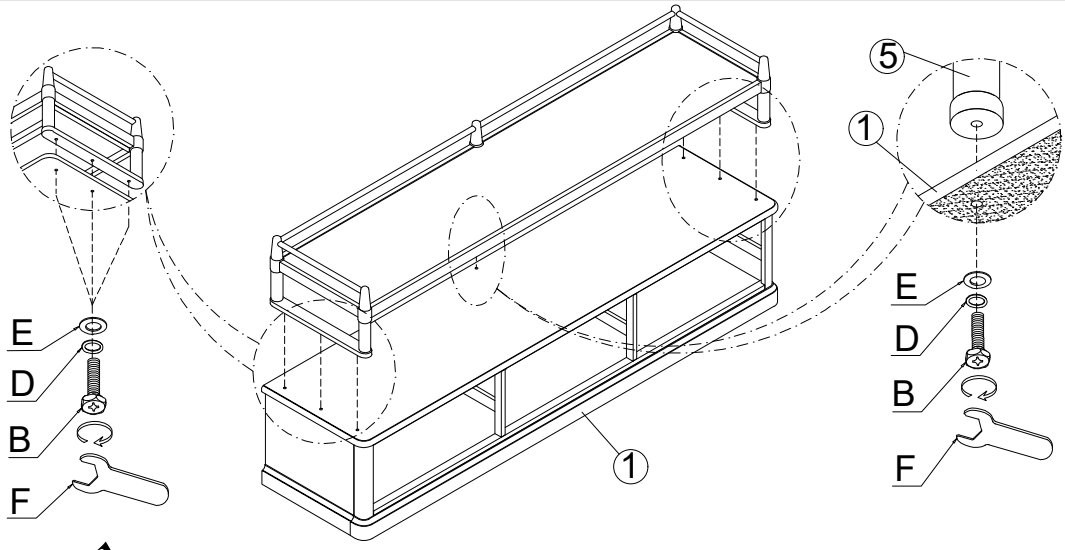STEP 5



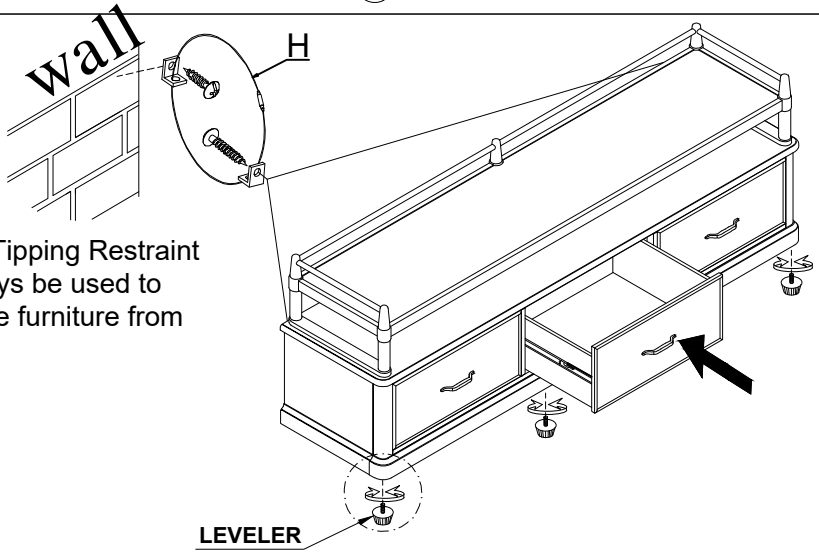STEP 6



Furniture Tipping Restraint must always be used to prevent the furniture from tipping.

Tighten all the bolts and reinstall all drawers back to the case to complete assembly.

Made in VietNam