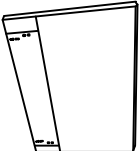

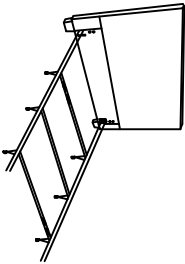
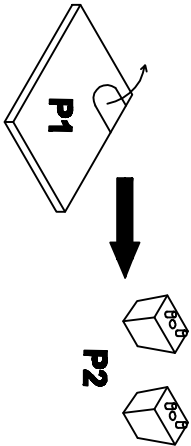
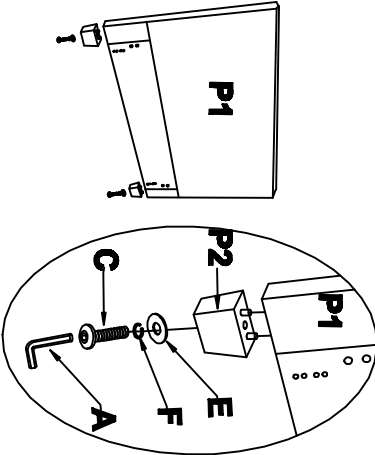
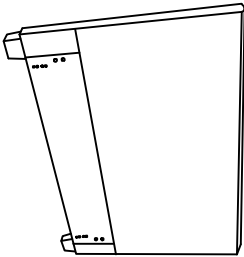


# GENEVA HEADBOARD ASSEMBLY INSTRUCTION

( FULL/ QN / CK / EK )

		P1	P2	P3
				
		HEADBOARD (HB) 1PC	WOODEN LEG 2PCS	
		<b>A</b> WRENCH 5/16" 1PC	<b>B</b> WRENCH 1/4" 1PC	<b>C</b> BOLT 5/16"x3.25" 4PCS
			<b>D</b> BOLT 1/4"x1" 8PCS	<b>E</b> FLAT WASHER Ø5/16" 4PCS
				<b>F</b> SPRING WASHER Ø5/16" 4PCS
				<b>G</b> FLAT WASHER Ø1/4" 8PCS
				<b>H</b> SPRING WASHER Ø1/4" 8PCS
<b>OPTION 1:</b> 		<b>INSTRUCTIONS FOR ADJUSTING LEVELERS.</b>		
<b>OPTION 2:</b> 				
<b>STEP 1:</b> TAKE THE LEGS OUT FROM THE BACK OF HEADBOARD.		<b>THE LEVELERS ARE LOCATED ON THE UNDERSIDE OF EACH OF THE LEGS (P2). TURN COUNTER-CLOCKWISE TO EXTEND, AND CLOCKWISE TO CONTRACT. ADJUST LEVELERS UNTIL THE LEGS MATCH EACH OTHER IN HEIGHT.</b>		
<b>STEP 2:</b> ASSEMBLE THE WOODEN LEGS TO THE BOTTOM OF HEADBOARD.		<b>ASSEMBLY COMPLETE.</b>		
<b>STEP 1:</b> PLACE WASHERS (H&G) THROUGH BOLT (D), AND FASTEN THE METAL BED FRAME TO HEADBOARD.		<b>STEP 2:</b> ASSEMBLY IS COMPLETED, SHOWN WITH METAL BED FRAME.		