

# ASSEMBLY INSTRUCTIONS

Page 1/3



## aspenhome®


Distributed by Furniture Values International, LLC

ITEM NO: I32-412/403/402 Queen Liquid Panel LP Bed  
I32-492/403/402 Queen Painted Panel LP Bed


| COMPONENTS LIST -412/492 |       | HARDWARE PACK For -412/492                                                                                    |        |
|--------------------------|-------|---------------------------------------------------------------------------------------------------------------|--------|
| Headboard                | 1 Pc  | A  Bolt (Ø5/16"*2")          | 8 Pcs  |
| Left Leg                 | 1 Pc  | B  Bolt (Ø5/16"*1-1/2")      | 6 Pcs  |
| Right Leg                | 1 Pc  | C  Lock Washer (Ø5/16")      | 14 Pcs |
| Wood Stretcher           | 1 Pc  | D  Flat Washer (Ø5/16"*3/4") | 14 Pcs |
| Center Support Leg       | 1 Pc  | E  Allen Wrench (4mm)        | 1 Pc   |
| COMPONENTS LIST -403     |       | HARDWARE PACK For -402                                                                                        |        |
| Footboard                | 1 Pc  | F  Wood Screw (M4*1")        | 8 Pcs  |
| Support legs (for slats) | 4 Set | G  Allen Wrench (4mm)        | 1 Pc   |
| COMPONENTS LIST -402     |       |                                                                                                               |        |
| Bed rails                | 2 Pcs |                                                                                                               |        |
| Slats                    | 4 Pcs |                                                                                                               |        |

### SAFETY WARNING:

ALL beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of the perpendicular (90 degree) and weaken the support system and may allow the bed to collapse.

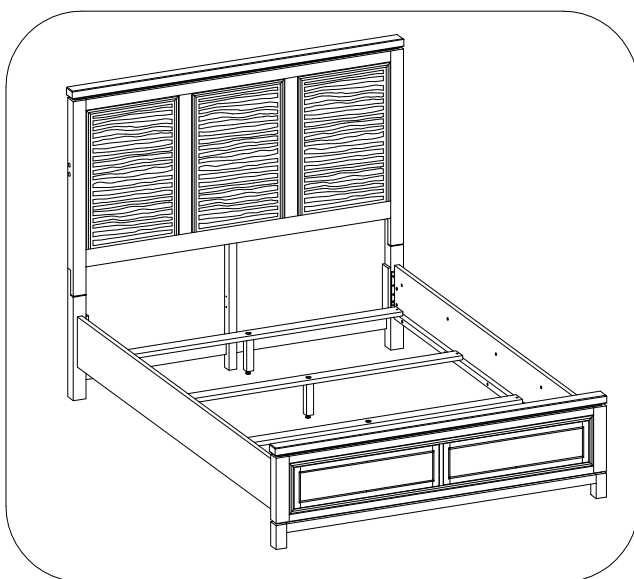

Queen Liquid Panel LP Bed

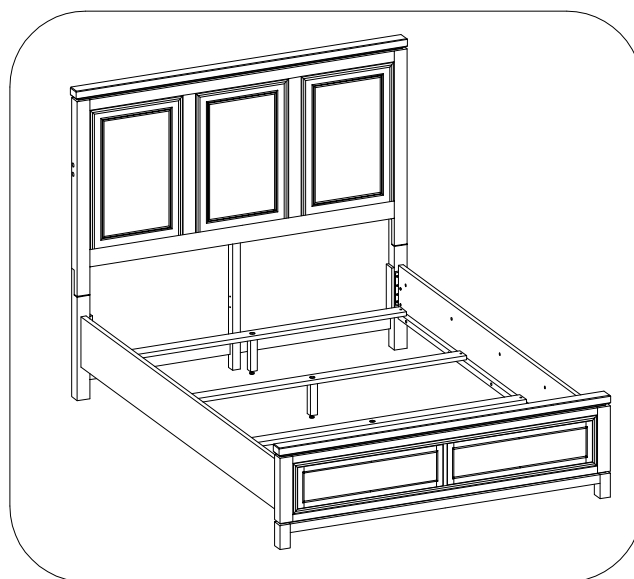

Queen Painted Panel LP Bed

MADE IN VIETNAM

DATE: 2015-09-08

# ASSEMBLY INSTRUCTIONS




Page 2/3



## aspenhome®

Distributed by Furniture Values International, LLC

ITEM NO: I32-412/403/402 Queen Liquid Panel LP Bed  
I32-492/403/402 Queen Painted Panel LP Bed

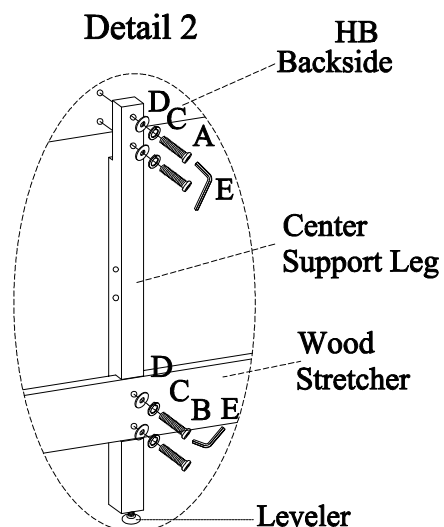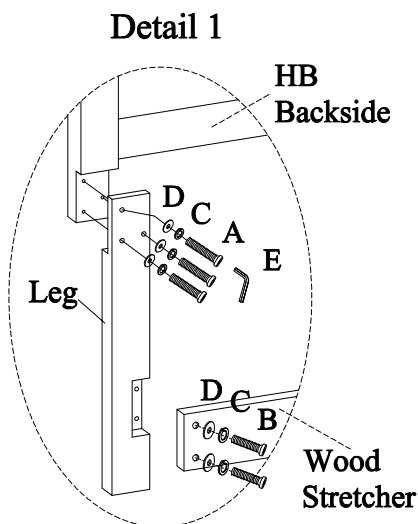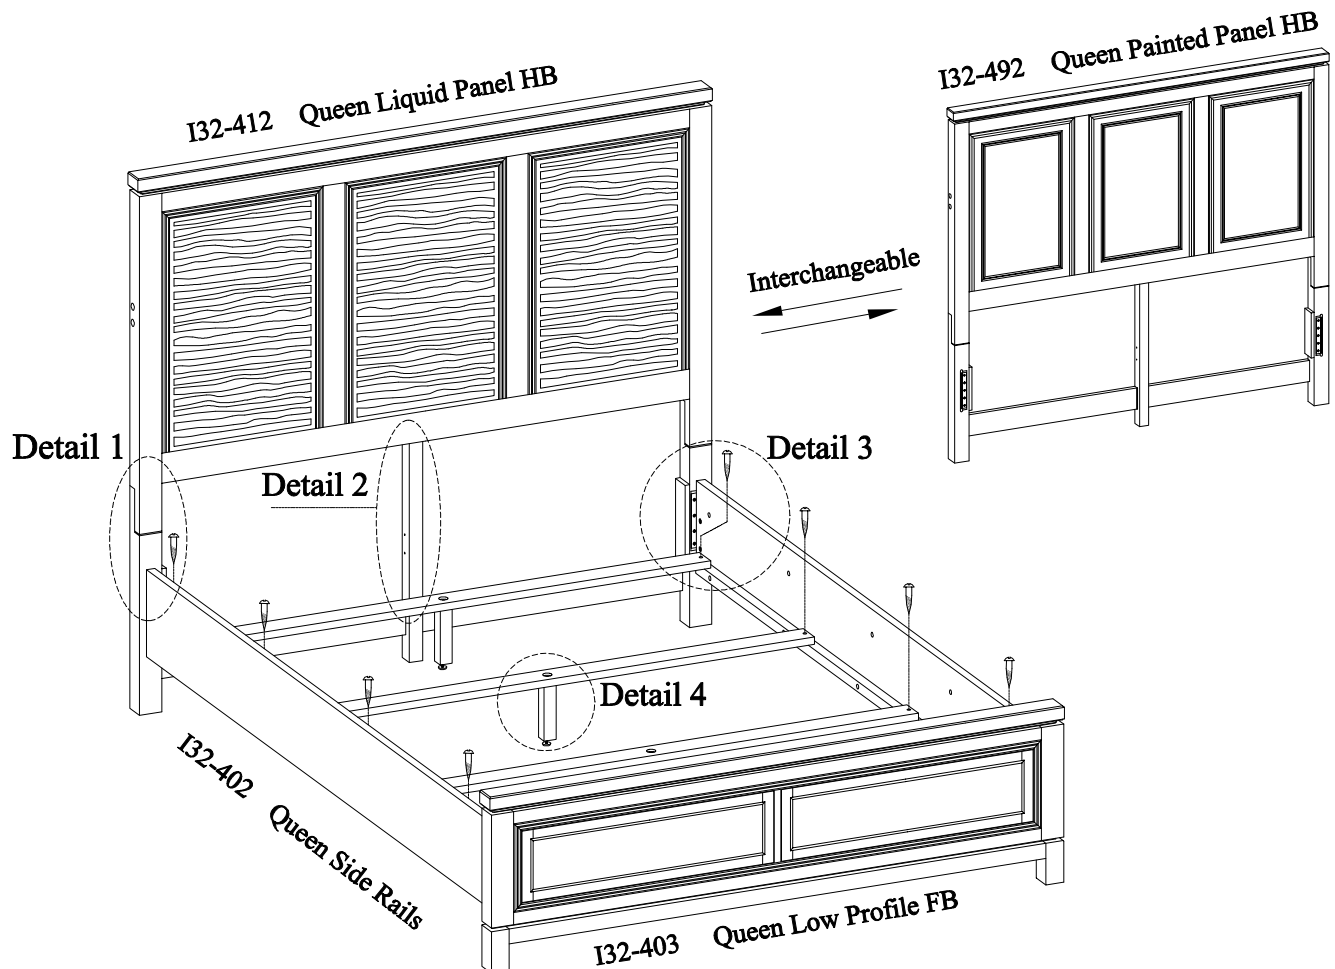

MADE IN VIETNAM


DATE: 2015-09-08



**aspenhome®**

Distributed by Furniture Values International, LLC

ITEM NO: I32-412/403/402 Queen Liquid Panel LP Bed  
I32-492/403/402 Queen Painted Panel LP Bed

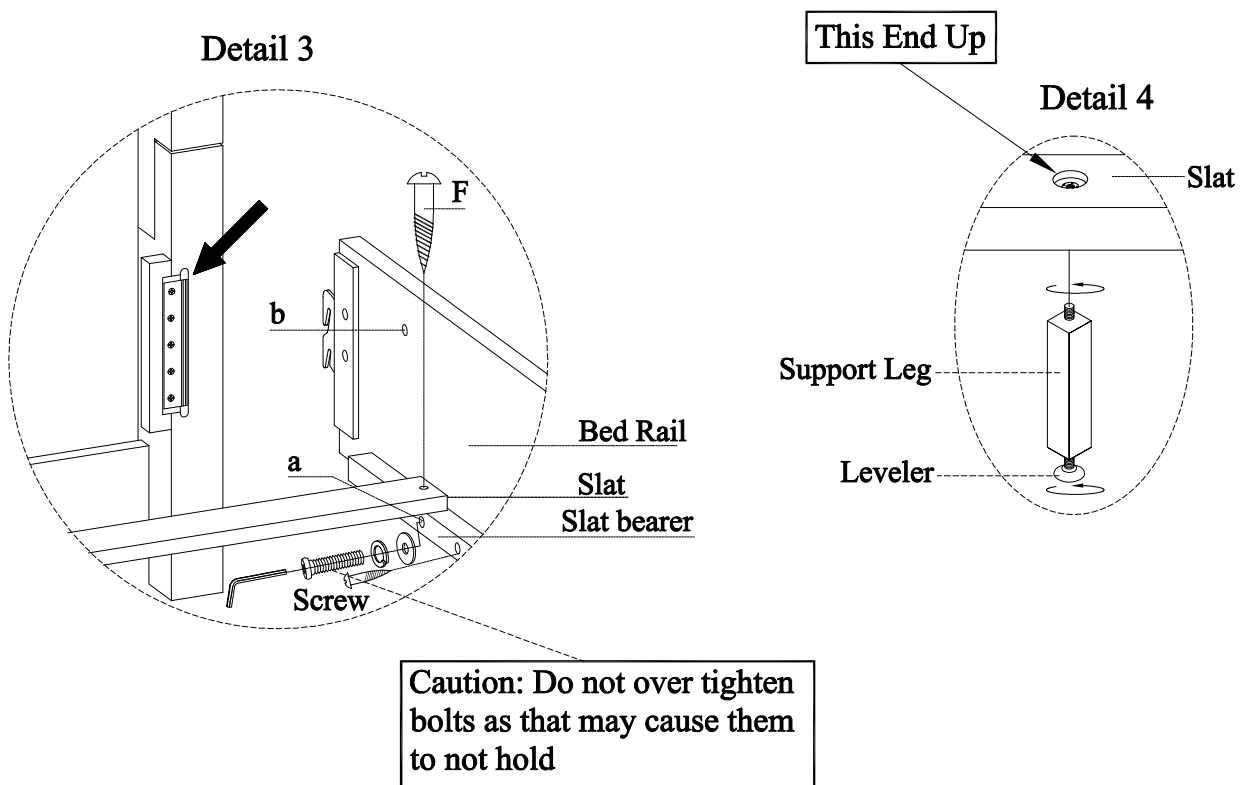

## Assembly Steps:

1. Attach legs to headboard using 6 bolts A, and attach wood stretcher to the legs using 2 bolts B as shown in detail 1. Then attach center support leg to the headboard using 2 bolts A and to the wood stretcher using 2 bolts B. Use an Allen Wrench to tighten all the bolts. See detail 2.
2. The slat bearers have been attached in the position b. You have to move your slat bearers in to position a. Remove the bolts (10pcs) and screws (8pcs) from the slat bearers to the side rails. Then re-attach the slat bearers to the side rails with bolts, lock washers, flat washers and screws. See detail 3.
3. Hook the side rails to the headboard and footboard as shown in detail 3.
4. Assemble the support legs with leveler to the slats as shown in detail 4, and attach the slats to the slat bearer equally with wood screws (F), as shown in detail 3. Adjust the levelers on bottom of support legs when necessary.

# ASSEMBLY INSTRUCTIONS

Page 1/4



## aspenhome®


Distributed by Furniture Values International, LLC

ITEM NO: I32-412/403D/402 Queen Liquid Panel Storage Bed  
I32-492/403D/402 Queen Painted Panel Storage Bed

| COMPONENTS LIST -412/492       |       | HARDWARE PACK For -412/492   |        |
|--------------------------------|-------|------------------------------|--------|
| Headboard                      | 1 Pc  | A  Bolt (Ø5/16"*2")          | 8 Pcs  |
| Left Leg                       | 1 Pc  | B  Bolt (Ø5/16"*1-1/2")      | 6 Pcs  |
| Right Leg                      | 1 Pc  | C  Lock Washer (Ø5/16)       | 14 Pcs |
| Wood Stretcher                 | 1 Pc  | D  Flat Washer (Ø5/16"*3/4") | 14 Pcs |
| Center Support Leg             | 1 Pc  | E  Allen Wrench (4mm)        | 1 Pc   |
| COMPONENTS LIST -402           |       | HARDWARE PACK For -403D      |        |
| Bed rails                      | 2 Pcs | F  Bolt (Ø5/16"*1-1/2" )     | 8 Pcs  |
| Slats                          | 4 Pcs | G  Lock Washer (Ø5/16")      | 8 Pcs  |
| COMPONENTS LIST -403D          |       | H  Flat Washer (Ø5/16"*3/4") | 8 Pcs  |
| Footboard                      | 1 Pc  | I  Wood Screw (M4*1")        | 8 Pcs  |
| Support legs (for center rail) | 2 Pcs | J  Allen Wrench (4 mm)       | 1 Pc   |
| Support leg (for pedestal)     | 3 Pcs | HARDWARE PACK For -402       |        |
| Decking                        | 4 Pcs | K  Wood Screw (M4*1")        | 8 Pcs  |
| Center Rail                    | 1 Pc  | L  Allen Wrench (4mm)        | 1 Pc   |

### SAFETY WARNING:

ALL beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of the perpendicular (90 degree) and weaken the support system and may allow the bed to collapse.

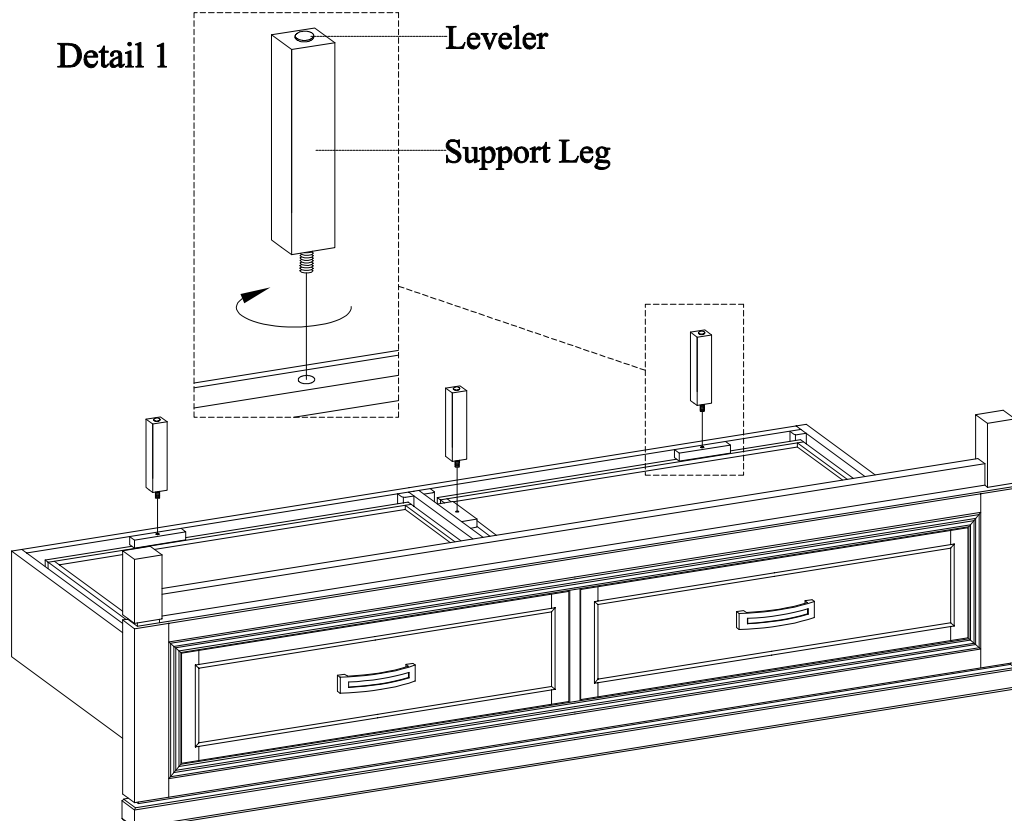

MADE IN VIETNAM

DATE: 2015-09-08

# ASSEMBLY INSTRUCTIONS




Page 2/4

ah

## aspenhome®

Distributed by Furniture Values International, LLC

ITEM NO: I32-412/403D/402 Queen Liquid Panel Storage Bed  
I32-492/403D/402 Queen Painted Panel Storage Bed

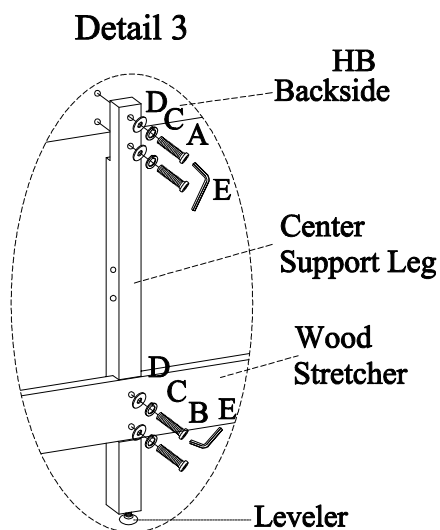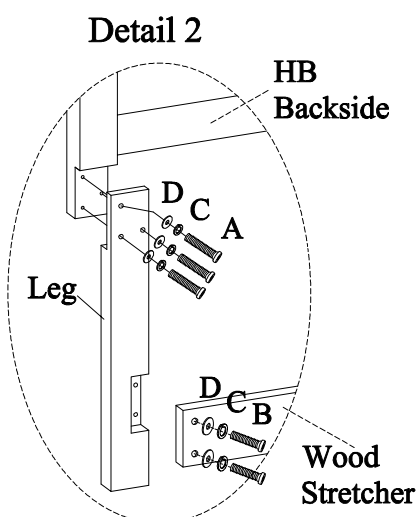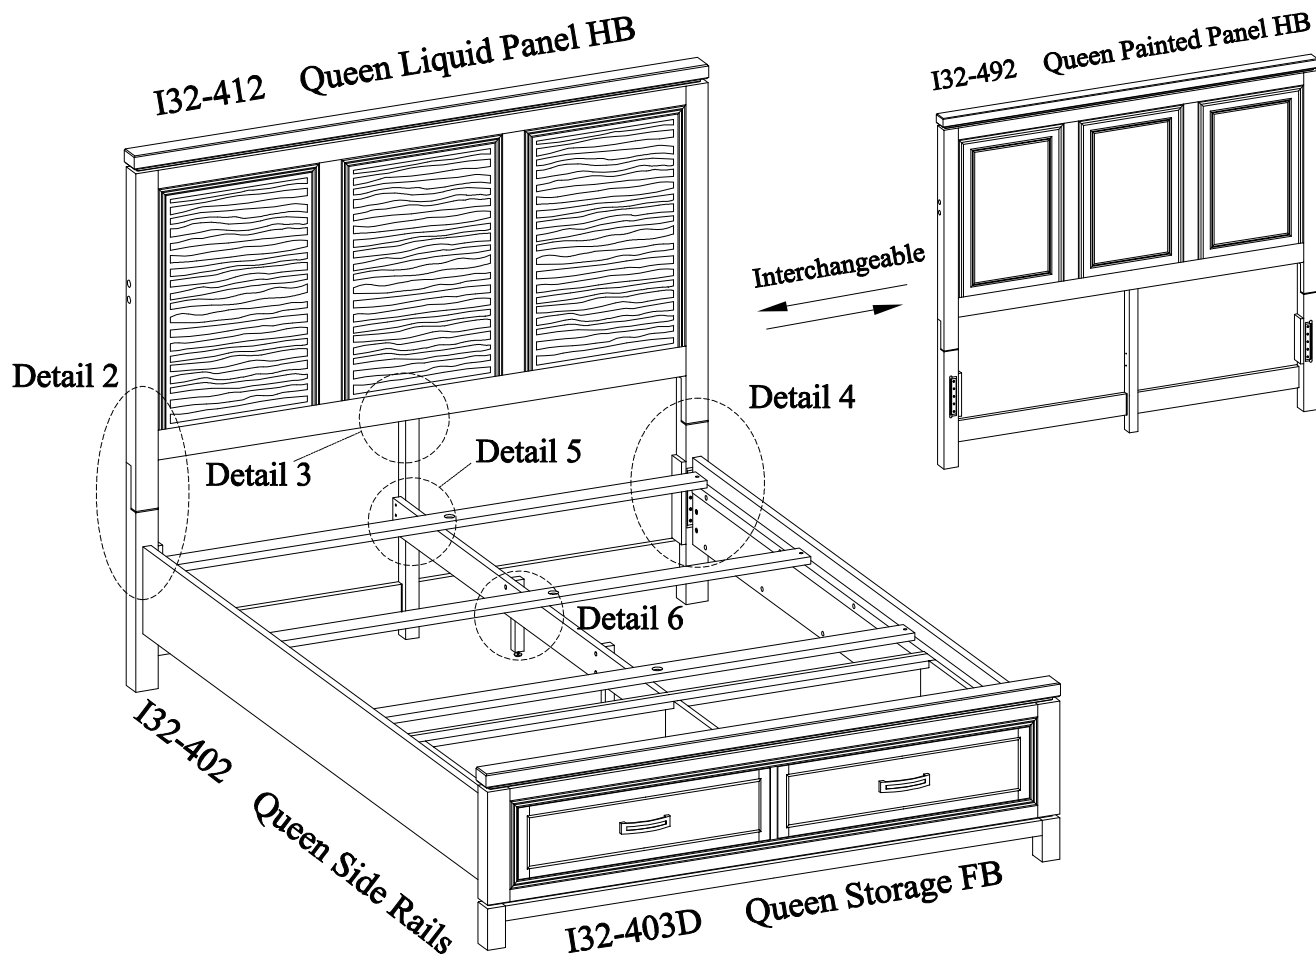

MADE IN VIETNAM

DATE: 2015-09-08

# ASSEMBLY INSTRUCTIONS


Page 3/4



## aspenhome®

Distributed by Furniture Values International, LLC

ITEM NO: I32-412/403D/402 Queen Liquid Panel Storage Bed  
I32-492/403D/402 Queen Painted Panel Storage Bed

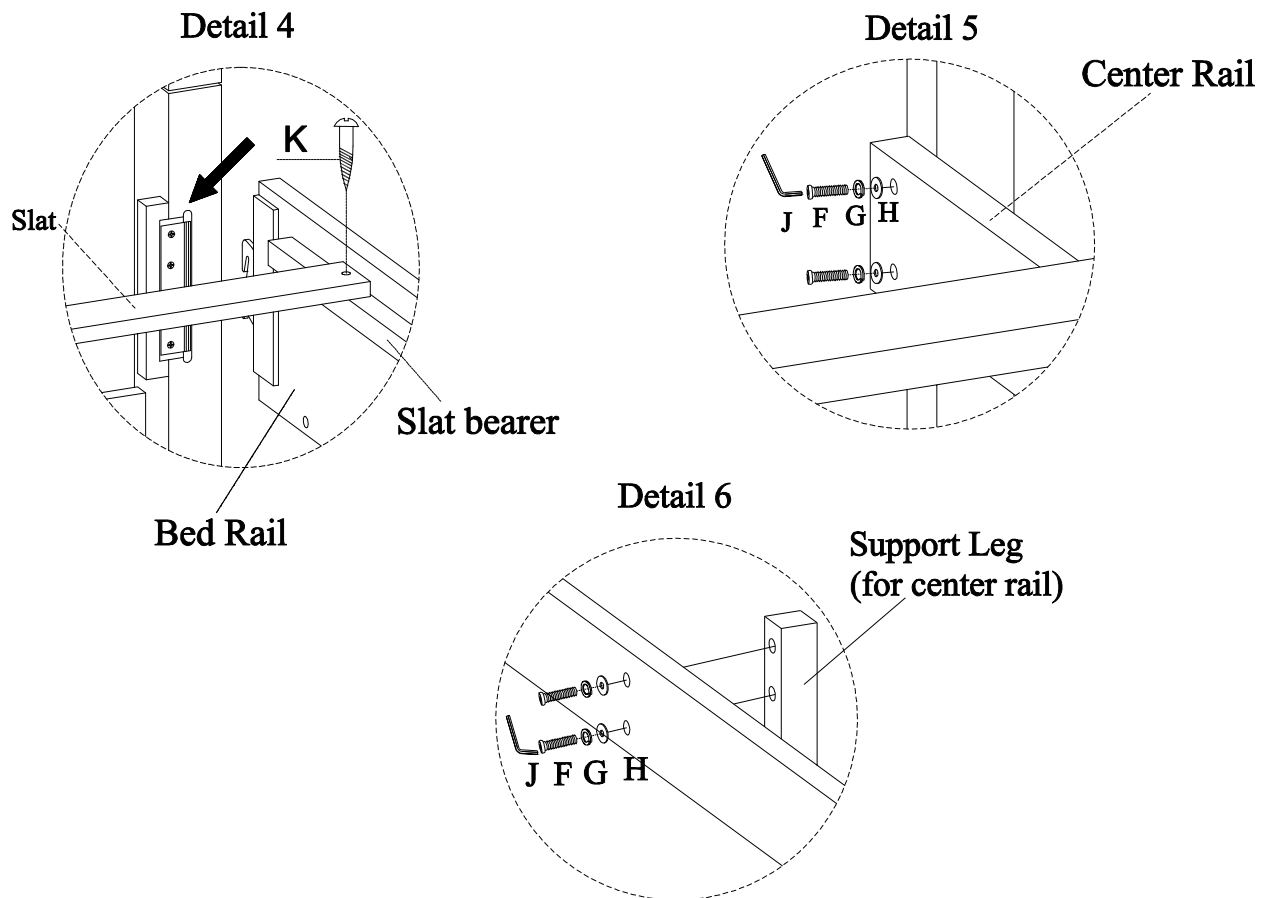

### Assembly Steps:

1. Assemble support legs (for pedestal) to footboard. See detail 1.
2. Attach legs to headboard using 6 bolts A, and attach wood stretcher to the legs using 2 bolts B as shown in detail 2. Then attach center support leg to the headboard using 2 bolts A and to the wood stretcher using 2 bolts B. See detail 3. Use an Allen Wrench to tighten all the bolts.
3. Hook the side rails to the headboard and footboard as shown in detail 4.
4. Assemble center rail to the headboard center support leg and footboard using 4 bolts F, see detail 5.
5. Assemble 2 support legs (for center rail) to the center rail using 4 bolts F, see detail 6.
6. Locate the slats on the slat bearers with proper distance. Then attach the slats to the slat bearers with wood screws (K), as shown in detail 4.
7. Adjust the levelers on bottom of support legs when necessary.
8. Put the decking on the bed, secure decking to the slats with wood screws (I) through the pre-drilled holes in the decking as shown above.

MADE IN VIETNAM

DATE: 2015-09-08

# ASSEMBLY INSTRUCTIONS

Page 4/4


ah

## aspenshome®


Distributed by Furniture Values International, LLC

ITEM NO: I32-412/403D/402 Queen Liquid Panel Storage Bed  
I32-492/403D/402 Queen Painted Panel Storage Bed



The slat should support both pieces of decking.

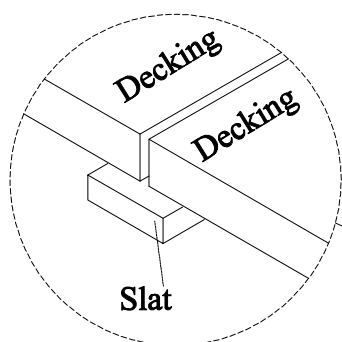

Queen Liquid Panel Storage Bed

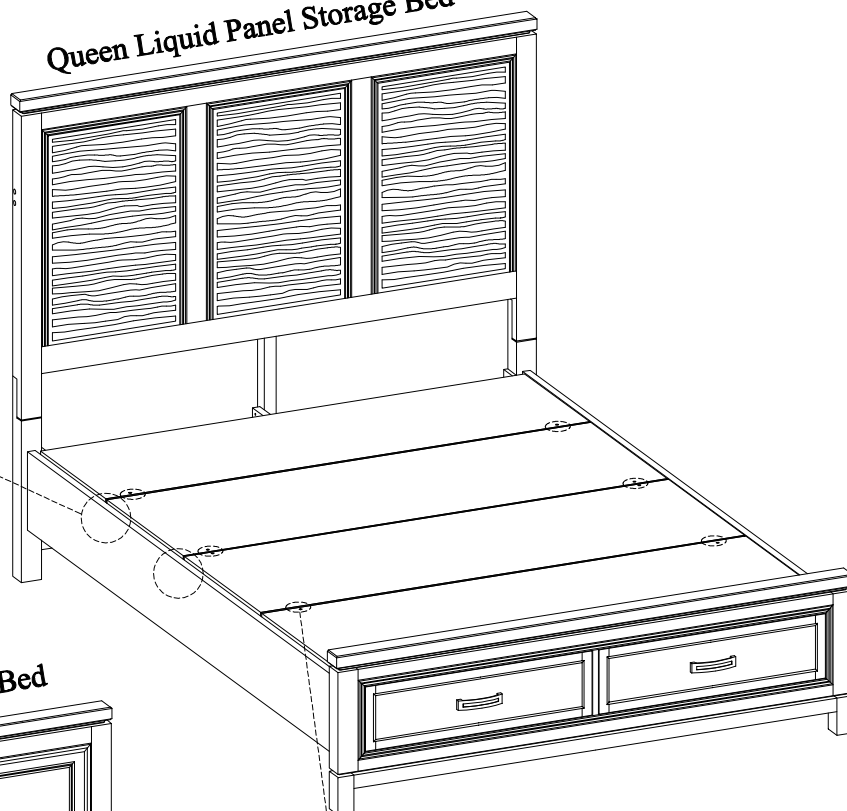

Queen Painted Panel Storage Bed

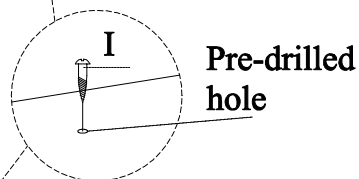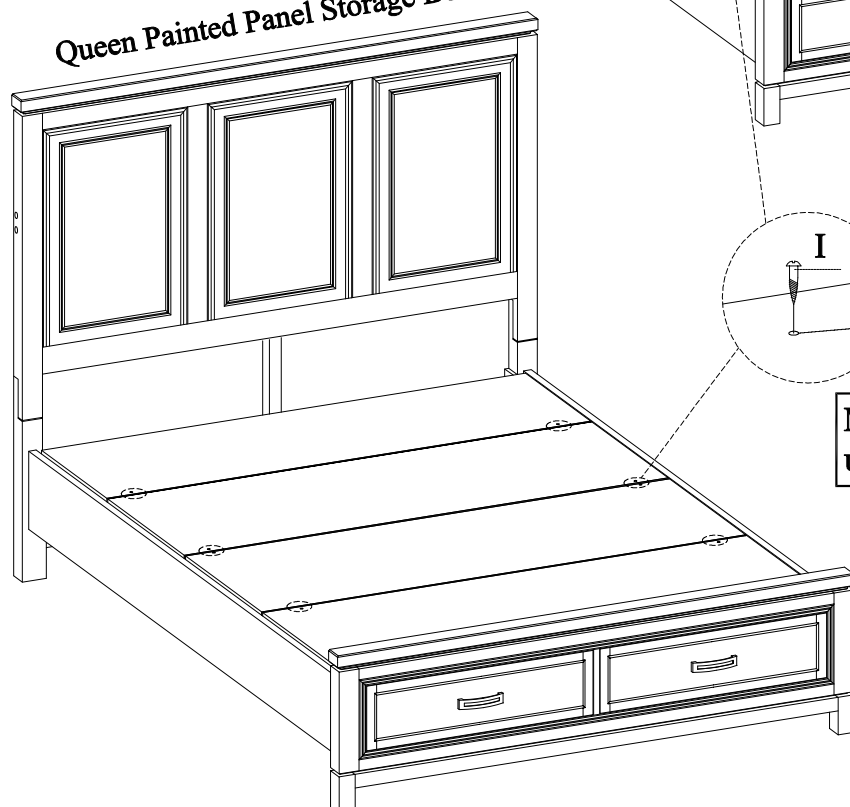

Pre-drilled hole

Make sure that there is a slat under the pre-drilled hole.

MADE IN VIETNAM

DATE: 2015-09-08

# ASSEMBLY INSTRUCTIONS

Page 1/3



## aspenhome®


Distributed by Furniture Values International, LLC

**ITEM NO: I32-415/407/406 & 415/407/410 King/Cal King Liquid Panel LP Bed**  
**I32-495/407/406 & 495/407/410 King/Cal King Painted Panel LP Bed**


| COMPONENTS LIST -415/495 |       | HARDWARE PACK For -415/495                                                                                    |        |
|--------------------------|-------|---------------------------------------------------------------------------------------------------------------|--------|
| Headboard                | 1 Pc  | A  Bolt (Ø5/16"*2")          | 8 Pcs  |
| Left Leg                 | 1 Pc  | B  Bolt (Ø5/16"*1-1/2")      | 6 Pcs  |
| Right Leg                | 1 Pc  | C  Lock Washer (Ø5/16")      | 14 Pcs |
| Wood Stretcher           | 1 Pc  | D  Flat Washer (Ø5/16"*3/4") | 14 Pcs |
| Center Support Leg       | 1 Pc  | E  Allen Wrench (4mm)        | 1 Pc   |
| COMPONENTS LIST -407     |       | HARDWARE PACK For -406/410                                                                                    |        |
| Footboard                | 1 Pc  | F  Wood Screw (M4*1")        | 10 Pcs |
| Support legs (for slats) | 5 Set | G  Allen Wrench (4mm)        | 1 Pc   |
| COMPONENTS LIST -406     |       |                                                                                                               |        |
| Bed rails                | 2 Pcs |                                                                                                               |        |
| Slats                    | 5 Pcs |                                                                                                               |        |
| COMPONENTS LIST -410     |       |                                                                                                               |        |
| Bed rails                | 2 Pcs |                                                                                                               |        |
| Slats                    | 5 Pcs |                                                                                                               |        |
| Center Rail (long)       | 1 Pc  |                                                                                                               |        |
| Magnetic Plate           | 4 Pcs |                                                                                                               |        |

### SAFETY WARNING:

ALL beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of the perpendicular (90 degree) and weaken the support system and may allow the bed to collapse.

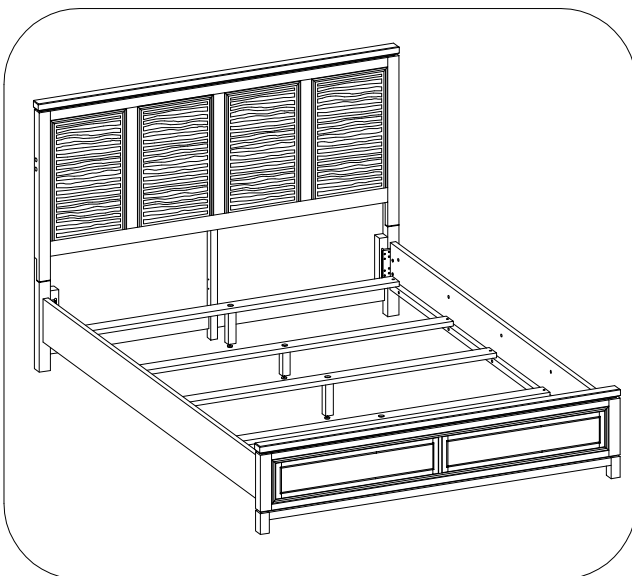

King/Cal King Liquid Panel LP Bed

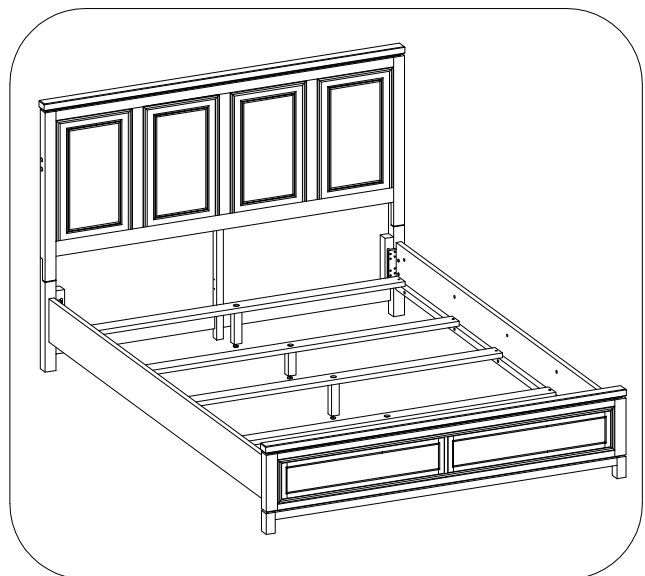

King/Cal King Painted Panel LP Bed

MADE IN VIETNAM

DATE: 2018-11-09

# ASSEMBLY INSTRUCTIONS




Page 2/3



## aspenhome®

Distributed by Furniture Values International, LLC

ITEM NO: I32-415/407/406 & 415/407/410 King/Cal King Liquid Panel LP Bed  
I32-495/407/406 & 495/407/410 King/Cal King Painted Panel LP Bed

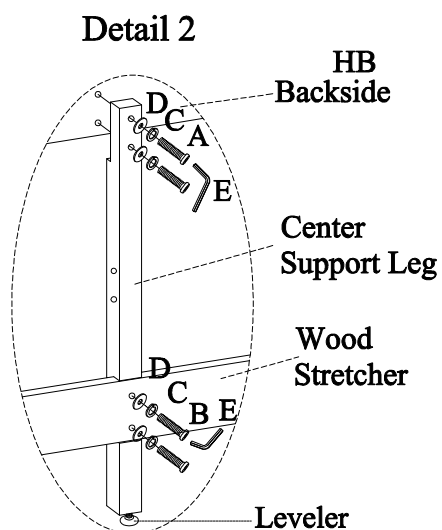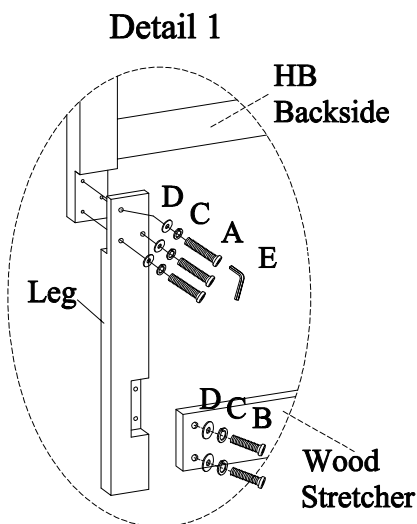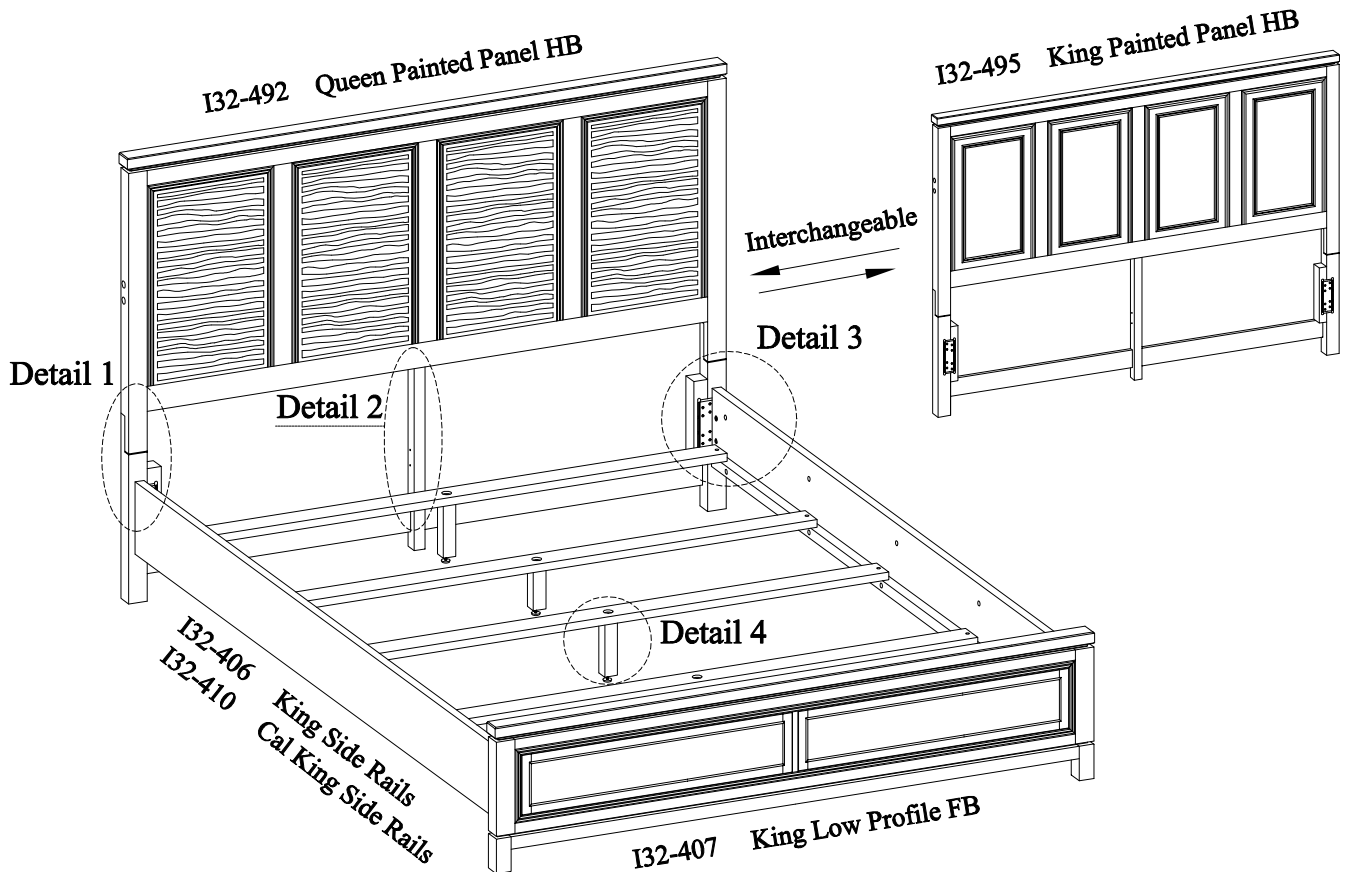

MADE IN VIETNAM


DATE: 2018-11-09



**aspenhome®**

Distributed by Furniture Values International, LLC

ITEM NO: I32-415/407/406 & 415/407/410 King/Cal King Liquid Panel LP Bed  
I32-495/407/406 & 495/407/410 King/Cal King Painted Panel LP Bed

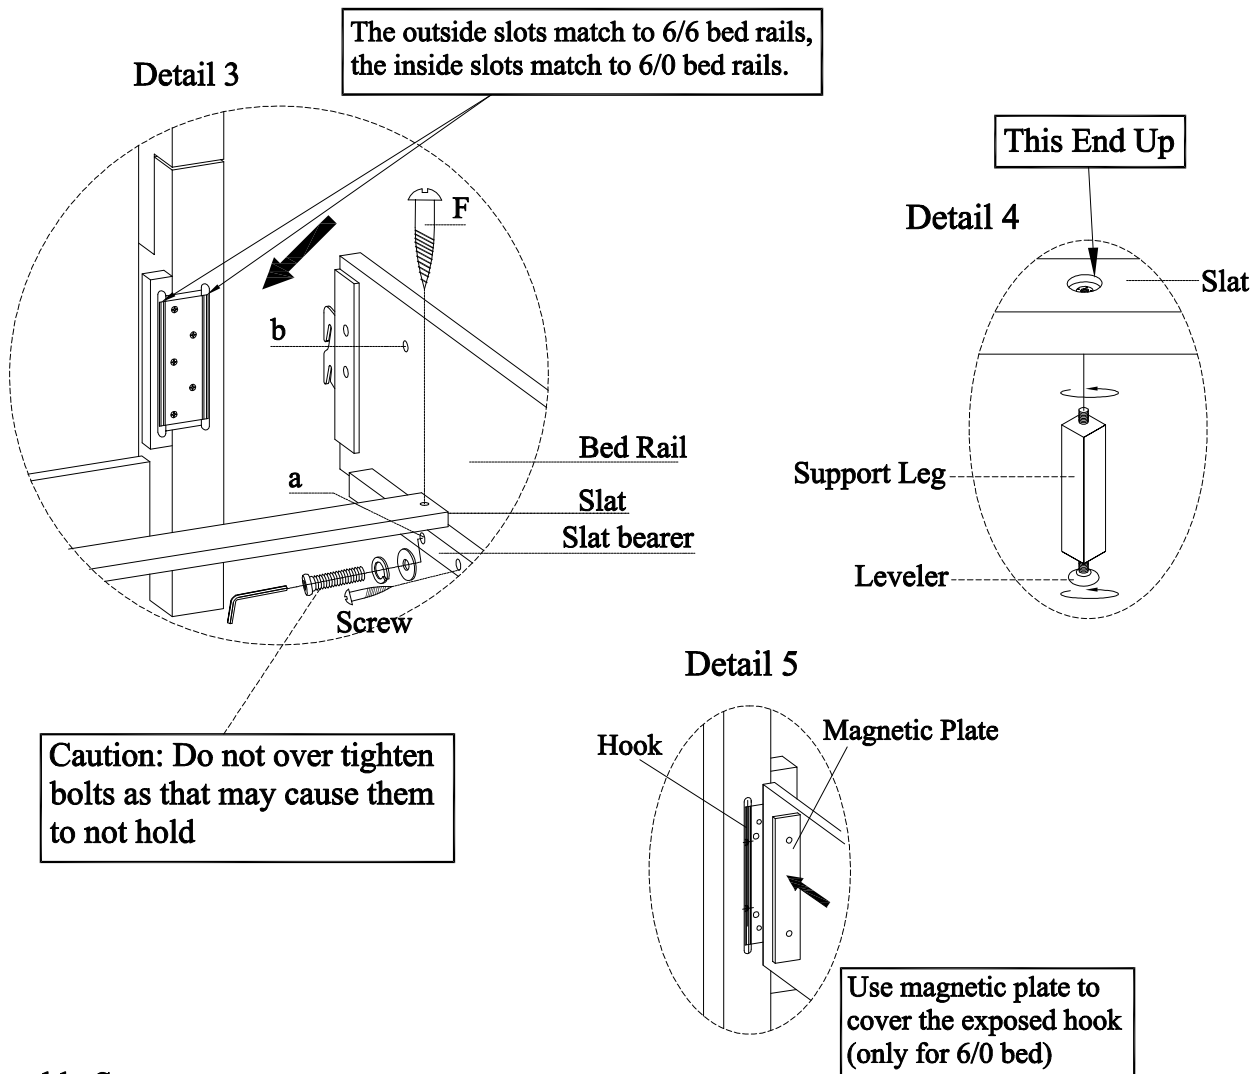

## Assembly Steps:

1. Attach legs to headboard using 6 bolts A, and attach wood stretcher to the legs using 2 bolts B as shown in detail 1. Then attach center support leg to the headboard using 2 bolts A and to the wood stretcher using 2 bolts B. Use an Allen Wrench to tighten all the bolts. See detail 2.
2. The slat bearers have been attached in the position b. You have to move your slat bearers in to position a. Remove the bolts (10pcs) and screws (8pcs) from the slat bearers to the side rails. Then re-attach the slat bearers to the side rails with bolts, lock washers, flat washers and screws. See detail 3.
3. Hook the side rails to the headboard and footboard as shown in detail 3.
4. Assemble the support legs with leveler to the slats as shown in detail 4, and attach the slats to the slat bearer equally with wood screws (F), as shown in detail 3. Adjust the levelers on bottom of support legs when necessary.

# ASSEMBLY INSTRUCTIONS

Page 1/4



## aspenhome®


Distributed by Furniture Values International, LLC

ITEM NO: I32-415/407D/406 & 415/407D/410 King/Cal King Liquid Panel Storage Bed  
I32-495/407D/406 & 495/407D/410 King/Cal King Painted Panel Storage Bed

| COMPONENTS LIST -415/495       |       | HARDWARE PACK For -415/495   |        |
|--------------------------------|-------|------------------------------|--------|
| Headboard                      | 1 Pc  | A Bolt (Ø5/16" *2")          | 8 Pcs  |
| Left Leg                       | 1 Pc  | B Bolt (Ø5/16" *1-1/2")      | 6 Pcs  |
| Right Leg                      | 1 Pc  | C Lock Washer (Ø5/16")       | 14 Pcs |
| Wood Stretcher                 | 1 Pc  | D Flat Washer (Ø5/16" *3/4") | 14 Pcs |
| Center Support Leg             | 1 Pc  | E Allen Wrench (4mm)         | 1 Pc   |
| COMPONENTS LIST -406           |       | HARDWARE PACK For -407D      |        |
| Bed rails                      | 2 Pcs | F Bolt (Ø5/16" *1-1/2")      | 8 Pcs  |
| Slats                          | 5 Pcs | G Lock Washer (Ø5/16")       | 8 Pcs  |
| COMPONENTS LIST -410           |       | H Flat Washer (Ø5/16" *3/4") | 8 Pcs  |
| Bed rails                      | 2 Pcs | I Wood Screw (M4*1")         | 6 Pcs  |
| Slats                          | 5 Pcs | J Allen Wrench (4 mm)        | 1 Pc   |
| Center Rail (long)             | 1 Pc  | HARDWARE PACK For -406/410   |        |
| Magnetic Plate                 | 4 Pcs | K Wood Screw (M4*1")         | 10 Pcs |
| COMPONENTS LIST -407D          |       | L Allen Wrench (4mm)         | 1 Pc   |
| Footboard                      | 1 Pc  |                              |        |
| Support legs (for center rail) | 2 Pcs |                              |        |
| Support leg (for pedestal)     | 3 Pcs |                              |        |
| Decking                        | 3 Pcs |                              |        |
| Decking (Filler)               | 2 Pcs |                              |        |
| Center Rail (short)            | 1 Pc  |                              |        |

### SAFETY WARNING:

ALL beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of the perpendicular (90 degree) and weaken the support system and may allow the bed to collapse.

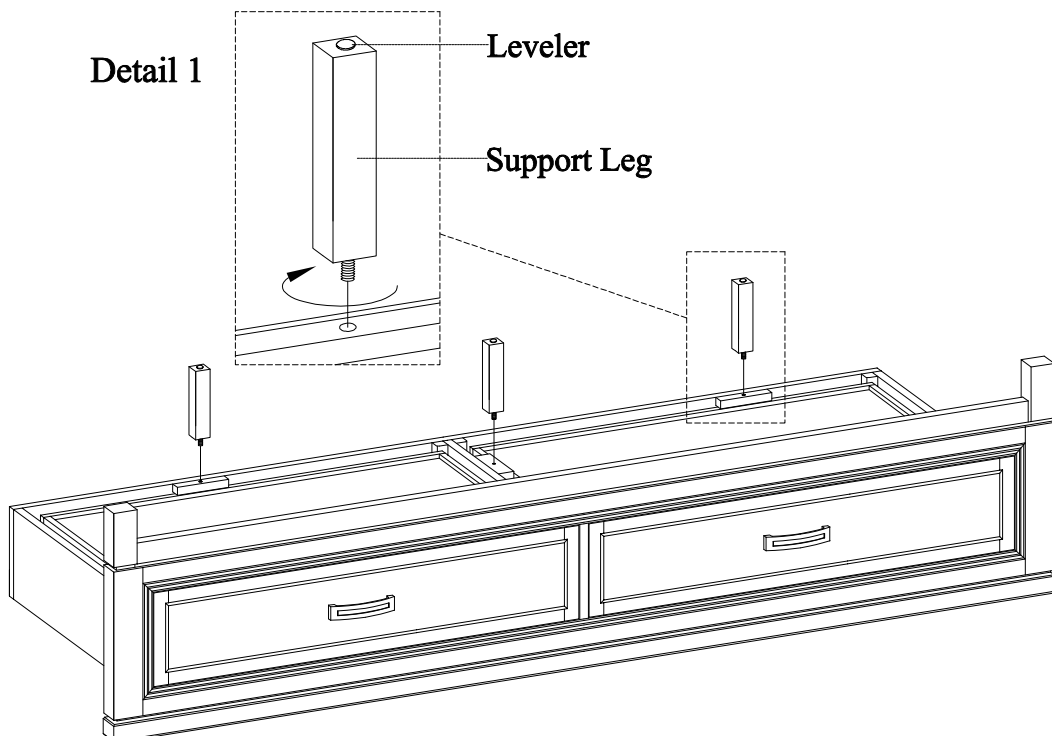

MADE IN VIETNAM

DATE: 2018-11-09

# ASSEMBLY INSTRUCTIONS




Page 2/4



## aspenhome®

Distributed by Furniture Values International, LLC

ITEM NO: I32-415/407D/406 & 415/407D/410 King/Cal King Liquid Panel Storage Bed  
I32-495/407D/406 & 495/407D/410 King/Cal King Painted Panel Storage Bed

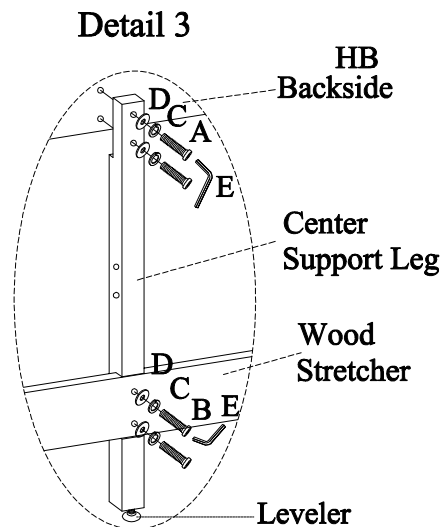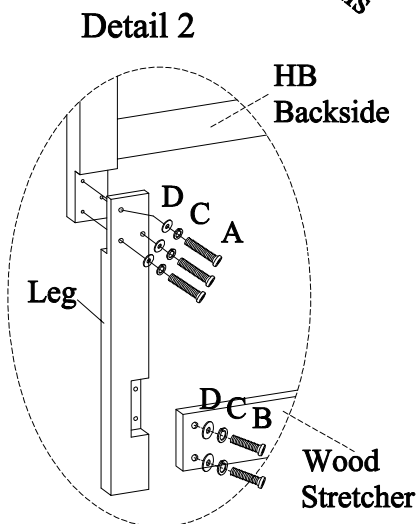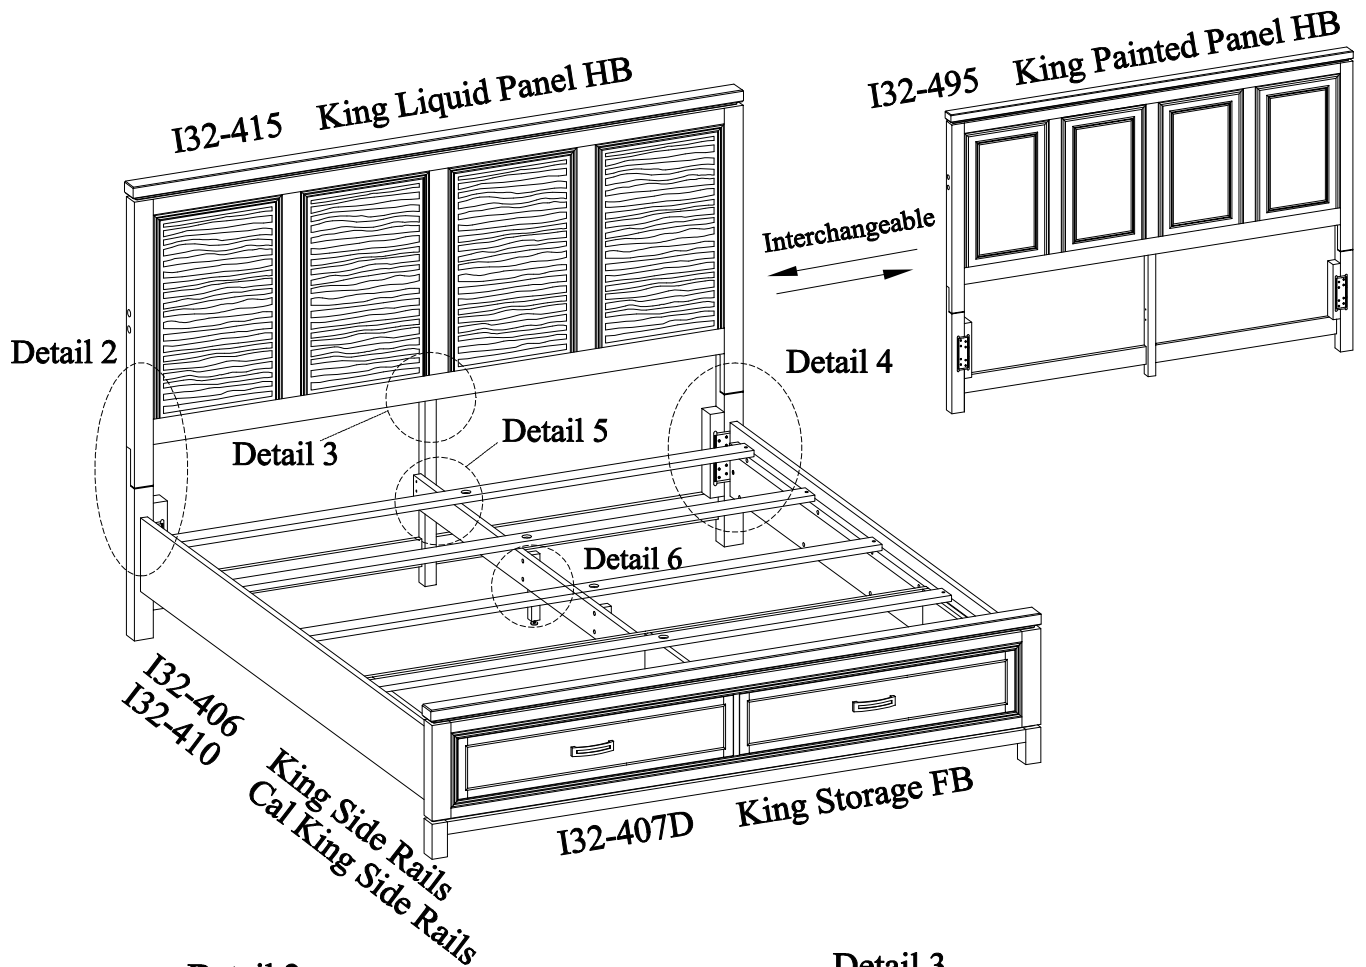

MADE IN VIETNAM

DATE: 2018-11-09




**aspenhome®**

Distributed by Furniture Values International, LLC


ITEM NO: I32-415/407D/406 & 415/407D/410 King/Cal King Liquid Panel Storage Bed  
I32-495/407D/406 & 495/407D/410 King/Cal King Painted Panel Storage Bed

**Detail 4**

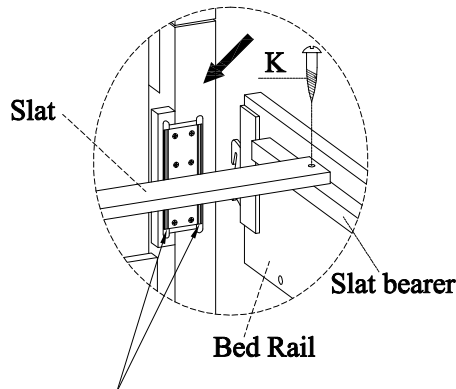


The outside slots match to 6/6 bed rails,  
the inside slots match to 6/0 bed rails.


**Detail 5**

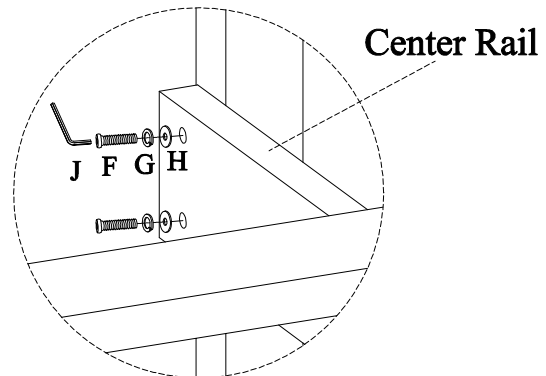

**Detail 6**

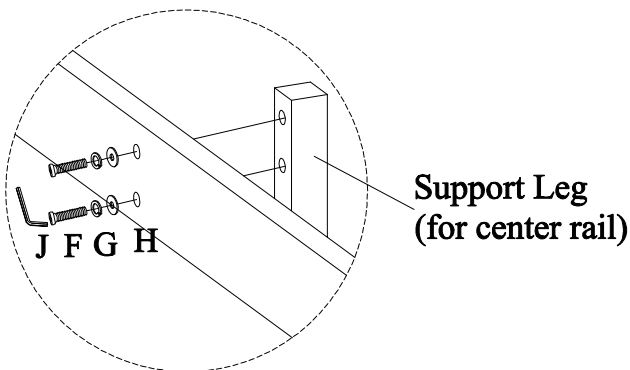

**Detail 7**

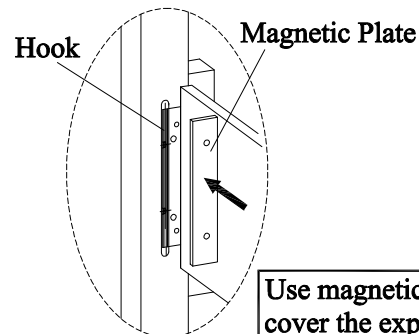

Use magnetic plate to  
cover the exposed hook  
(only for 6/0 bed)

## Assembly Steps:

1. Assemble support legs (for pedestal) to footboard. See detail 1.
2. Attach legs to headboard using 6 bolts A, and attach wood stretcher to the legs using 2 bolts B as shown in detail 2. Then attach center support leg to the headboard using 2 bolts A and to the wood stretcher using 2 bolts B. See detail 3. Use an Allen Wrench to tighten all the bolts.
3. Hook the side rails to the headboard and footboard as shown in detail 4 .
4. Assemble center rail to the headboard center support leg and footboard using 4 bolts F, see detail 5.
5. Assemble 2 support legs (for center rail) to the center rail using 4 bolts F, see detail 6.
6. Locate the slats on the slat bearers with proper distance. Then attach the slats to the slat bearers with wood screws K, as shown in detail 4 .
7. Adjust the levelers on bottom of support legs when necessary.
8. Put the decking on the bed, secure decking to the slats with wood screws (I) through the pre-drilled holes in the decking as shown above. When the filler is used in 6/0 Cal King bed, please use a utility knife to cut off the small piece and discard from the notch.

# ASSEMBLY INSTRUCTIONS


Page 4/4

ah

## aspenhome®

Distributed by Furniture Values International, LLC

ITEM NO: I32-415/407D/406 & 415/407D/410 King/Cal King Liquid Panel Storage Bed  
I32-495/407D/406 & 495/407D/410 King/Cal King Painted Panel Storage Bed

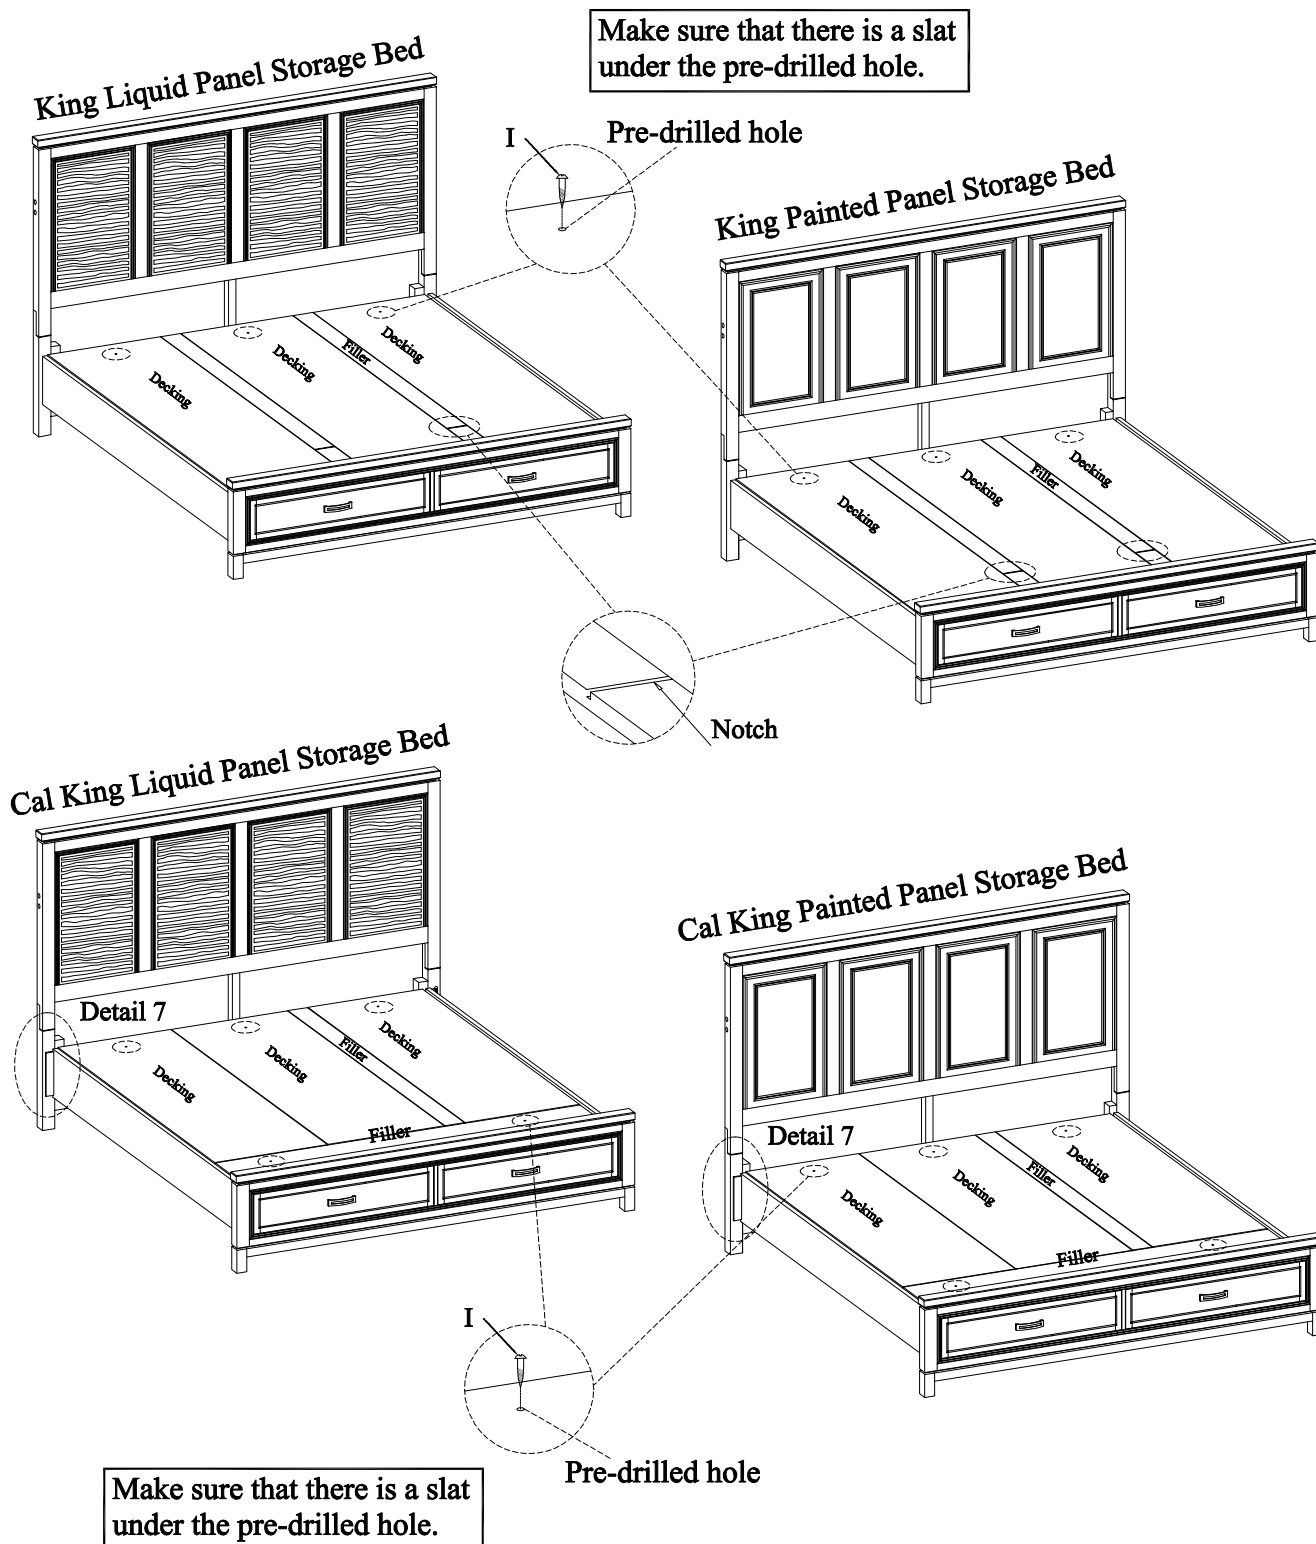

MADE IN VIETNAM

DATE: 2018-11-09