

CAFÉ FUSION DINING CHAIR

318 (Frame)

319 (Slats)

COASTLINE CASUAL

11 Industrial Drive




ASSEMBLY INSTRUCTIONS

1 PLEASE READ INSTRUCTIONS COMPLETELY BEFORE BEGINNING. Carefully remove contents from box. Make sure that all parts and hardware are included using the Parts List below.


318

Left & Right Sides

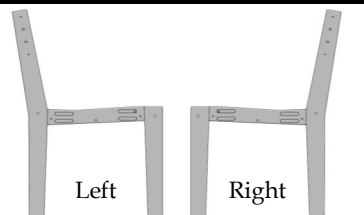


x 1ea

Front and Rear Apron

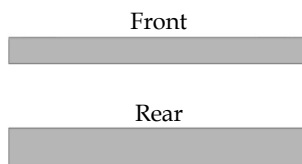

x 1ea

80mm Hex Lag (Actual Size)



Part Code: 316-1/4-10-80HL

x 4


3/8" tap® (Actual Size)



Part Code: TAP-3/8

x 4


1-3/4 Phillips Head Screw (Actual Size)



Part Code: 316-8x1-3/4PFDS

x 14

5/8" tap® (Actual Size)




Part Code: TAP-5/8

x 4

319

Seat Assembly




x 1

Back Slats



x 2

4mm Allen Wrench (Actual Size)

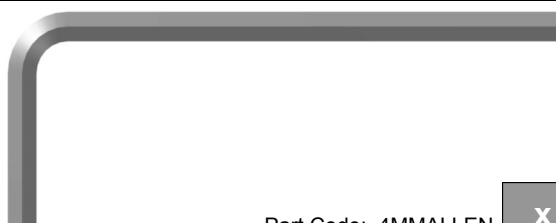

Part Code: 4MMALLEN


x 1

5/16" Nylon Dowel (Actual Size)




Part Code: NYLON-5/16X1-1/8D


x 2

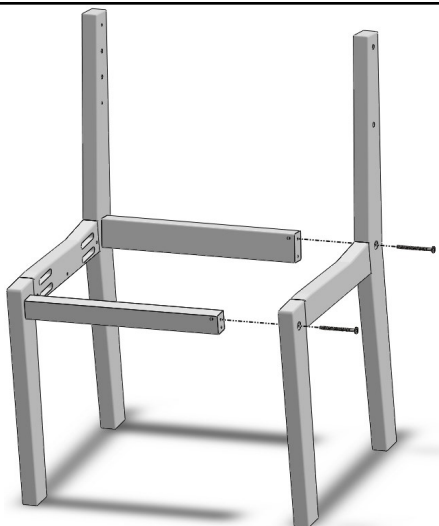2**ATTACH APRONS TO SIDE ASSEMBLIES**


Attach front and rear aprons to Side assemblies as shown, with the pockets of the aprons facing down using (4) 80mm Hex Lags.

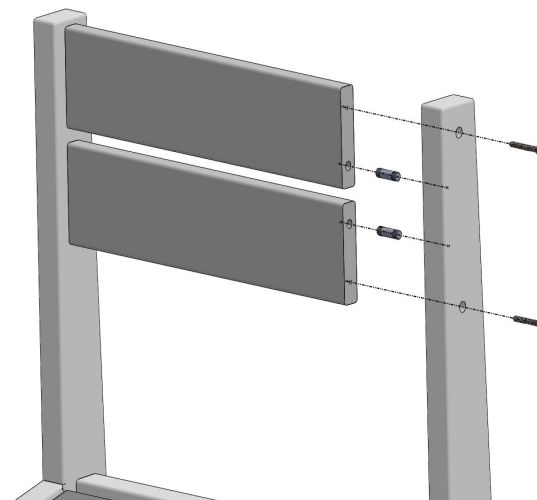3**ATTACH BACK SLATS TO REAR LEGS**

Tap 5/16" dowels into large holes in back slats. Align with large holes in rear legs. Secure with 1-3/4" Phillips head screws through 3/8" counter-bore in rear legs into pilot holes in back slats.

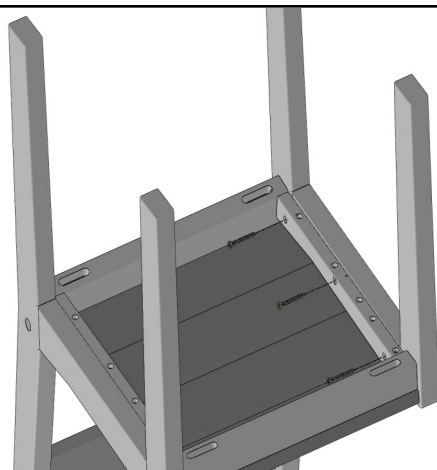4**SEAT TO SIDE ASSEMBLIES**

Align seat assembly with frame. Secure using 1-3/4" Philips head screws through countersink holes on inside of seat assembly into pilot holes in side assemblies.

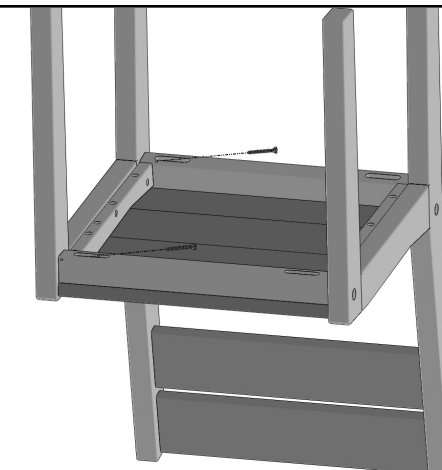5**SECURE APRONS TO LEGS**

At this time make sure lags from step 2 are tight. Rotate rear apron to align with angle on seat support, and make sure front apron is parallel with front leg. Secure aprons with 1-3/4" Philips head screws through the pockets on underside of aprons into legs.

6**PLUG ALL HOLES WITH PROVIDED 5/8" AND 3/8" taps™**