


# ASSEMBLY INSTRUCTION FOR ACME FURNITURE MODEL# LV03120/ LV03130



Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

**\*\*Do not fully tighten screws until fully assembled \*\*\***

COMPONENT PARTS		
DESCRIPTION	PART NAME	QTY (PCS)
①	<b>Sofa Base</b> 	<b>1</b>
②	<b>Backrest</b> 	<b>1</b>
③	<b>Back Cushion</b> 	<b>2</b>
④	<b>Armrest Pillow</b> 	<b>2</b>

## HARDWARE      REQUIRED

Ⓐ		Pin	3	PCS
Ⓑ		Pin Shaft	3	PCS
Ⓒ		Plastic Foot 1#	2	PCS
Ⓓ		Plastic Foot 2#	6	PCS

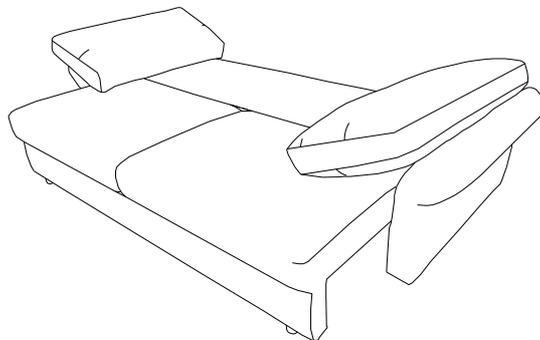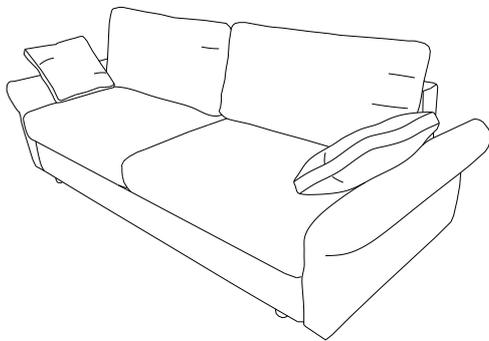


### Attention


\*\*\* Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.

## How to assemble:

**STEP 1 :** Push the base outside, and then install the backrest part as pictured.

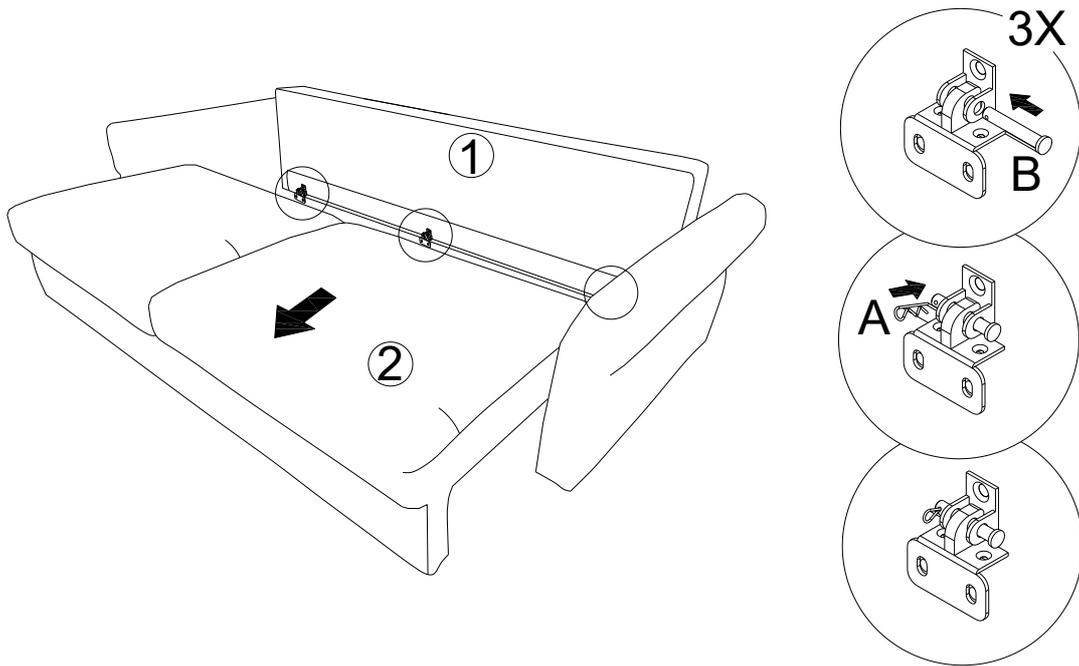


**STEP 2:** Turning the sofa over 90 degrees, and then screw the Foot C,D tightly.

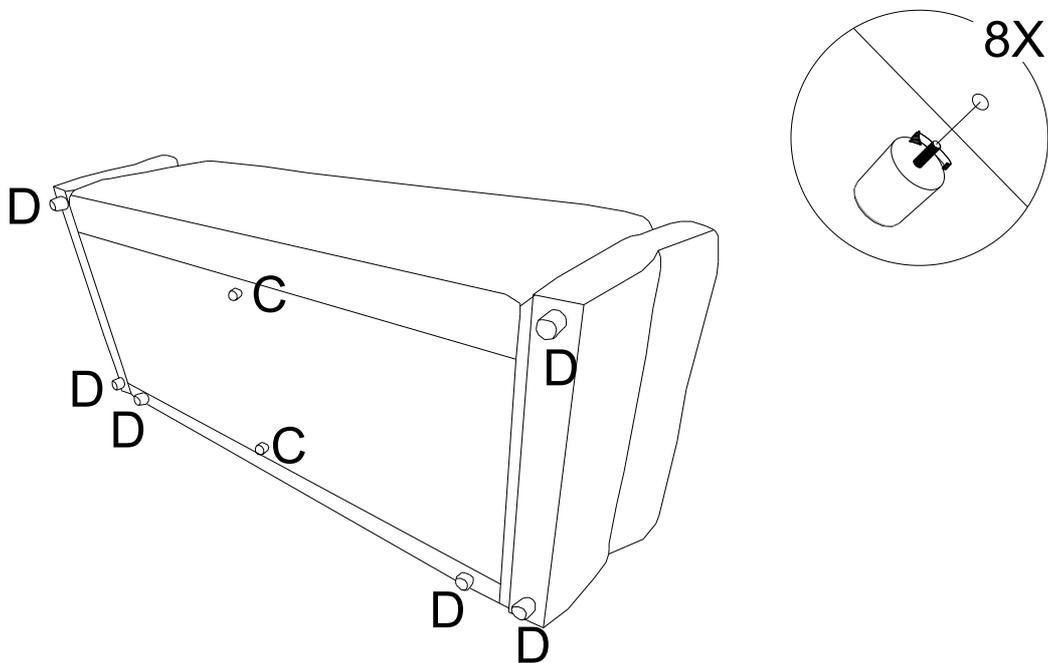


## How to assemble:

**STEP 3: Spread the cushions on the sofa.  
Congrats, you're done!**

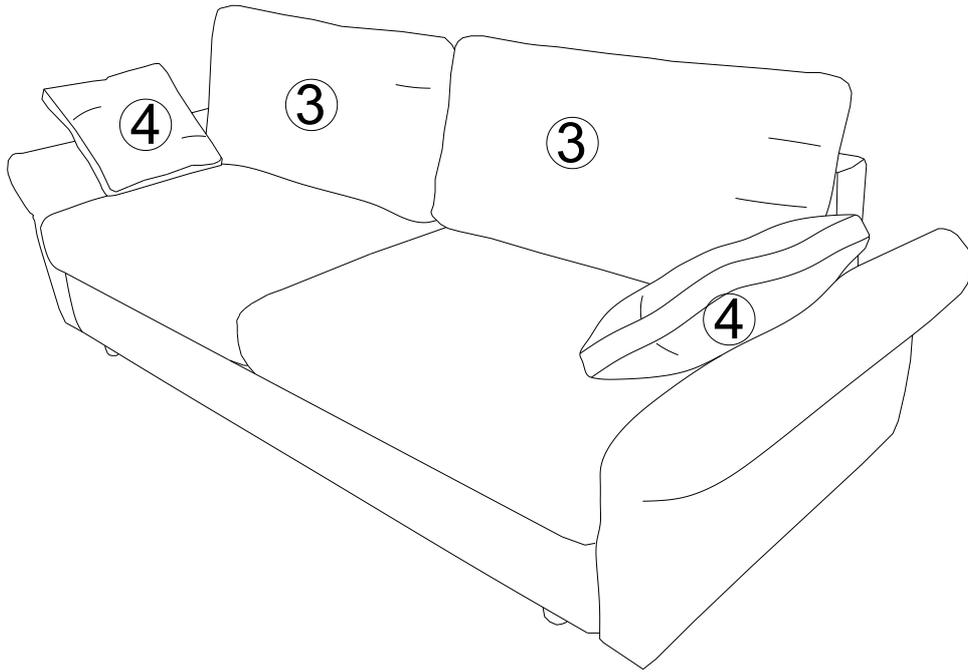


**STEP 4 : Remove the cushions, and pull out the sofa base.**

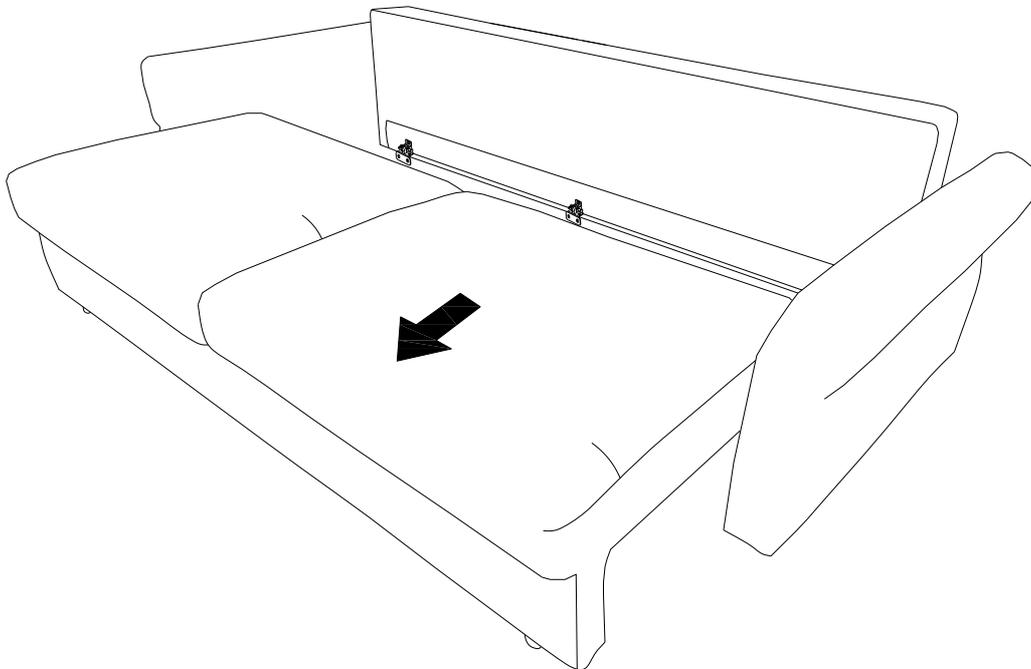

## How to assemble:

**STEP 5:** Press down the backrest. Make sure the puller is on the outside.

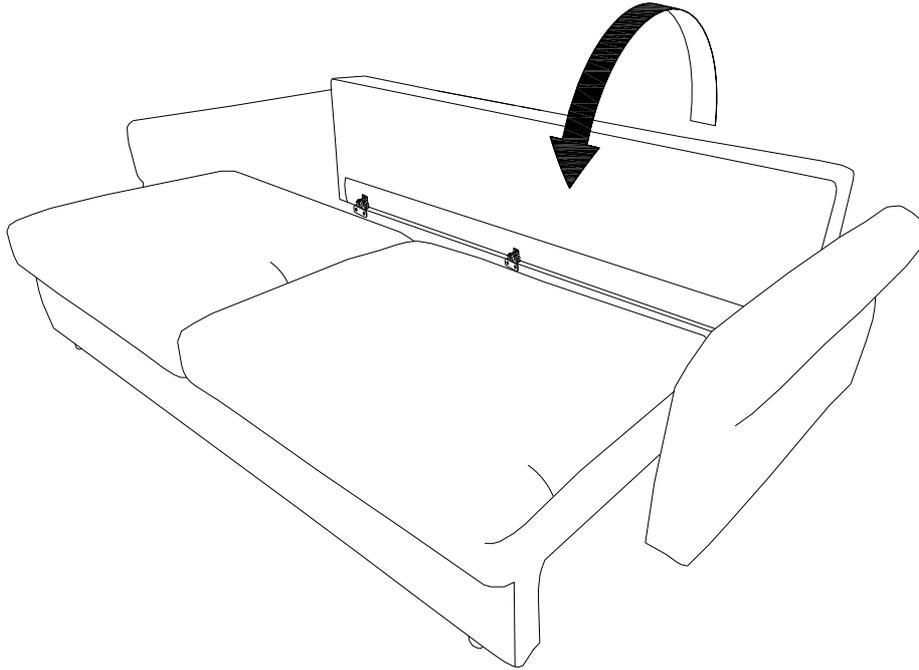

**STEP 6:** Congrats, you get a sofa bed !

