




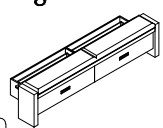







Hardware and Parts packed with the Headboard #75870

Headboard Panel  (H-A) 1 pc.	Headboard Post  (H-B) 1 Right 1 Left	Headboard Stretcher  (H-C) 1 pc.	
Ø5/16" x 1-1/2" Allen Head Bolt  (H-D) 10 pcs.	Ø5/16" Spring Washer  (H-E) 10 pcs.	Ø5/16" x 19mm Flat Washer  (H-F) 10 pcs.	5mm Allen Wrench  (H-G) 1 pc.


Hardware and Parts packed with the Footboard #75873

Storage Footboard  (F-A) 1 pc.	Wood Slat 60 3/4 Lg.  (F-B) 5 pcs.	Support Leg 13 7/8 Lg.  (F-C) 4 pcs.	Storage Box Support Leg 8 3/4 Lg.  (F-D) 3 pcs.	Ø8 x 1" Wood Screw  (F-E) 18 pcs.
Ø1/4" x 1-1/4" Allen Head Bolt  (F-F) 6 pcs.	Ø1/4" Spring Washer  (F-G) 6 pcs.	Ø1/4" x 16mm Flat Washer  (F-H) 6 pcs.	4mm Allen Wrench  (F-I) 1 pc.	Decking Panel 60 3/4 x 20  (F-J) 4 pcs. for 5/0

Hardware and Parts packed with the Bed Rails #75872

Bed Rail 5/0-6/6  (R-A) 2 pcs.				
Ø5/16" x 3-1/2" All-thread Bolt  (R-B) 8 pcs.	Ø5/16" Washer  (R-C) 8 pcs.	Ø5/16" Spring Washer  (R-D) 8 pcs.	Ø5/16" Hex Nut  (R-E) 8 pcs.	13mm Open Wrench  (R-F) 1 pc.

5/0 Queen Panel Storage Bed
 75870 -- 4/6-5/0 Panel Headboard
 75873 -- 5/0 Storage Bench Footboard, Platform & Slats.
 75872 -- 5/0-6/6 Bed Rails (for 5/0 Bed)

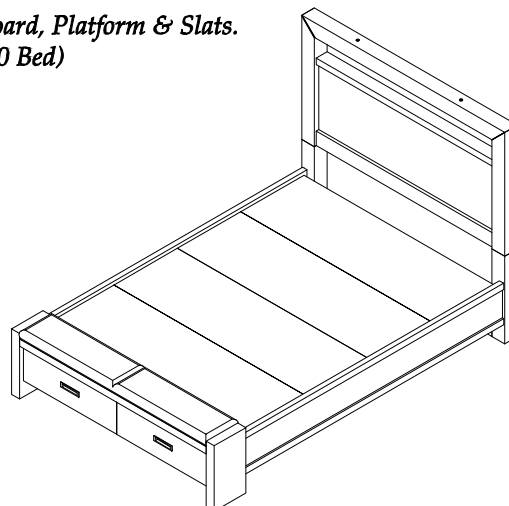

Note: The same Bed Rails are used for a Standard Bed set-up or for a Storage Bed. The wood, Slat Support cleat will be mounted in the lower position for a Standard Bed or will need to be mounted at the upper position for a Storage Bed.

ASSEMBLY STEPS :







1. Place the Headboard Panel (H-A) face down on a clean and soft surface.
2. Attach two Headboard Posts (H-B) to the back of the Headboard Panel, using the Flat Washers (H-F), Spring Washers (H-E) and Bolts (H-D). (see detail A). Do not fully tighten until after next step.
3. Attach the Stretcher (H-C) to the back of the Headboard Posts using the Bolts (H-D) and the same Washers as previous step. Tighten all Bolts using the Allen Wrench (H-G).
4. Attach the Storage Box Support Legs (F-D) to the back of the Footboard storage box using the Bolts (F-F), Spring Washers (F-G) and Flat Washers (F-H). Tighten with the Allen Wrench.
5. Install the eight All-Thread Bolts (F-B) into the threaded metal inserts installed in the Headboard and Footboard posts.
6. Gently lean the Headboard against the wall where the completed Bed will be located in the room.

Using the Allen Wrench, temporarily remove the Slat Support Cleats mounted to the inside of the Bed Rails and lay them aside.


7. Position one end of one Bed Rail (R-A) onto the All-Thread Bolts and fasten with the Washers (R-C) and (R-D) and Hex Nuts (R-E). Only partially tighten the Hex Nuts until the Footboard has been connected. Repeat for other Bed Rail.
8. Position and connect the Footboard to the other end of the Bed Rails as in previous Step.
9. Carefully align the Footboard to be 'square' with the Headboard. Using the Open Wrench (R-F) tighten all Hex Nuts attaching the Side Rails to the Headboard and Footboard. (See Detail C).

Reattach the Slat Support Cleats at the upper position on the Bed Side Rails.

10. Attach the Support Legs (F-C) to the Wood Slats (F-B). (See Detail D).
11. Attach the Wood Slats to the Bed Rails using the Wood Screws (F-E) and your Phillips Screwdriver. The levelers located at the bottom of the Support Legs can be adjusted if necessary to provide support. (See Detail E).
12. Using one of the Decking Panels (F-J) as a gauge, position the Wood Slats on the Bed Side Rails so there is a Slat underneath, centered at the edge of each Decking Panel (See Detail F).

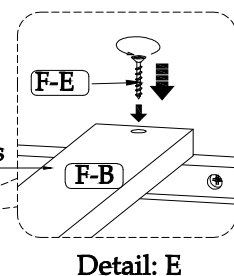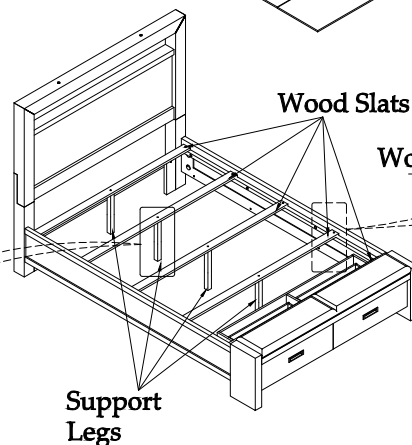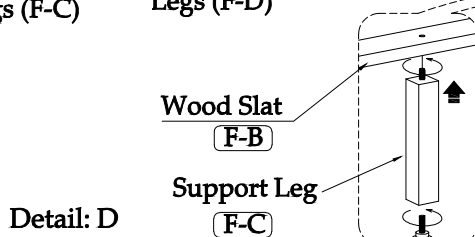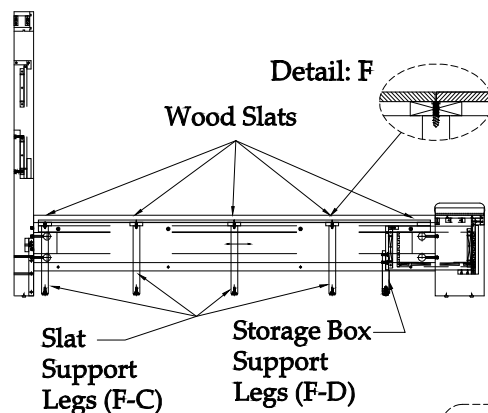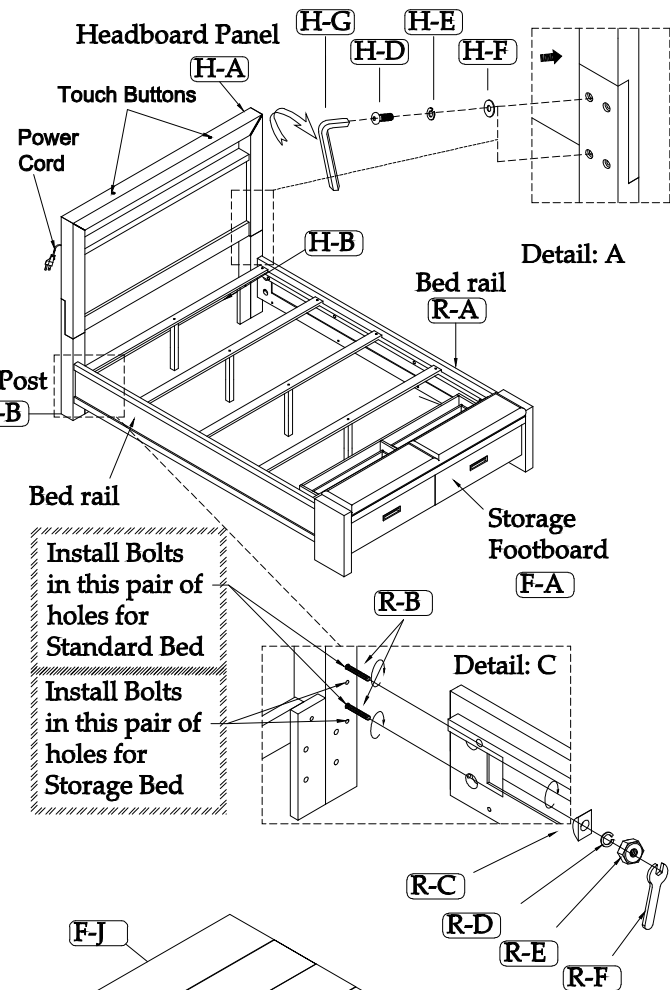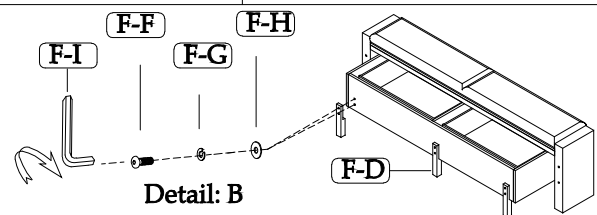

There is an LED strip light installed in the bottom side of the top rail which is activated using either of the two touch buttons mounted on top of the rail, which are connected to a three-level touch switch.

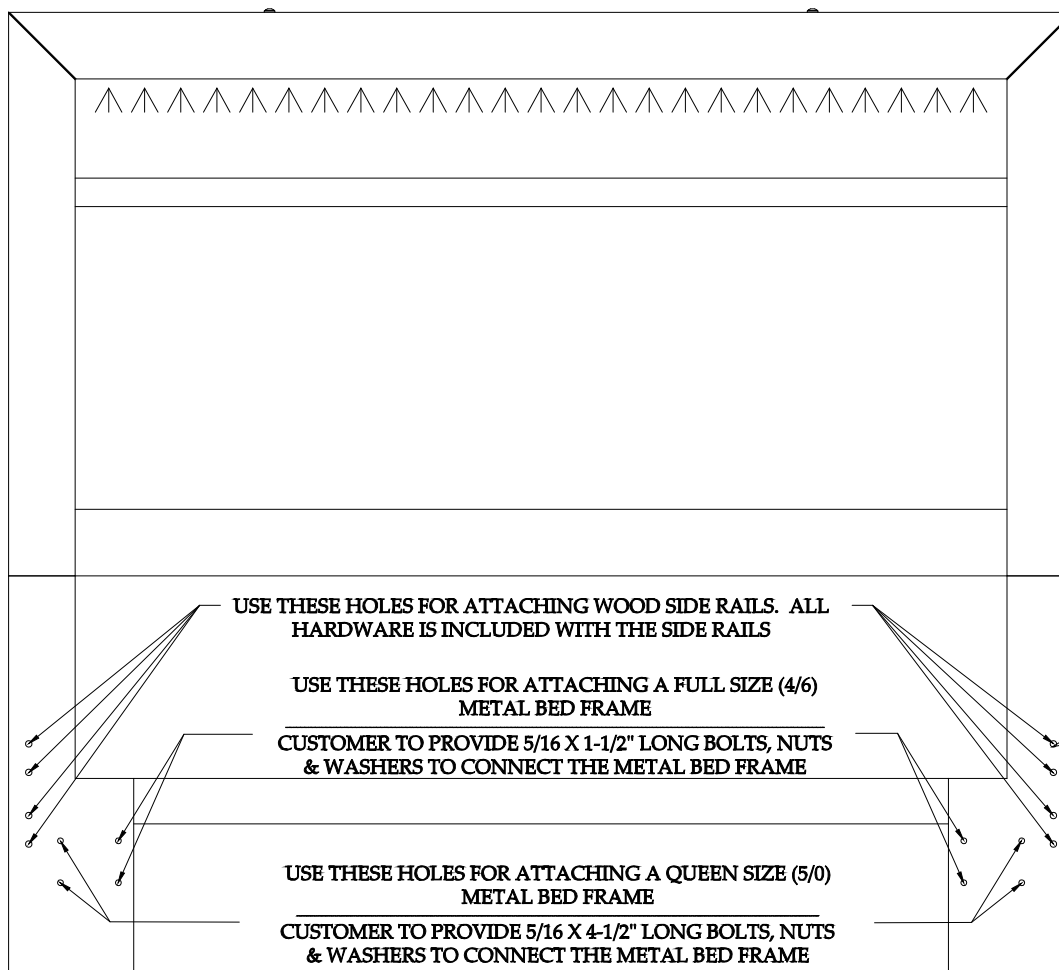

5/0 Queen Storage Bed
75870 -- 4/6-5/0 Panel Headboard.
75873 -- 5/0 Storage Bench Footboard & Platform
75872 -- 5/0-6/6 Bed Rails

5/0 Queen Standard Bed
75870 -- 4/6-5/0 Panel Headboard.
75871 -- 5/0 Panel Footboard & Slats
75872 -- 5/0-6/6 Bed Rails

