# **home**styles<sup>®</sup>

#### 4510-95

## Kitchen Cart


#### **IMPORTANT**


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.



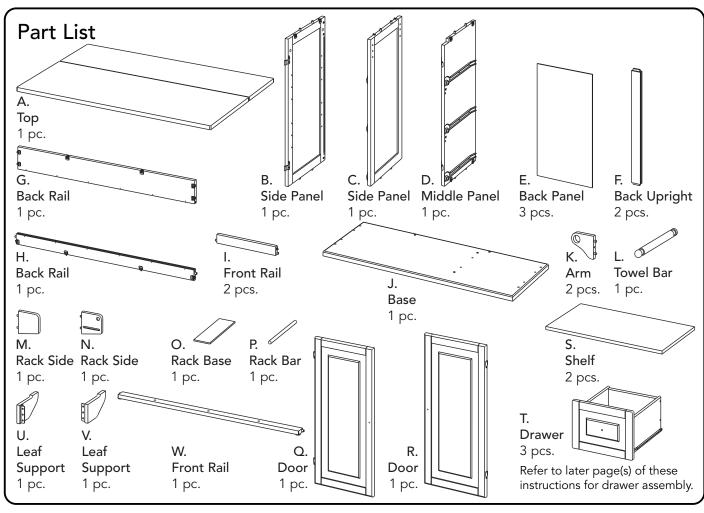

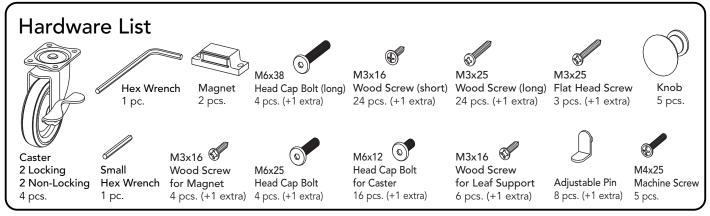

Tool(s) required for assembly: Phillips screwdriver


## Assembly Instructions 2/7

#### **IMPORTANT**

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- Keep Hex Wrench as the bolts may need to be tightened in the future.


#### STEP 1


Assemble Rack Sides (M), (N), Rack Base (O) and Rack Bar (P).

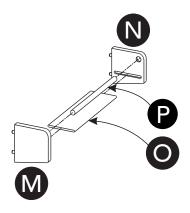

#### STEP 2

Attach unit to Side Panel (C) with Head Cap Bolts.

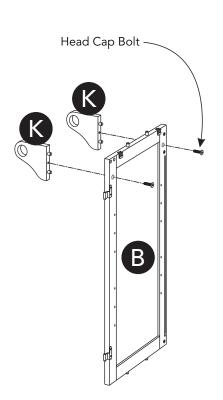


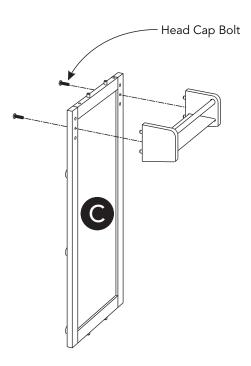

STEP 3

Attach Arms (K) to Side Panel (B) with Head Cap Bolts.

## Assembly Instructions 3/7

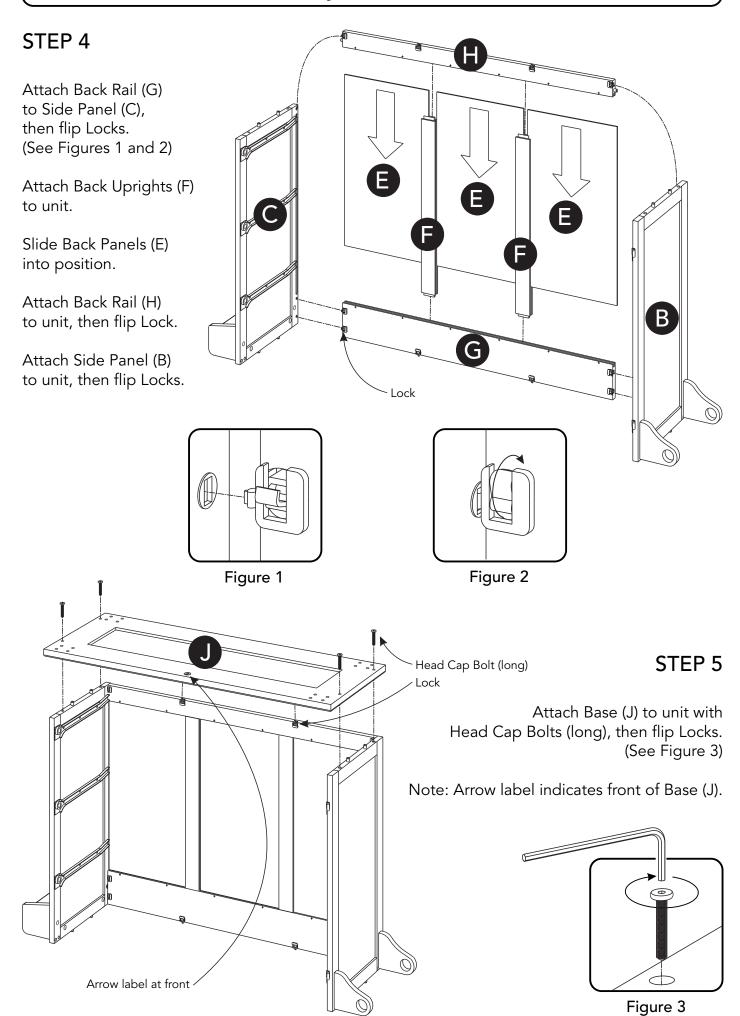

## Assembly Instructions 4/7

#### STEP 6

Attach Casters to unit with Head Cap Bolts for Caster into pre-drilled holes with Locking Casters at front. (See Figure 4)

Note: Arrow label indicates front of unit.



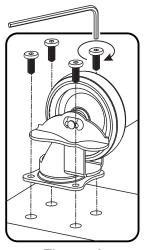


Figure 4

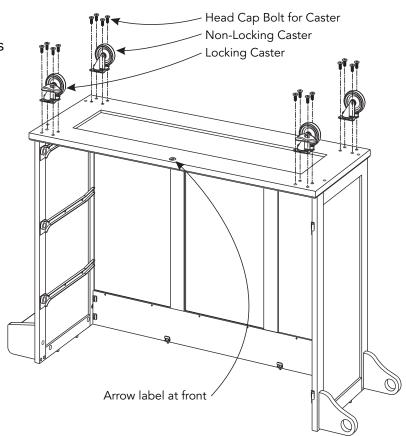

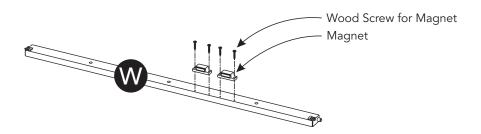

#### STEP 7

Attach Magnets to Front Rail (W) by inserting Wood Screws for Magnet into pre-drilled holes, then tighten. (See Figure 5)

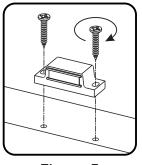


Figure 5

## Assembly Instructions 5/7

#### STEP 8


Turn unit over to its upright position.

Attach Middle Panel (D) to unit, then flip Locks.

Attach Front Rails (I), (W) to unit, then flip Locks.

Insert Wood Screws (short) into pre-drilled holes in unit, then tighten.

Slide Towel Bar (L) into position.

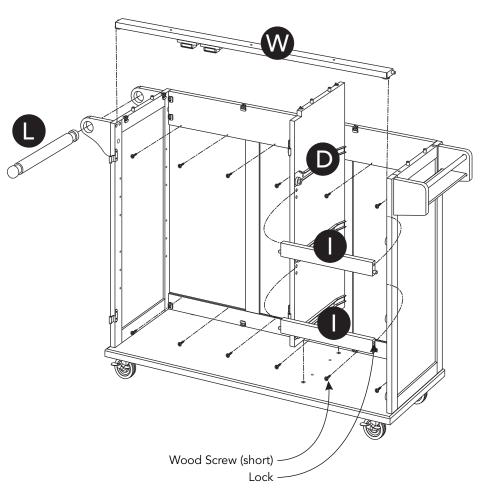


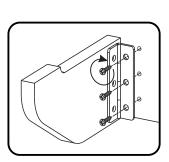


Figure 6


#### STEP 9


Attach Leaf Supports (U) and (V) to unit with Wood Screws for Leaf Support. (See Figure 6)

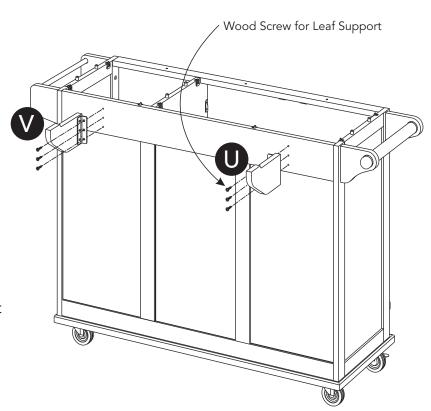

## Assembly Instructions 6/7

#### Drawer (T)

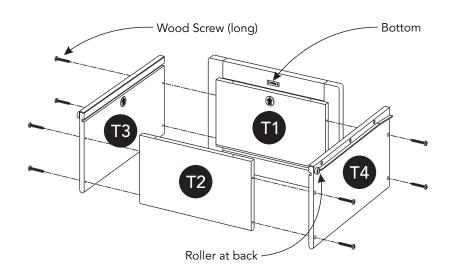

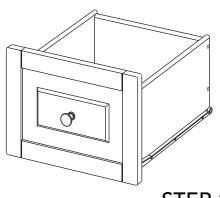

STEP 10


Attach Drawer Front (T1) and Drawer Back (T2) to Drawer Side (T3) with Wood Screws (long).


Attach Drawer Side (T4) to unit with Wood Screws (long).

#### **STEP 11**

Slide Drawer Bottom (T5) into groove.


Attach Drawer Bottom (T5) to unit with Wood Screws (short).

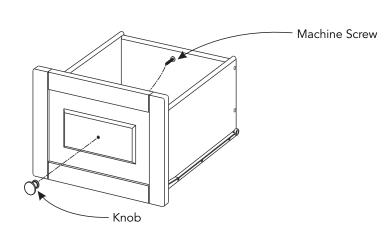

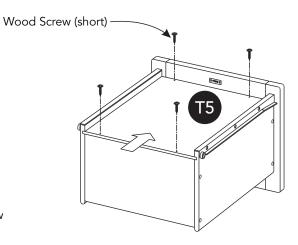


#### **STEP 12**

Attach Knob with Machine Screw.

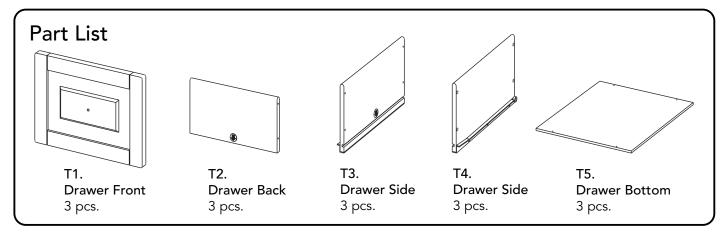

### Assembly Instructions 7/7

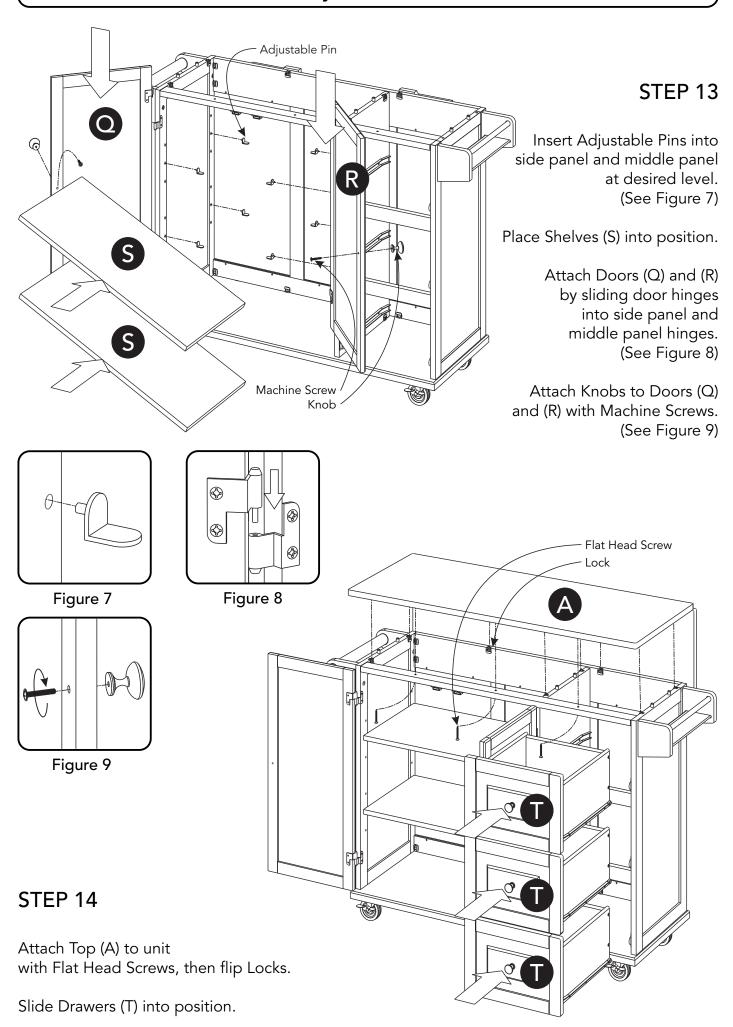

# CARE INSTRUCTIONS

## **NEVER**

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

## **NEVER**

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT CRACKING



Do not place in direct sunlight.

PREVENT FADING



Do not write directly on surface.

PREVENT MARKING



Do not place hot objects on surface.

PREVENT FINISH DAMAGE



Do not use rubber based placemats.

PREVENT DISCOLORING



Do not use commercial waxes and polishes.

PREVENT YELLOWING

## **CLEAN**

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



**home**styles will provide replacements free of charge for missing or damaged parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retailer, **home**styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged parts may be requested via contact info below.