








# Assembly Instructions MODEL NO.: N339 HUTCH WITH DOORS

48Wx12Dx36H


	TUN010CL	TUN011KC		TUN026	TUN017SC	TUN023DH	TUN018SC	
A			C					
	Cam lock 20Pcs+2Pcs(spare)	Klix Cam 20Pcs+2Pcs(spare)		Dowel 20Pcs+1Pcs(spare)	JCBC Black Grommet 2Pcs	Side door hinge 4Pcs	Screw #4 1/2" 24Pcs+2Pcs(spare)	

## STEP1

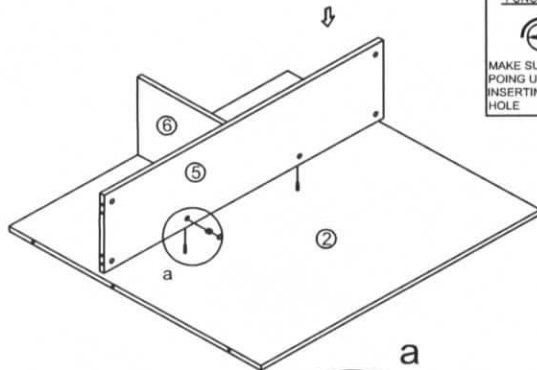



**IMPORTANT:**  
**FUNCTION OF KLIx CAM**  
1/4 RIGHT TURN FOR LOCKING  
MAKE SURE THE ARROW IS POINTING UPWARDS BEFORE INSERTING INTO THE PANELS HOLE

## STEP2

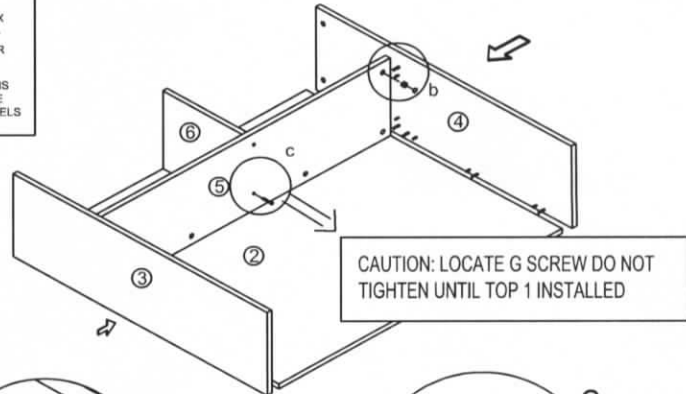


CAUTION: LOCATE G SCREW DO NOT TIGHTEN UNTIL TOP 1 INSTALLED

## STEP3

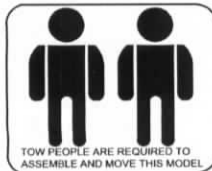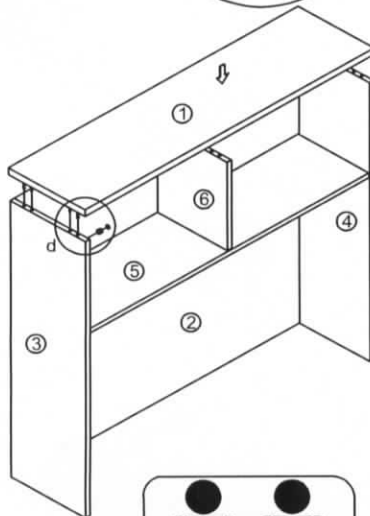


TWO PEOPLE ARE REQUIRED TO ASSEMBLE AND MOVE THIS MODEL

## STEP4

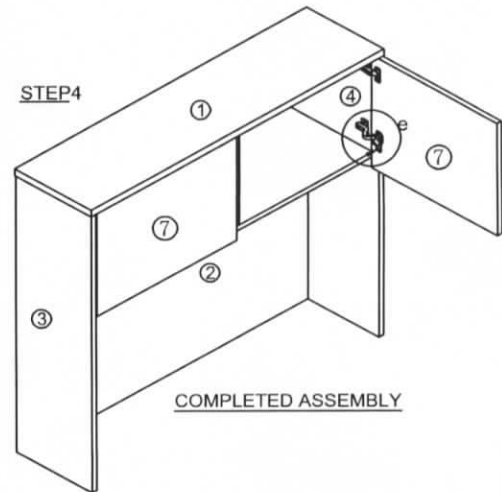

COMPLETED ASSEMBLY



## IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children