Assembly Instructions COUNTER SIDE CHAIR DAH355PCSC & DAH555PCSC

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

- 1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
- 2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
- 3. Please do not over tighten screws or bolts.
- 4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


STEP:2


MADE IN VIETNAM

PART LIST FOR SIDE CHAIR					
No.	PART DESC	CODE.	Q'TY		
А	Counter Side Chair - Upholstered Back Frame	PDAH355PCSCBFR PDAH555PCSCBFR PDAH755PCSCBFR	1		
В	Counter Side Chair - Cushion w/ Seat Frame	PDAH355PCSCBCS PDAH555PCSCBCS PDAH755PCSCBCS	1		
С	Counter Side Chair - Front L/R Legs	PDAH350CSCLEG PDAH550CSCLEG PDAH750CSCLEG	2		
D	Counter Side Chair - L/R Side Stretcher	PDAH350CSCSTR1 PDAH550CSCSTR1 PDAH750CSCSTR1	2		
Е	Counter Side Chair - Front Stretcher	PDAH350CSCSTR2 PDAH550CSCSTR2 PDAH750CSCSTR2	1		

HARDWARE LIST PACKED INSIDE BOX						
No.	HARDWARE DESC		CODE.	Q'TY		
1	() ()	ALLEN BOLT (Ø1/4"*1-5/8")		2		
2	(a)	ALLEN BOLT (Ø1/4"*2-3/8")	PDAH350CSCHW PDAH550CSCHW PDAH750CSCHW	4		
3	<u> </u>	ALLEN BOLT (Ø1/4"*3")		4		
4	Ø	SPRING WASHER (Ø1/4")		10		
5	0	FLAT WASHER (Ø1/4")		10		
6	()	SCREWS/ VIS (#4*1-1/2")		6		
7		ALLEN KEY (Ø1/8")		1		

⚠ Only tighten all bolts when all bolts aligned with bolt inserts.

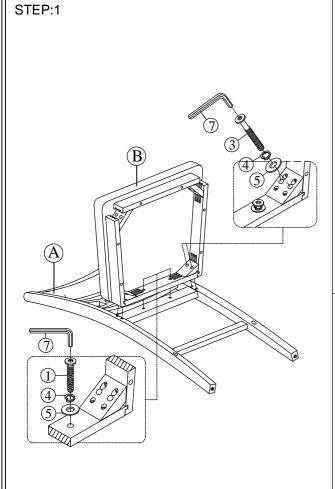

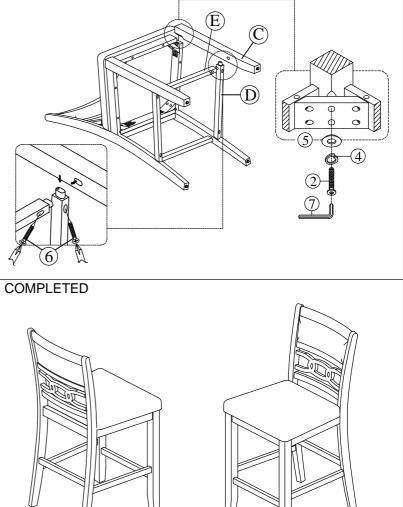

PAGE 1 OF 1