

ASSEMBLY INSTRUCTION

DESCRIPTION : KING STORAGE HEADBOARD /
FOOTBOARD AND SIDERAIL

MODEL :

C5236A - G91-2DXX	C5236G - G91
C5236A - B92-XXXX	C5236G - B92
C5236A - GXJ-2DXX	C5236G - GXJ


REVISION : C

Parts List

NO.	Descriptions	Qty.
A	Headboard Panel	1
B	Headboard Leg Left (L)	1
C	Headboard Leg Right (R)	1
D	Headboard Support Rail Front	1
E	Headboard Support Rail Back	1
F	Footboard	1
G	Bed Rail	2
H	Drawer Slat	1
I	Drawer Slat Support	1
J	Bed Slat 3Holes	3
K	Bed Slat 2Holes	10
L	Bed Slat Support	3
M	Center Slat With 3 Holes	1
N	Drawer	2
O	Slat Cover	1
P	Drawer Slat Support Stopper	1

Hardware Pack Headboard & Footboard

NO.	Descriptions	Qty.
1	CSK M4 x 16mm 	7
2	CSK M4 x 25mm 	8
3	CSK M4 x 32mm 	30
4	JCBC SCREW M6 x 35mm 	8
5	JCBC SCREW M6 x 60mm 	3
6	SPRING WASHER $\frac{1}{4}$ " 	8
7	FLAT WASHER $\frac{1}{4}$ " x 20mm 	8
8	L KEY M4 	1
9	L KEY M5 	1

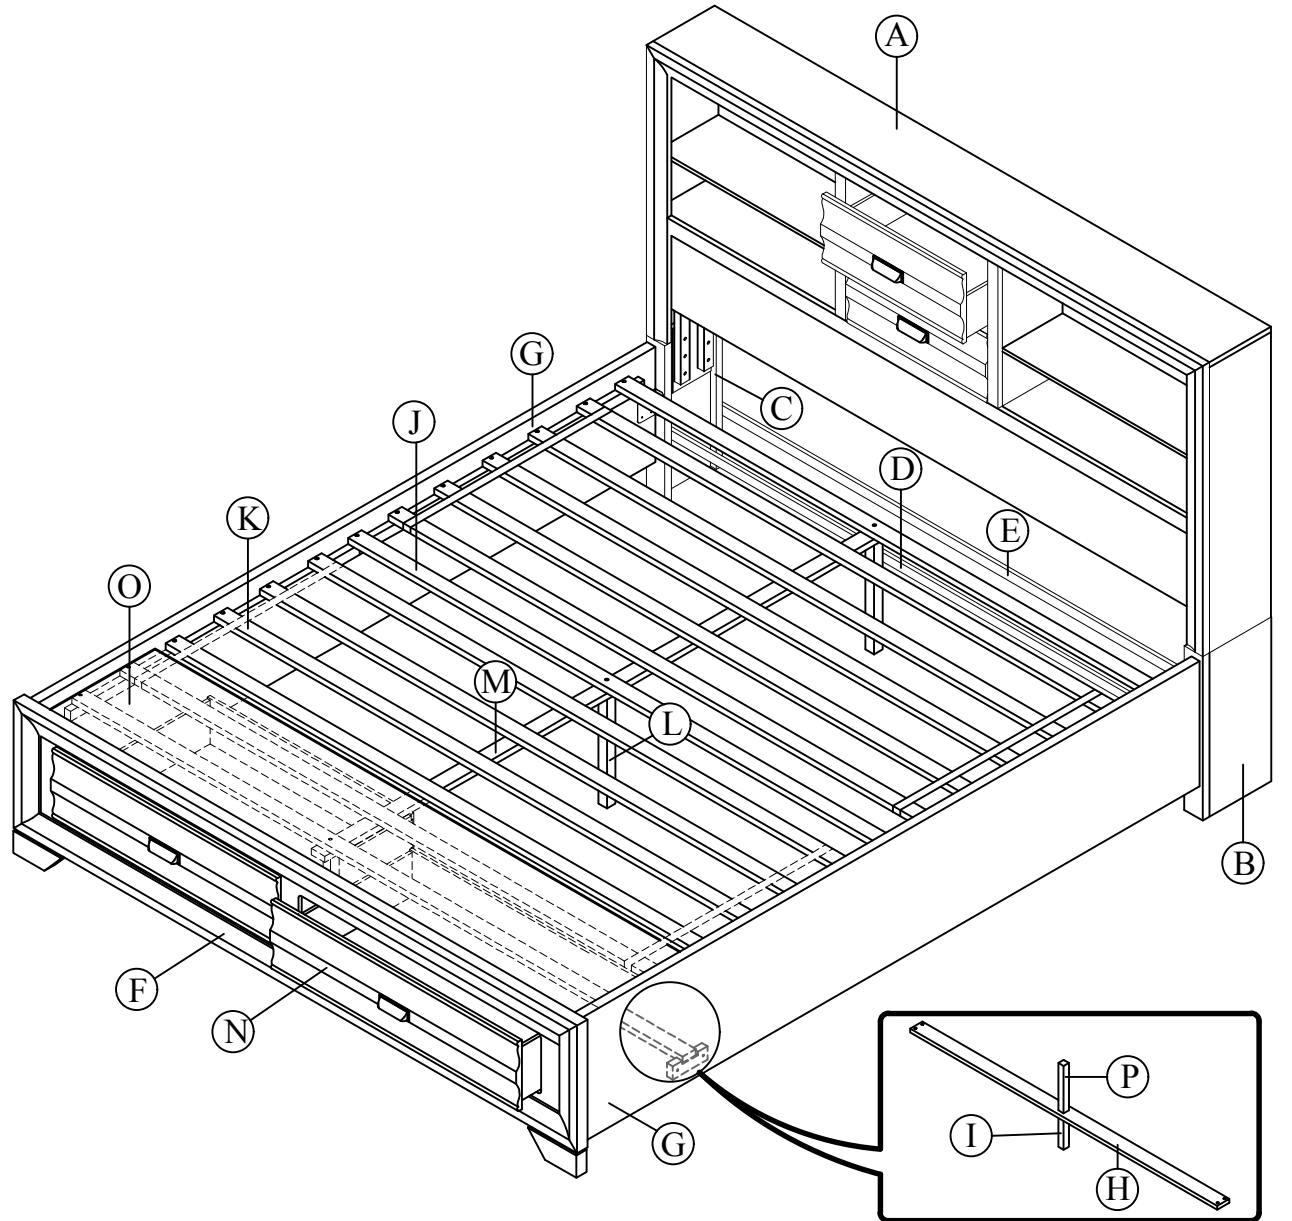

**NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE.
CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.**


ASSEMBLY INSTRUCTION

DESCRIPTION : KING STORAGE HEADBOARD /
FOOTBOARD AND SIDERAIL

STEP 1.1: Attach & tighten the Headboard Leg (B) & (C) to the Headboard (A). Affix Headboard & Headboard Leg using JCBC screw M6 x 35mm (4), Spring Washer (6), Flat Washer (7) using L Key (8).

STEP 1.2: Attach Headboard Support Rail Front (D) & affix using CSK Screw M4 x 25mm (2).

STEP 1.3: Followed by Attach Headboard Back Support Rail (E) & affix using CSK Screw M4 x 25mm (2).
(Attach at the top of wood cleat as shown in diagram)

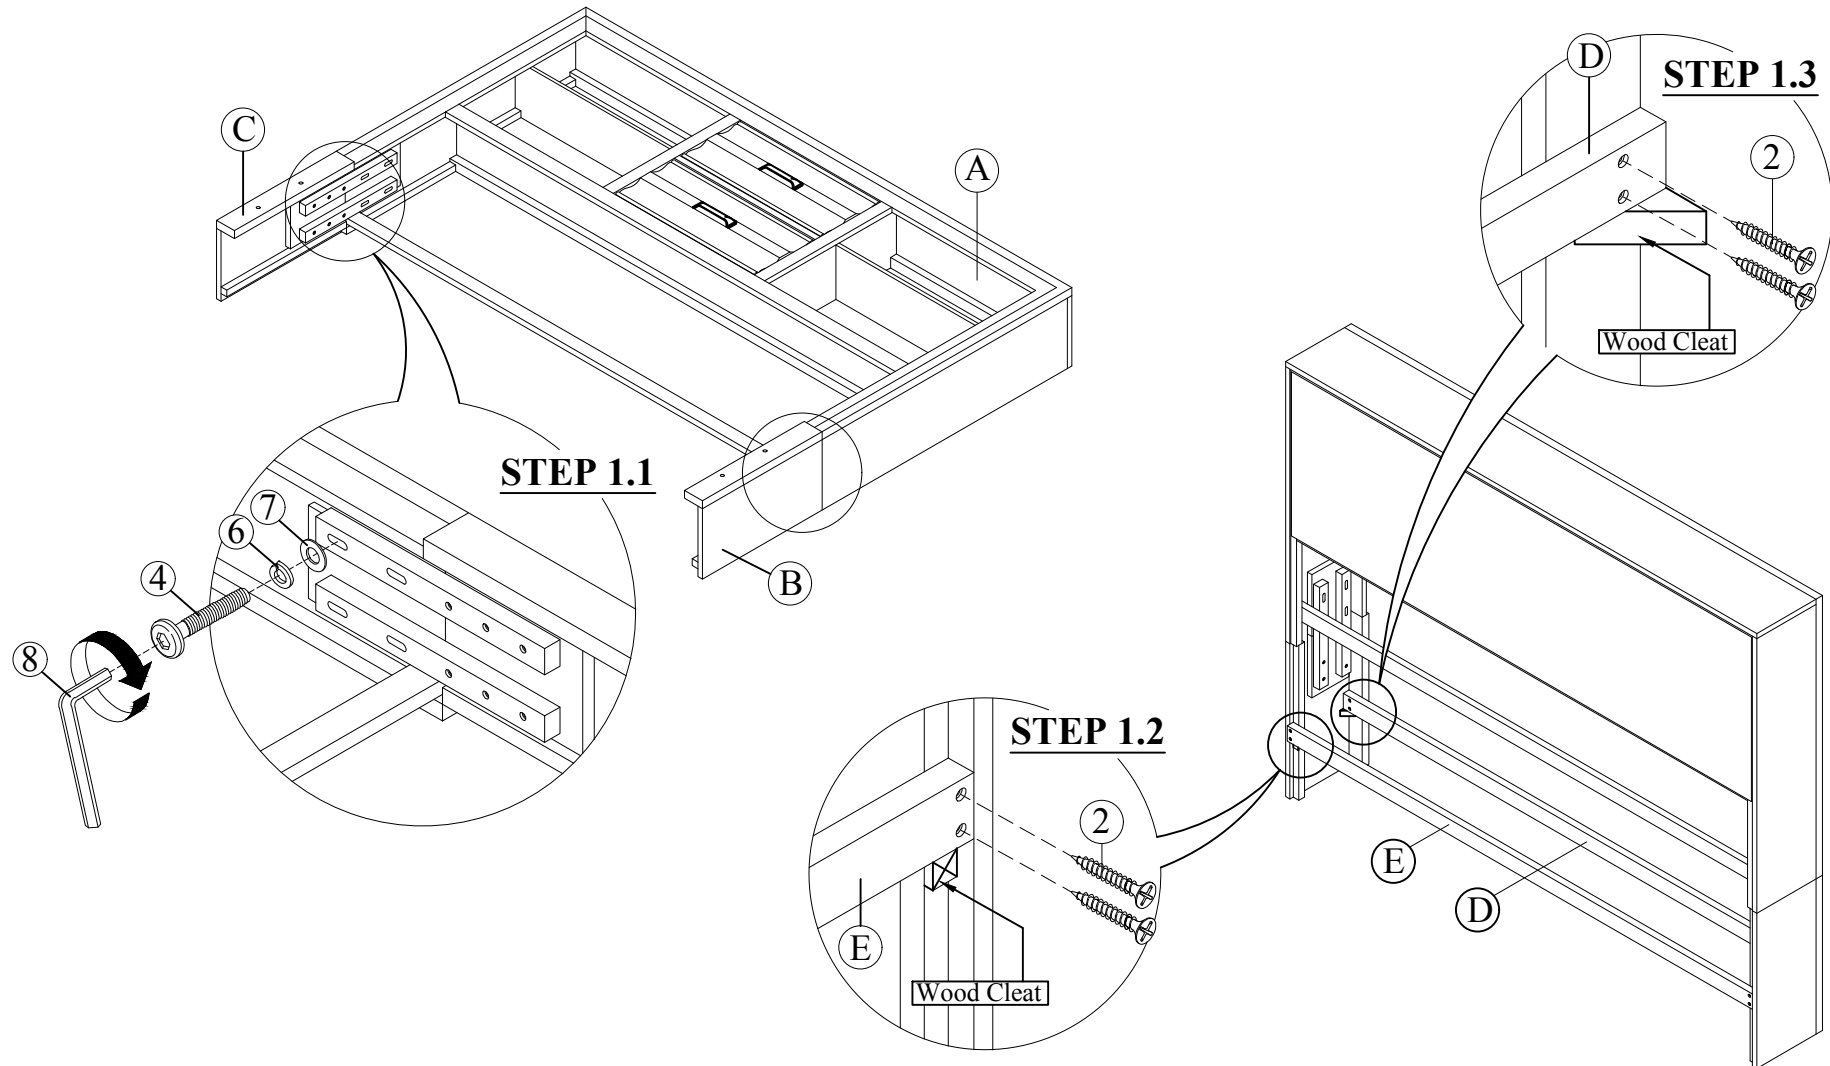

**NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE.
CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.**

ASSEMBLY INSTRUCTION

DESCRIPTION : KING STORAGE HEADBOARD /
FOOTBOARD AND SIDERAIL

STEP 2.1: Attach the Bed Rail (G) to Headboard Leg.


STEP 2.2: Tighten SCREW on Headboard Leg by using L KEY M5 (9) & repeat the same step on Footboard (F).

STEP 2.3: Move the bed to the desired position.

STEP 2.4: Attach the Drawer Slat (H) each to a Drawer Slat Support (I) and fix with Drawer Slat Support Stopper (P).

STEP 2.5: Fix the Drawer Slat (H) to Bed Rail (G) with CSK M4 x 32mm (3).

STEP 2.6: Move 'T' Runner at Footboard (F) to Drawer Slat (H).

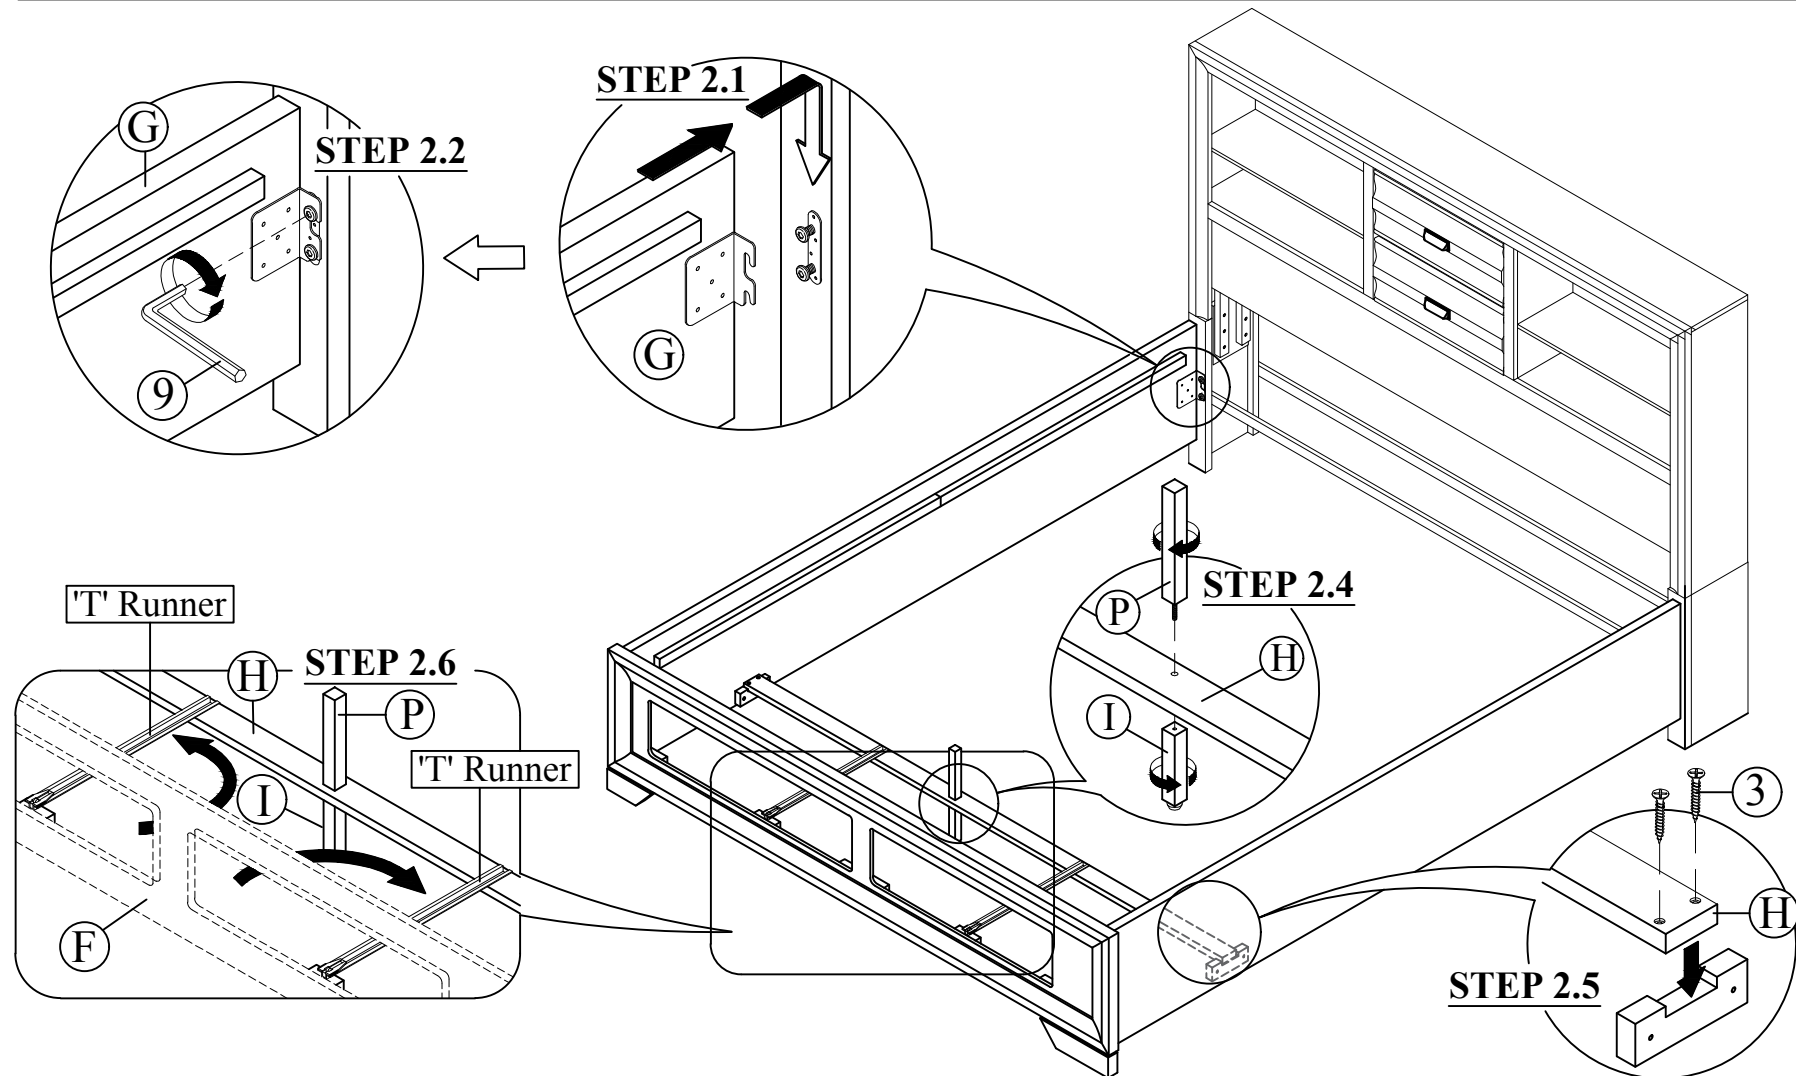

**NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE.
CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.**


ASSEMBLY INSTRUCTION

DESCRIPTION : KING STORAGE HEADBOARD /
FOOTBOARD AND SIDERAIL

STEP 3.1: Insert Drawer (N) to Footboard (F) until completely closed.

STEP 3.2: Tighten 'T' Runner at Footboard (F) to Drawer Slat (H) with CSK M4 x 16mm (1).

STEP 3.3: If Drawer (N) does not close properly, adjust the adjuster at the bottom of Drawer Slat Support (I) up or down until the Drawer (N) closes tightly.

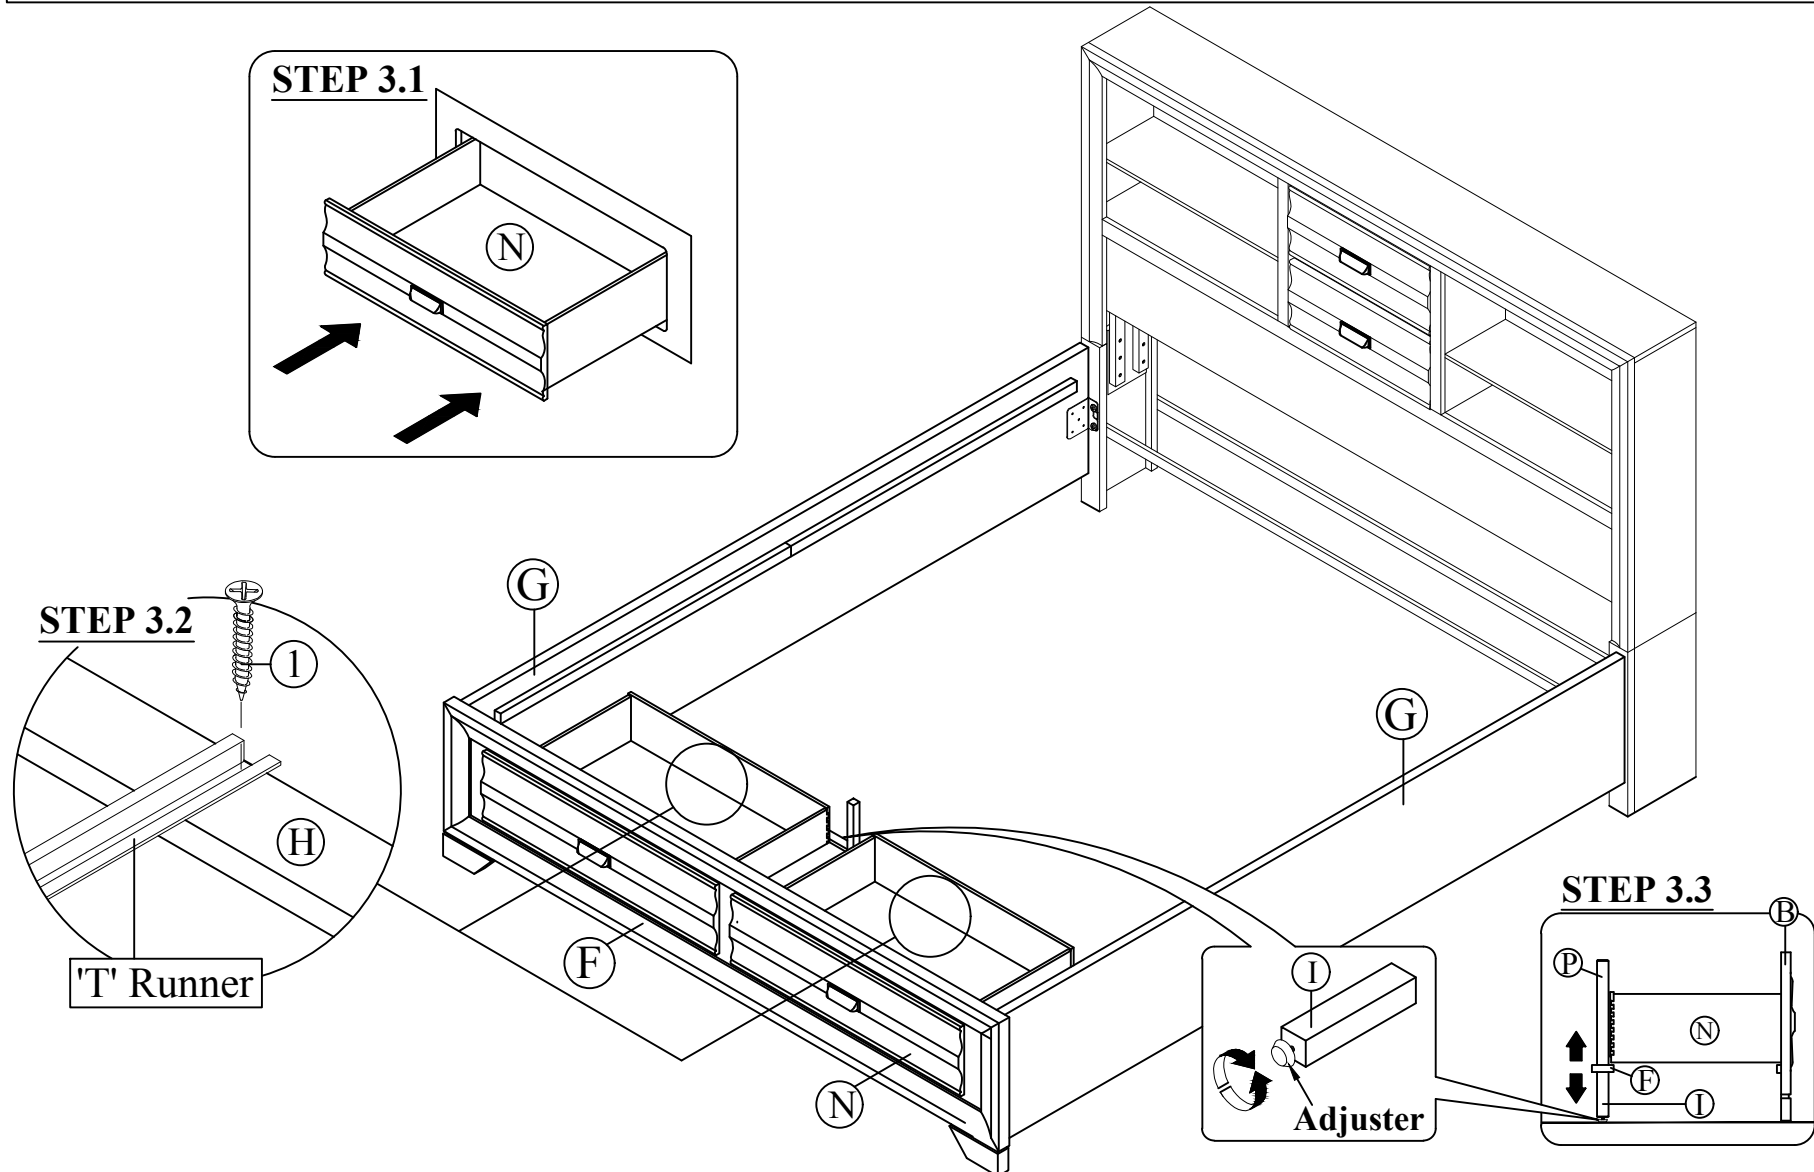


**NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE.
CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.**

ASSEMBLY INSTRUCTION

**DESCRIPTION : KING STORAGE HEADBOARD /
FOOTBOARD AND SIDERAIL**

STEP 4.1: Attach the Center Slat (M), Bed Slat (J) to Bed Slat Support (L). Tighten with JCBC M6 x 60mm (5) by using L KEY M4 (8).

STEP 4.2: Attach Bed Slat (J) & Bed Slat (K) and tighten to Bed Rail (G) with CSK M4 x 32mm (3).

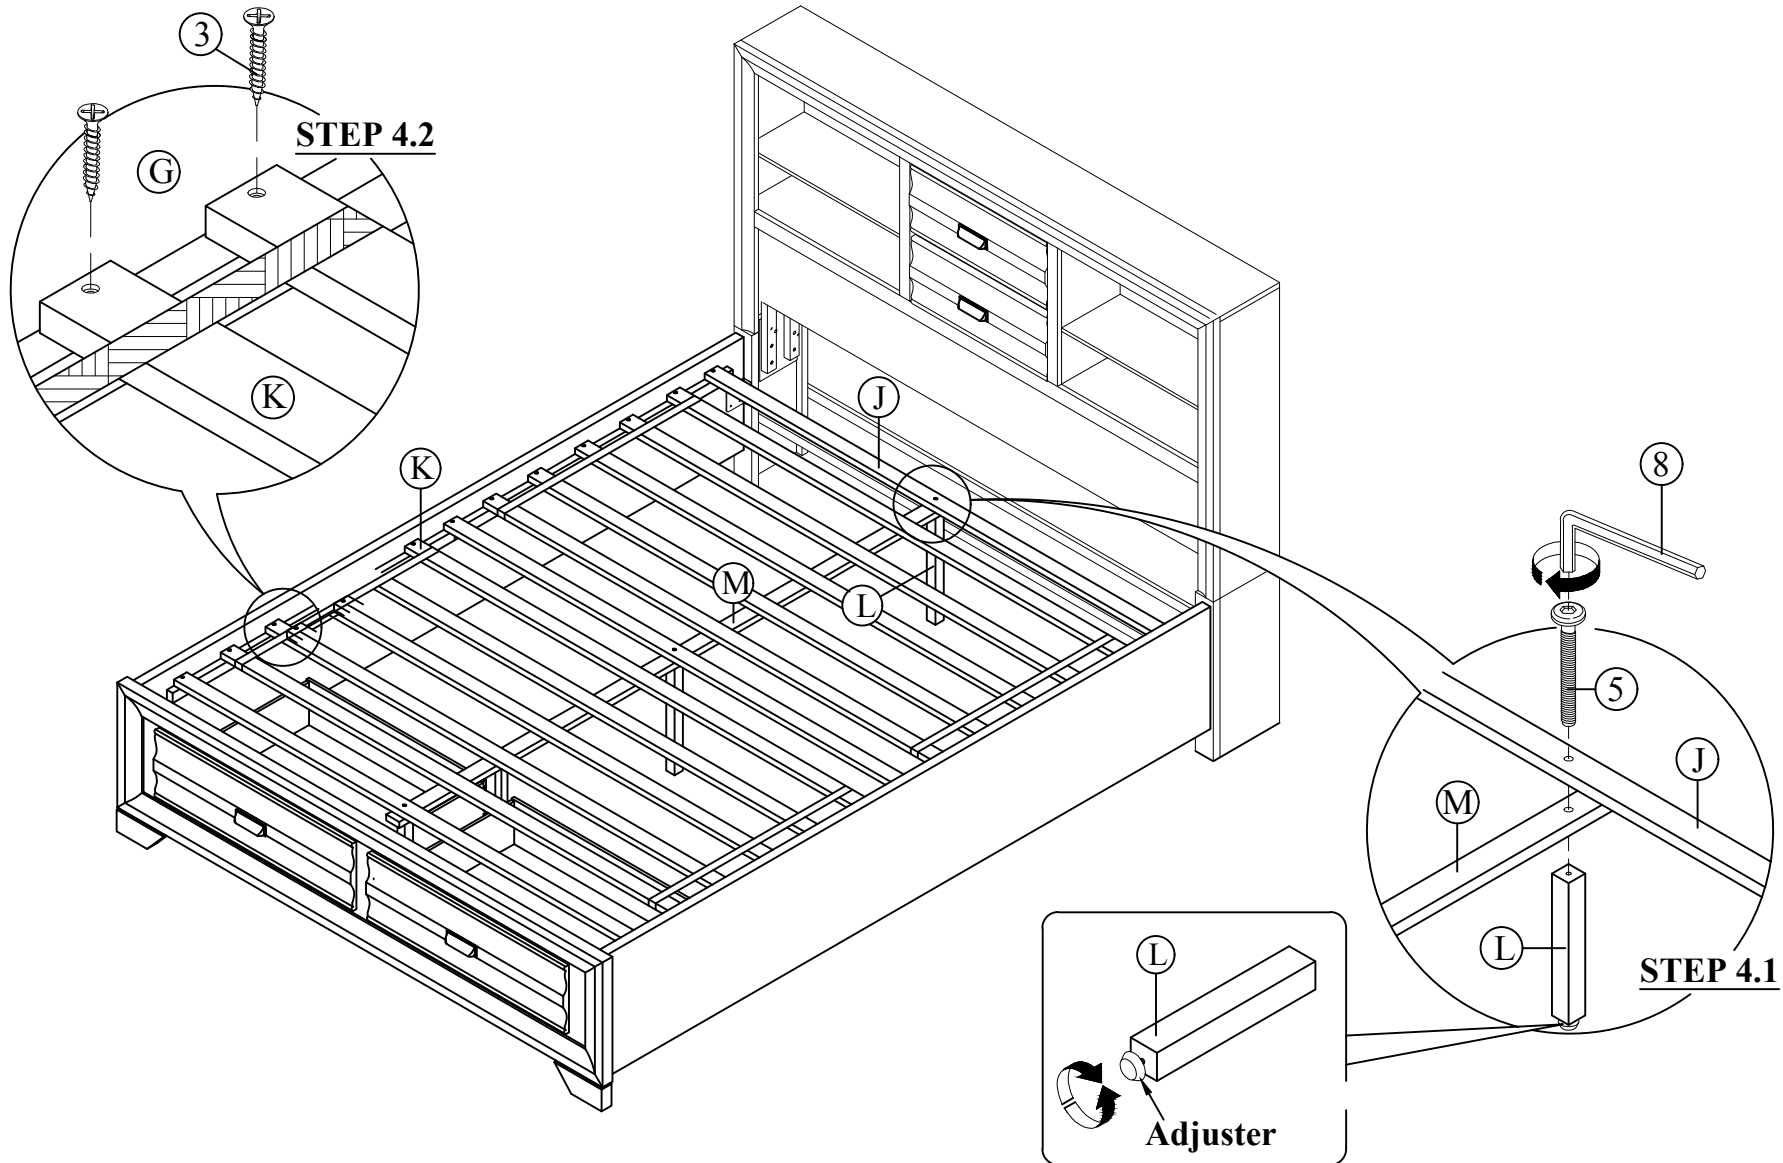


**NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE.
CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.**

ASSEMBLY INSTRUCTION

DESCRIPTION : KING STORAGE HEADBOARD /
FOOTBOARD AND SIDERAIL

STEP 5.1: Attach the Slat Cover (O) to top Bed Slat (J & K) .

STEP 5.2: Close the distance Slat Cover (O) to Footboard (F). Tighten Slat Cover (O) to Wood at Footboard (F)
with CSK M4 x 16mm (1).

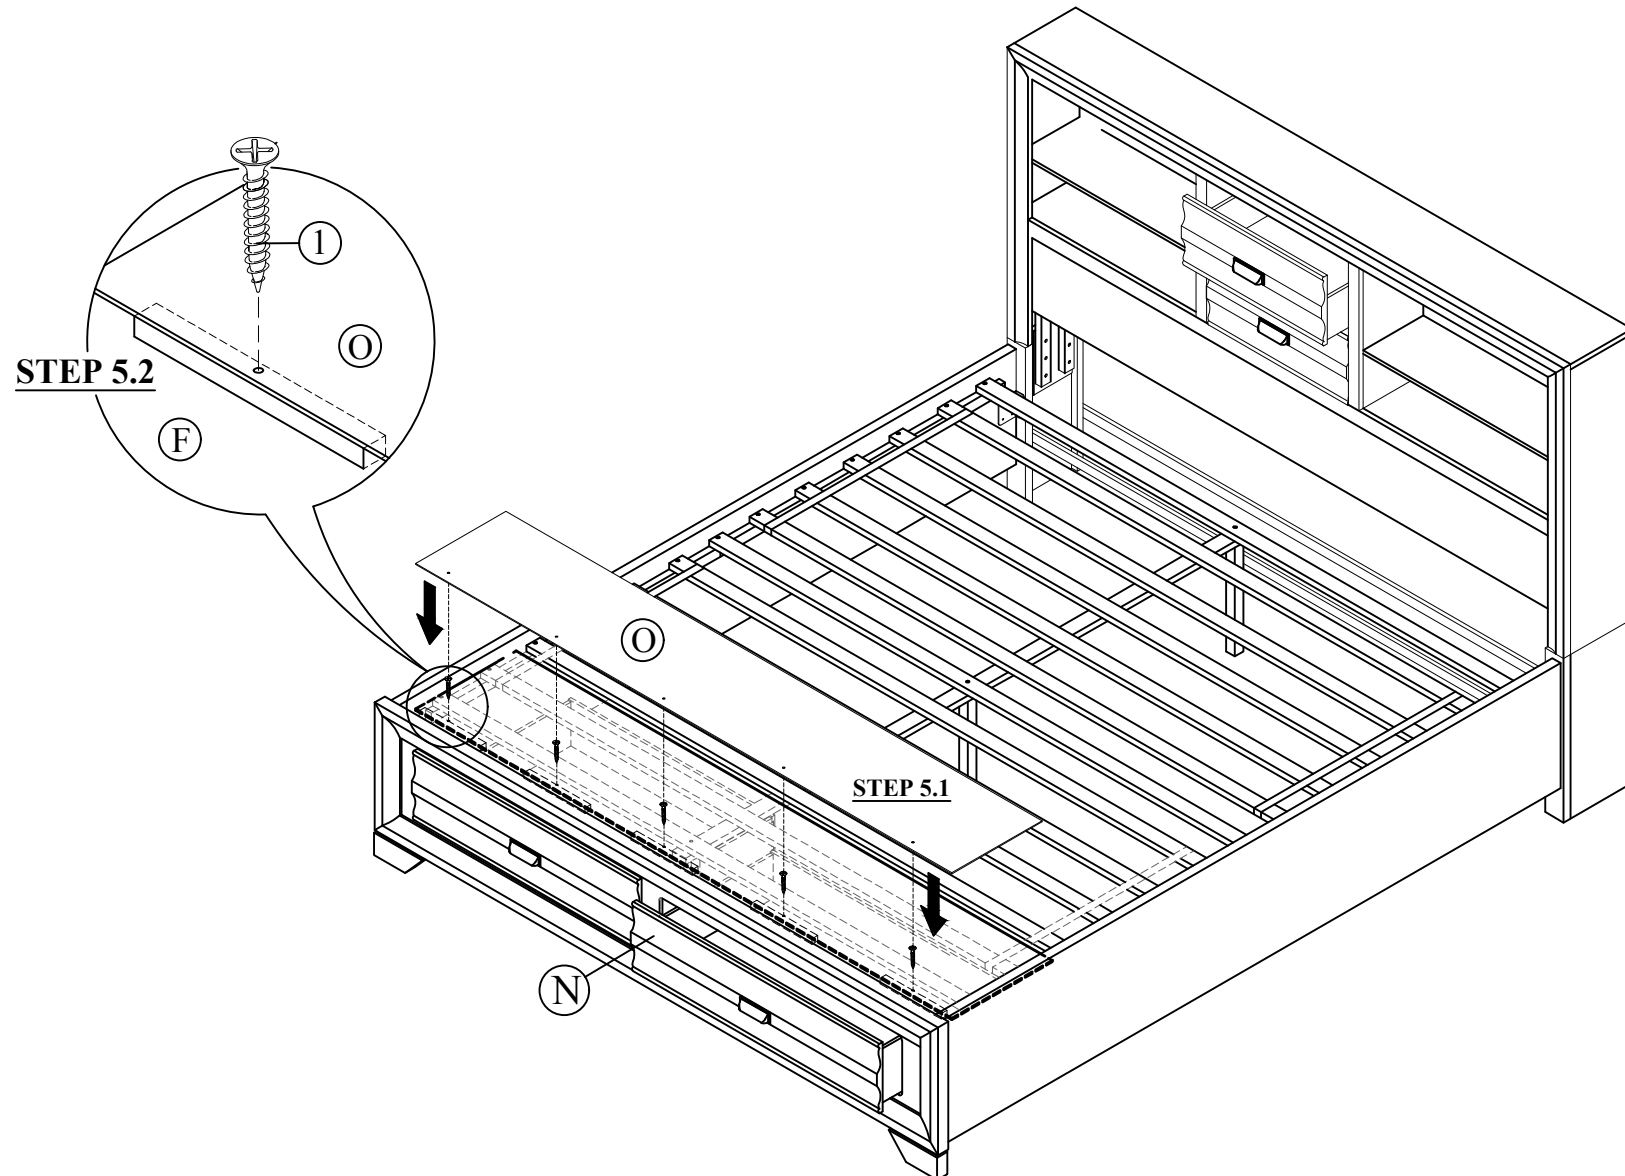

**NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE.
CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.**

INSTRUCTIONS D'ASSEMBLAGE

DESCRIPTION : TETE DE TRES GRAND LIT A CAISSE
DE TIROIRS/ PIED DE LIT & LONGERONS

MODEL :

C5236A - G91-2DXX	C5236G - G91
C5236A - B92-XXXX	C5236G - B92
C5236A - GXJ-2DXX	C5236G - GXJ


REVISION : C

Pièces

N°	Descriptions	Q'té
A	Tête de lit	1
B	Pied de la Tête de Lit Gauche (L)	1
C	Pied de la Tête de Lit Droite (R)	1
D	Longeron de Tête de Lit Avant	1
E	Longeron de Tête de Lit Derrière	1
F	Pied de lit	1
G	Longeron	2
H	Latte tiroirs	1
I	Soutien lattes de tiroirs	1
J	Latte 3 trous	3
K	Latte 2 trous	10
L	Soutien Lattes	3
M	Latte Centrale 3 trous	1
N	Tiroir	2
O	Cache-Lattes	1
P	Butée de soutien lattes aux tiroirs	1

Paquet de quincaillerie tête et pied du lit

N°	Descriptions	Q'té
1	CSK M4 x 16mm 	7
2	CSK M4 x 25mm 	8
3	CSK M4 x 32mm 	30
4	VIS JCBC M6 X 35mm 	8
5	JCBC VIS M6 X 60mm 	3
6	RONDELLE A RESSORT Ø1/4" 	8
7	RONDELLE PLATE Ø1/4" x 20mm 	8
8	CLE «L» M4 	1
9	CLE «L» M5 	1

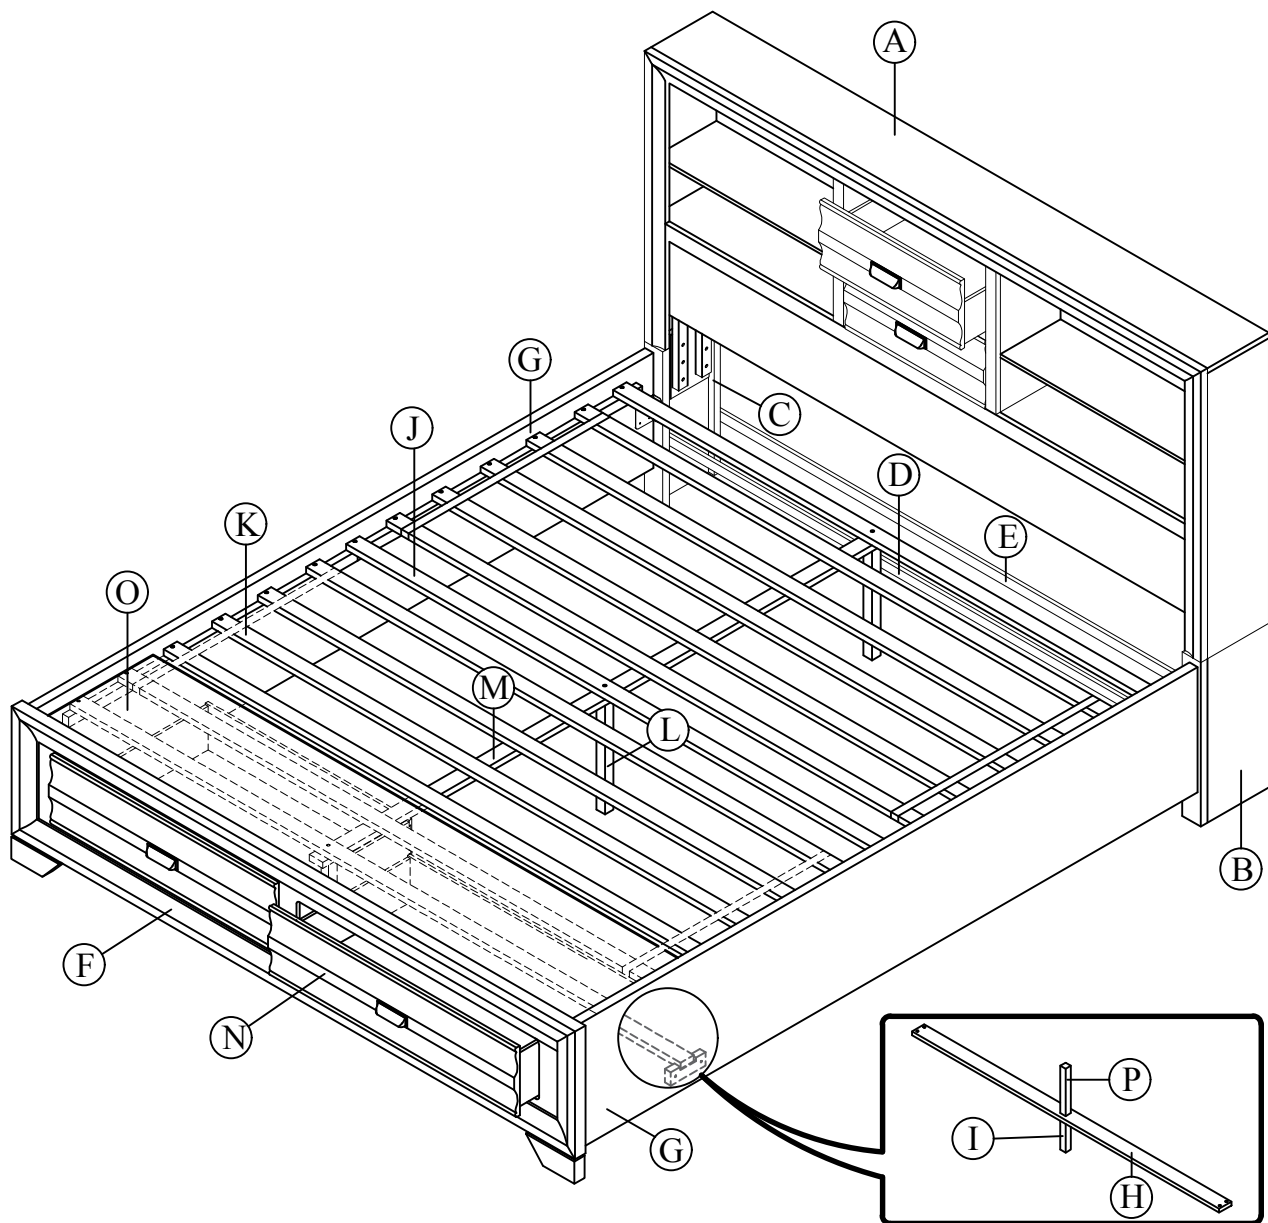

REMARQUE : RESERRER LES VIS RÉGULIÈREMENT. À L'USAGE, LES VIS SE DESERRENT.
VÉRIFIER QUE LES VIS SOIENT SERRÉES TOUTES LES 6-8 SEMAINES.


INSTRUCTIONS D'ASSEMBLAGE

DESCRIPTION : TÊTE DE TRES GRAND LIT A CAISSE
DE TIROIRS/ PIED DE LIT & LONGERONS

ETAPE 1.1 : Attacher et serrer Pied de TDL (B) & (C) à la Tête de lit (A). Fixer la TDL et Pied de la TDL avec la vis JCBC M6 x 35mm (4), Rondelle à ressort (6), Rondelle plate (7) en utilisant la Clé L (8).

ETAPE 1.2: Attacher Longeron de Tête de Lit Avant (D) & fixer en utilisant Vis CSK M4 x 25mm (2).

ETAPE 1.3: Attacher Longeron de Tête de Lit Derrière (E) & fixer en utilisant Vis CSK M4 x 25mm (2).
(Attacher au dessus de la cale en bois comme indiqué)

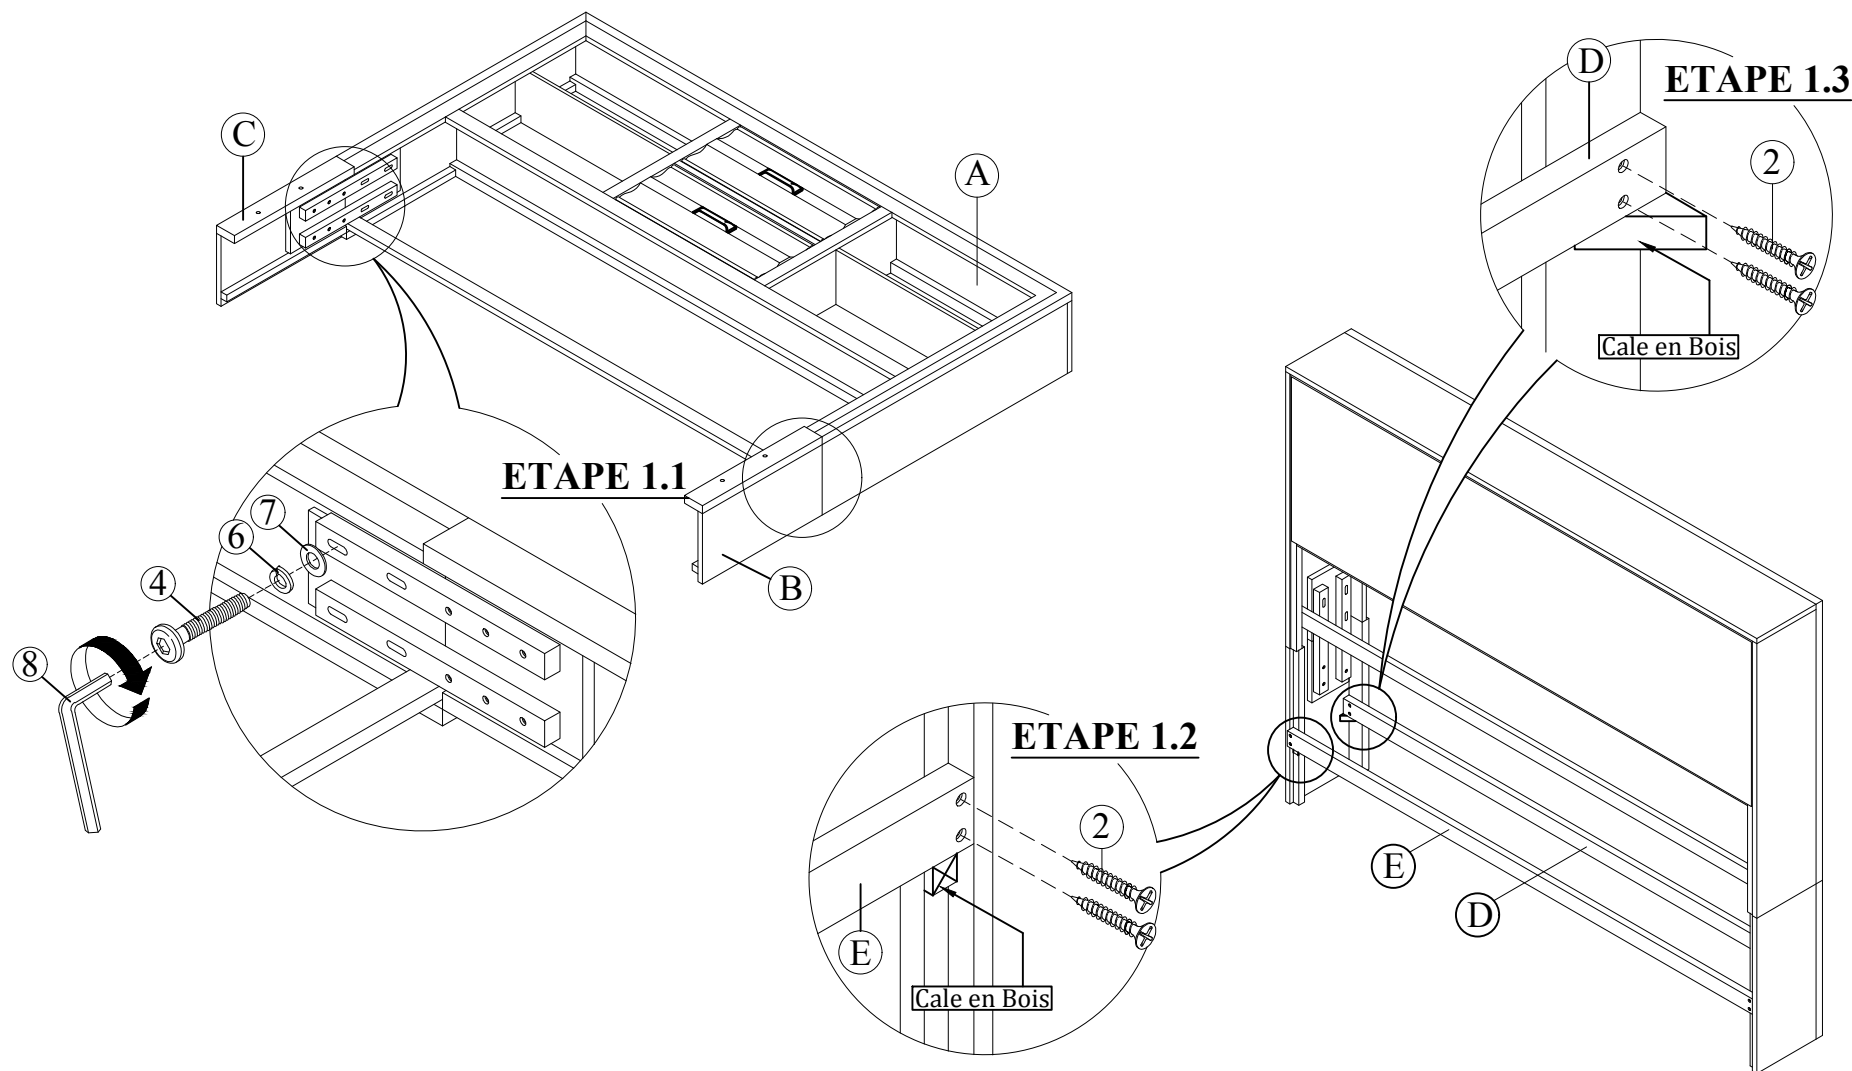

REMARQUE : RESERRER LES VIS RÉGULIÈREMENT. À L'USAGE, LES VIS SE DESERRENT.
VÉRIFIER QUE LES VIS SOIENT SERRÉES TOUTES LES 6-8 SEMAINES.

INSTRUCTIONS D'ASSEMBLAGE

DESCRIPTION : TÊTE DE TRES GRAND LIT A CAISSE
DE TIROIRS/ PIED DE LIT & LONGERONS

ETAPE 2.1: Attacher le Longeron (G) au Pied de la Tête du lit.


ETAPE 2.2: Serrer la VIS au pied de la Tête du lit en utilisant la Clé «L» M5 (9) & répéter pour le Pied de la TDL.

ETAPE 2.3: Déplacer le lit à l'emplacement final souhaité.

ETAPE 2.4: Attacher chaque Latte de tiroir (H) a un Soutien de lattes de tiroirs (I) et fixer avec Butée de soutien lattes aux tiroirs (P).

ETAPE 2.5: Fixer les Lattes de tiroirs (H) aux Longerons (G) avec CSK M4 x 32mm (3).

ETAPE 2.6: Tourner les Glissières "T" du PDL (F) aux Lattes de tiroirs (H).

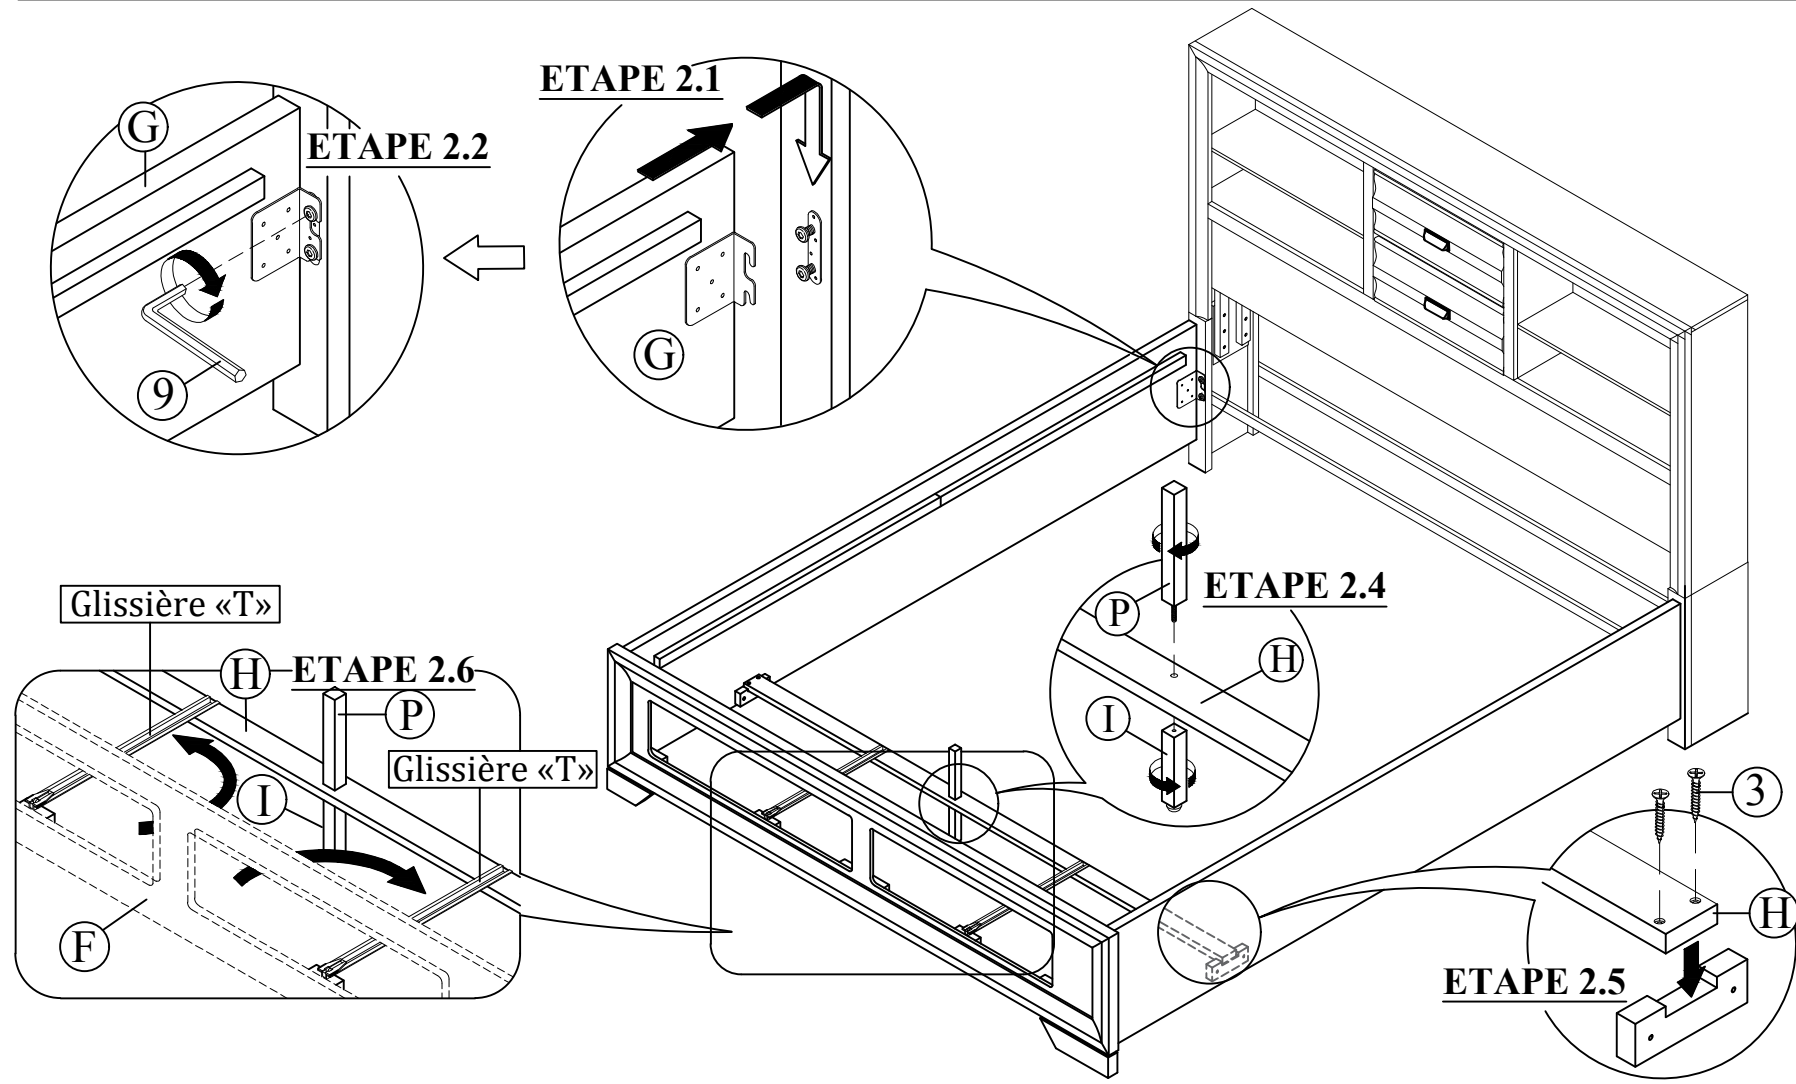

REMARQUE : RESERRER LES VIS RÉGULIÈREMENT. À L'USAGE, LES VIS SE DESERRENT.
VÉRIFIER QUE LES VIS SOIENT SERRÉES TOUTES LES 6-8 SEMAINES.


INSTRUCTIONS D'ASSEMBLAGE

DESCRIPTION : TETE DE TRES GRAND LIT A CAISSE
DE TIROIRS/ PIED DE LIT & LONGERONS

ETAPE 3.1: Insérer Tiroir (N) complètement dans le Pied du lit (F).

ETAPE 3.2: Serrer la Glissière "T" sur le Pied de lit (F) aux Lattes de tiroirs (H) en utilisant CSK M4 x 16mm (1).

ETAPE 3.3: Si le Tiroir (N) ne ferme pas bien, régler l'ajusteur au fond du Soutien de lattes de tiroirs (I) jusqu'à ce que le Tiroir (N) soit bien en place.

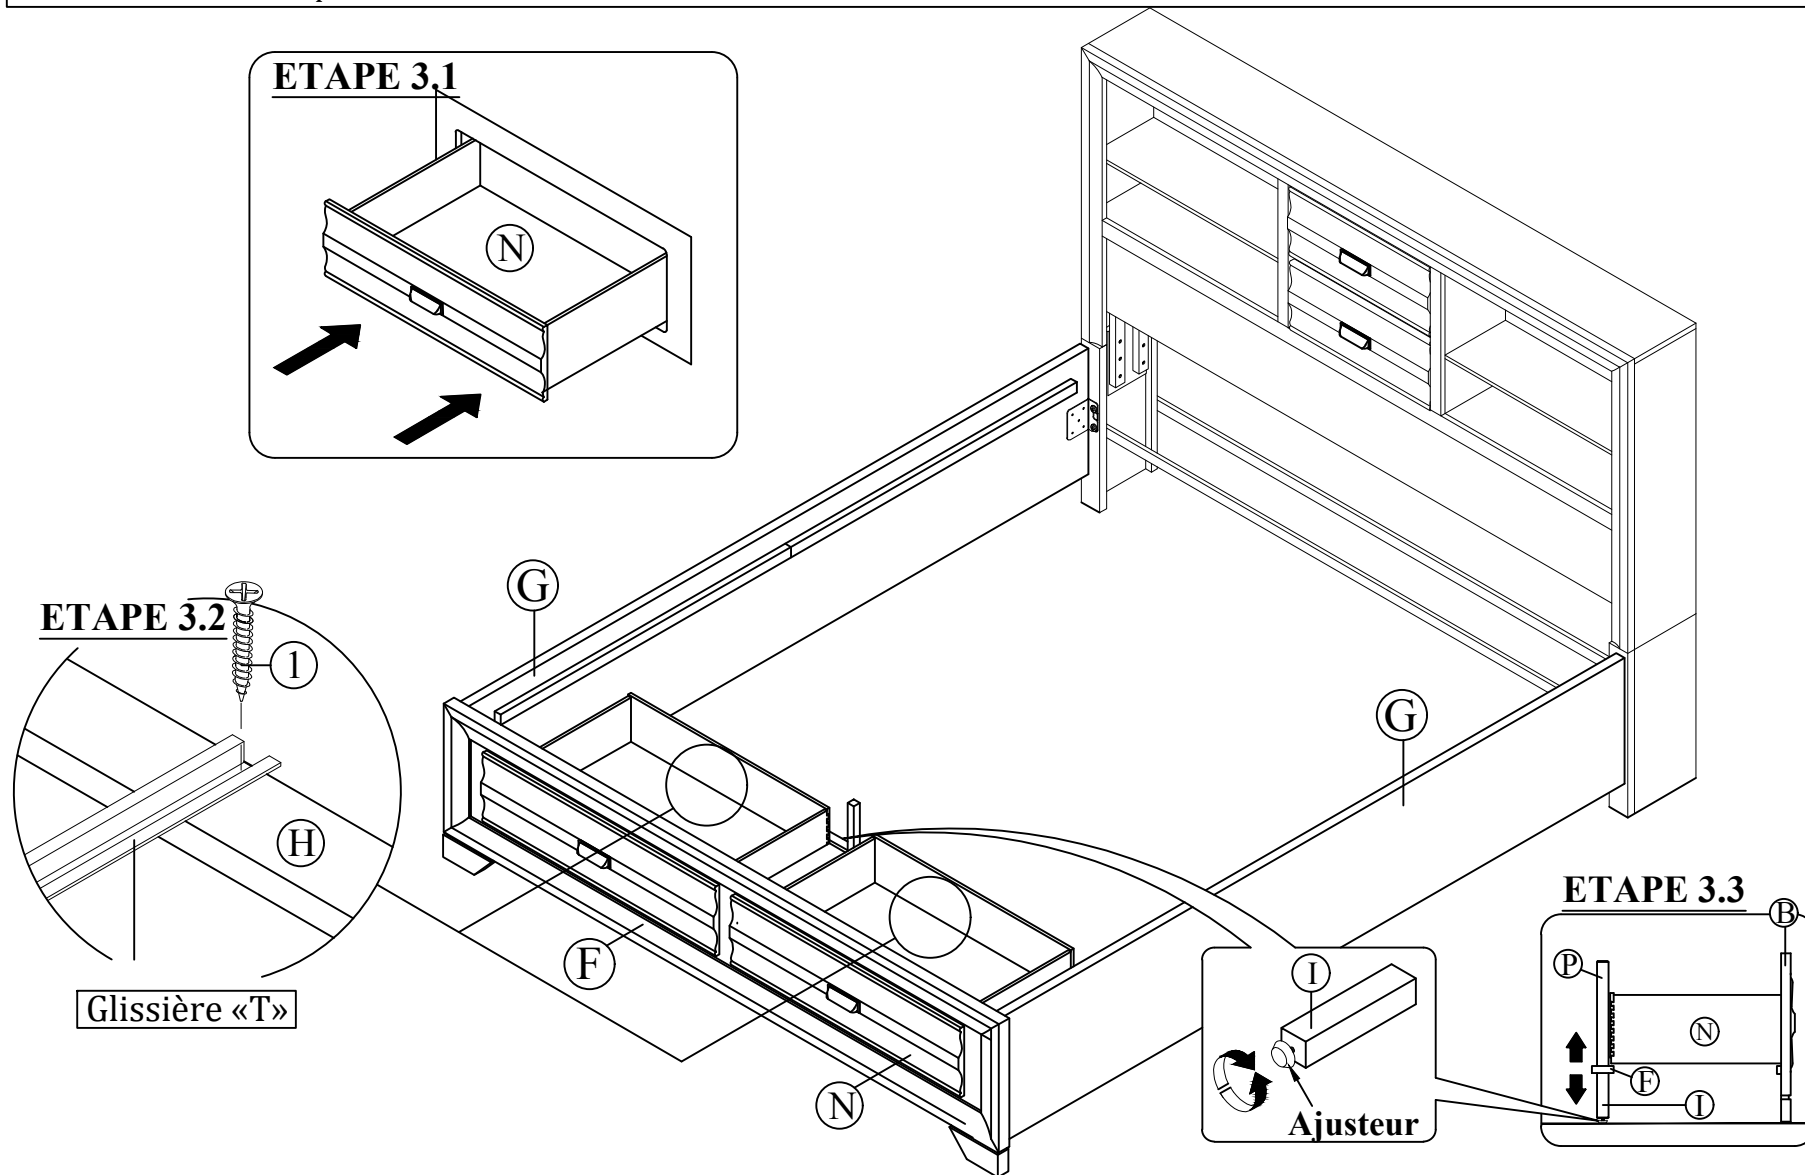


REMARQUE : RESERRER LES VIS RÉGULIÈREMENT. À L'USAGE, LES VIS SE DESERRENT.
VÉRIFIER QUE LES VIS SOIENT SERRÉES TOUTES LES 6-8 SEMAINES.

ETAPE 4.1: Attacher la Latte centrale (M) & les Lattes (J) au Soutien de lattes (L). Serrer avec JCBC M6 x 60mm (5)

en utilisant CLE «L» M4 (8).


ETAPE 4.2: Attacher les Lattes (J) & les Lattes (K) aux Longerons (G) en utilisant CSK M4 x 32mm (3).

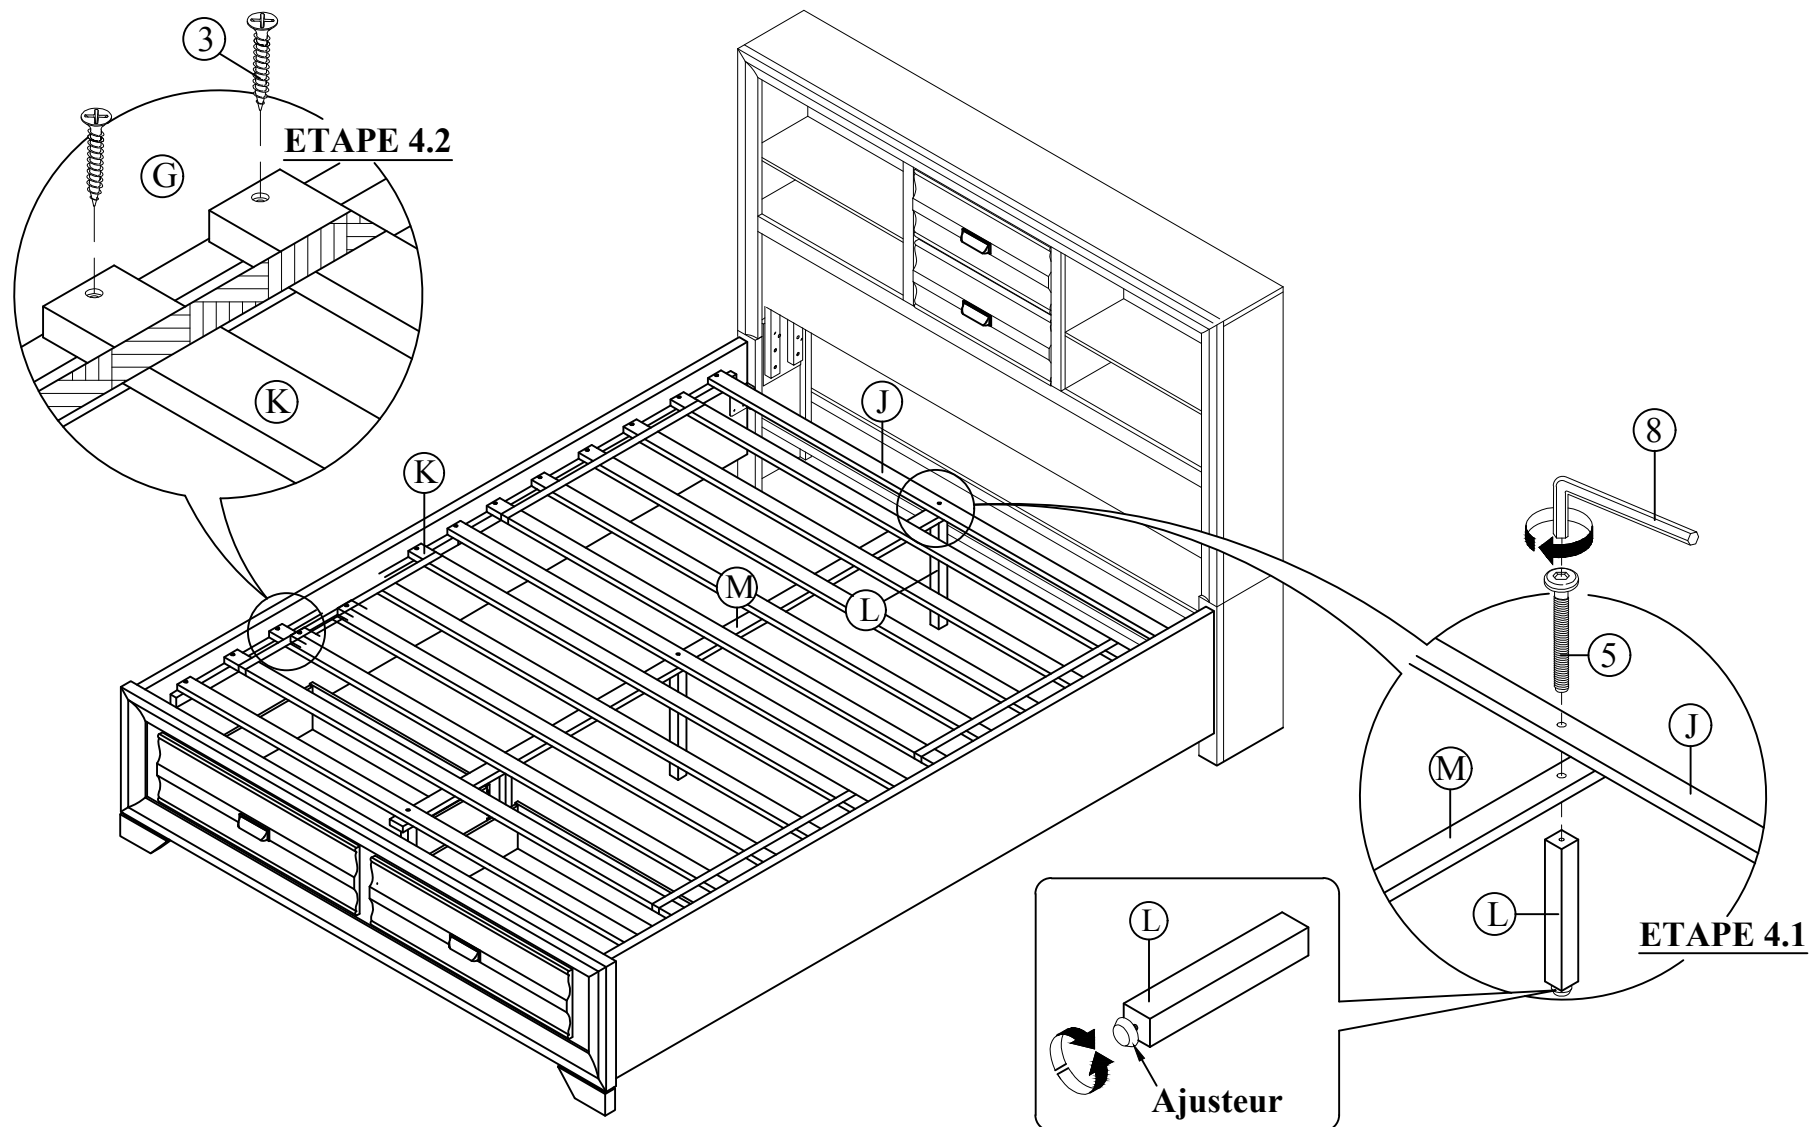

REMARQUE : RESERRER LES VIS RÉGULIÈREMENT. À L'USAGE, LES VIS SE DESERRENT.
VÉRIFIER QUE LES VIS SOIENT SERRÉES TOUTES LES 6-8 SEMAINES.

ETAPE 5.1: Attacher le Cache-lattes (O) aux Lattes (J & K).

ETAPE 5.2: Emboiter le Cache-Lattes (O) au Pied de lit (F). Visser le Cache-Lattes (O) au Bois au niveau du Pied de Lit (F) avec CSK M4 x 16mm (1).

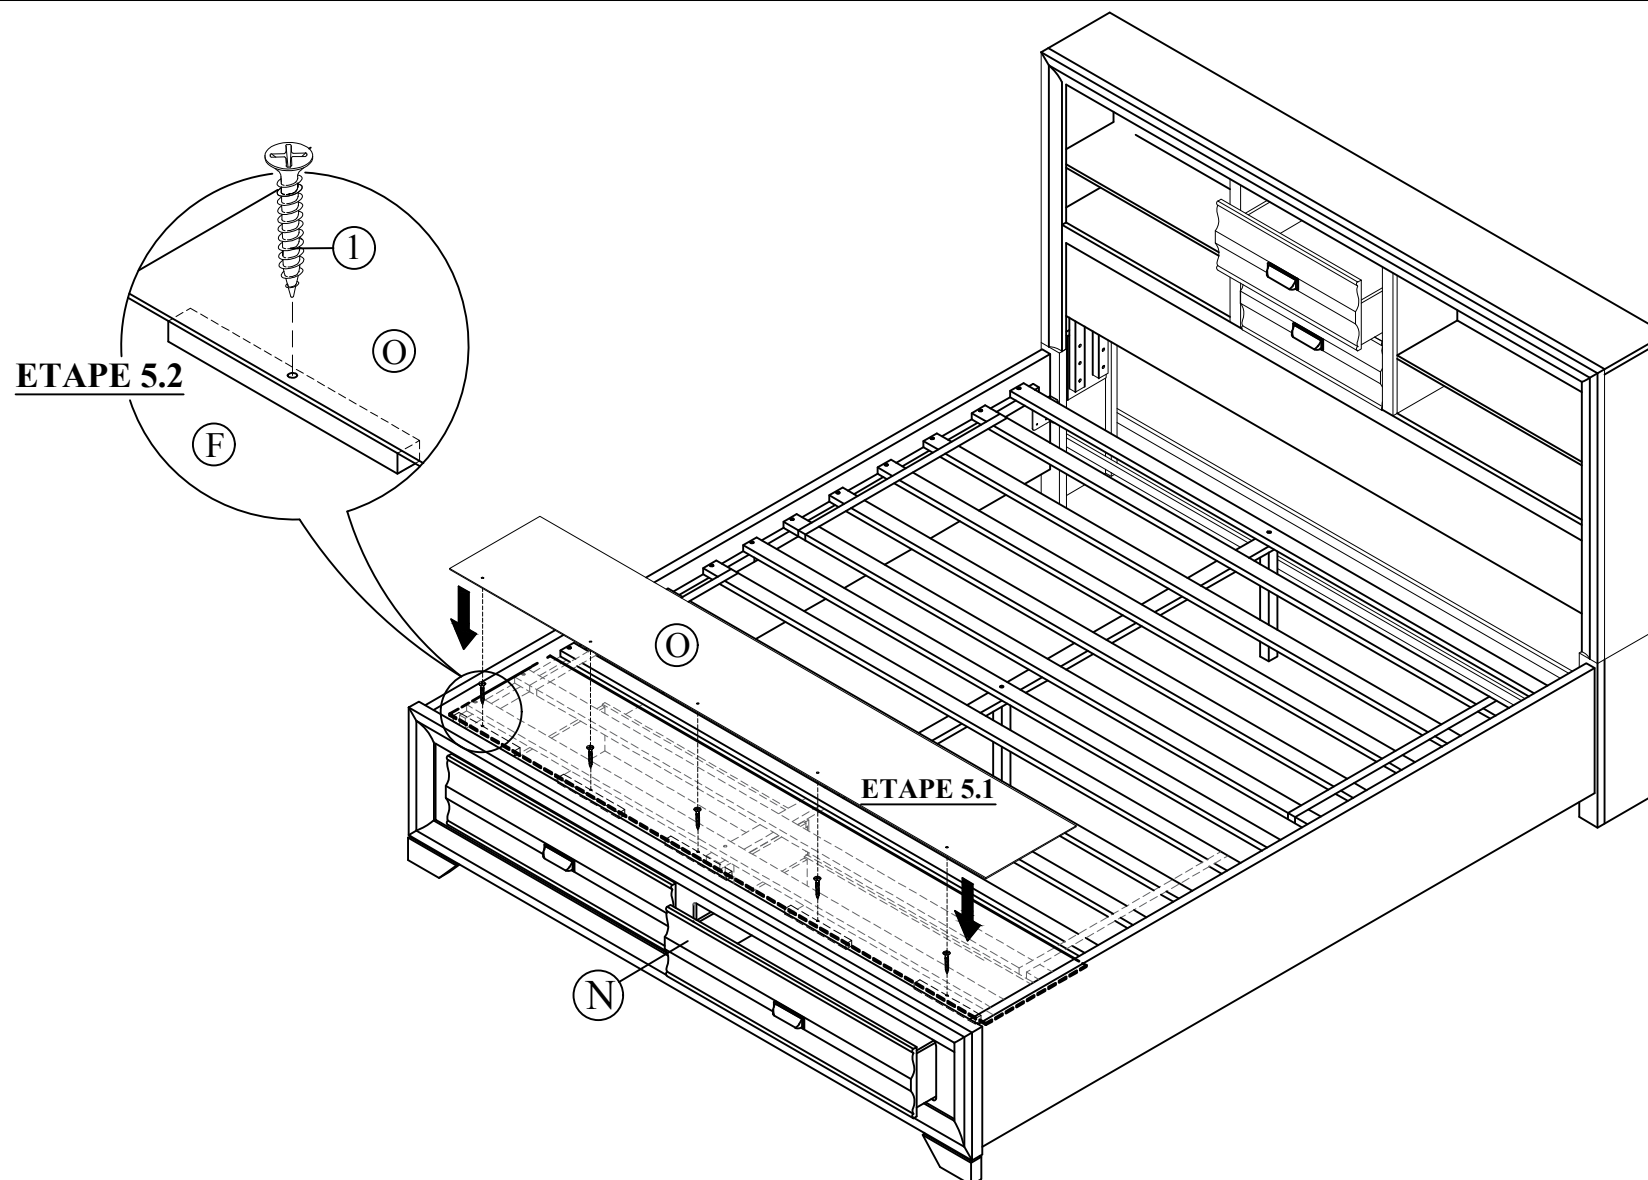

REMARQUE : RESERRER LES VIS RÉGULIÈREMENT. À L'USAGE, LES VIS SE DESERRENT.
VÉRIFIER QUE LES VIS SOIENT SERRÉES TOUTES LES 6-8 SEMAINES.