





TOV

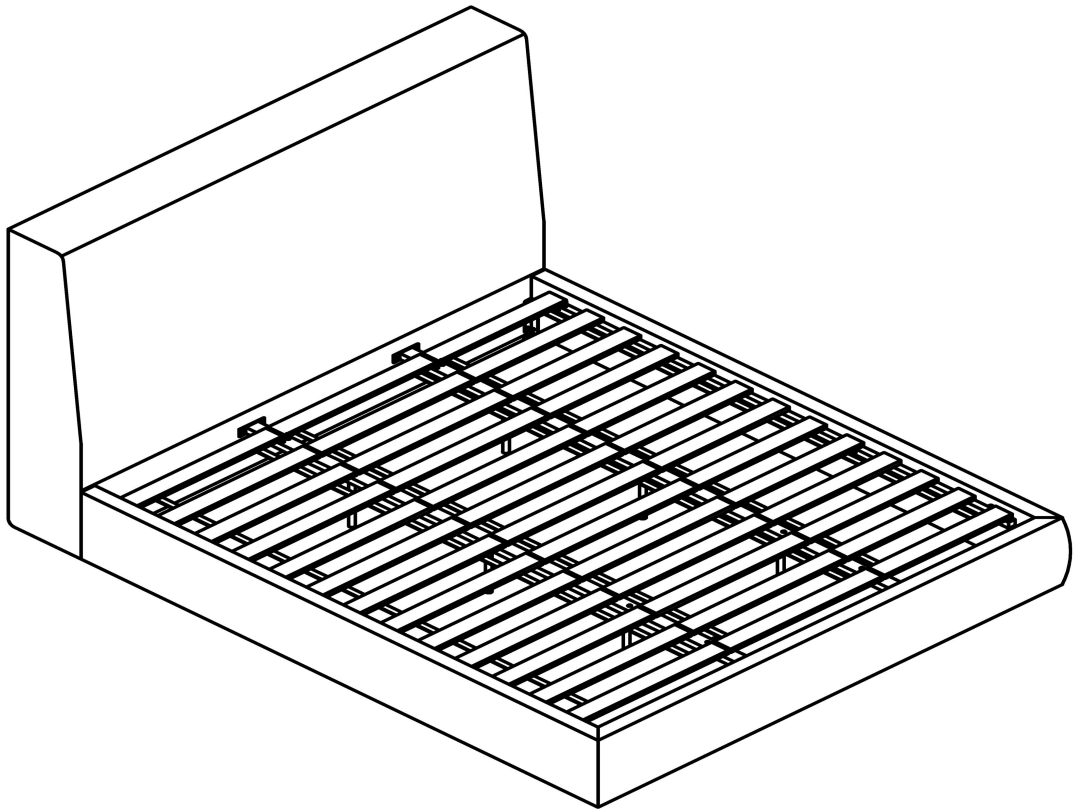

Isla King Bed

DON'T BE BORING.

Hardware and Components

	-----	A	X 1 PC
	-----	B	X 1 PC
	-----	C	X 1 PC
	-----	D	X 1 PC
	-----	E	X 18 PCS (Φ8mm)
	-----	F	X 39 PCS
	-----	G	X 16 PCS (30mmx8mm)
	-----	H	X 6 PCS (40mmx6mm)
	-----	I	X 1 PC Allen Key -8mm
	-----	J	X 6 PCS (H=210 mm)
	-----	K	X 6 PCS (Φ6mm)
	-----	L	X 2 PCS
	-----	M	X 12 PCS (25mmx6mm)
	-----	N	X 4 PCS (H=25mm)
	-----	O	X 2 PCS
	-----	P	X 1 PC
	-----	Q	X 2 PCS (Φ8mm)

Step 1


Open box of hardware and legs.

This hardware box will be a smaller box inside of the main box. Look for the red streamer.




Step 2

- A. Retrieve Bed legs (N) from parts' carton packed in side rails carton.
- B. Attach Bed legs (N) to Headboard.

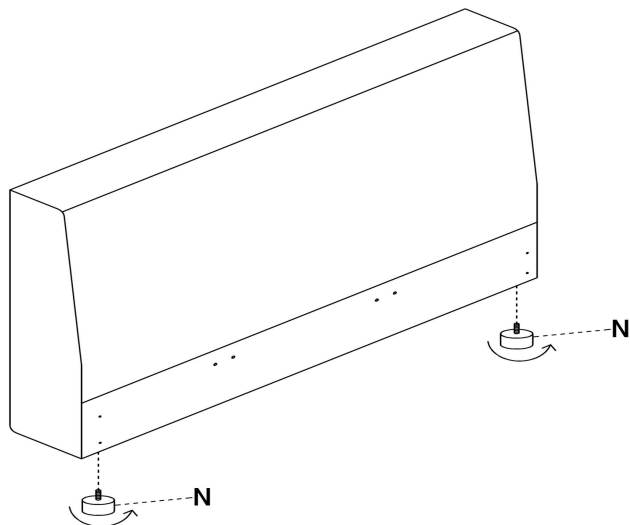


Step 3

- A. Attach side rails to headboard & footboard using Bolt (G) and Washer (E).
- B. First twist the screw in, then slot the brackets over the bolts, Tighten the bolts with Allen key (I) .

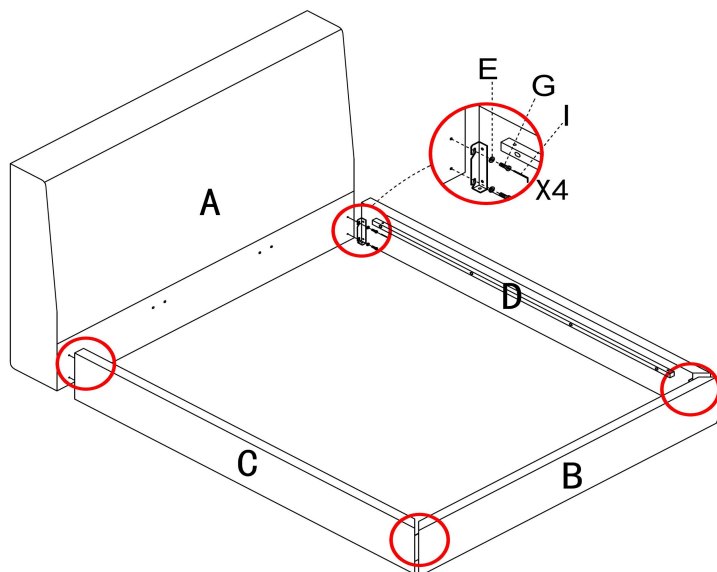


Step 4

- A.** Retrieve Bed legs (N) from parts' carton packed in side rails carton.
- B.** Attach Bed legs (N) to Footboard ,Tighten the Nuts (Q) with Wrench (P) .
(The flat washer(E) and the spring washer(O) are arranged on the bolt between the bracket and nuts.)

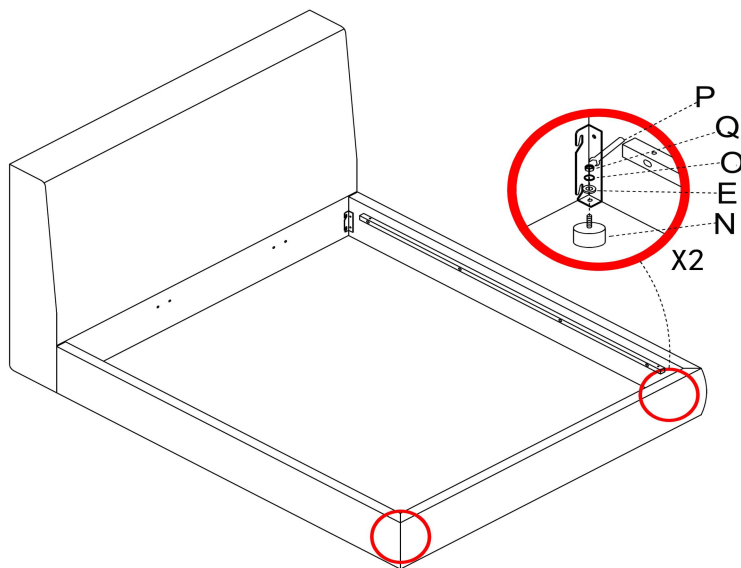

Step 5


- A.** Attach steel center support legs (J) to the center support rail (L) using Allen key (I), Bolt (H) and Washer (K).

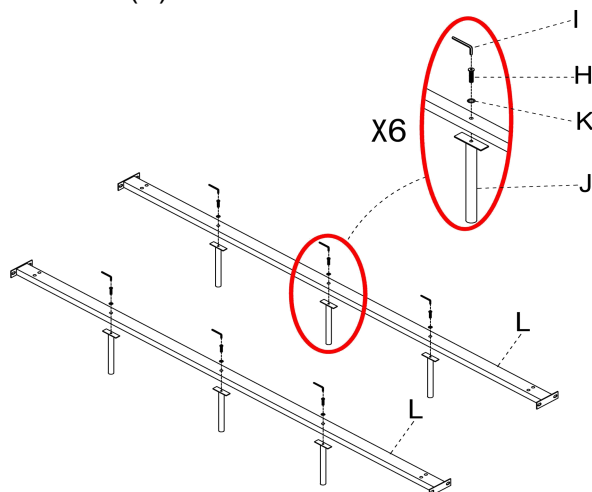

Step 6

A. Attach center support rail (L) to the Headboard and footboard using Allen key (I), Bolt (G) and Washer (E). Please line up the holes in the center support rail (L) and refit the bolts & washers, tighten the bolts with Allen key (I) .


B. Verify the center support legs are perpendicular to the floor for full support.

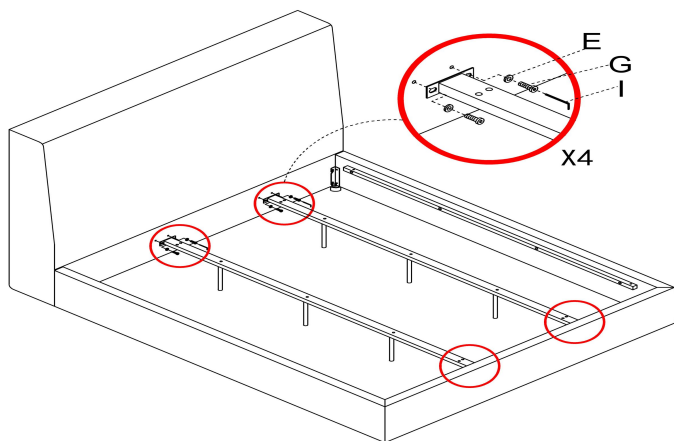

Step 7

A. Attach Bolt (M) to the holes in the end of support rails using Allen key (I).

(*Please note that the bolt only needs to be twisted half in and leave half out .)

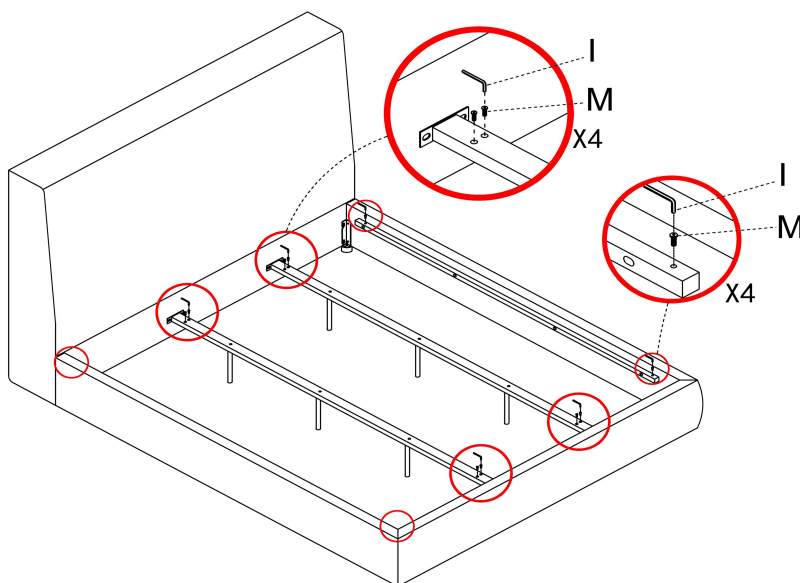


Step 8

A. Unroll slatroll(s) and place on bedframe.

Slats need to be straight and tight.

B. Secure your slats in place by pulling the last slat overtop the bolts you just installed.

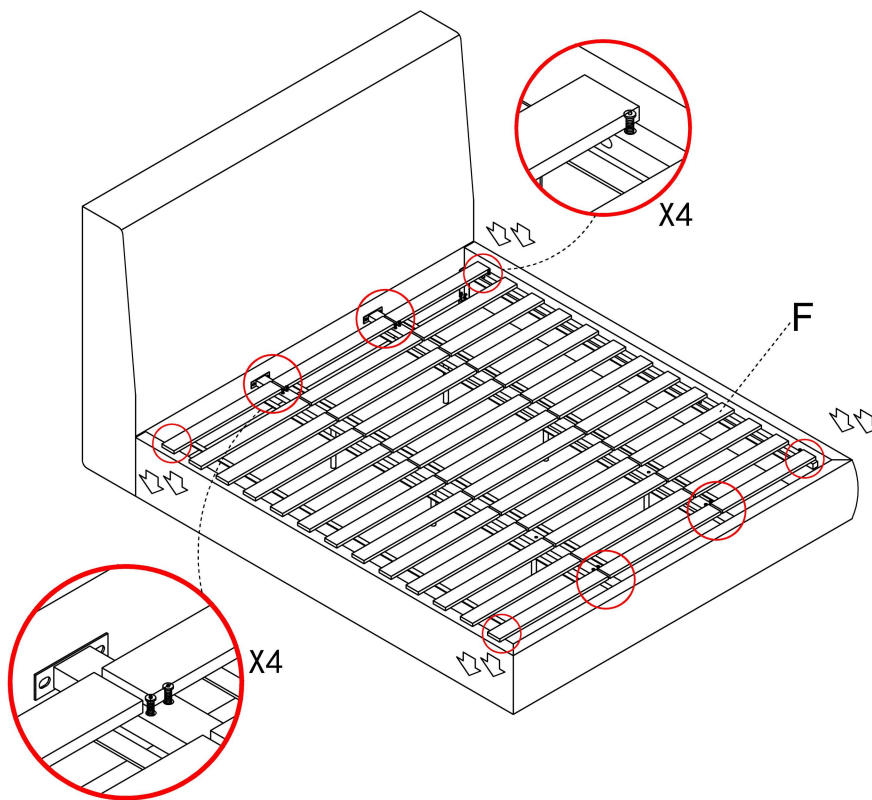

D. Your bed is complete, place mattress on slatroll and enjoy your new bed!

Stuck?

Contact our team @ 516-888-3355

Scan for product care!



TOV



Follow us!

Show your new purchase some love by tagging it on our Instagram!

 @tovfurniture

 516-888-3355

 hello@tovfurniture.com

 www.tovfurniture.com

If the future is female—your furniture should be, too. No mahogany in sight. Sexy settees shaped like lips. Price points for any budget. At TOV, we do things differently.