

# ASSEMBLY INSTRUCTIONS

CROWNMARK  
B4852WH-RACK  
RACK

(BOX 1)  
PART LIST


No	ITEM	Qty
A	Mirror	1 pc
B	Rack	7pcs

(BOX 1)  
HARDWARE LIST

No	ITEM	Qty
1	JCBC M6 x 50mm	14pcs
2	Wood Dowel 8 x 30mm	14pcs
3	Wall Plug	2pcs
4	Barrel Nut M6 x 15mm	14pcs
5	Flat Head Chipboard Screw M4 x 45mm	2pcs
6	ALLEN KEY m4x65mm Blk	1pc

REMARK:  
THE HARDWARE IS LOCATED IN THE  
PACKING ITEM.

STEP 1: Insert wood dowel(2) at Rack as shown. Attach rack (B) on mirror (A)groove and Insert Barrel Nut(4) from bottom at hole as shown. Secure with JCBC screw(1) ,Then tighten with Allenkey (6) as shown.

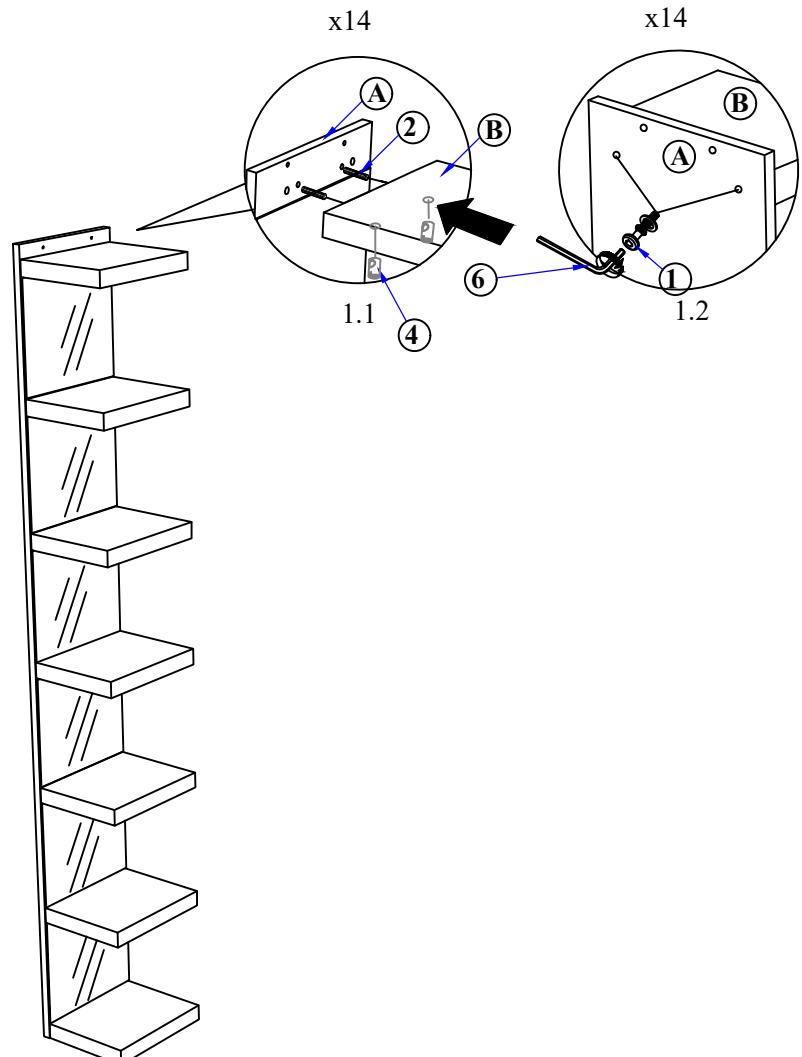

STEP 2: Please align and touch t mirror(A) at the wall. Please marking and drill hole for Insert Wall plug(3) to the wall.Then secure Tall Mirror (A)with flat head chipboard screw(5) and tighten with screw driver(not included) as shown.

**WARNING! : Need two Peoples to place the Mirror.**

