

**FULGOR**

MILANO

EXCLUSIVE METAL KIT

BEZEL REPLACEMENT VIDEO





BADGE COVER REPLACEMENT VIDEO



KNOB LAYOUT MODEL BY MODEL




# SOFIA METAL COLLECTION PARTS

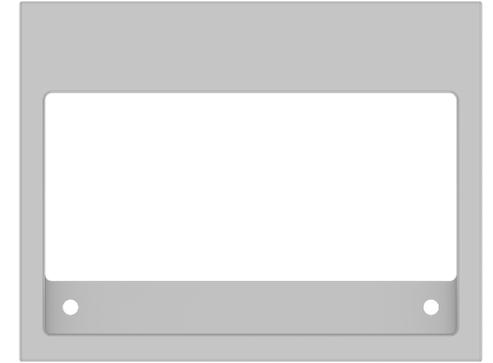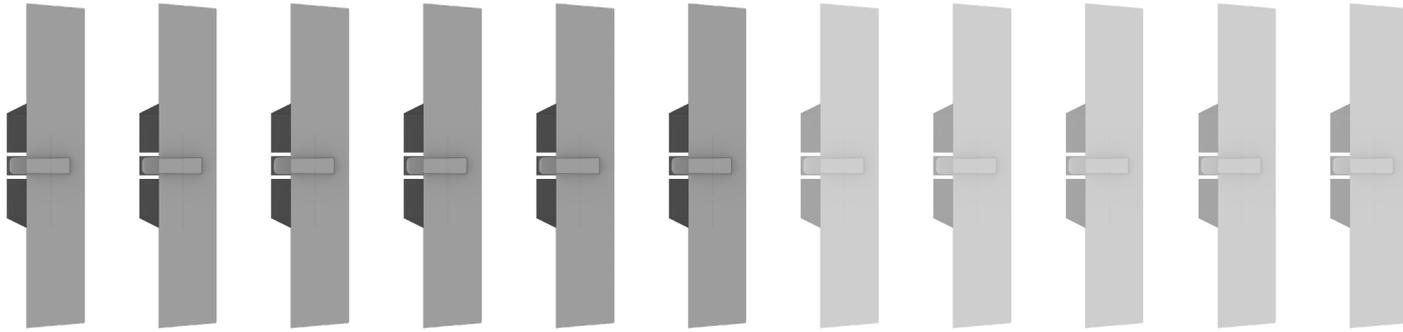

1

— NUMBER OF BEZELS REQUIRED VARY —

**1** BADGE COVER

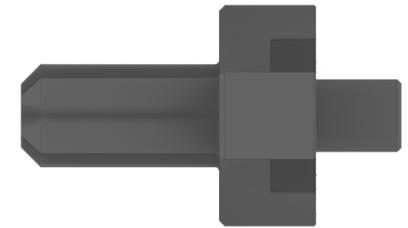


2

**2** ALIGNMENT TOOL



3


**3** ALLEN WRENCH



4

**4** LONGER COVER SCREWS X 2

# DECORATIVE BEZEL REPLACEMENT

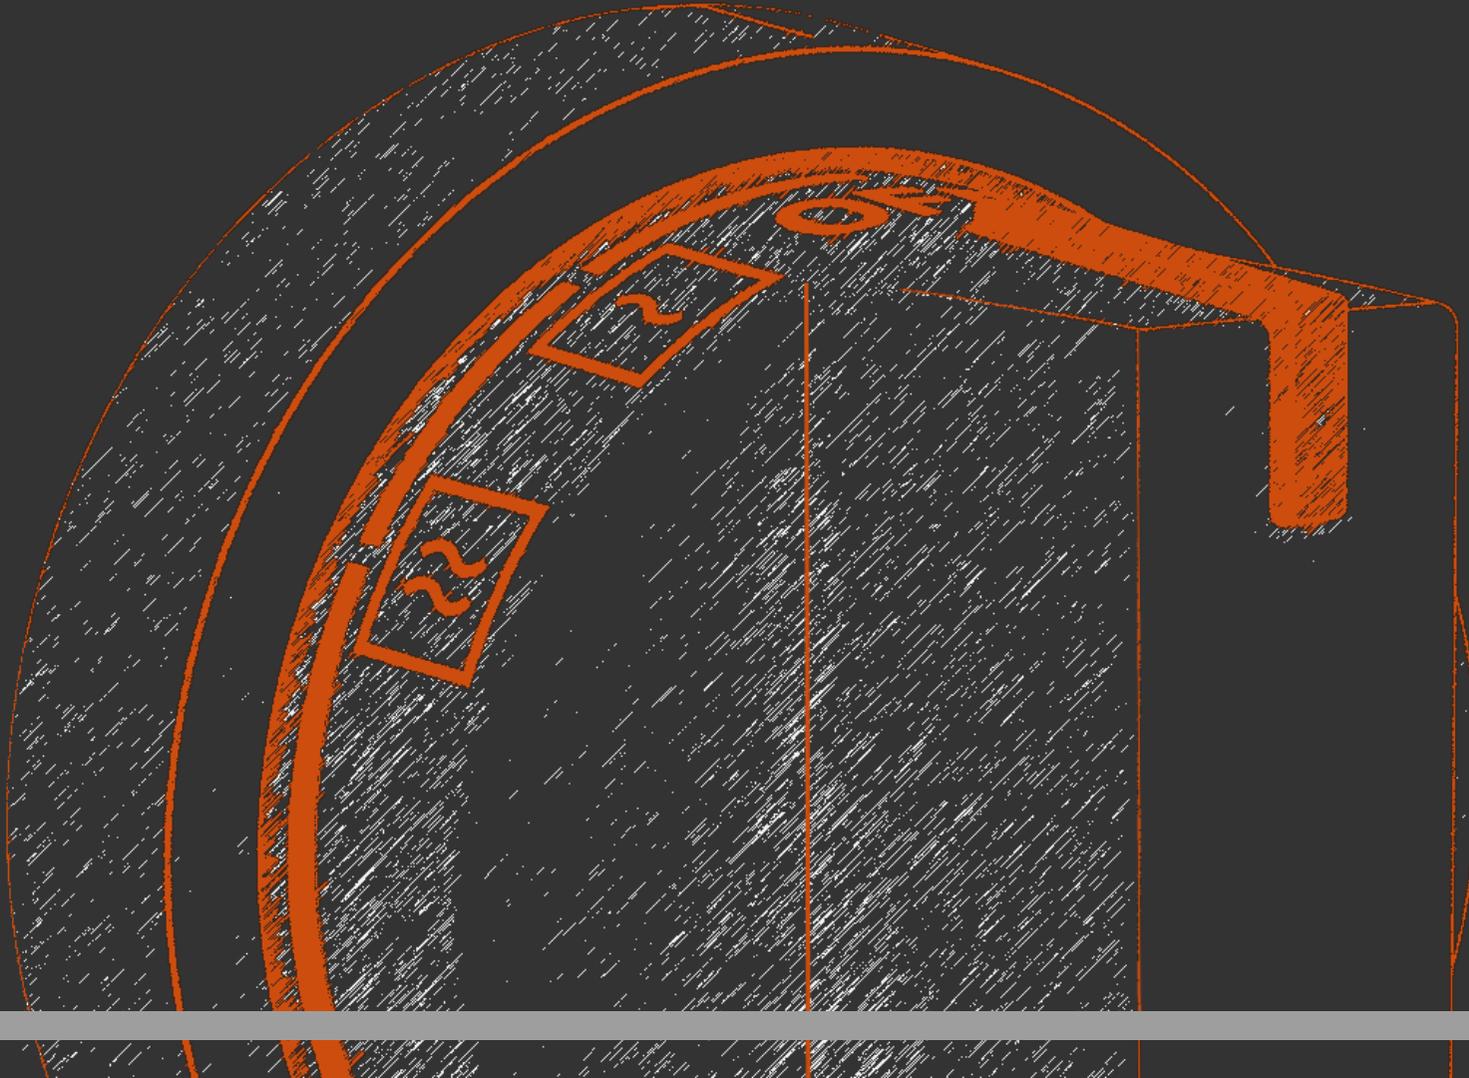

# 1

## ADVICE BEFORE REPLACING BEZEL

KEEP CHILDREN AWAY DURING ASSEMBLY

KEEP CHILDREN AWAY FROM SMALL COMPONENTS ( SCREWS )

TURN OFF THE GAS OR ELECTRICITY BEFORE STARTING



REMOVE KNOBS AND REPLACE BEZELS ONE AT A TIME

SUGGEST REPLACING BEZELS FROM LEFT TO RIGHT

PHILLIPS SCREWDRIVER REQUIRED



2

REMOVE KNOB BY PULLING STRAIGHT FORWARD

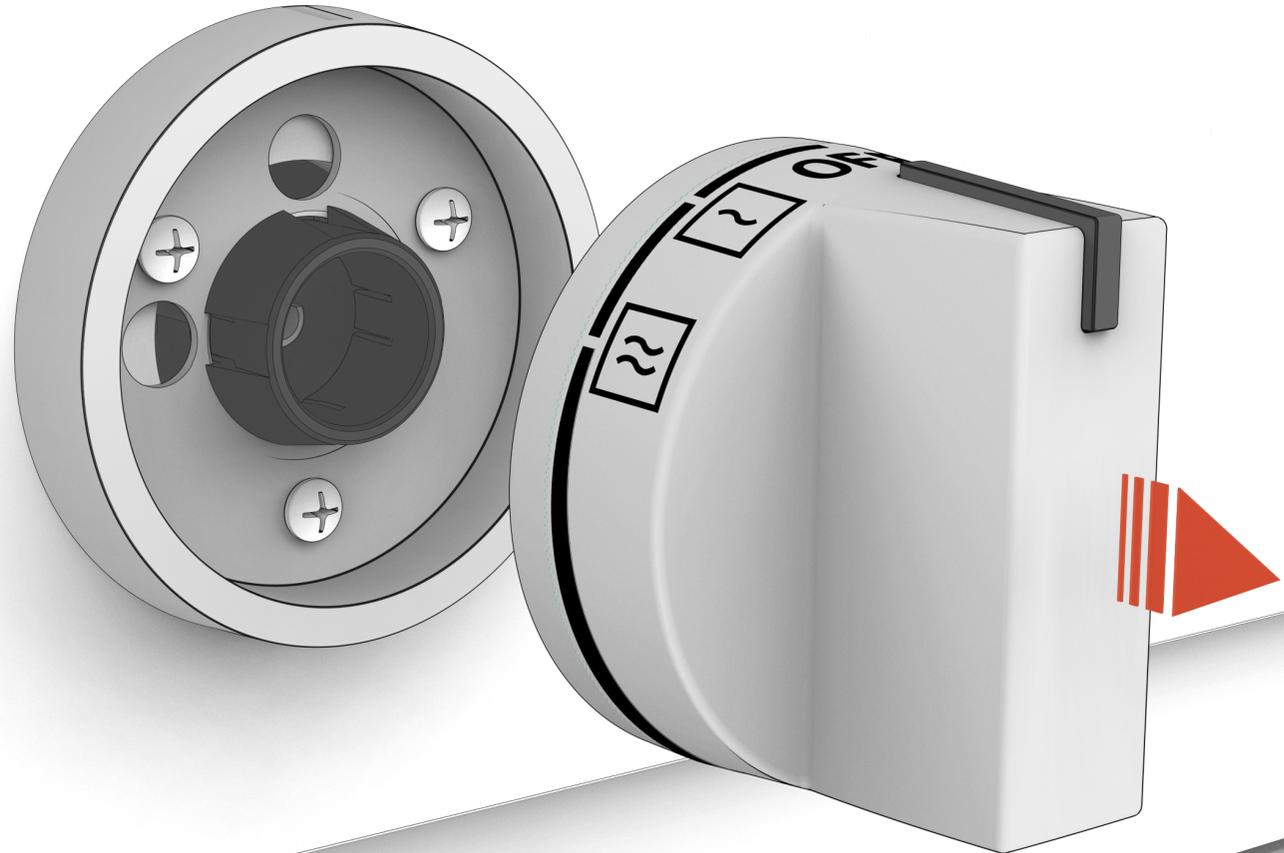

3



REMOVE THE THREE SCREWS

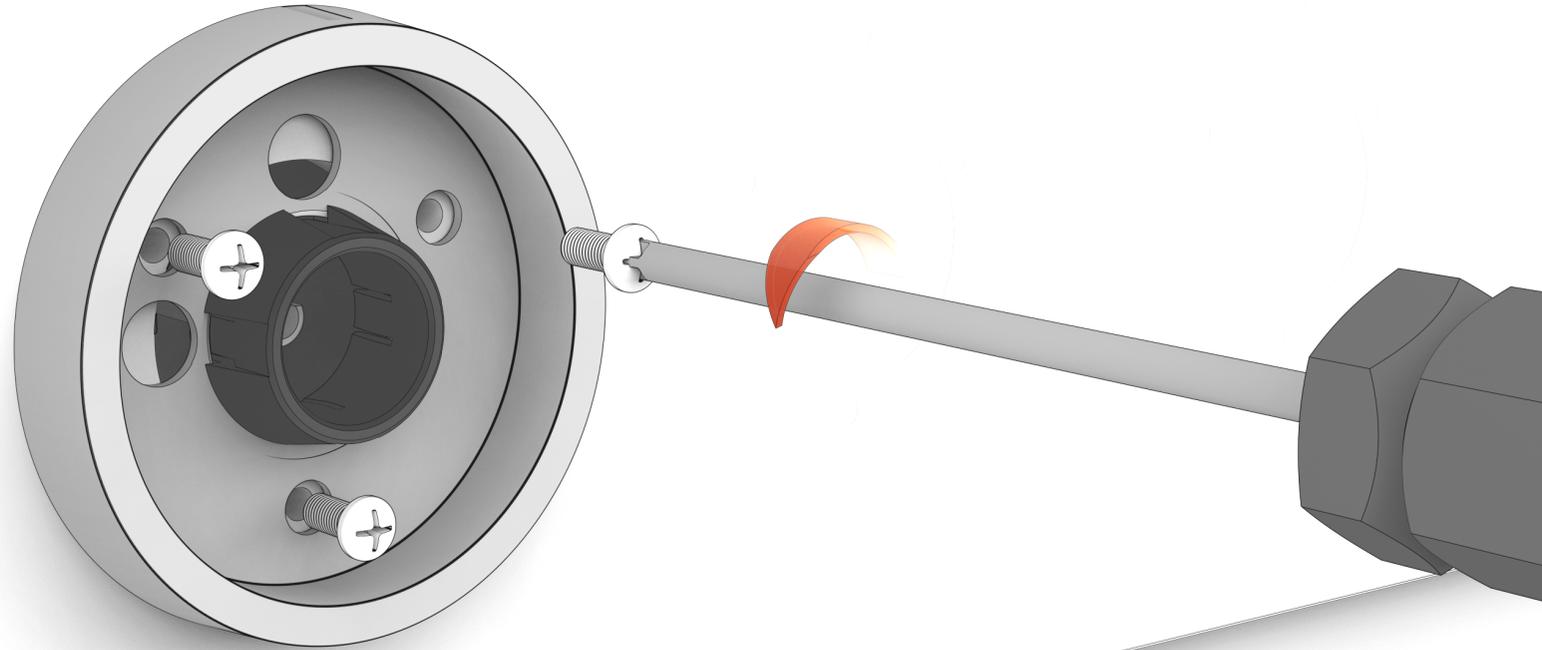

HOLD BEZEL WHEN REMOVING FINAL SCREW



4

# REMOVE EXISTING BEZEL

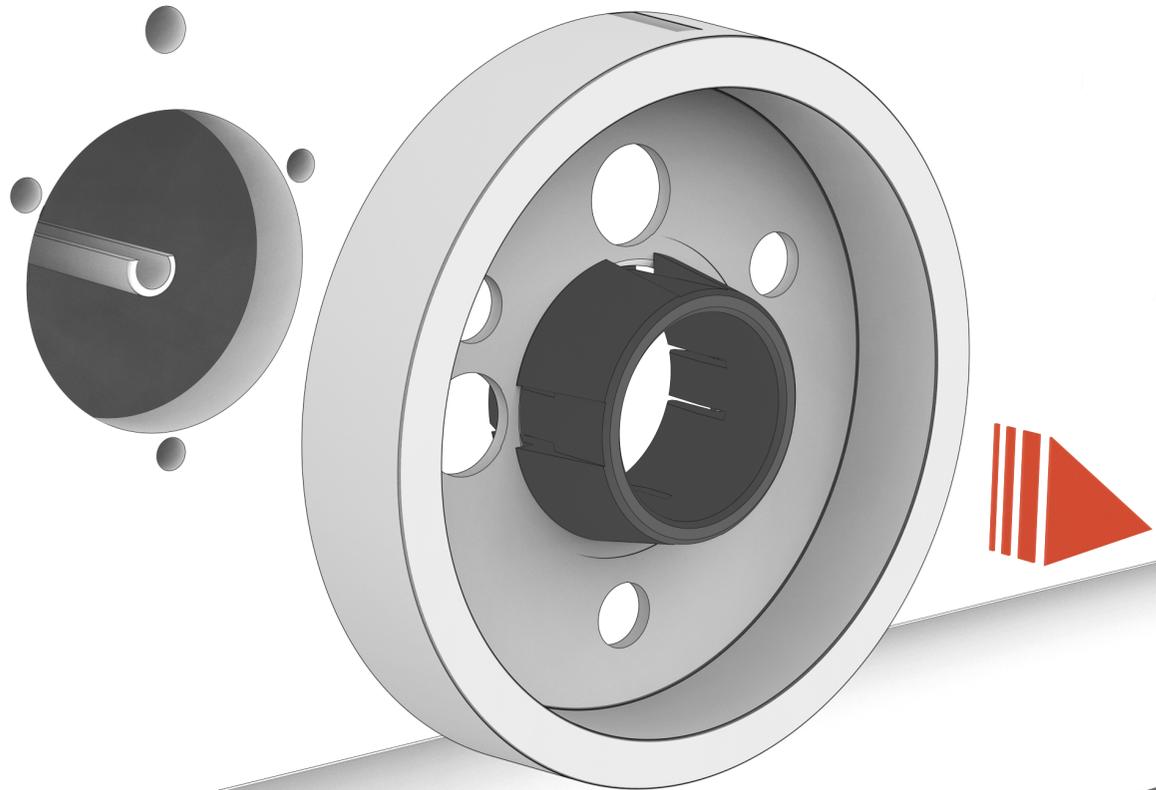

5



## SPECIAL FLANGE CORRECT POSITION

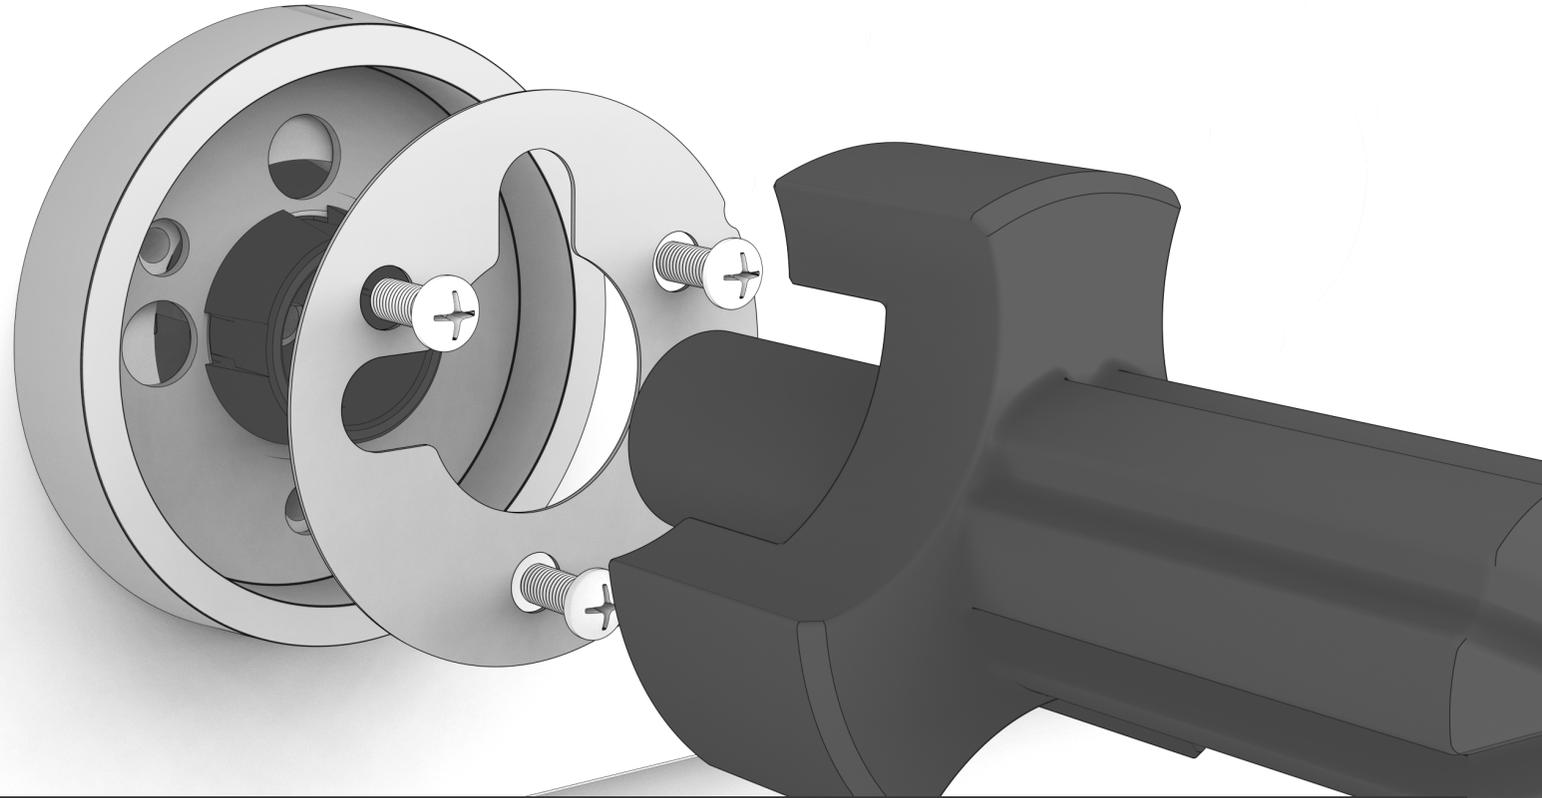

**IF THE FLANGE IS PRESENT, REPOSITION IT IN THE CORRECT POSITION**


6

INSERT THE ALIGNMENT TOOL INTO NEW BEZEL

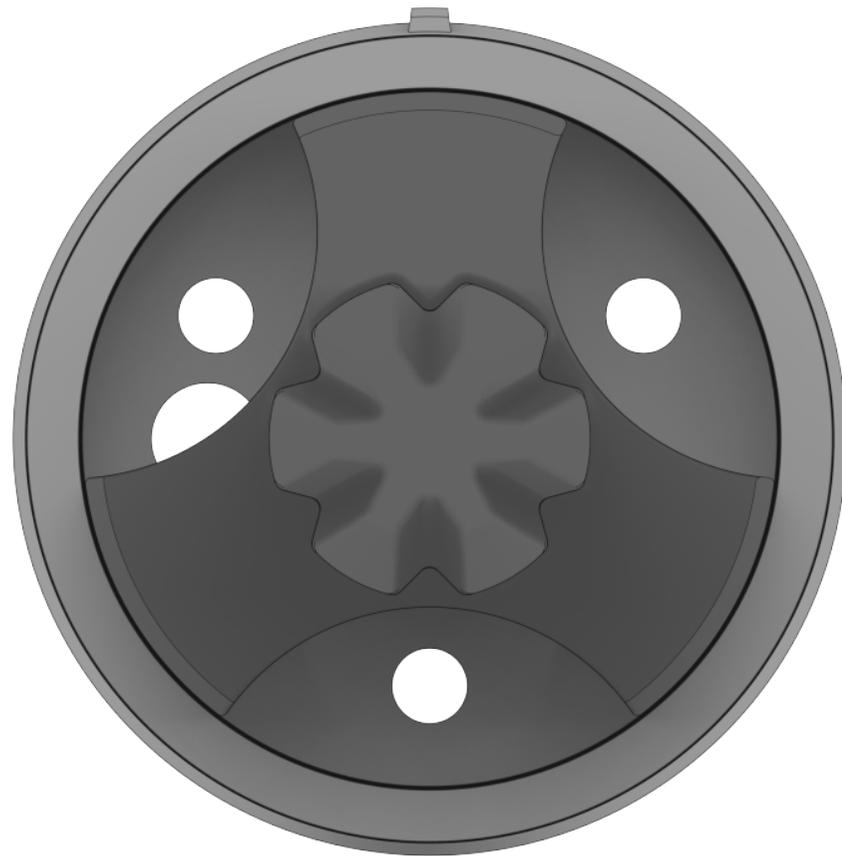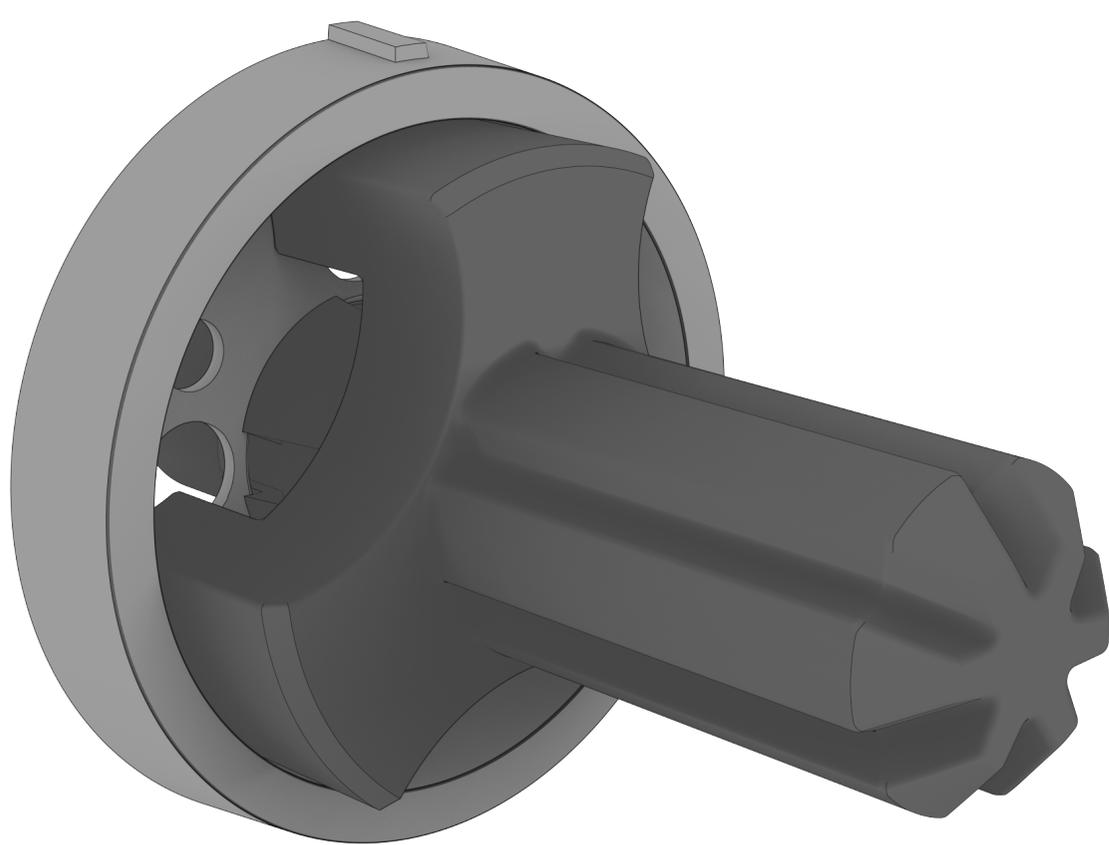

7


# CENTER BEZEL IN CORRECT POSITION AND REINSTALL SCREWS

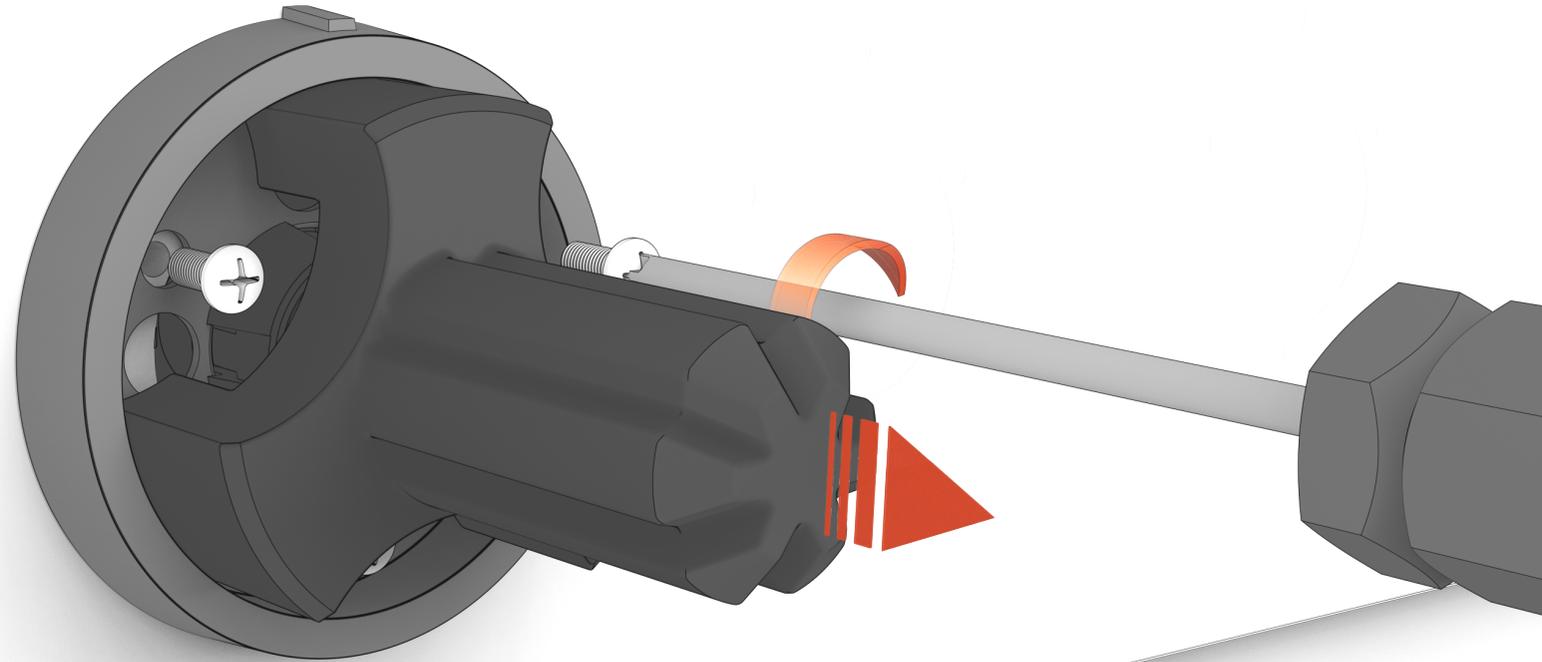

AFTER REMOVE ALIGNMENT TOOL



8

# ENSURE MATCHING ORIENTATION

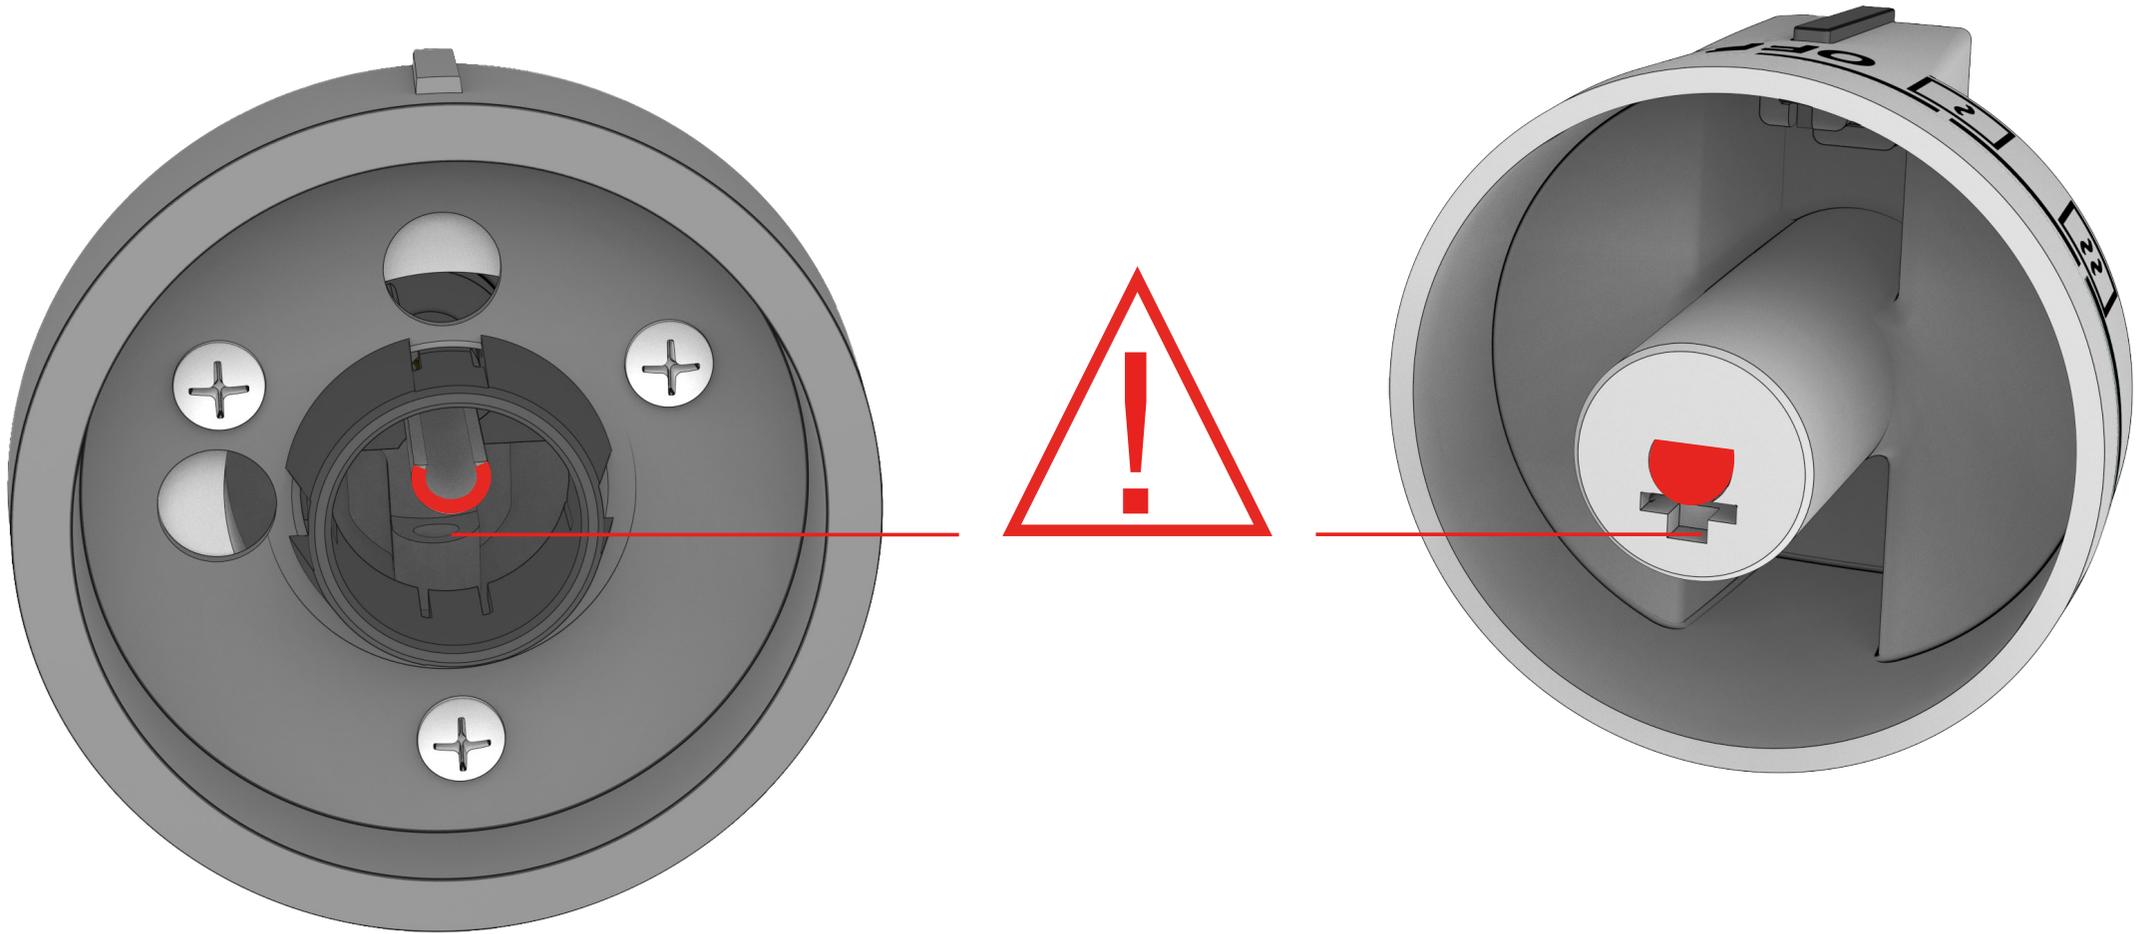

9

# REINSTALL KNOB IN CORRECT POSITION

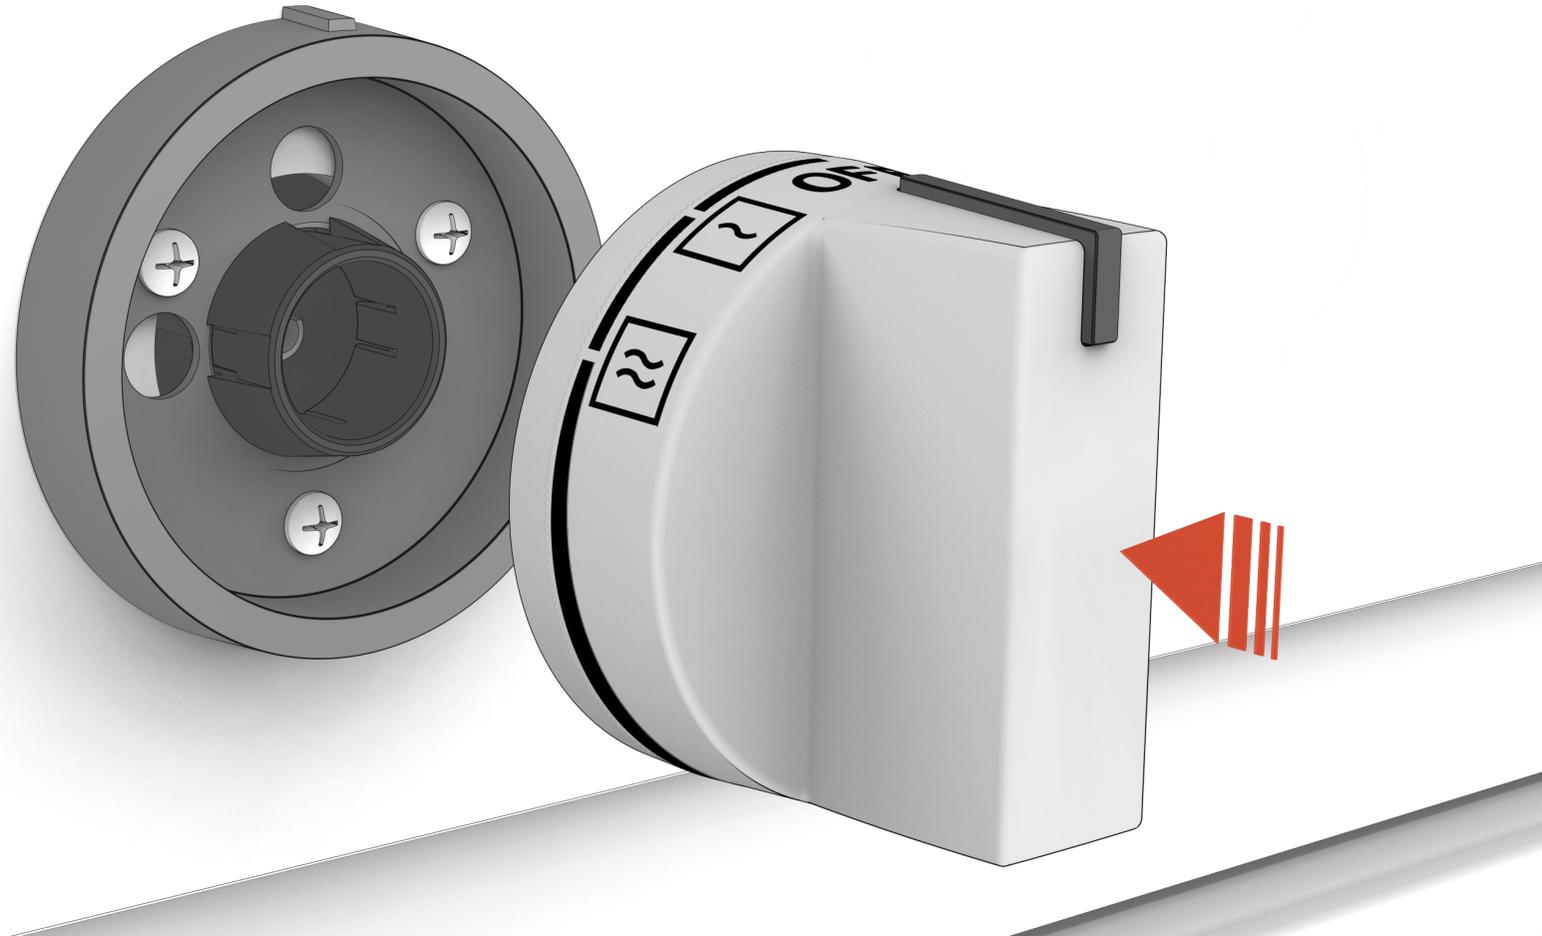

10

## BEZEL REPLACEMENT COMPLETE




CHECK THAT THE ROTATION MOVEMENT, LEFT AND RIGHT, IS SMOOTH

# DECORATIVE BADGE COVER ACCESSORY



2

REMOVE BOLTS WITH ALLEN WRENCH

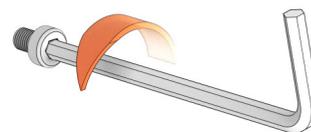

3

REMOVE THE NAMEPLATE



4

INSTALL DECORATIVE BADGE OVER THE EXISTING BADGE



5

REPOSITION THE NAMEPLATE



6

USE LONGER SCREWS PROVIDED TO SECURE THE NAMEPLATE



7

# DECORATIVE BADGE COVER INSTALL COMPLETE



# FULGOR

## MILANO



[FULGOR-MILANO.COM](https://www.fulgor-milano.com)

FOR MORE INFORMATION