



Fine Furniture for every stage of life

225061Q (B1&B2) <u>Queen Bed</u>

REVISION 0: 11/23/2024

#### **ASSEMBLY INSTRUCTIONS**



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



**ASSEMBLY TIME** 

20 MINUTES

### **PARTS IDENTIFICATION**

#### **B1 (BOX 1)**

A	HEADBOARD PANEL	1PC	E	FOOTBOARD SUPPORT BAR	1PC
В	FOOTBOARD PANEL	1PC	F	BED SLAT	4PCS
С	LEFT HEADBOARD LEG	1PC	G	BED SLAT SUPPORT WITH LEVELER	4PCS
D	RIGHT HEADBOARD LEG	1PC			

<u>B2</u>	( BOX 2)				
н	LEFT BED RAIL	1PC	J	FOOTBOARD LEG	2PCS
I	RIGHT BED RAIL	1PC			
НВ	225061Q (B1) FROM BOX 1 HEADBOARD COMPLETE	1PC	FB	225061Q(B1) FROM BOX 1 FOOTBOARD PANEL	1PC

#### NOTE:



#### **ASSEMBLY INSTRUCTIONS**

#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

#### **HARDWARE IDENTIFICATION**

#### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 225061Q (B1)

1	SMALL ALLEN WRENCH (M4 x 65mm - BLK)	1PC	4 LOCK WASHER (1/4" - BLK)	6PCS
2	BIG ALLEN WRENCH (M5 x 65mm - BLK)	1PC	5 FLAT WASHER (1/4"ID x 13mm - BLK)	6PCS
3	SHORT BOLT (M6 x 35mm - BLK)	6PCS		

#### Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 225061Q (B2)

6	SMALL ALLEN WRENG (M4 x 65mm - BLK)	CH ~	1PC	10	LOCK WASHER (1/4" - BLK)		6PCS
7	BIG ALLEN WRENCH (M5 x 65mm - BLK)		1PC	11	FLAT WASHER (1/4"ID x 13mm - BLK)		6PCS
8	LONG BOLT (M6 x 80mm - BLK)		2PCS	12	SHORT FLAT HEAD SCREW (M4 x 32mm - RBW)	<del>()</del>	8PCS
9	MEDIUM BOLT (M6 x 50mm - BLK)		4PCS	13	LONG FLAT HEAD SCREW (M4 x 50mm - RBW)	<b>(1)</b>	4PCS

#### NOTE:




#### **ASSEMBLY INSTRUCTIONS**

### STEP 1


Note: Please take note of the marking sticker

(L&R) on the headboard legs.

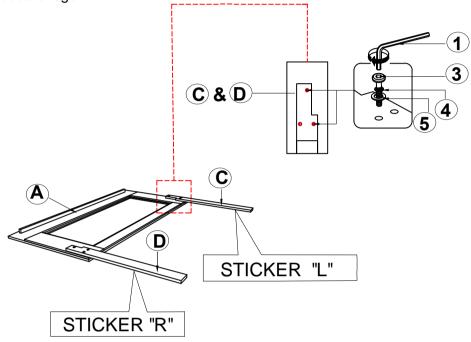


\*\*BACK VIEW\*\*

## STEP 2

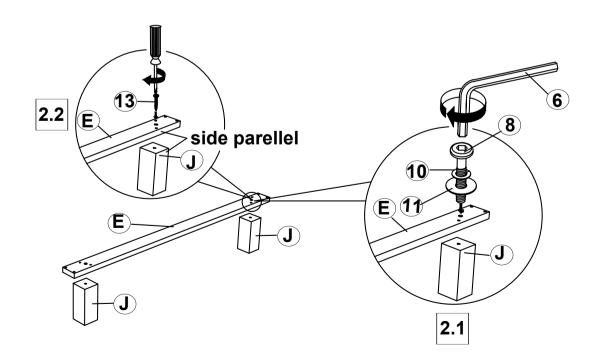




# ASSEMBLY INSTRUCTIONS STEP 3

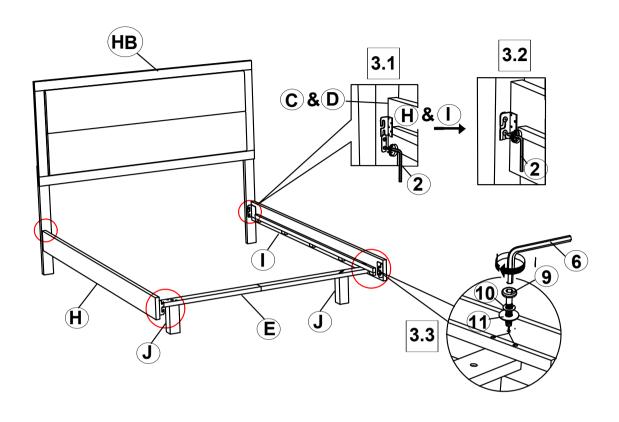

# STEP 4

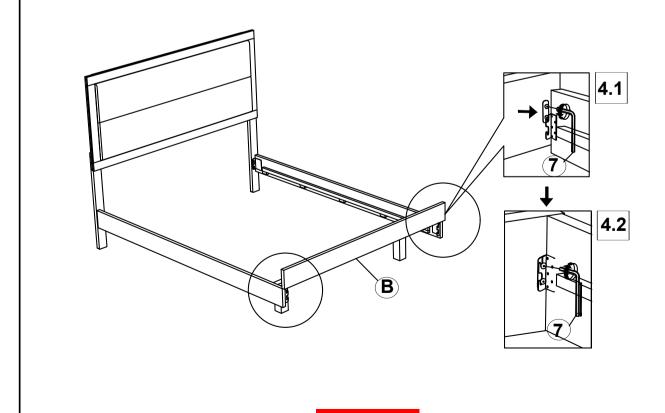


PAGE 5 OF 6




# ASSEMBLY INSTRUCTIONS



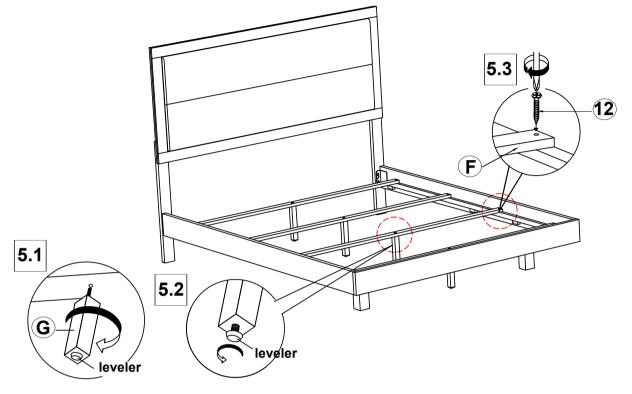


# STEP 6 COMPLETE

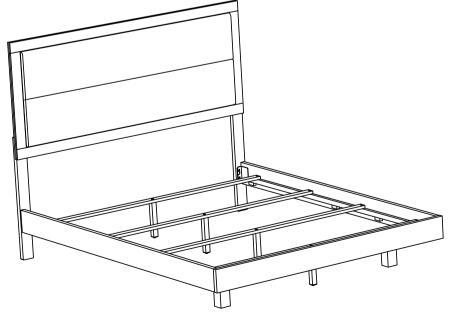

**ķ** 



Inner Size: 61.00"W X 80.50"D

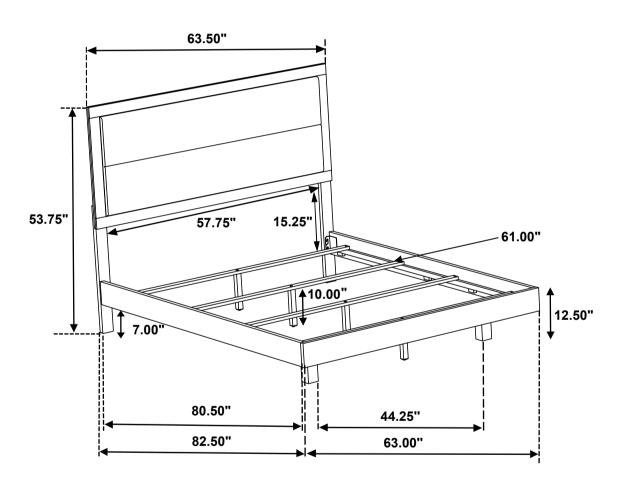

Note: Dimension tolerance ± 5%





Fine Furniture for every stage of life

225062 *Nightstand* 

REVISION 0: 11/23/2024

# COASTER

#### **ASSEMBLY INSTRUCTIONS**

#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

## **PARTS IDENTIFICATION**

A NIGHTSTAND

1PC

B LEG WITH LABEL "R"

2PCS

### **HARDWARE IDENTIFICATION**

1	BOLT (M6 x 35mm - BLK)	4PCS
2	LOCK WASHER (1/4" - BLK)	4PCS
3	FLAT WASHER (1/4"ID x 19mm - BLK)	4PCS
4	WOOD DOWEL (8 x 20mm)	4PCS
5	ALLEN WRENCH (M4 x 60mm - BLK)	1PC


#### NOTE:


### **ASSEMBLY INSTRUCTIONS**

## STEP 1




# STEP 2

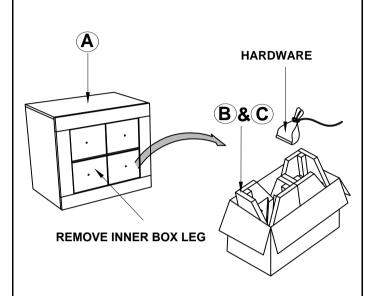

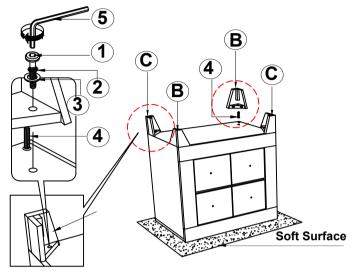

**Bottom View** 

### STEP 3

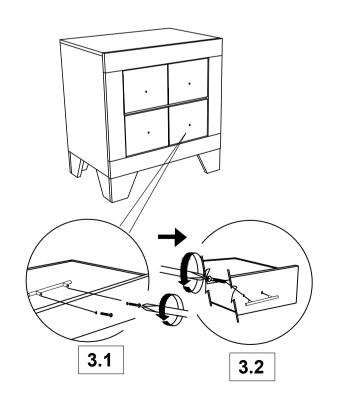


# STEP 4 COMPLETE







Inner Size of Drawer: 12.75"W x 11.25"D x 4.25"H x 0.25"T

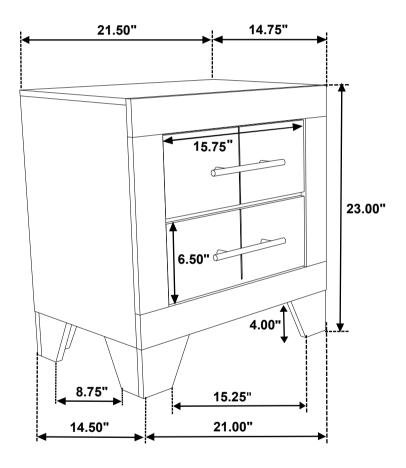

Note: Dimension tolerance ± 5%





Fine Furniture for every stage of life

225063 Dresser

REVISION 0: 11/23/2024

#### **ASSEMBLY INSTRUCTIONS**



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

### **PARTS IDENTIFICATION**

Α	DRESSER	1PC
В	LEG WITH LABEL "R"	2PCS
С	LEG WITH LABEL "L"	2PCS
D	CENTER SUPPORT LEG WITH LEVELER	1PC

#### HARDWARE IDENTIFICATION


1	BOLT (M6 x 35mm - BLK)	4PCS
2	LOCK WASHER (1/4" - BLK)	4PCS
3	FLAT WASHER (1/4"ID x 19mm - BLK)	4PCS
4	WOOD DOWEL (8 x 20mm)	4PCS
5	ALLEN WRENCH (M4 x 60mm - BLK)	1PC

#### NOTE:


#### **ASSEMBLY INSTRUCTIONS**

# COASTER'

## STEP 1

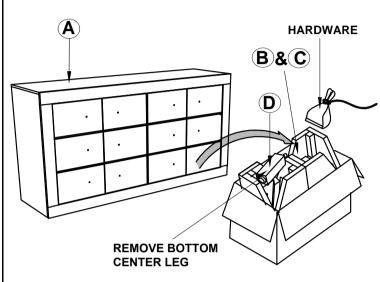


## STEP 2

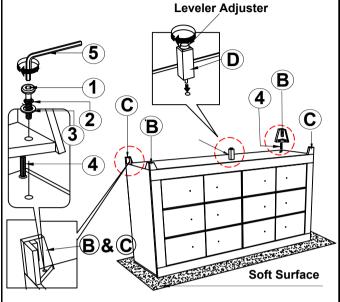

**Bottom View** 

## STEP 3

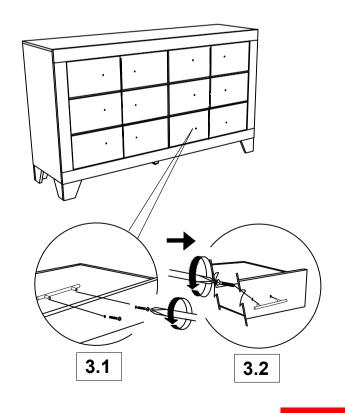

# STEP 4 COMPLETE






COASTERFURNITURE.COM

PAGE 3 OF 3



Inner Size of Drawer : 23.25"W x 11.25"D x 5.25"H x 0.25"T

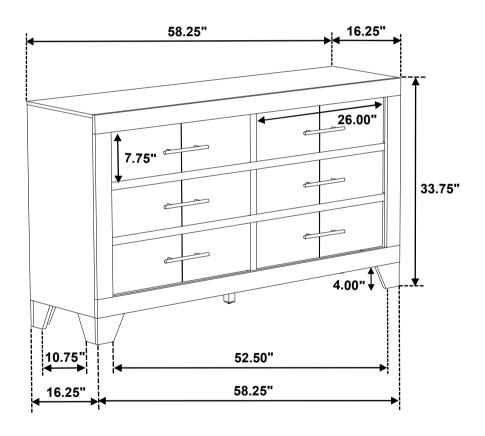

Note: Dimension tolerance ± 5%





Fine Furniture for every stage of life

225064 *Mirror* 

REVISION 0: 11/23/2024

#### **ASSEMBLY INSTRUCTIONS**



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.





10 MINUTES

### **PARTS IDENTIFICATION**

A MIRROR 1PC

B DRESSER FROM
BOX ITEM #225063

1PC

C MIRROR SUPPORT (PACK WITH MIRROR) 2PCS

## **HARDWARE IDENTIFICATION**

1 FLAT HEAD SCREW

(M4 x 32mm - RBW)


10PCS

#### NOTE:


### **ASSEMBLY INSTRUCTIONS**

## STEP 1



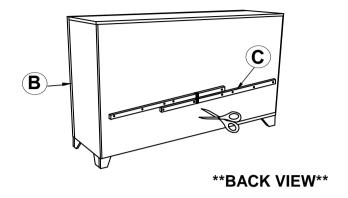

## STEP 2

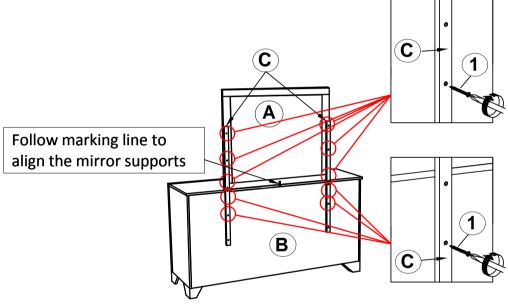


# STEP 3 COMPLETE





PAGE 3 OF 3



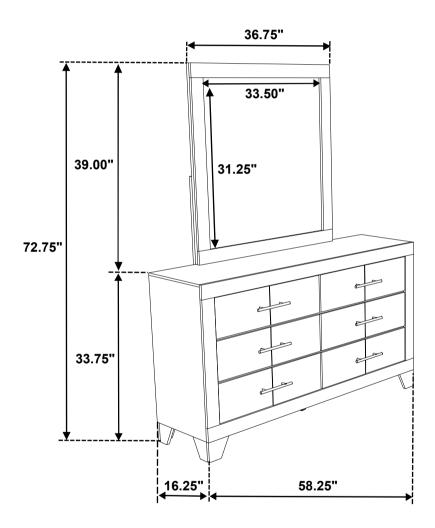

Note: Dimension tolerance ± 5%