ASSEMBLY INSTRUCTIONS

MODEL: 0361A/B & 0362A YLIME **OUEEN** (4+4)

(Box 1) BOX OF HEADBOARD & FOOTBOARD

No	ITEM	Qty
A	Headboard	1 pc
В	Footboard	1 pc
С	Headboard Leg (L/R)	2 pcs
D	Bed Slats	4 pcs
Е	Bed Slats Support	4 pcs


(Box 2) BOX OF SIDE RAIL


No	ITEM	Qty
F	Side Rail	2 pcs

(Box 1)


HARDWARE LIST				
No	ITEM	Qty		
1	Csk M4 x 32mm	8 pcs		
2	JCBC Bolt m6x30mm Blk	6 pcs		
3	Spring Washer 1/4" Blk	6 pcs		
4	Flat Washer 1/4"IDx13mmOD Blk	6 pcs		
5	ALLEN KEY m4x65mm Blk	1 pc		
6	ALLEN KEY m5x65mm Blk	1 pc		
7	12V+12W+1A Adaptor With ETL Certificate	1 pc		

STEP 1: Attach Head Board Leg (C) to Head Board (A) . Insert Spring Washer (3), Flat washer (4), tighten JCBC (2) using an Allen Key (5).

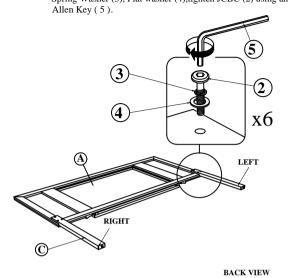

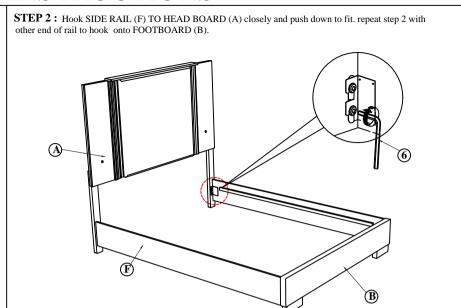

STEP 3: Tighten the 4 Corner with Allen Key (6). Fix the Bed Slat Support Leg (E), to Bed Slat (D) as shown. Install the bed slat (D) to side rail (F) and tighten with Csk Screw (1) as per diagram shown. (NOTE: THE SETUP MUST DONE AT THE DECIDED LOCATION FOR THE BED TO OBTAIN PERFECT STABILITY)

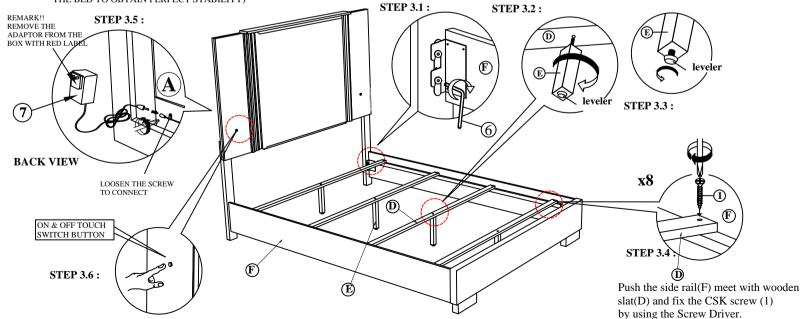

NOTE: MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.