









Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000

HARDWARE LIST

- A (4) 75mm Long Allen Bolts
- B (4) 50mm Medium Allen Bolts
- C (6) 40mm Short Allen Bolts
- D (4) Spring Washers
- E (4) Flat Washers
- F (4) Hex Nuts
- G (1) Open End Wrench
- H (1) Allen Wrench

PART	QTY	HARDWARE	PART	QTY	HARDWARE
A	4		B	4	
C	6		D	4	
E	4		F	4	
G	1		H	1	

PARTS LIST

- I (1) Headboard
- J (1) Left Leg
- K (1) Right Leg

*** Bed Frame
Not Included.**

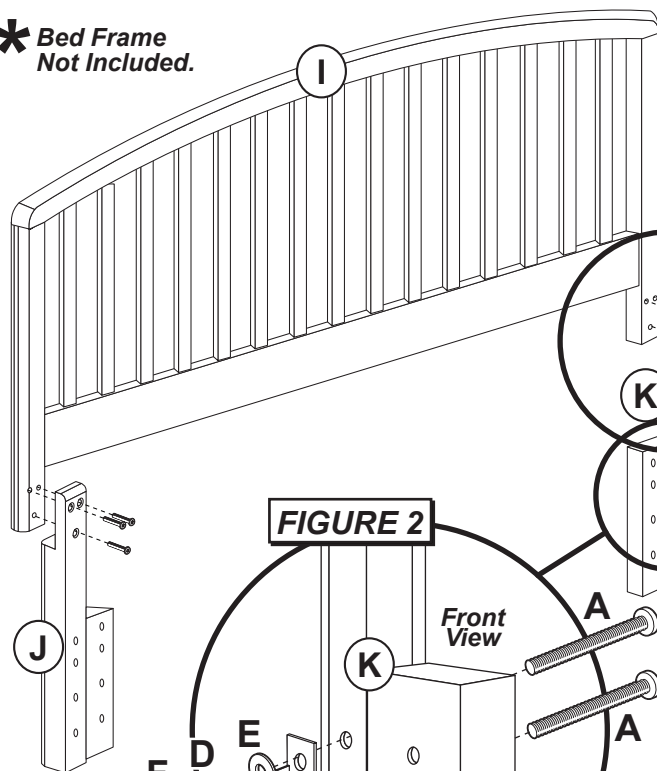


FIGURE 1

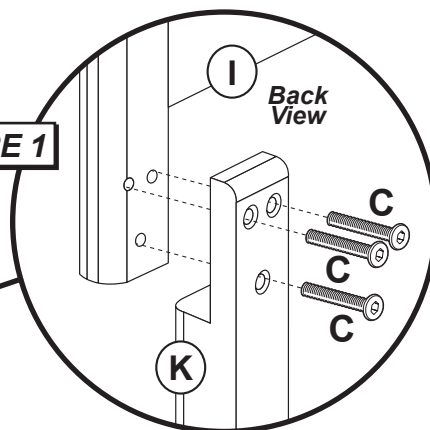


FIGURE 2


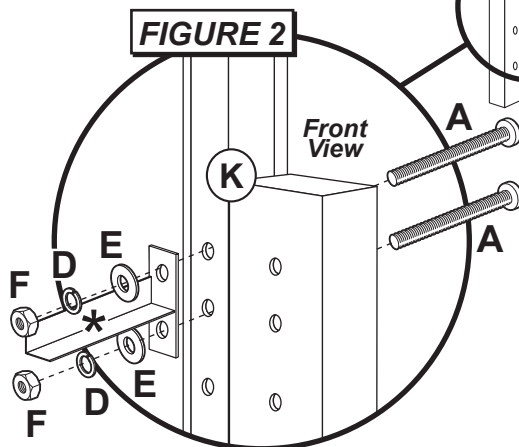


FIGURE 3

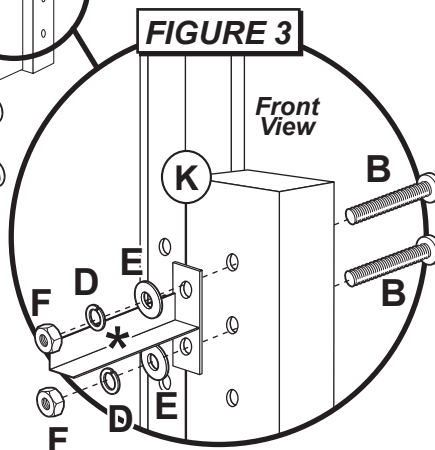

STEP 1 - Figure 1
Attach Headboard (I) to Legs (J & K) by using 3 Small Allen Bolts (C) per leg. Make sure the smaller section of each leg faces inward. Tighten all bolts with Allen Wrench (H) provided.

STEP 2 - Figure 2 (For Queen)

Attach each Bed Frame (*Not Included) to posts on Headboard using 2 Long Allen Bolts (A) from outside and 2 Spring Washers (D), 2 Flat Washers (E) & 2 Hex Nuts (F) from inside per side. Tighten bolts & nuts using Allen Wrench (H) and Open End Wrench (G) once both bed frames have been attached.

STEP 2 - Figure 3 (For Full)

Attach each Bed Frame (*Not Included) to posts inside Headboard using 2 Medium Allen Bolts (B) from the outside and 2 Spring Washers (D), 2 Flat Washers (E) & 2 Hex Nuts (F) per side. Tighten bolts & nuts using Allen Wrench (H) and Open End Wrench (G) once both bed frames have been attached.