

ASSEMBLY INSTRUCTIONS

MODEL : 0361A/B & 0362A
YLINE
QUEEN (4+4)

(Box 1)
 BOX OF HEADBOARD & FOOTBOARD

No	ITEM	Qty
A	Headboard	1 pc
B	Footboard	1 pc
C	Headboard Leg (L/R)	2 pcs
D	Bed Slats	4 pcs
E	Bed Slats Support	4 pcs


(Box 2)
 BOX OF SIDE RAIL

No	ITEM	Qty
F	Side Rail	2 pcs


(Box 1)
 HARDWARE LIST

No	ITEM	Qty
1	Csk M4 x 32mm	8 pcs
2	JCBC Bolt m6x30mm Blk	6 pcs
3	Spring Washer 1/4" Blk	6 pcs
4	Flat Washer 1/4"IDx13mmOD Blk	6 pcs
5	ALLEN KEY m4x65mm Blk	1 pc
6	ALLEN KEY m5x65mm Blk	1 pc
7	12V+12W+1A Adaptor With ETL Certificate	1 pc

STEP 1 : Attach Head Board Leg (C) to Head Board (A) . Insert Spring Washer (3), Flat washer (4),tighten JCBC (2) using an Allen Key (5).

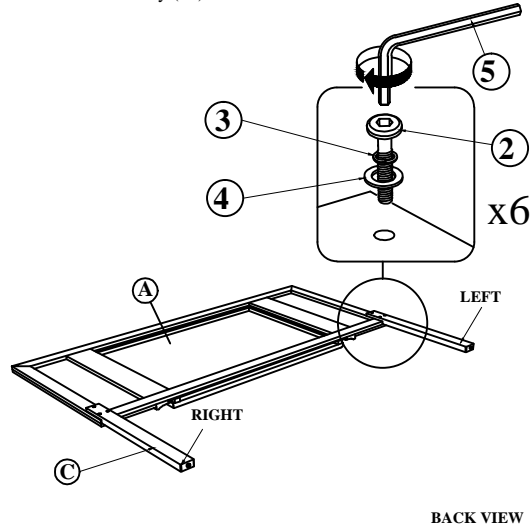


STEP 2 : Hook SIDE RAIL (F) TO HEAD BOARD (A) closely and push down to fit. repeat step 2 with other end of rail to hook onto FOOTBOARD (B).

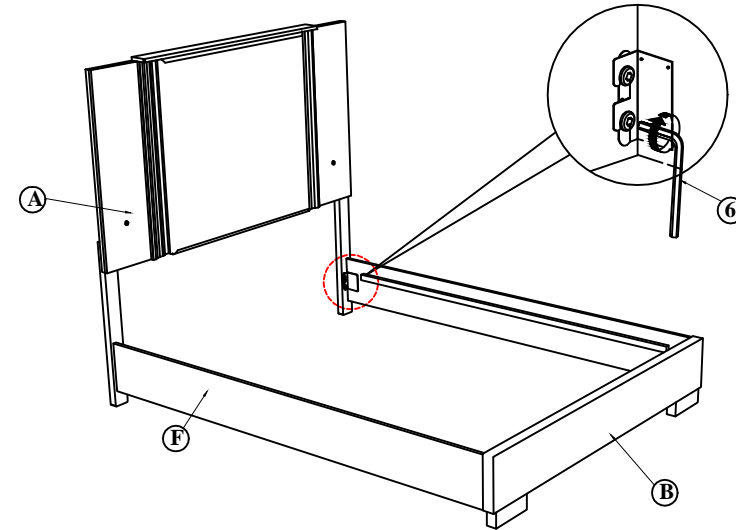


STEP 3 : Tighten the 4 Corner with Allen Key (6).Fix the Bed Slat Support Leg (E), to Bed Slat (D) as shown . Install the bed slat (D) to side rail (F) and tighten with Csk Screw (1) as per diagram shown. (NOTE: THE SETUP MUST DONE AT THE DECIDED LOCATION FOR THE BED TO OBTAIN PERFECT STABILITY)


STEP 3.5 :

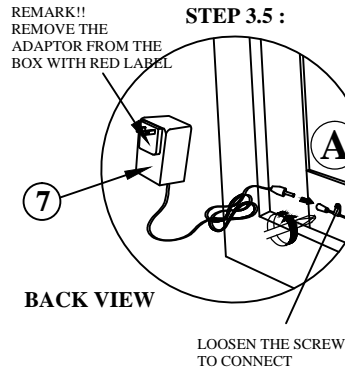



STEP 3.6 :

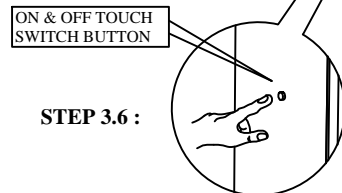


STEP 3.1 :

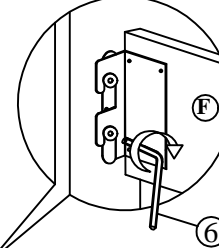

STEP 3.2 :

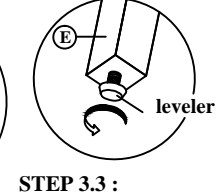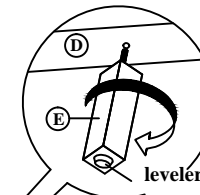

STEP 3.3 :

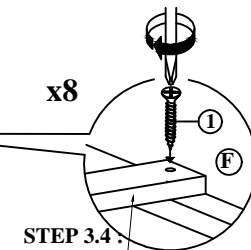

STEP 3.4 :


Push the side rail(F) meet with wooden slat(D) and fix the CSK screw (1) by using the Screw Driver.

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.


ASSEMBLY INSTRUCTIONS

**MODEL : 0361A/B & 0362A
YLIME
DRESSER**


**(BOX 1)
BOX OF DRESSER**

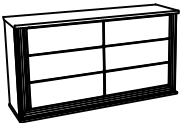NO	ITEM	QTY
	DRESSER	
A		1 PC



HARDWARE LIST

NO	ITEM	QTY
1	12V+12W+1A Adaptor With ETL Certificate 	1 PC

STEP 1 : Remove The Adaptor (1) from the Top Drawer then Connect the LED terminal socket which is place at back of Dresser (A) as shown.

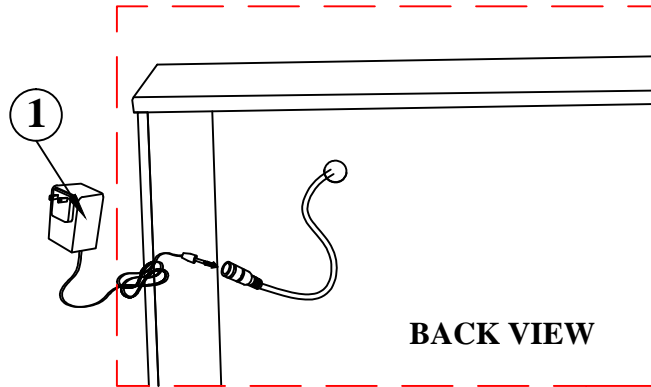

STEP 2 : Pull out the drawer to find the switch button as shown.

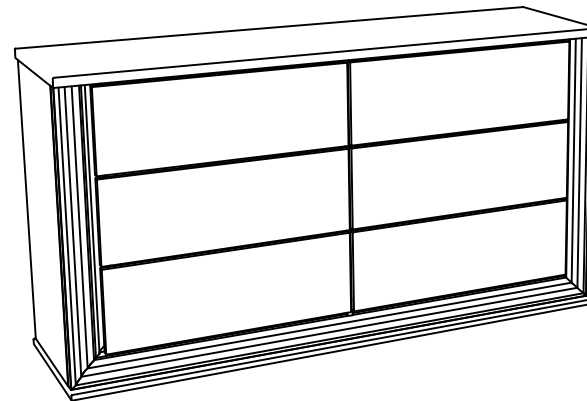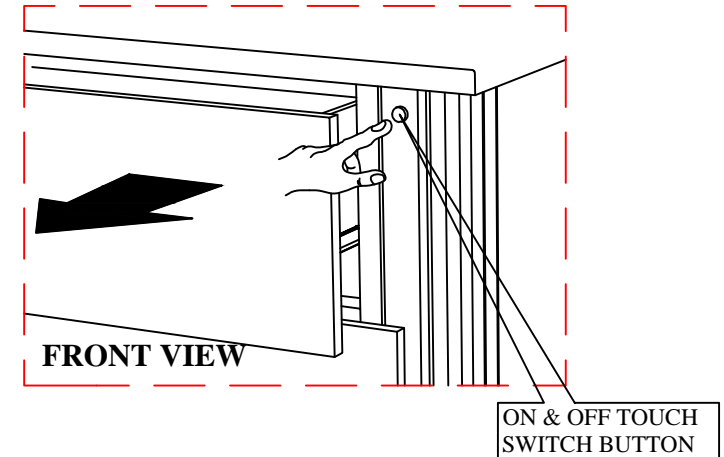


COMPLETED ASSEMBLY

NOTE : MUST TIGHTEN SCREWS PERIODCALLY OR SCREWS WILL BECOME LOOSE.CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.



ASSEMBLY INSTRUCTIONS

MODEL :0361A/B & 0362A
YLIME
DRESSER & MIRROR



(Box 1)
BOX OF MIRROR

NO	ITEM	QTY
	MIRROR	
A		1PC

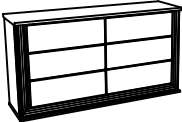
(Box 2)
BOX OF DRESSER

NO	ITEM	QTY
	DRESSER	
B		1 PC
	MIRROR SUPPORT	
C		2 PCS


(Box 1)
HARDWARE LIST

NO	ITEM	QTY
1	Flat Head Chipboard Screw m4x32mm Rbw 	6 PCS
2	12V+12W+1A Adaptor With ETL Certificate 	1 PCS



STEP 1 : Cut the raffia string before assembly at back of Dresser as shown.
STEP 1.1 : Centralize the Mirror Support (C) to Vertical position as shown.

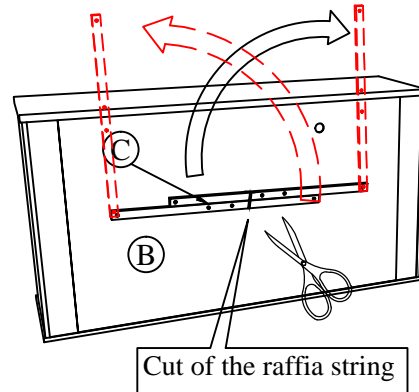

STEP 2 : Secure the mirror support (C) with Csk Screw (1) and tighten them with Screw Driver (NOT PROVIDED).

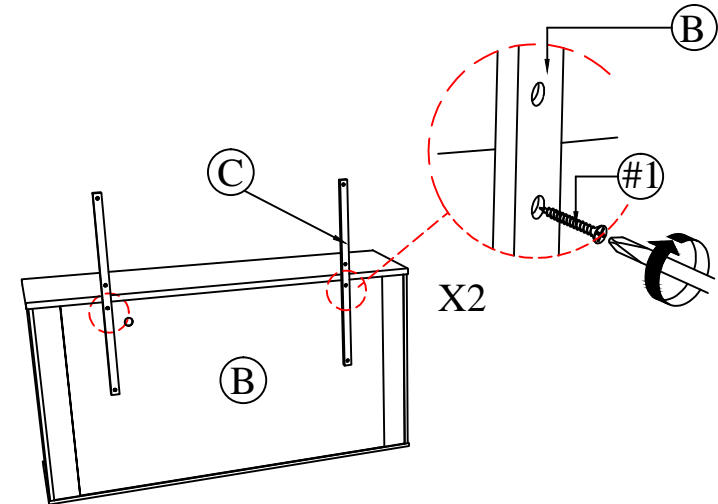

STEP 3 : Place mirror (A) on top of dresser (B). Align & fasten mirror support (C) to the back of dresser (B) using Csk Screw (1) and tighten them with ScrewDriver (NOT INCLUDED).

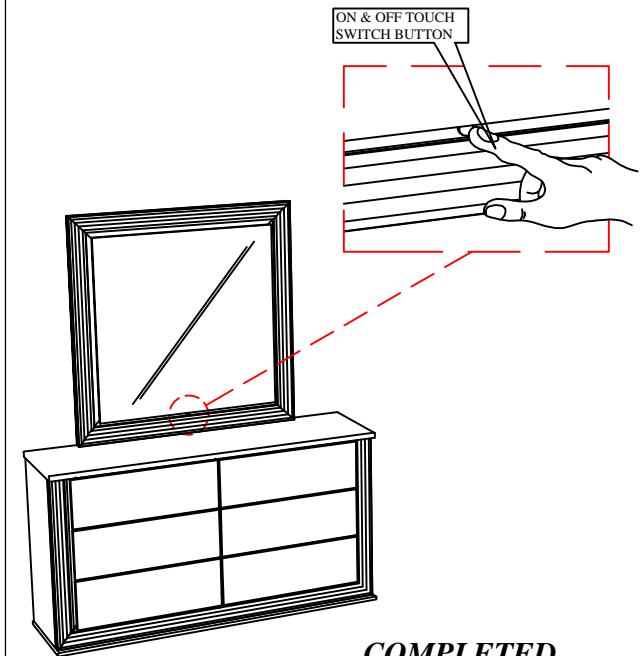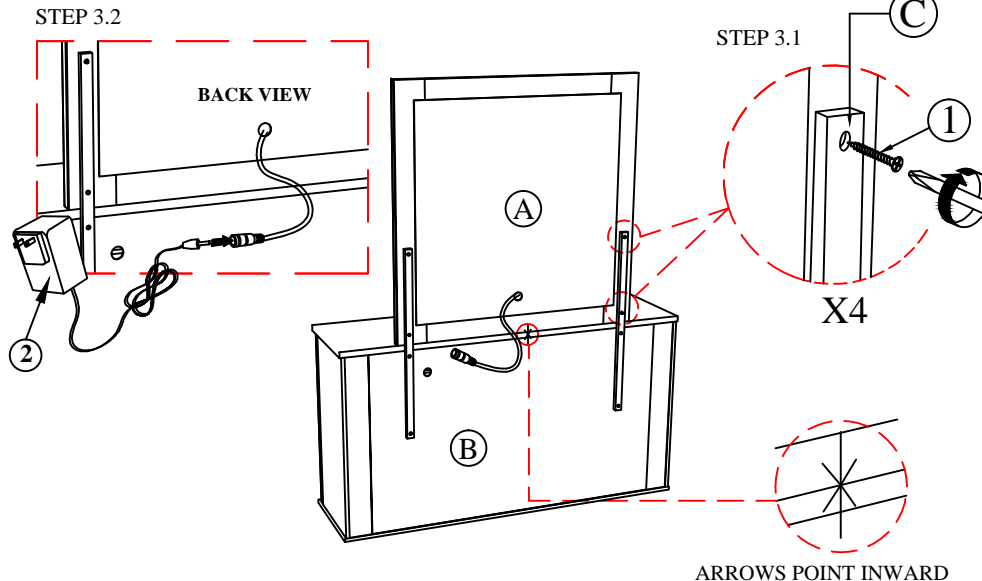


**COMPLETED
ASSEMBLY**

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

ASSEMBLY INSTRUCTIONS

**MODEL : 0361A/B & 0362A
YLIME
NIGHTSTAND**


**(BOX 1)
BOX OF NIGHT STAND**

NO	ITEM	QTY
	NIGHT STAND	
A		1 PC


**(BOX 1)
HARDWARE LIST**

NO	ITEM	QTY
1	0361A/361B/362A Night Stand 5V2 Adaptor With UL Certificate To 2 USB SUB Part	1 PC


STEP 1 : Remove The Adaptor (1) from the Top Drawer then Connect the LED terminal socket which is place at back of Nightstand (A) as shown.

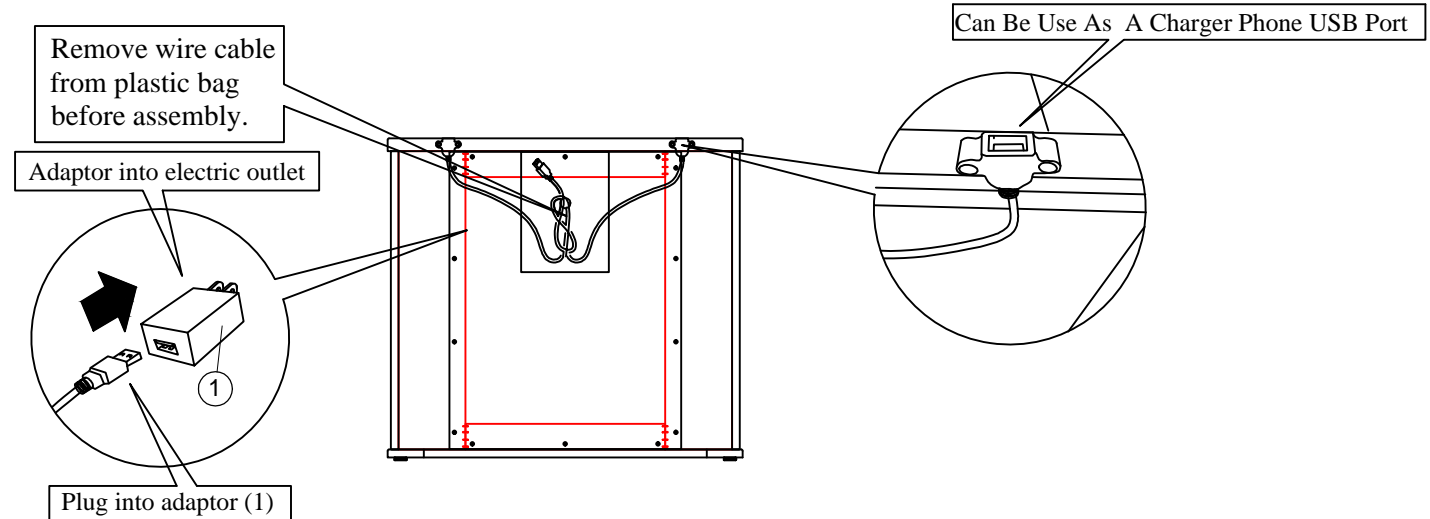

STEP 2 : Pull out the drawer to find the switch button as shown.

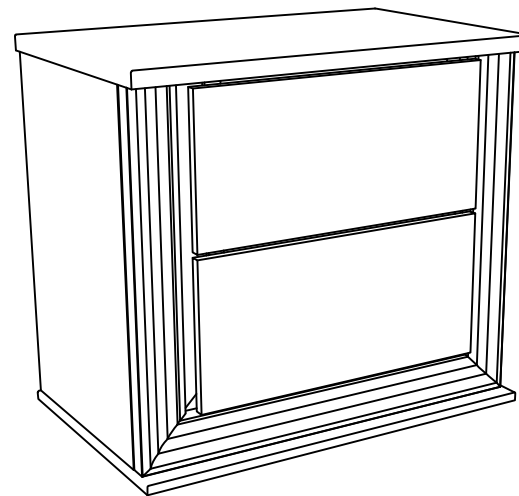

COMPLETED ASSEMBLY

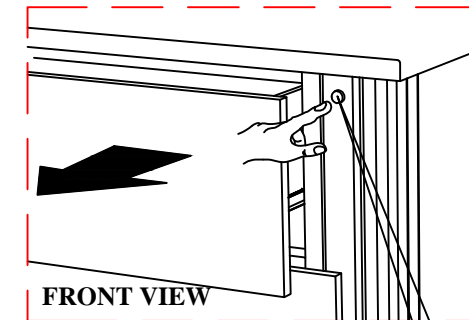

ON & OFF TOUCH
SWITCH BUTTON

NOTE : MUST TIGHTEN SCREWS PERIODCALLY OR SCREWS WILL BECOME LOOSE.CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.