
Riverside FURNITURE
email: info@riverside-furniture.com

Calhoun Home Office Assembly Instructions







Made in Viet Nam

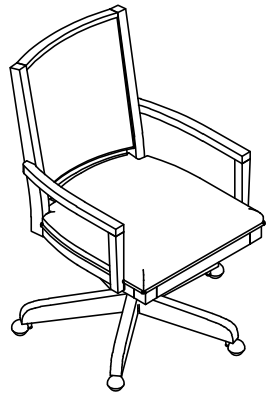


61738
Desk Chair

Warning :
- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture must be assembled on a soft surface such as a blanket or carpet.


Components and Hardware List

Chair Body	Seat control Mechanism	Chair Base	Wood Cap	Pneumatic Cylinder & Cover		
						
A 1 pc.	B 1 pc.	C 1 pc.	D 5 pcs.	E 1 pc.		
Caster	Allen Head Bolt 5/16"-18 x 1"	Spring Washer 5/16" x 12 x 2mm	Flat Washer 5/16"x 19 x 2mm	Allen Key 5mm	Wood Screw Ø18 x 5/8"	Tool Required (Not provided) Phillips Screwdriver
						
F 5 pcs.	G 4 pcs.	H 4 pcs.	I 4 pcs.	J 1 pc.	K 10 pcs.	

Step 1

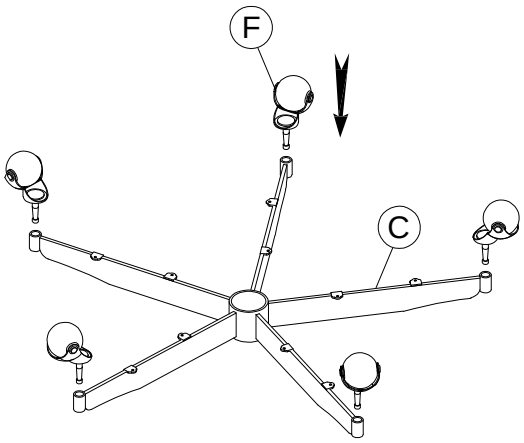


Step 2

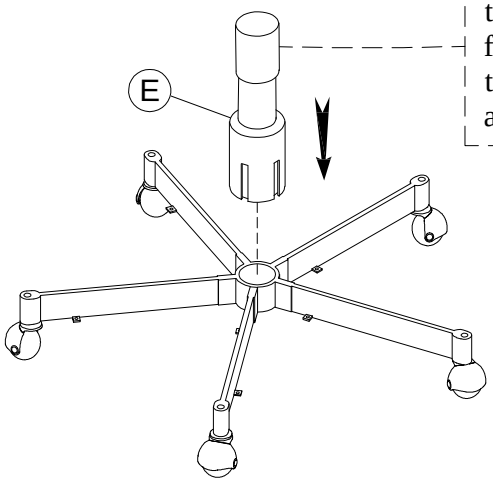


If present, remove the plastic cover from the top end of the cylinder before assembling to seat.


Step 3

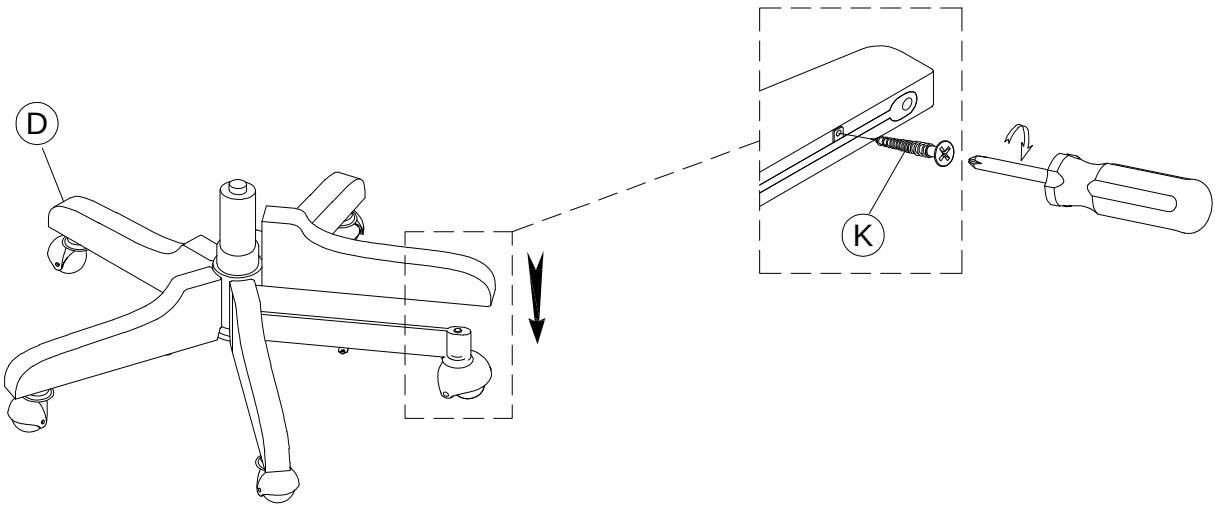

Step 4

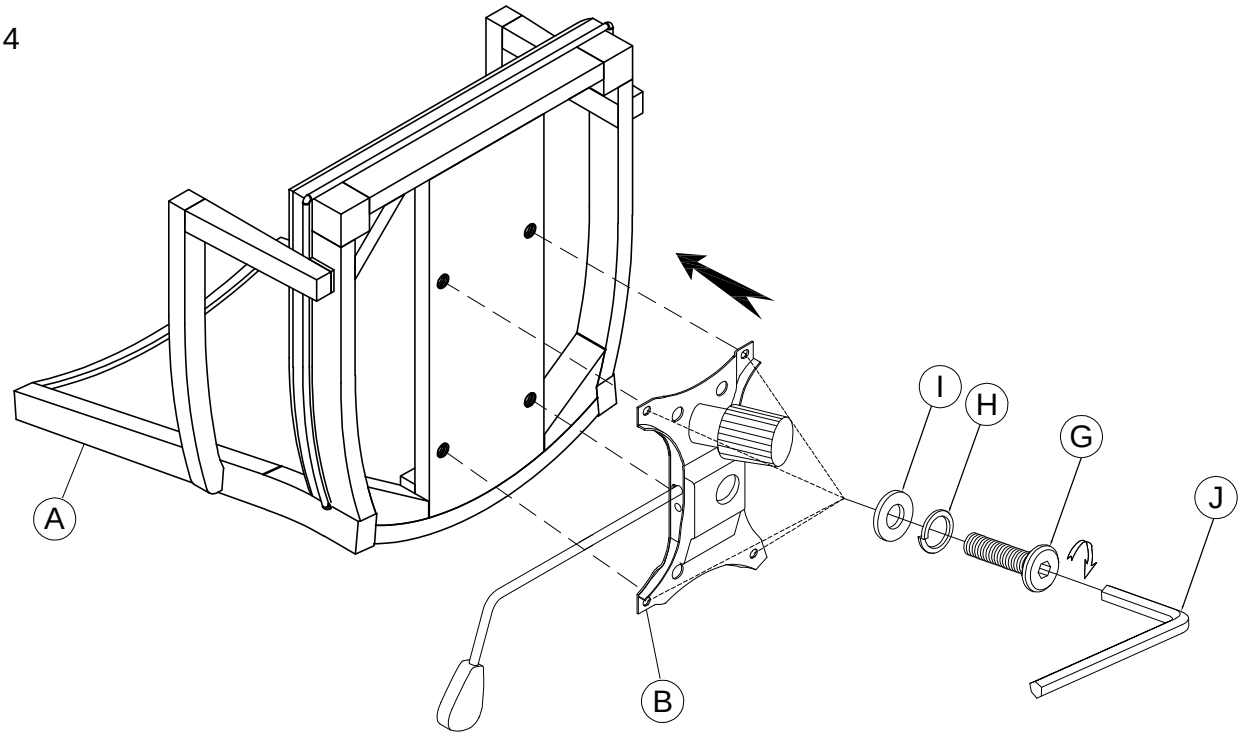

Step 5

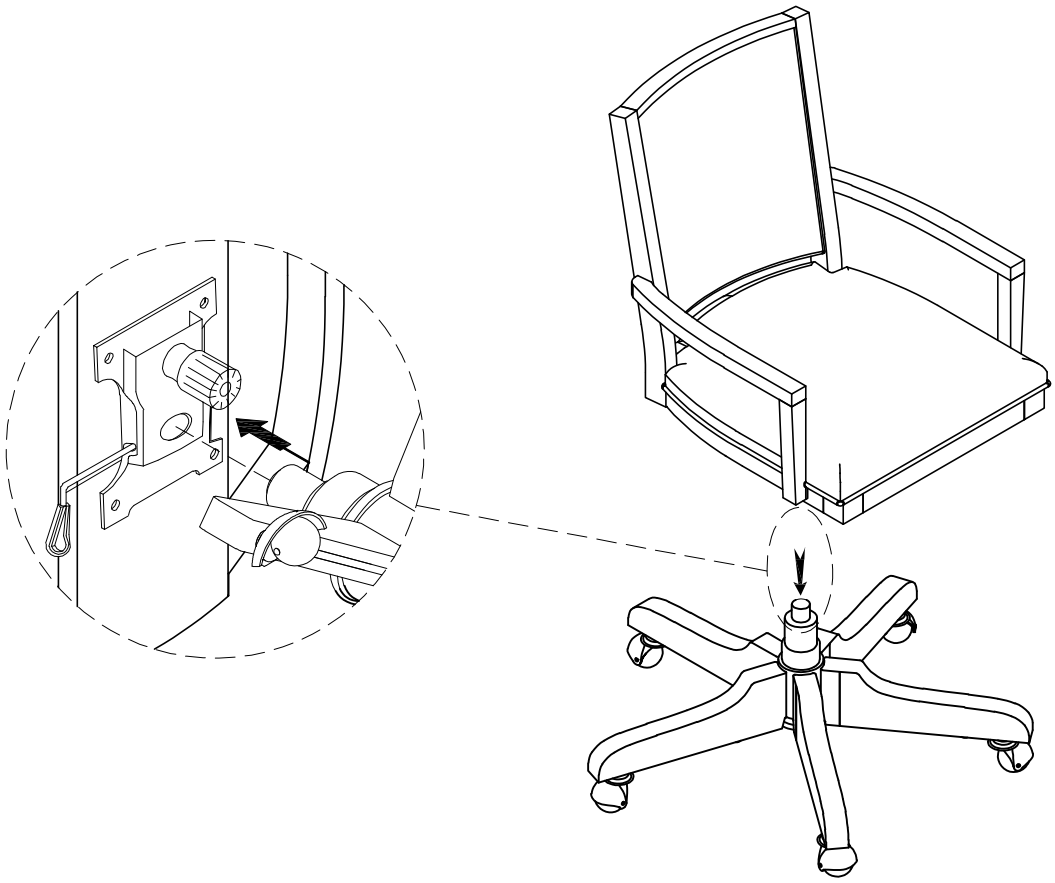

Note: To prevent possible damage to some type of flooring, never roll casters on unprotected hardwood or vinyl flooring. The lift mechanism is in a locked position for shipping. To unlock, pull straight out on the handle, and then the lift cylinder can be activated by lifting the handle.