

ASSEMBLY INSTRUCTIONS

ITEM.NO: FR3456,TWIN

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.

Before you Assemble: Please read all instruction carefully before beginning the assembly process. It is recommended that 2 people work together during assembly to prevent personal injury and to ensure that heavy or cumbersome parts are not damaged during the process.

CAUTION: For your safety, this product requires two people to lift


Step 1 Unfold side rail so it is straight. See Figure 1.

WARNING: Use caution when unfolding rail to avoid pinching fingers.

Step 2 Slide END CAPS onto side rails. Swing out CROSS ARMS to 90 degrees. See Figure 1.


WARNING: END CAPS MUST BE PLACED OVER END OF SIDE RAILS TO AVOID SERIOUS INJURY.

Figure 1

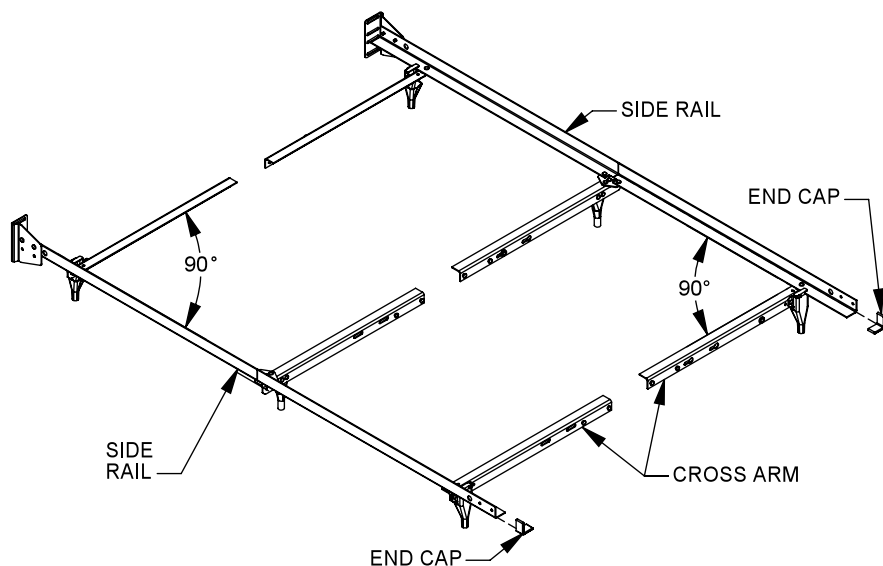


Step 3 Overlap CROSS ARMS and engage SHOULDER RIVETS into keyholes. Then push the plastic plug in the opening indicated in Figure 2.
Note: Two rivet heads must engage in keyhole slots.

Figure 2

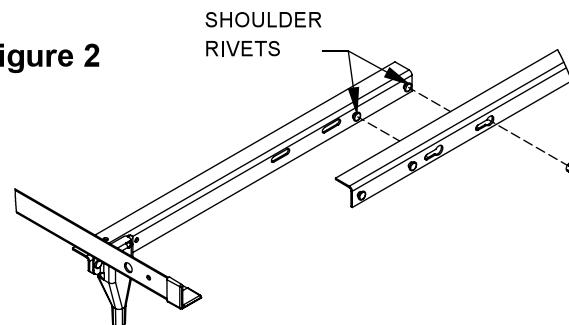

Step 4 Install foot attachments as shown in Figure 3.

Figure 3

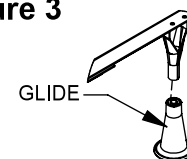


ASSEMBLY INSTRUCTIONS

ITEM.NO: FR3456, FULL/QUEEN/C. KING/KING

Step 1 Unfold side rail so it is straight. See Figure 1

WARNING: Use caution when unfolding rail to avoid pinching fingers.


Figure 1

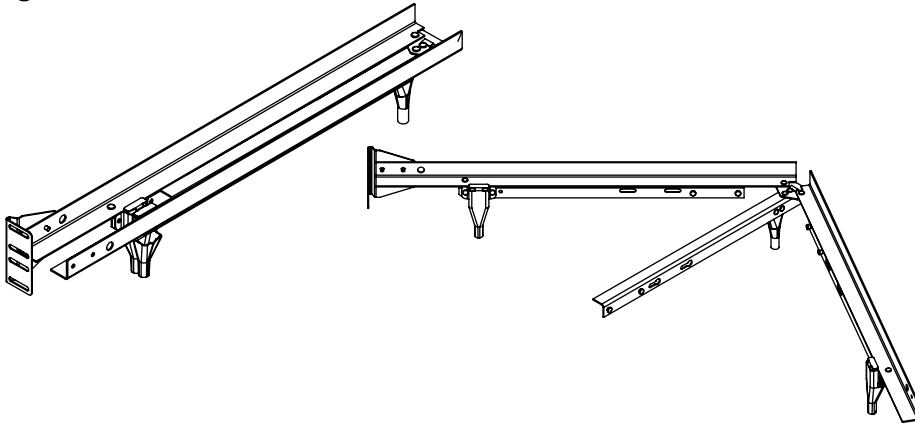

Step 2 Slide END CAPS onto side rails. Swing out CROSS ARMS to 90 degrees. See Figure 2.

WARNING: END CAPS MUST BE PLACED OVER END OF SIDE RAILS TO AVOID SERIOUS INJURY.

Figure 2

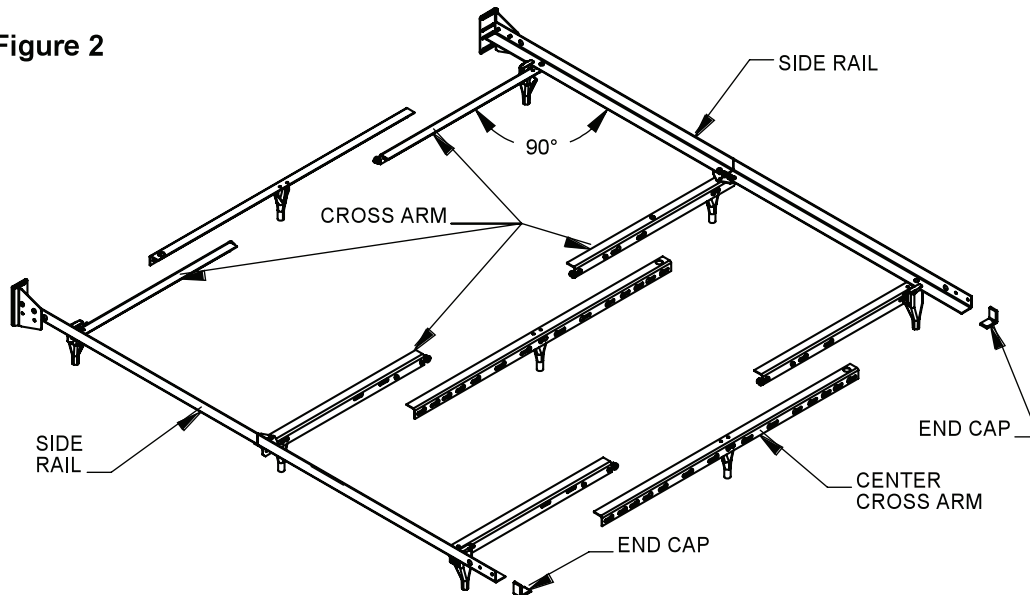


Step 3 Determine desired bed size (Full, Queen, Cal. King, or King). Overlap CROSS ARMS and engage SHOULDER RIVETS into proper keyholes of

CENTER CROSS ARMS as indicated in Figure 3.


Step 4 To lock cross arms together, pull outward to engage **Shoulder Rivets** in the narrow part of the keyholes. Then push the plastic plug in the opening indicated in Figure 3.

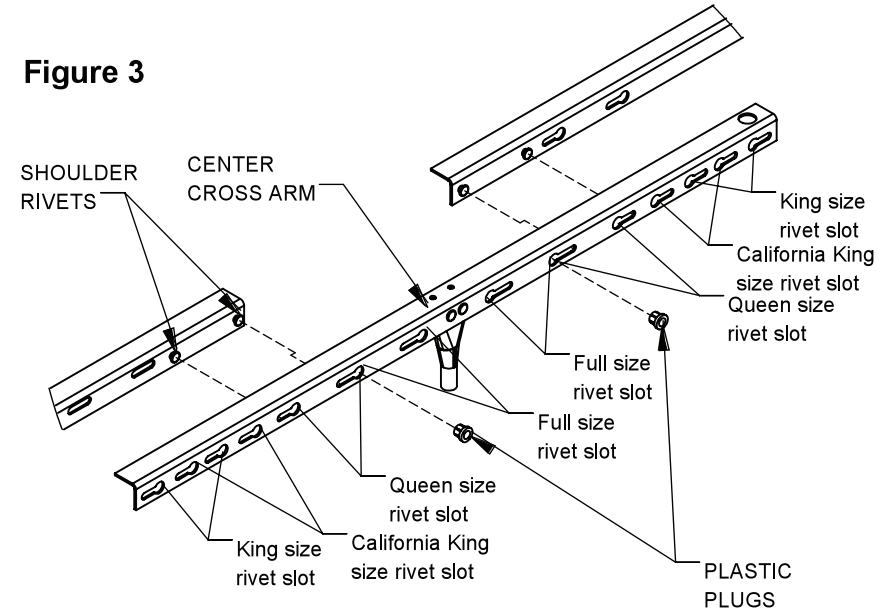


Figure 3



Step 5 Install foot attachments as shown in Figure 4.

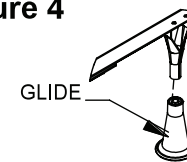Figure 4



HARDWARE LIST			QTY
A		GLIDE	9 X
B	 38x38	END CAP	2 X
C		PLASTIC PLUGS	6 X

Need Assistance? Call us at 1-855-343-7378 from 8:00 am to 5:00 pm PST Monday - Friday