

# M022-417-281 STREAMLINE SIDE CHAIR

## MODERN STREAMLINE

1 of 2


### ASSEMBLY INSTRUCTIONS

PLEASE UNPACK ALL PARTS AND CHECK AGAINST PARTS LIST ON THIS INSTRUCTION SHEET BEFORE DISCARDING PACKING AND CARTON!

- 2) Assemble the Cushion seat and Chair back using the bolt (A) and flat washer (B), lock washer (C) by allen key (D), as shown in Diagram A.
- 3) Assemble the Cushion seat and Front leg using the bolt (A) and flat washer (B), lock washer (C) by allen key (D), as shown in Diagram B.

\*\*\* NOTE KEEP THIS SHEET!!! \*\*\*

In the unlikely event that you would need a replacement part for your furniture, please contact your local authorized Schmadig International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

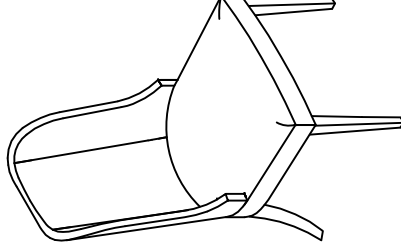

M022-417-281	
Streamline Side Chair	
Part Description	QTY
Chair Back	1
Cushion Seat	1
Front Legs	2
Nail-in Floor Glide	4
RTA Hardware	4

RTA Hardware	
Hardware List	Qty
A Bolt 5/16(in)x50(mm)	8
B Flat Washer 5/16	8
C Lock Washer 5/16	8
D Allen Key 5mm	1