




Assembly Instruction For

P3 Recliner, Zero Gravity, Memory Foam

U-17440-11590/11591-105PPP


Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


PART LIST				
NO.	Part Picture	Part Description	Code	QTY
A		Recliner Body		1pc
B		Recliner Back		1pc
C		Adapter cord	PU-17440-ADT	1pc

STEP:1

Adapter cord (C) underneath
the Recliner Body (A)

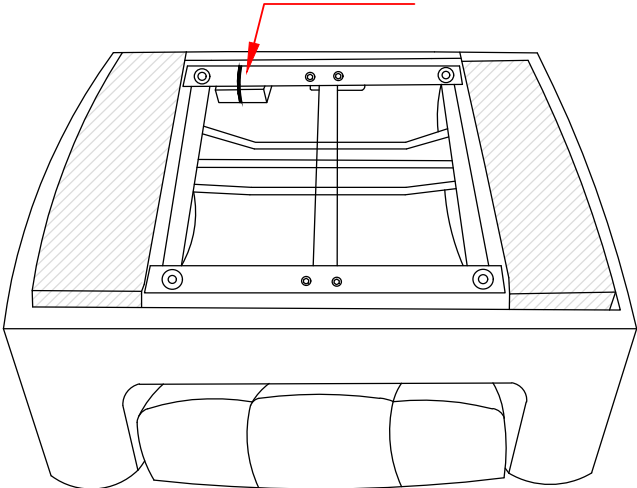

STEP:2

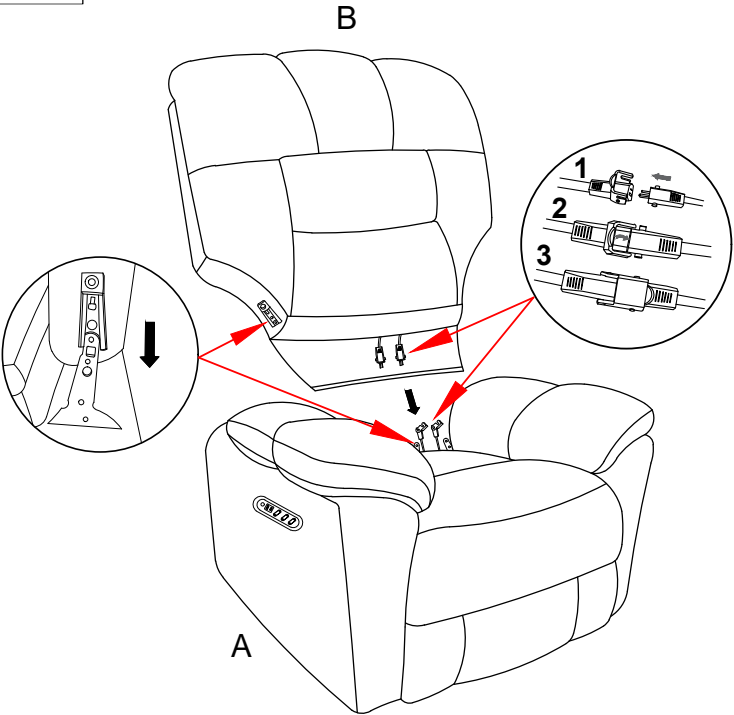


Assembly Instruction For


P3 Recliner, Zero Gravity, Memory Foam

U-17440-11590/11591-105PPP



STEP:3

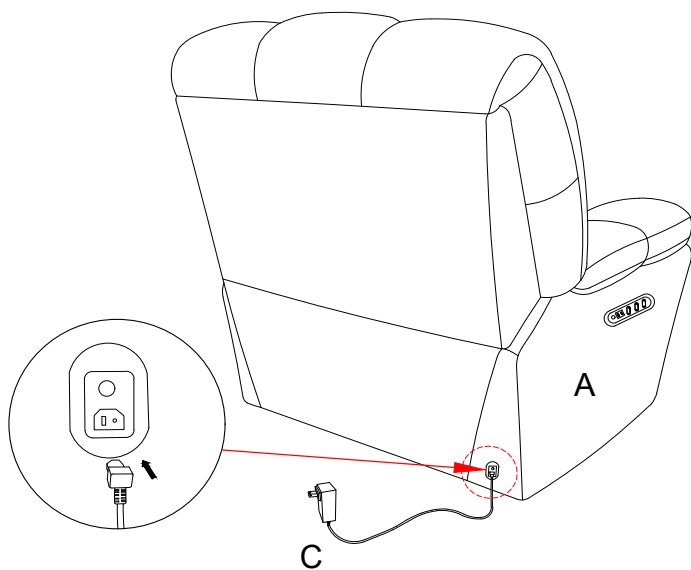

STEP:4

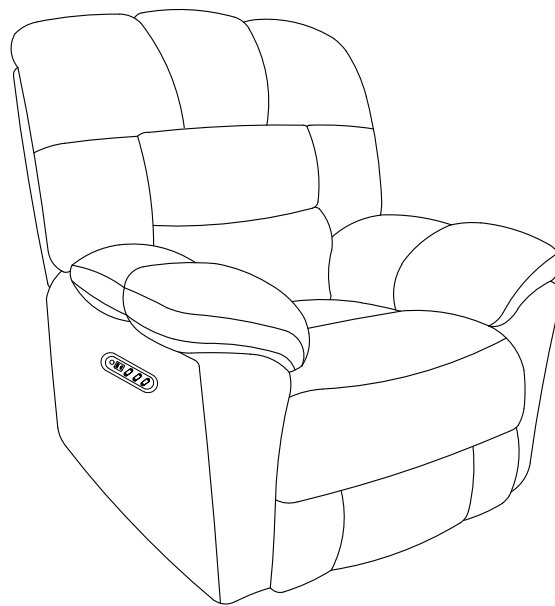

STEP:5

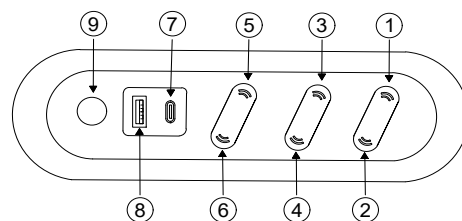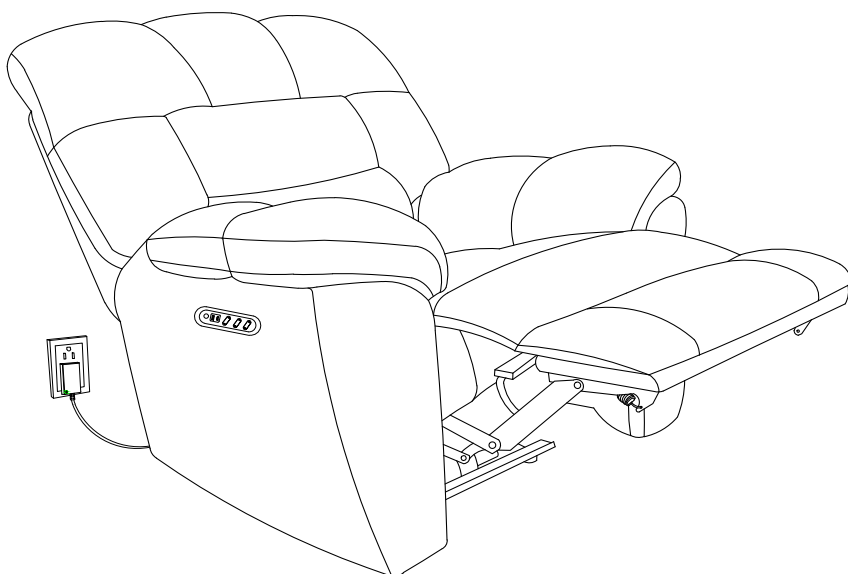

Front

- | | |
|-------------------|--------------------|
| ① Mechanism Open | ⑥ Headrest Close |
| ② Mechanism Close | ⑦ USB -C interface |
| ③ Lumbar Open | ⑧ USB interface |
| ④ Lumbar Close | ⑨ Home Button |
| ⑤ Headrest Open | |

ASSEMBLY COMPLETED

49902365