


Warning :





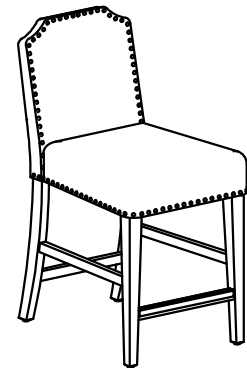












- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture must be assembled on a soft surface such as a blanket or carpet.




92615 / 16 / 17

Clipped Top Uph Stool


Components and Hardware List
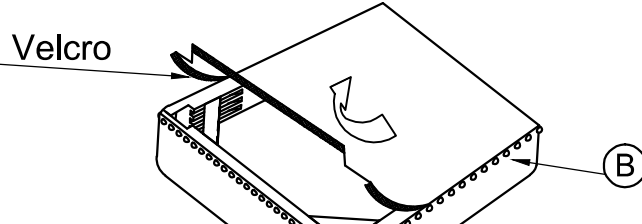
<div>Chair Back</div> <div></div> <div><div>A</div>1 pc.</div>	<div>Seat Frame</div> <div></div> <div><div>B</div>1 pc.</div>	<div>Front Leg (Left)</div> <div></div> <div><div>C</div>1 pc.</div>	<div>Front Leg (Right)</div> <div></div> <div><div>D</div>1 pc.</div>	<div>Front Stretcher 15-7/8" x 1-1/4" x 3/4"</div> <div></div> <div><div>E</div>1 pc.</div>	<div>92615 / 16 / 17</div> <div>Clipped Top Uph Stool</div>		
<div>Side Stretcher (Left) 18-7/8" x 1-1/4" x 3/4"</div> <div></div> <div><div>F</div>1 pc.</div>	<div>Side Stretcher (Right) 18-7/8" x 1-1/4" x 3/4"</div> <div></div> <div><div>G</div>1 pc.</div>	<div>Allen Head Bolt Ø5/16" x 18 x 3-3/8"</div> <div></div> <div><div>H</div>4 pcs.</div>	<div>Allen Head Bolt Ø5/16" x 18 x 2-1/8"</div> <div></div> <div><div>I</div>4 pcs.</div>	<div>Allen Head Bolt Ø5/16" x 18 x 1-3/4"</div> <div></div> <div><div>J</div>2 pcs.</div>	<div>Ø5/16" Spring Washer</div> <div></div> <div><div>K</div>10 pcs.</div>	<div>Ø5/16" Flat Washer</div> <div></div> <div><div>L</div>10 pcs.</div>	
<div>4mm Allen Key</div> <div></div> <div><div>M</div>1 pc.</div>	<div>Wood Screw Ø4x45 mm</div> <div></div> <div><div>N</div>6 pcs.</div>	<div>Screw Driver not included</div> <div></div>				<div>STEP 1: Remove Velcro strips on the seat frame to assemble the chair back and front legs.</div> <div></div>	
<div>Upholstery Tack</div> <div></div> <div>6 pcs.</div>							


STEP 2: Do not fully tighten the bolts.

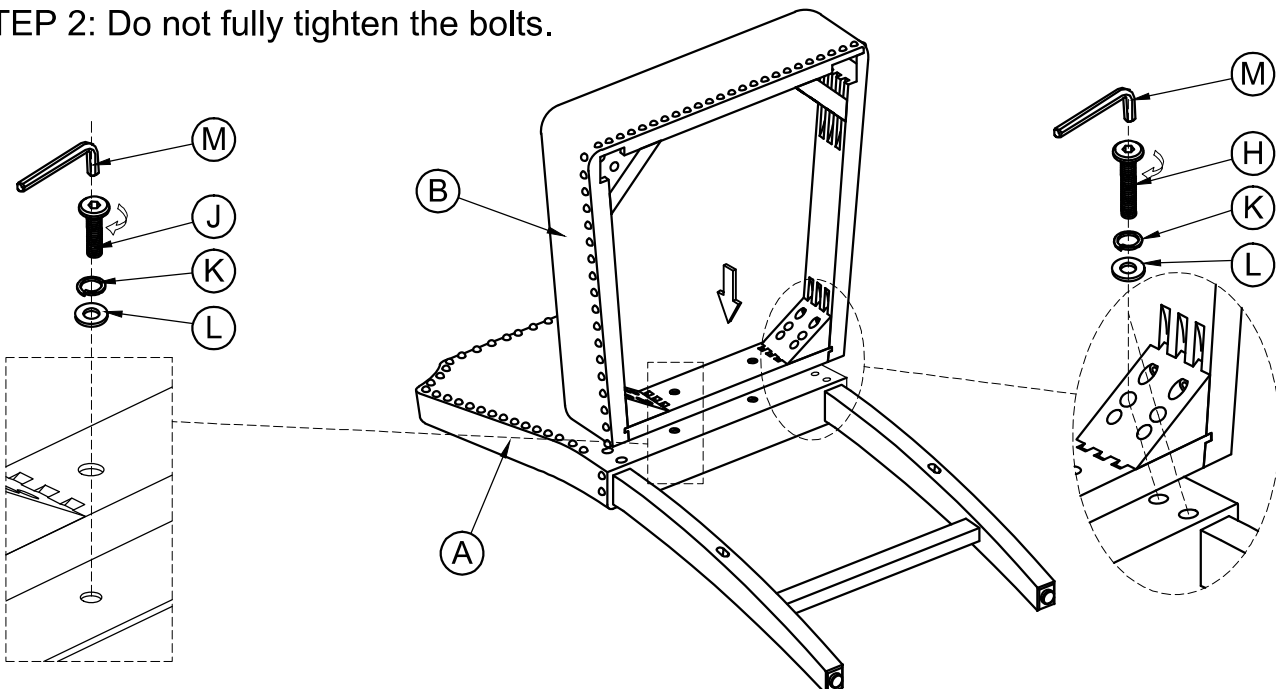


STEP 3: Do not fully tighten the screws.

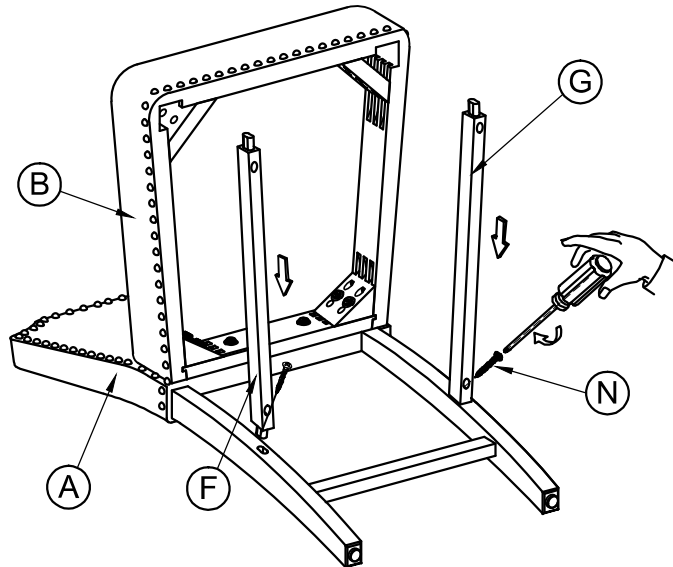

STEP 4: Do not fully tighten the screws.

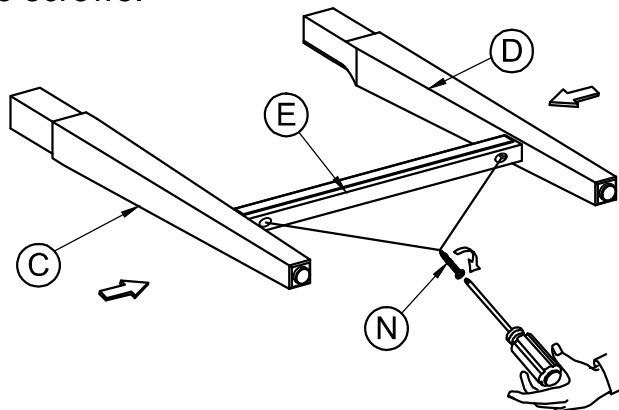


STEP 5: Using the Allen Key to tighten all bolts.

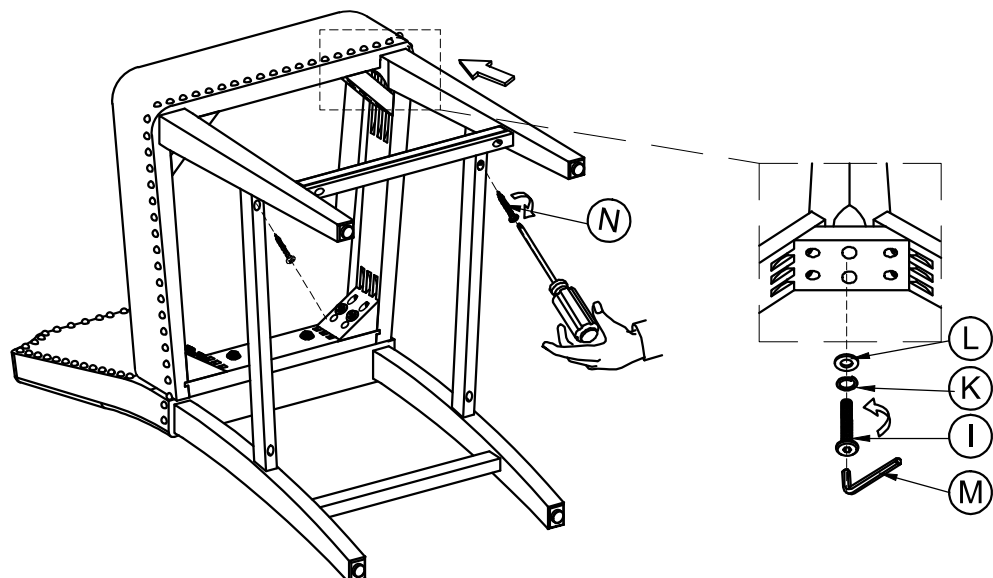


STEP 6: Using the Philips Head Screw driver to tighten all screws.

STEP 7: Attach all Velcro strips to the seat frame.

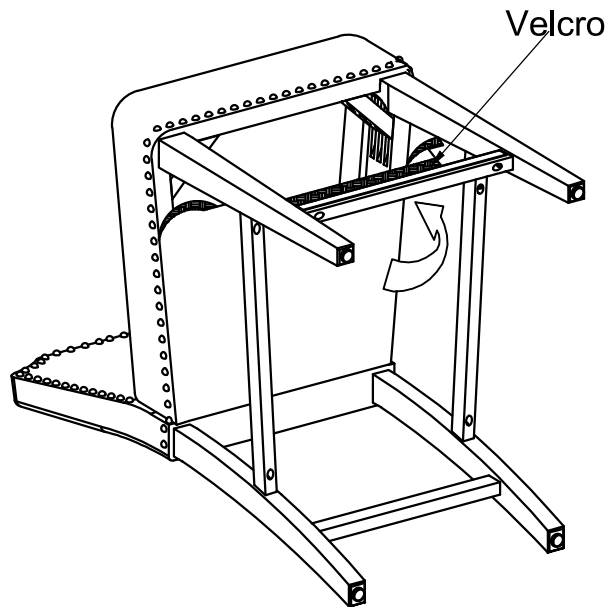

COMPLETE

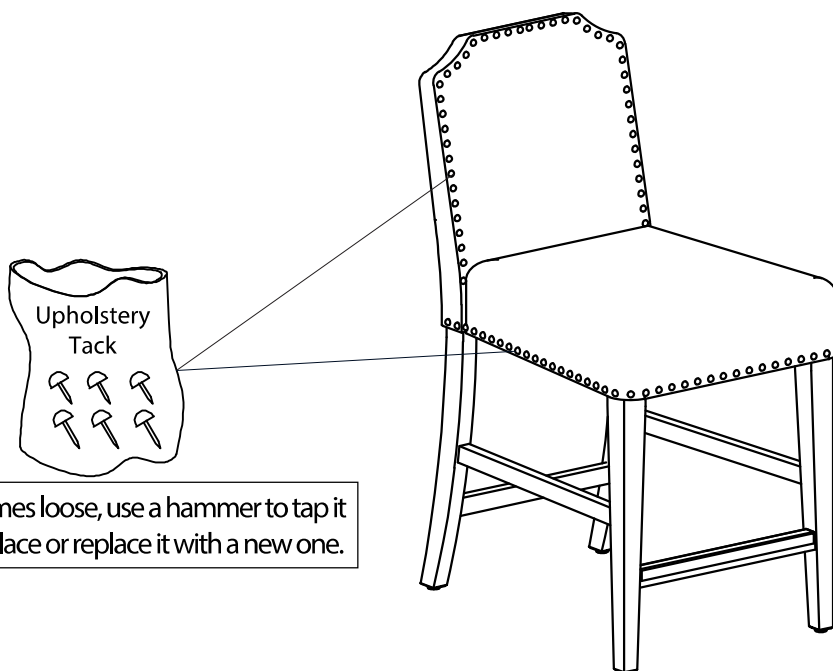

If a tack comes loose, use a hammer to tap it back into place or replace it with a new one.