













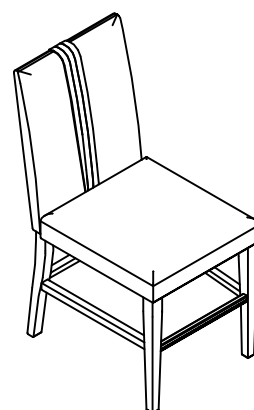


#### Warning :

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture must be assembled on a soft surface such as a blanket or carpet.

#### Components and Hardware List


 Chair Back (A) 1 pc.	 Seat Cushion (B) 1 pc.	 Right Leg (C) 1 pc.	 Left Leg (D) 1 pc.	 Front Stretcher (Metal U) (E) 1 pc.	 Side Stretcher (Right) (F) 1 pc.		
 Side Stretcher (Left) (G) 1 pc.	 Ø5/16" x 18 x 2-1/4" Allen Head Bolt (H) 4 pcs.	 Ø5/16" x 18 x 3" Allen Head Bolt (I) 4 pcs.	 Ø5/16" x 18 x 1-3/4" Allen Head Bolt (K) 2 pcs.	 Ø5/16" x Ø13 Spring Washer (L) 10 pcs.	 Ø5/16" x Ø19 Flat Washer (M) 10 pcs.	 M4 x 2-1/2" Allen Key (N) 1 pc.	 #4 x 1-1/2" Wood Screw (O) 6 pcs.




91058

Counter Height Chair


#### STEP 1 : Do not fully tighten the bolts.

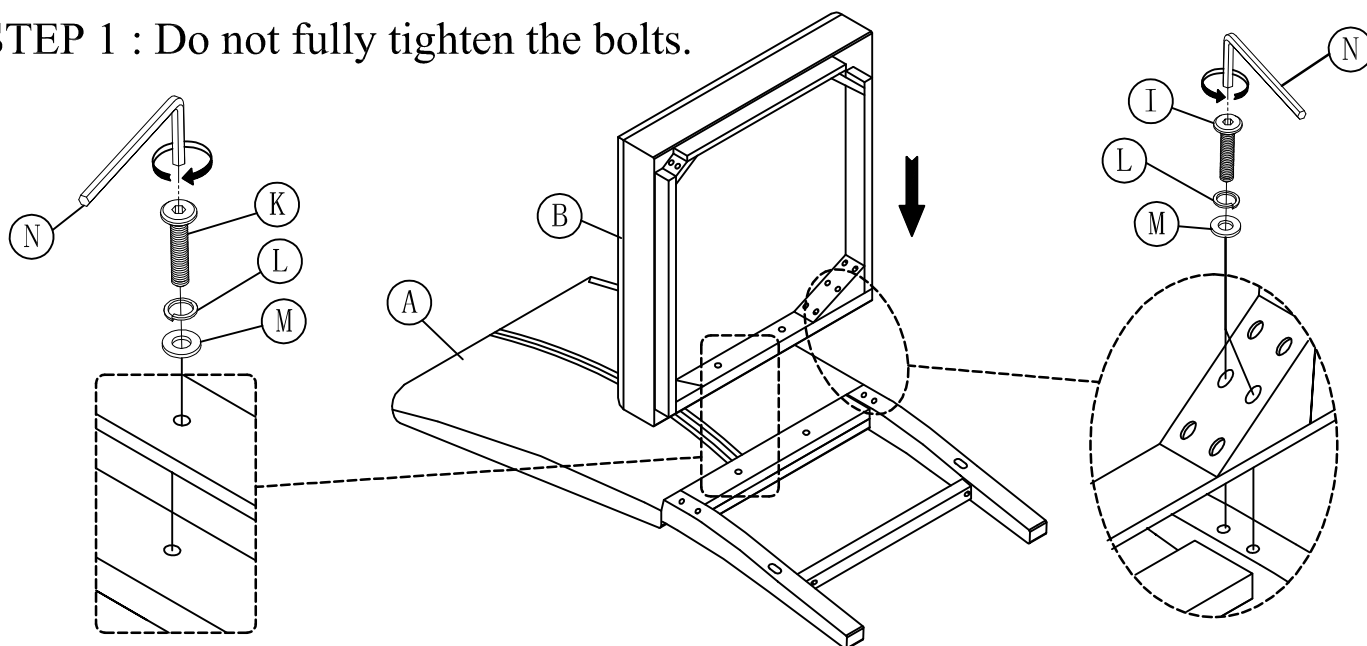


#### STEP 2 : Do not fully tighten the screw.

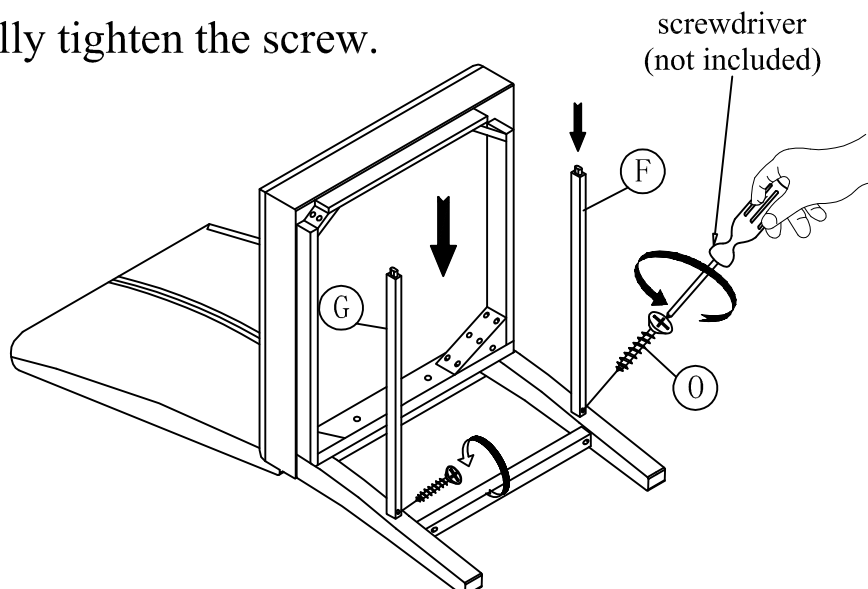


**STEP 3**

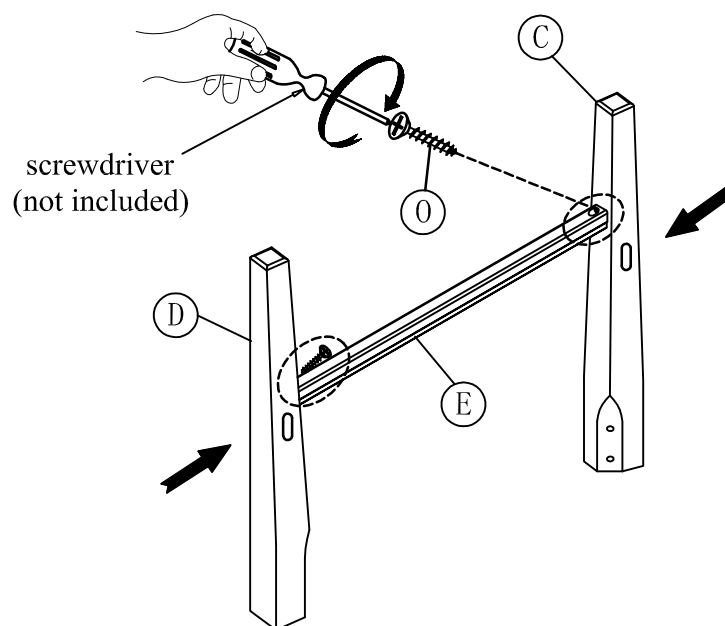

**STEP 4 : Using the Allen Key to tighten all bolts.**

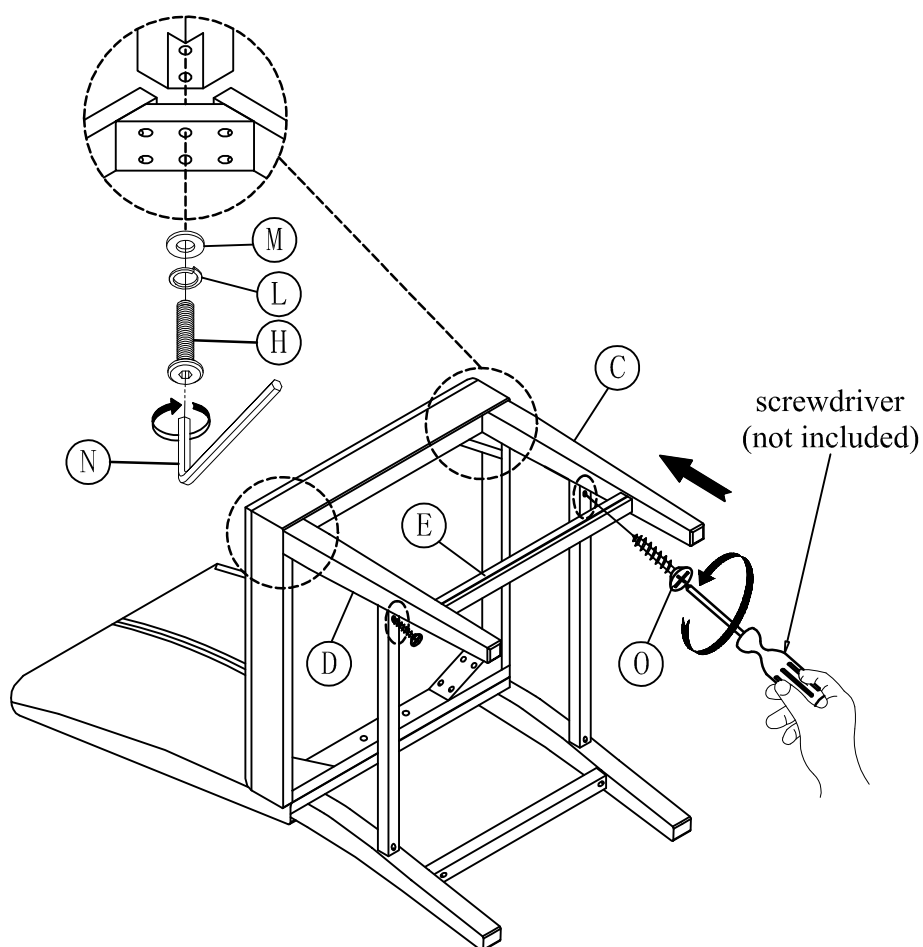

**Complete**

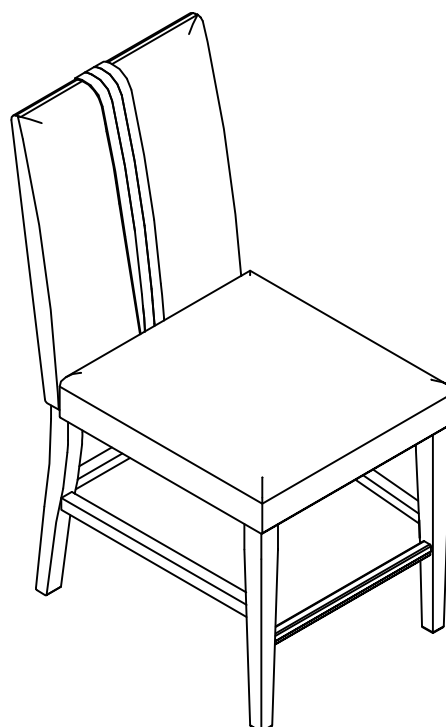

**STEP 5 : Using a Phillips head screwdriver tighten all screws.**