
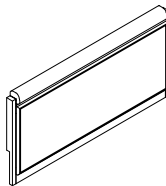

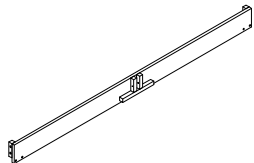


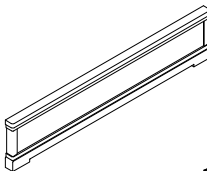
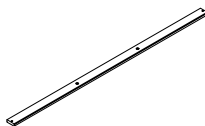

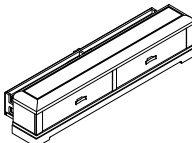
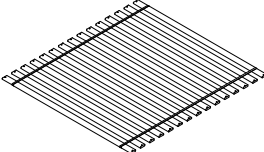
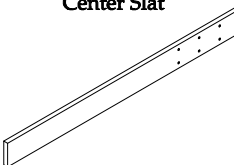
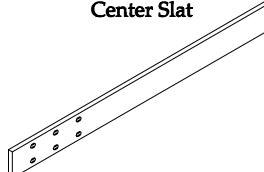
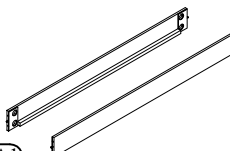
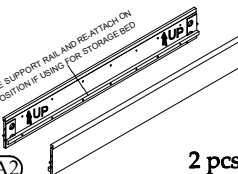
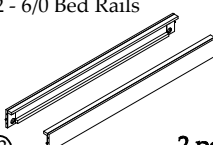


Riverside FURNITURE email: info@riverside-furniture.com		MILTON PARK Bedroom Assembly Instructions		Page 1 of 8 Made in Viet Nam King Uph Bed	
Hardware and Parts packed with the Headboard					
Upholstery Headboard  (H-A) 1 pc.		Headboard Post  (H-B) One Left & One Right		Headboard Stretcher  (H-C) 1 pc.	
Ø5/16" x 1-1/2" Allen Head Bolt  (H-D) 4 pcs.	Ø5/16" x 1-3/4" Allen Head Bolt  (H-E) 6 pcs.	Ø5/16" Spring Washer  (H-F) 10 pcs.	Ø5/16" x Ø19mm Flat Washer  (H-G) 10 pcs.	5mm Allen key  (H-H) 1 pc.	
Hardware and Parts packed with the Footboard					
Panel Footboard  (F-A1) 1 pc.		Slats  (F-B) 5 pcs.		Support leg  (F-C) 10 pcs.	
				Screw Ø9 x 1"  (F-D) 10 pcs.	
Hardware and Parts packed with the Storage Footboard					
Storage Footboard  (F-A2) 1 pc.		Roll Slat  (F-B) 1 set.		Center Slat  (F-C1) 1 pc.	
				Center Slat  (F-C2) 1 pc.	
				Support leg  (F-D) 1 pc.	
Ø1/4" x 2-3/4" Allen Head Bolt  (F-1) 2 pcs.	Ø1/4" x 1-1/4" Allen Head Bolt  (F-2) 4 pcs.	Ø1/4" Spring Washer  (F-3) 6 pcs.	Ø1/4" x Ø19mm Flat Washer  (F-4) 6 pcs.	4 mm Allen Key  (F-5) 1 pc.	Ø9 x 1" Wood Screw  (F-6) 30 pcs.
				Ø9 x 1-1/2" Wood Screw  (F-7) 2 pcs.	
Hardware and Parts packed with the Bed Rails					
18676 - Bed Rails  (R-A1) 2 pcs.		Ø5/16" Curved Washer  (R-B) 8 pcs.		Ø5/16" x 17mm Nut  (R-C) 8 pcs.	
				Ø5/16"x 4" Long Bolt  (R-D) 8 pcs.	
				13 mm Open Wrench  (R-E) 1 pc.	
18672 - Storage Bed Rails  (R-A2) 2 pcs.		Ø5/16" Curved Washer  (R-B) 8 pcs.		Ø5/16" x 17mm Nut  (R-C) 8 pcs.	
				Ø5/16" x 4" Long Bolt  (R-D) 8 pcs.	
				13 mm Open Wrench  (R-E) 1 pc.	
18682 - 6/0 Bed Rails  (R-A3) 2 pcs.		Ø5/16" Curved Washer  (R-B) 8 pcs.		Ø5/16" x 17mm Nut  (R-C) 8 pcs.	
				Ø5/16" x 4" Long Bolt  (R-D) 8 pcs.	
				13 mm Open Wrench  (R-E) 1 pc.	


6/0-6/6 King Bed

18684 -- 6/0-6/6 Uph Headboard

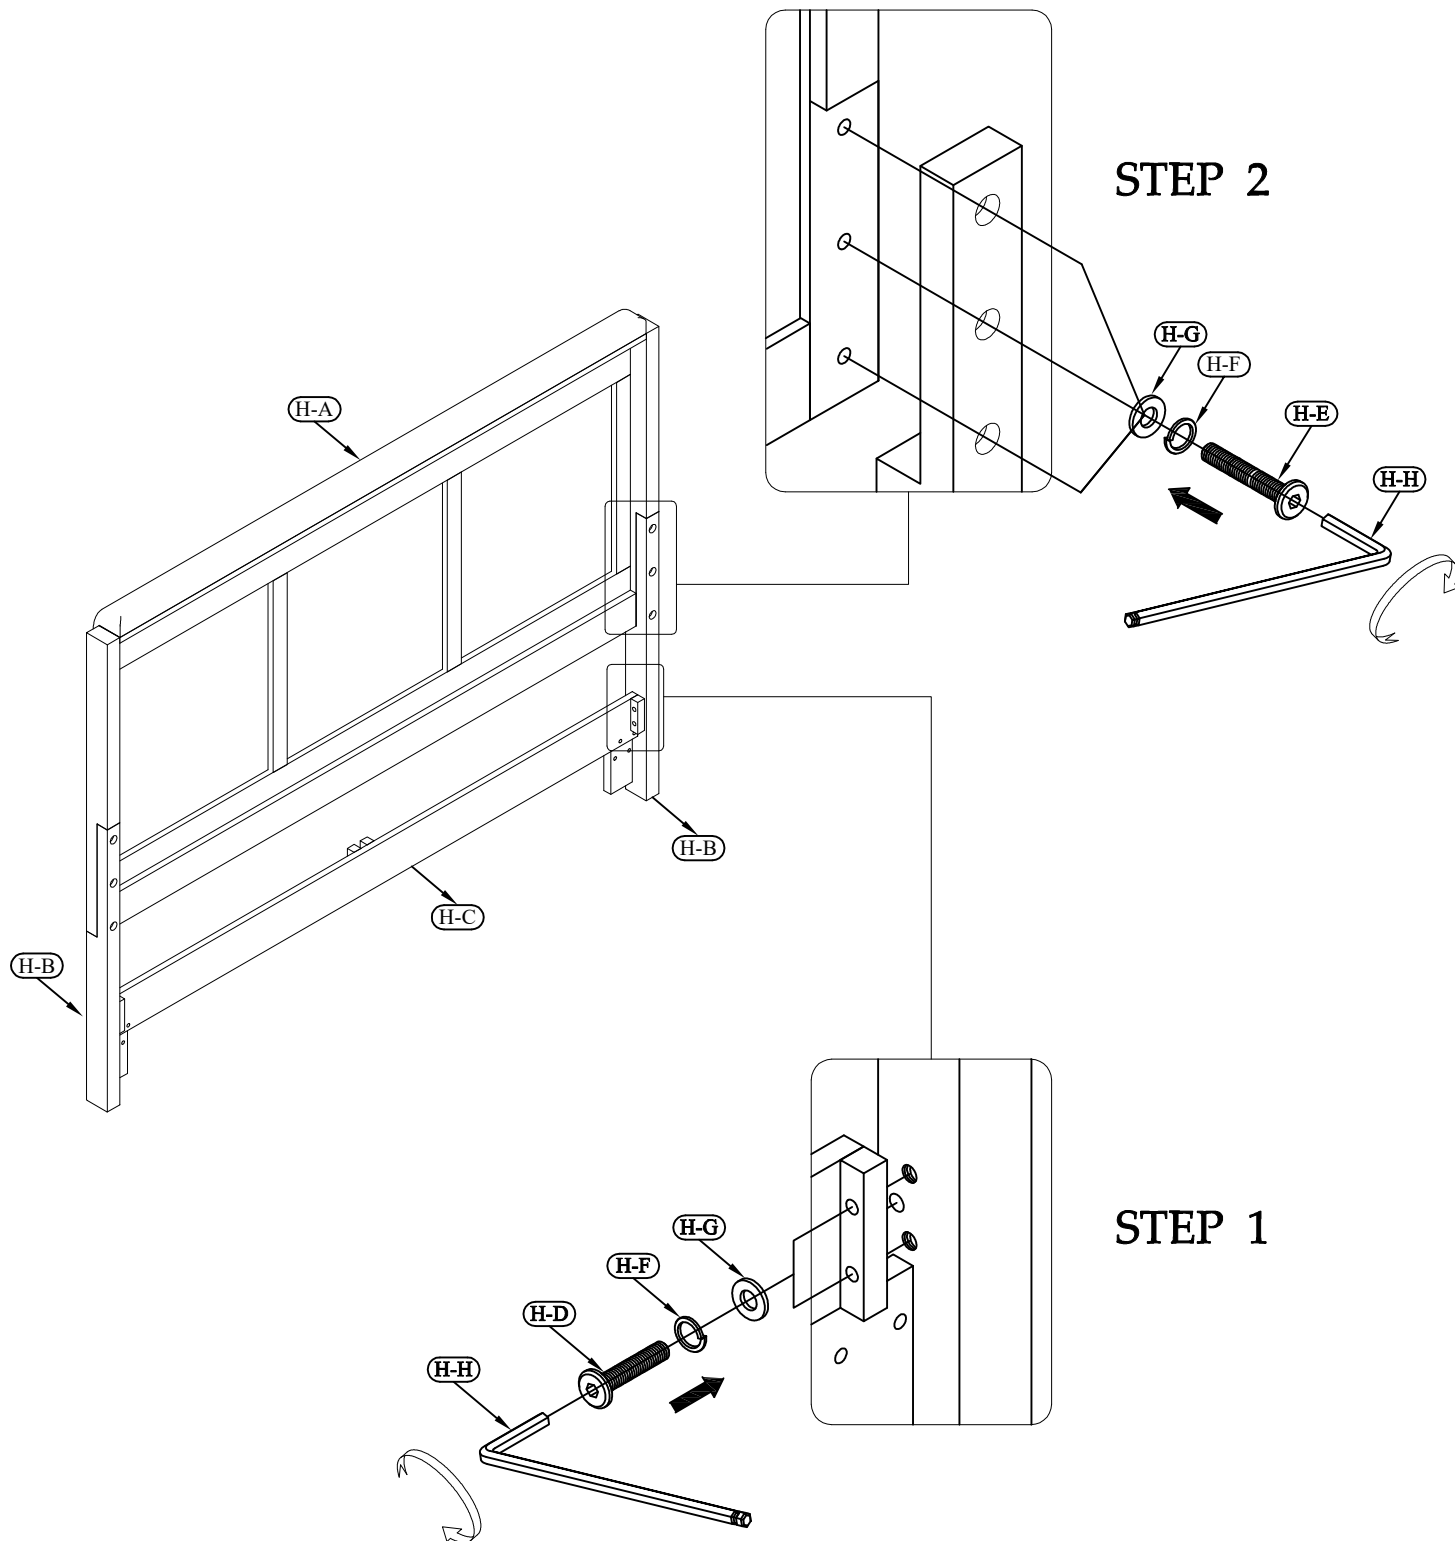

6/0-6/6 King Bed

18684 -- 6/0-6/6 Uph Headboard

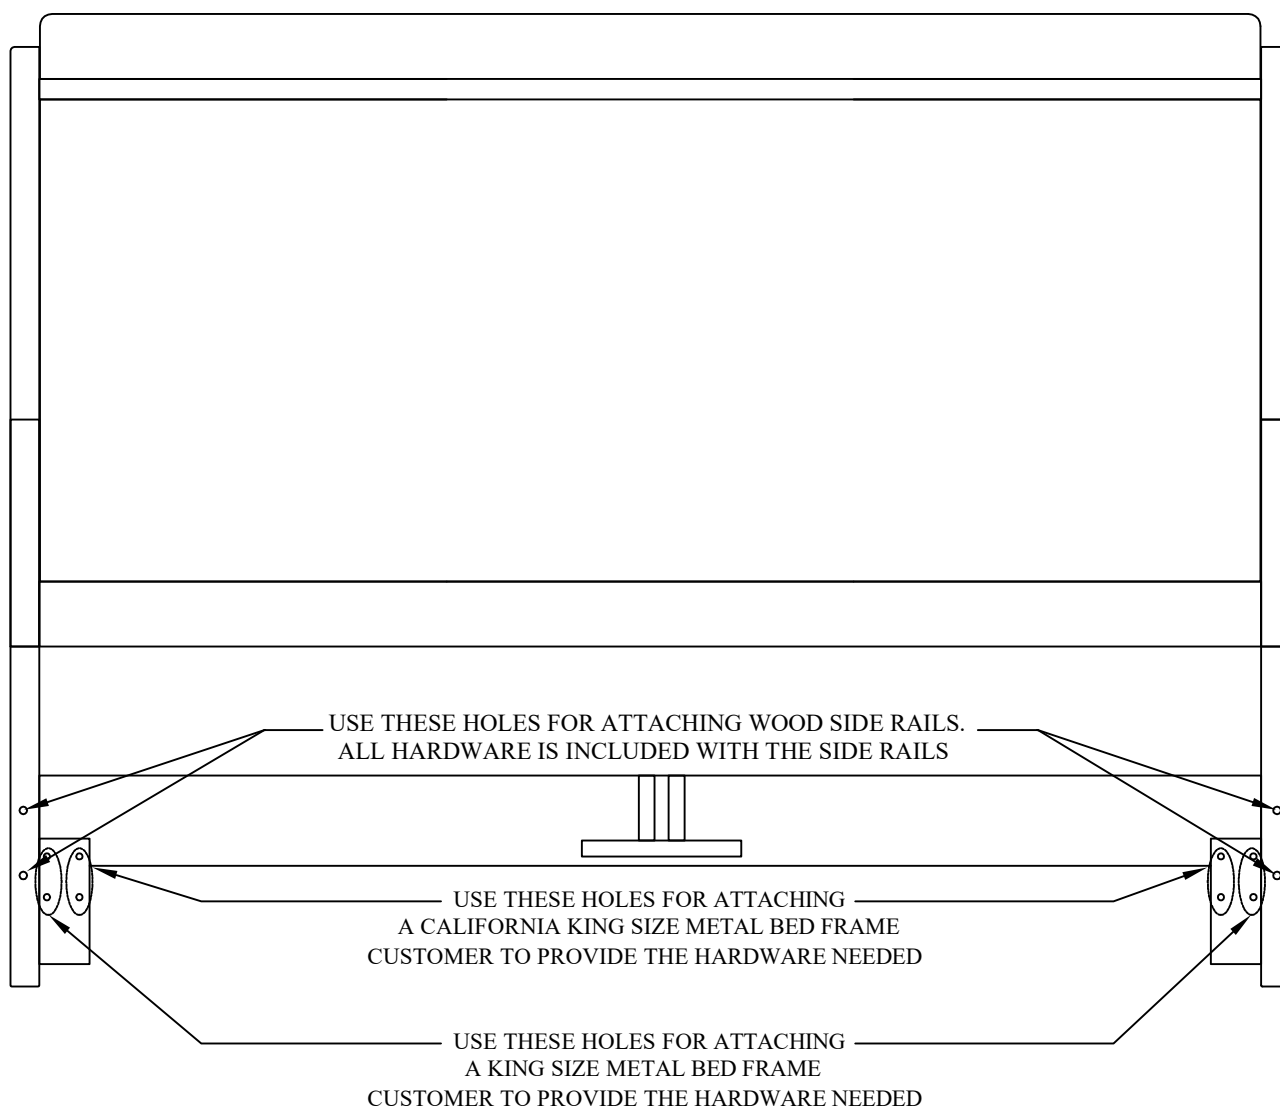

6/0 - 6/6 Bed

THE HEADBOARD MAY BE USED ALONE
WITH A CALIFORNIA KING OR A STANDARD
KING SIZE METAL BED FRAME.

6/0-6/6 King Bed

18684 -- 6/0-6/6 Uph Headboard


18681 -- 6/0-6/6 Panel Footboard



18676 -- 5/0-6/6 Bed Rails



18682 -- 6/0 Bed Rails

18672 -- 5/0-6/6 Storage Bed Rails

STEP 3

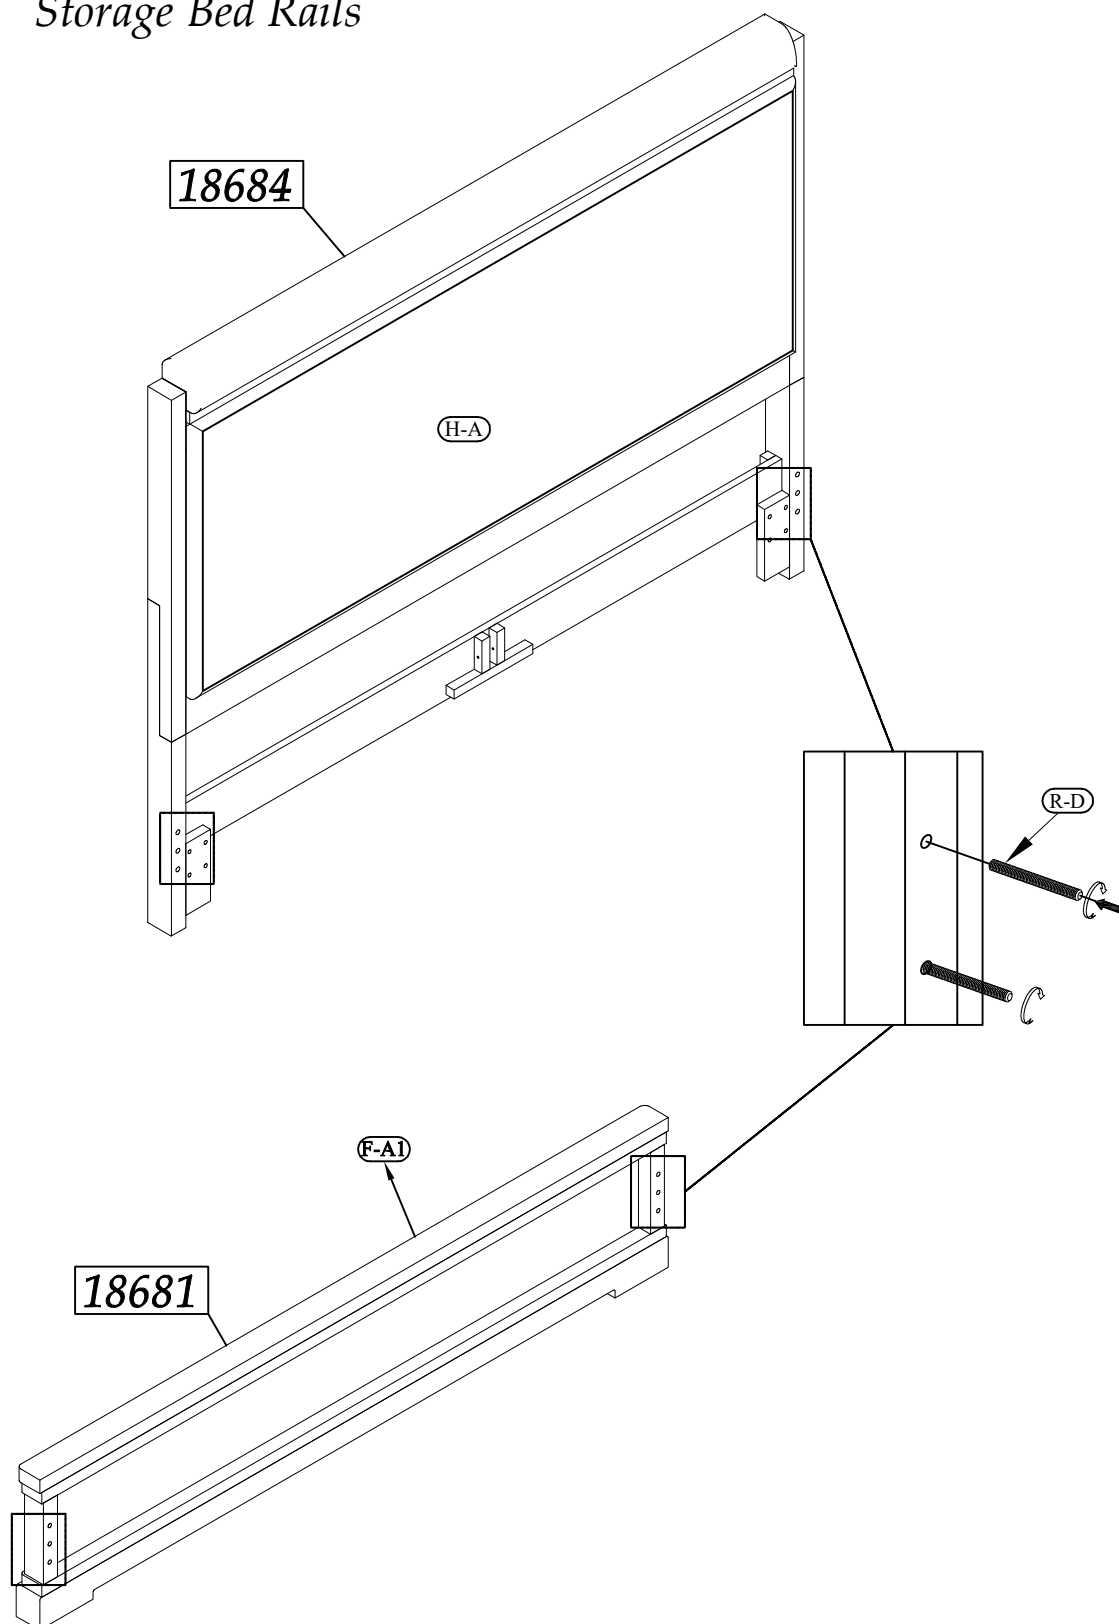

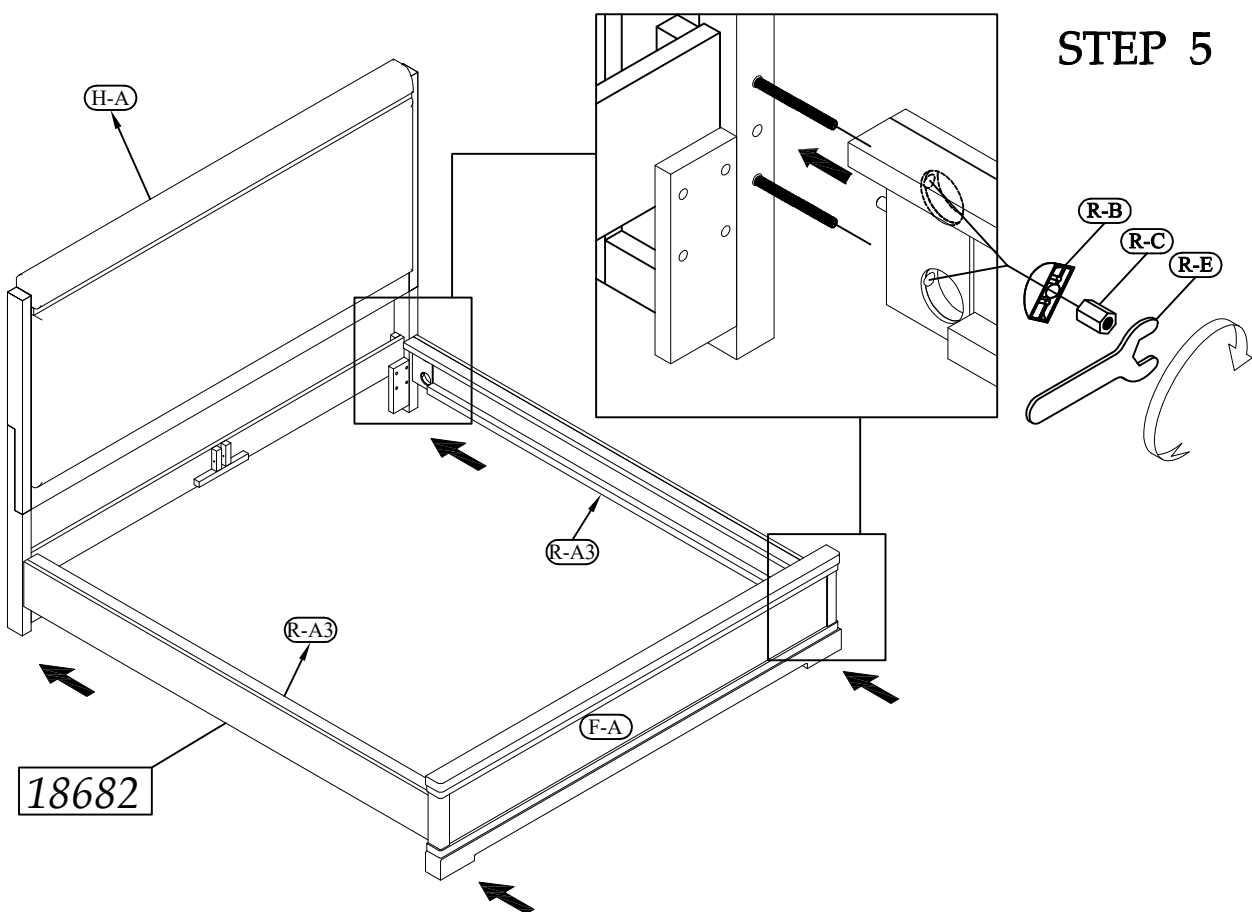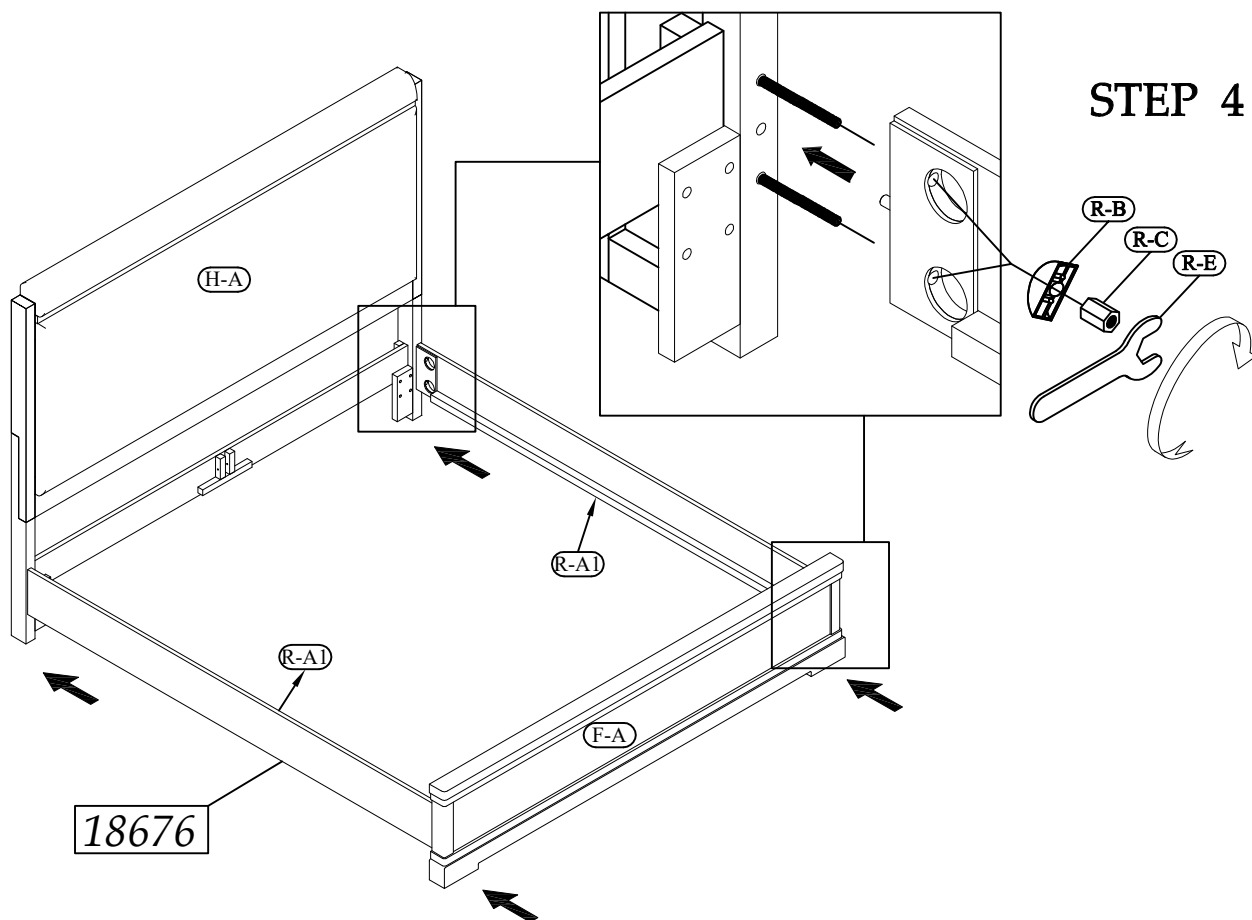

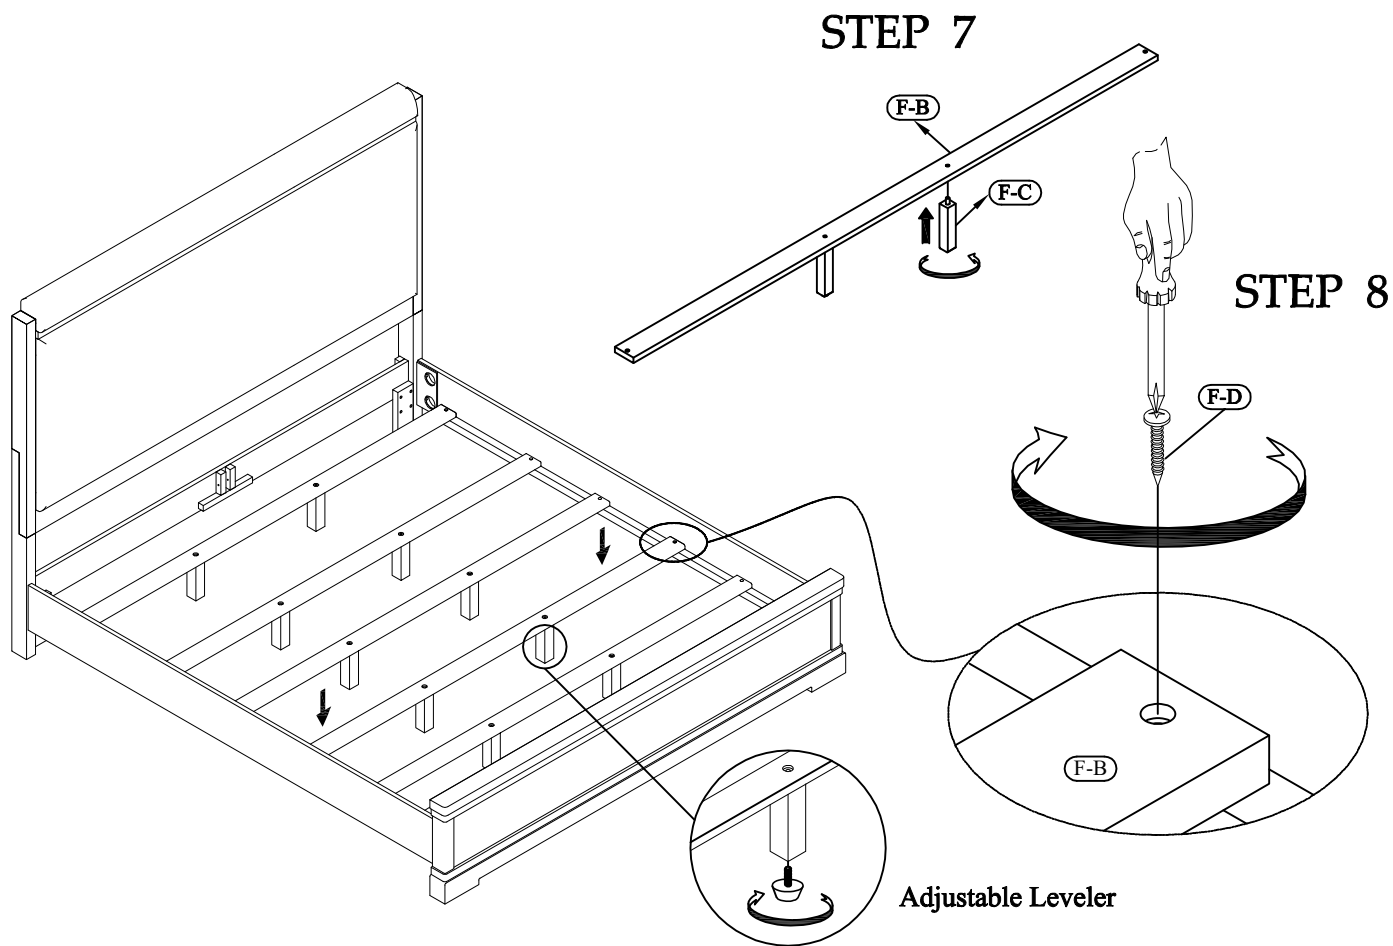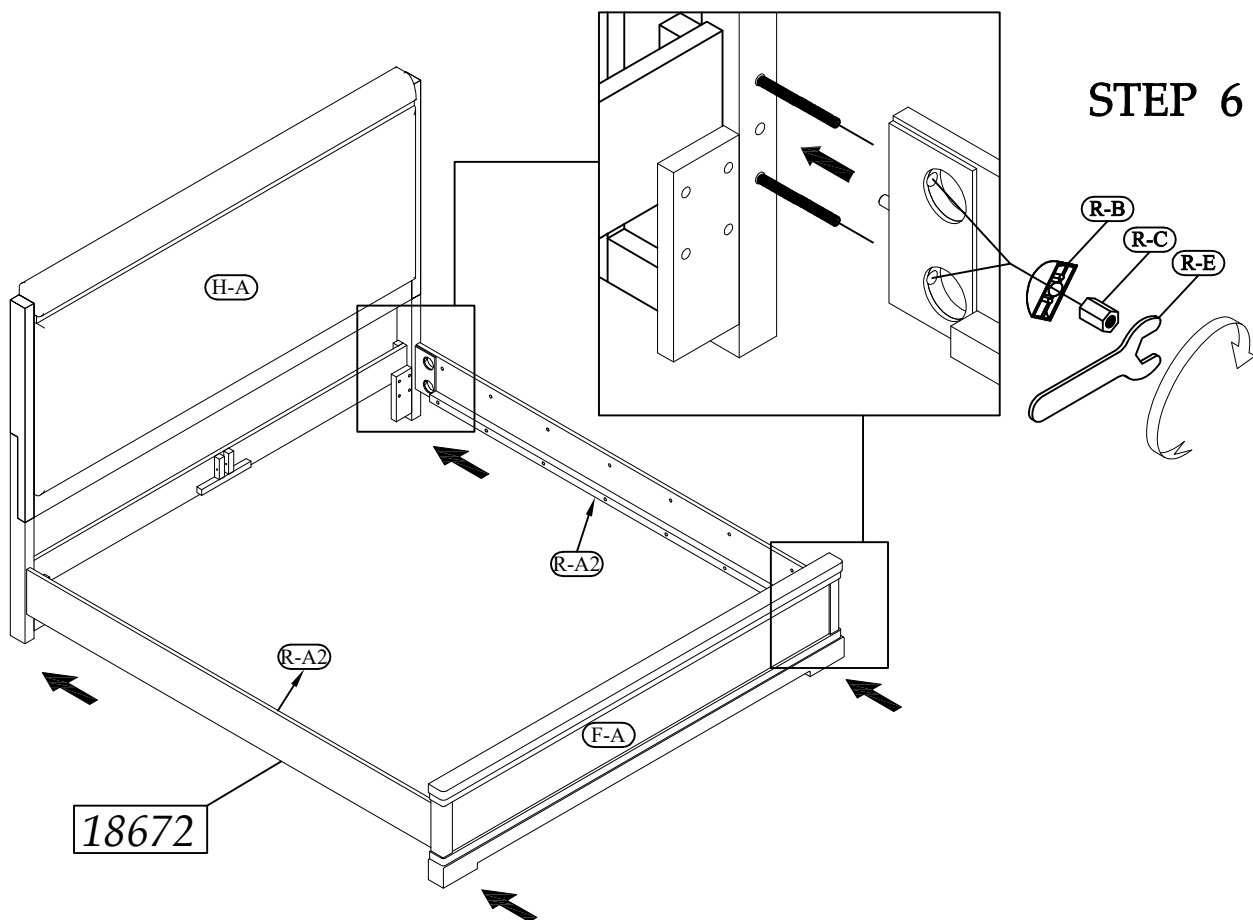





Hardware and Parts packed with the Footboard

6/0-6/6 King Bed


18684 -- 6/0-6/6 Uph Headboard

18683 -- 6/0-6/6 Storage Footboard & Slats


18672 -- 5/0-6/6 Storage Bed Rails

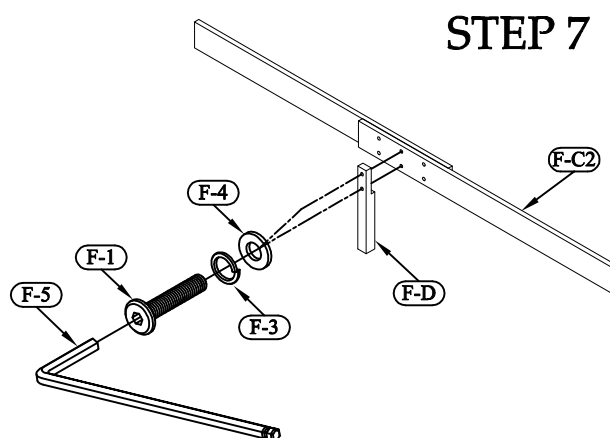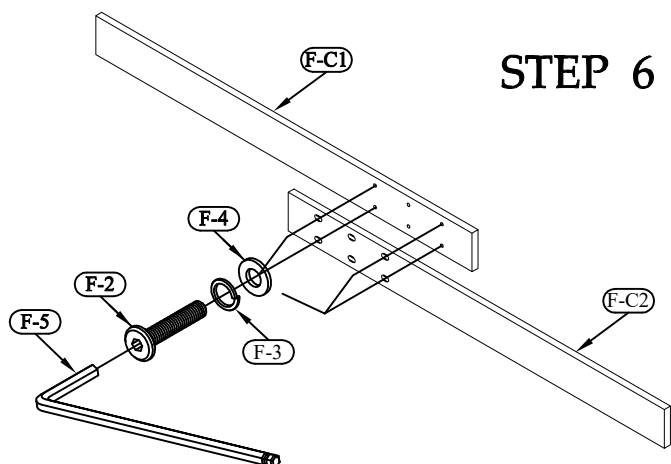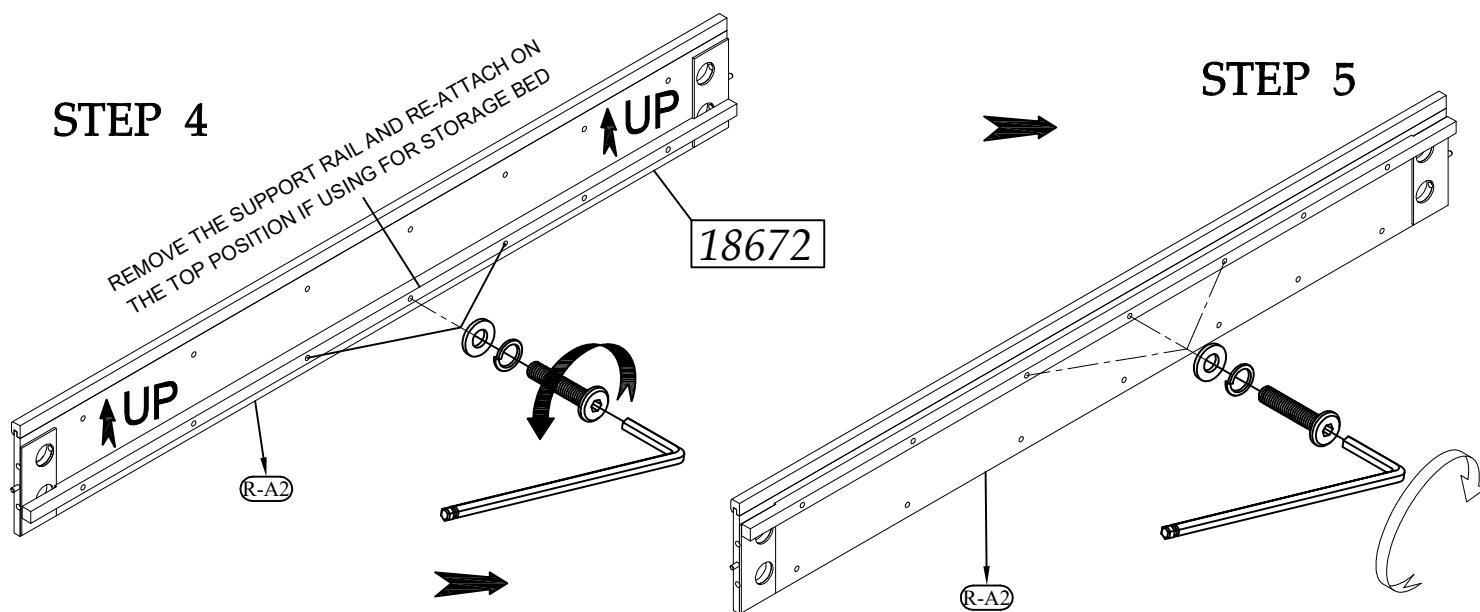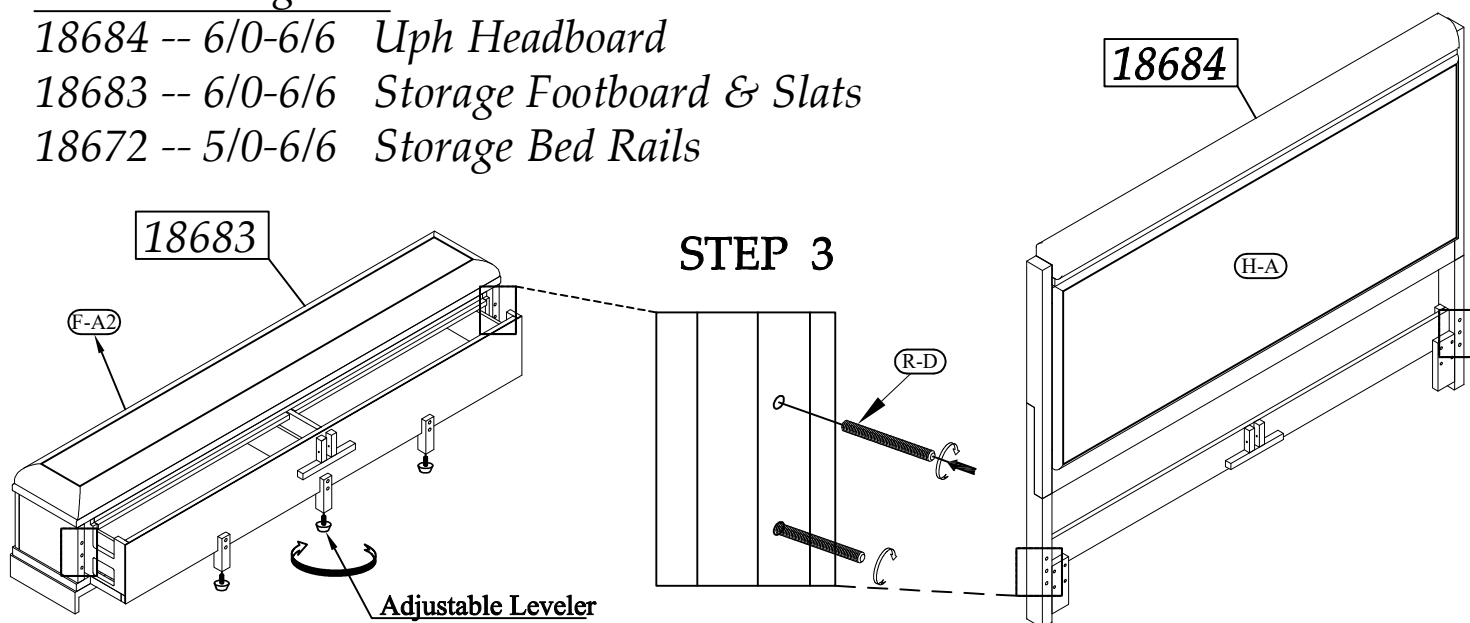


STEP 8

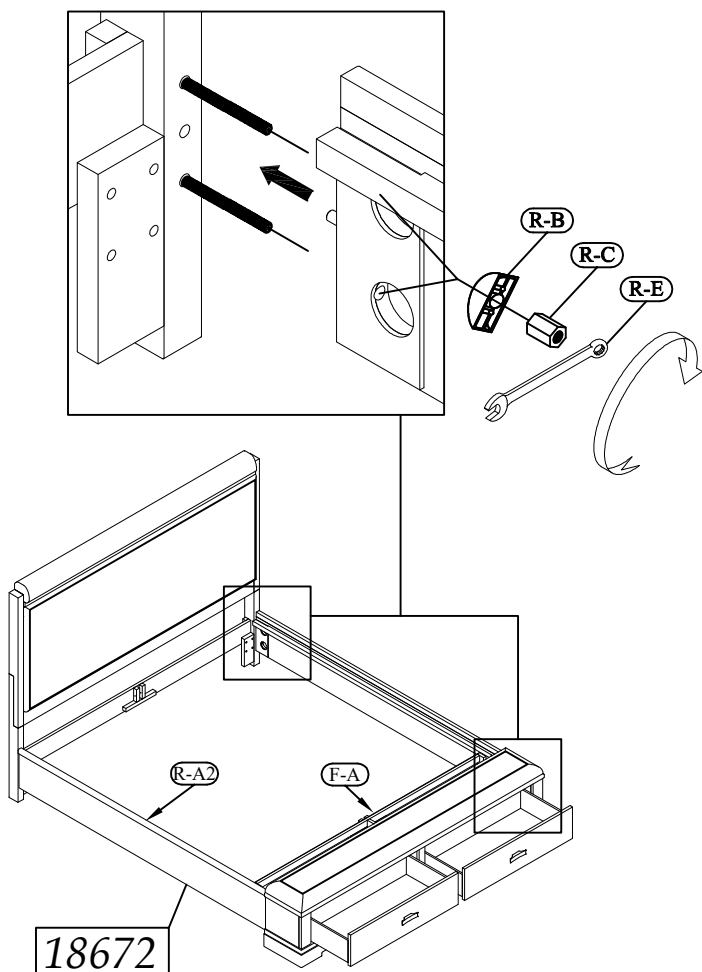

STEP 9

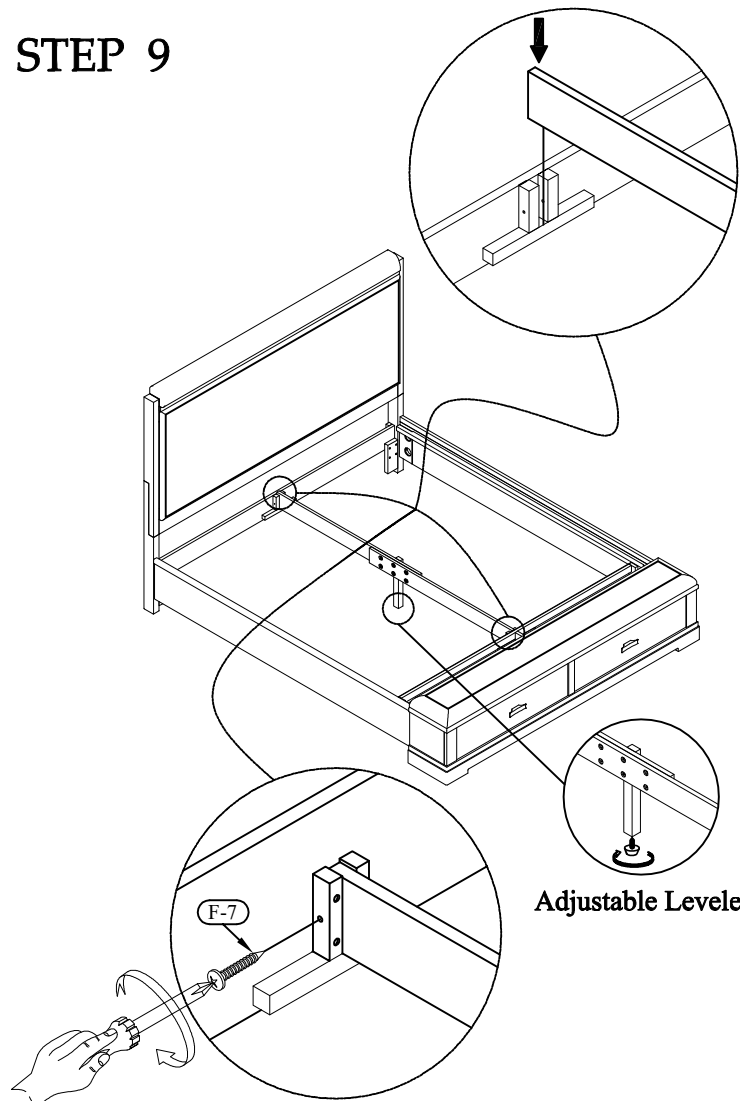

STEP 10

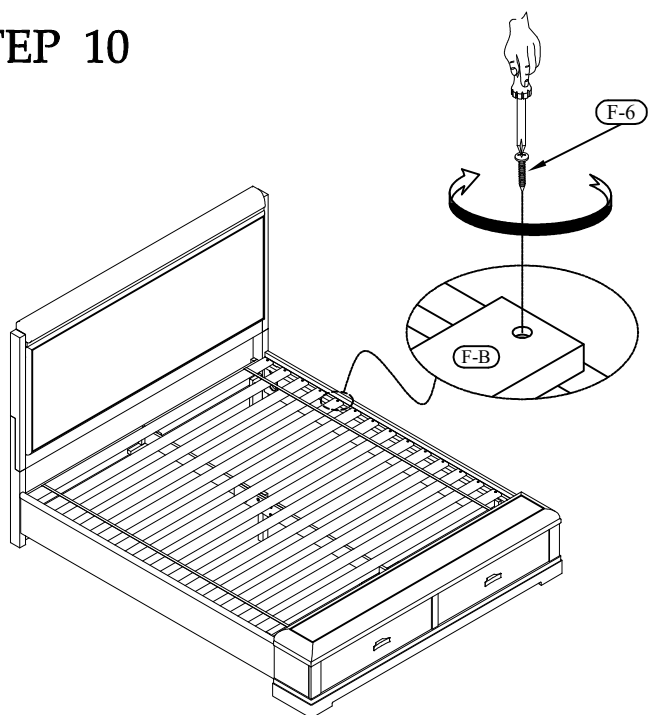

COMPLETE

