

# Assembly Instructions

Model #

# McKenzie Classic Beds

GAC = Glazed Antique Cherry finish

JAV = Java finish


FST = Fieldstone finish

PEC = Pecan finish

SN = Snowbound finish


**2805 McKenzie Queen Classic Bed**

**2809 McKenzie King Classic Bed**

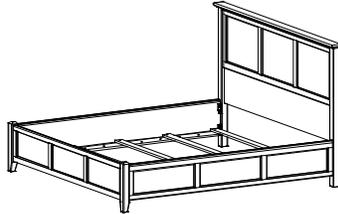

**2819 McKenzie Queen Classic Storage Bed**

**2821 McKenzie King Classic Storage Bed**

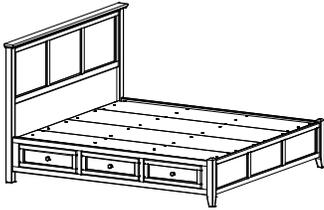

*Thank you for allowing us to help you furnish your home. We are certain you will be delighted with your new furniture for many years to come.*

## IMPORTANT NOTES:

- For normal household use only. *Not* recommended for commercial use.
- Remove items before you move this unit.
- Do not overload the drawers.
- This assembly requires two people.

## ! WARNING

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the state of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection.

For more information go to: [www.p65warnings.ca.gov/wood](http://www.p65warnings.ca.gov/wood)

This product can expose you to chemicals, including formaldehyde, which are known to the State of California to cause cancer.

For more information go to: [www.p65warnings.ca.gov/furniture](http://www.p65warnings.ca.gov/furniture)

## DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.

- Storage Bed Instructions pgs 6-14
- Rail Bed Instructions pgs 15-17

## CUSTOMER SERVICE

If you ever have questions about your furniture, please do not hesitate to contact us. In the unlikely event you need a replacement part; we can make those parts available through an authorized Whittier Wood Furniture dealer. If you cannot order replacement parts through your dealer, please contact our customer service department.

**Hours:** Our friendly customer service staff can be reached:

**Monday-Friday 8:00 a.m. to 5:00 p.m. (Pacific Time).**

You may leave a message 24 hours a day, seven days a week.

**Customer Service: 800-653-3336 • Outside the U.S.: 541-687-0213**

**Fax: 541-687-2060 • Email: [info@whittierwood.com](mailto:info@whittierwood.com)**



P.O. Box 2827  
Eugene, OR 97402 USA

Production Code:

VN


09/23

**2805 McKenzie Queen Classic Bed**  
**2809 McKenzie King Classic Bed**  
**2819 McKenzie Queen Classic Storage Bed**  
**2821 McKenzie King Classic Storage Bed**  
*Parts List*



Please note this Assembly Instruction is for McKenzie Classic Beds (#2805 Queen and #2809 King), and McKenzie Classic Storage Beds (#2819 Queen and #2821 King). The Parts Lists for each component follow.

Please identify the parts and check that quantities received match those on this list. If you need to replace a part, refer to the finish name, following letter and part name.

**2806 McKenzie Queen Classic Headboard Kit (x1)**  
**2810 McKenzie King Classic Headboard Kit (x1)**

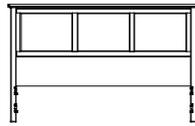Part	Description		Quantity
A	Headboard Assembly		1
W	#8 x 1" Black Screw (inserted)		12
ZE	Small Left Bed Bracket (attached)		2
ZF	Small Right Bed Bracket (attached)		2
ZJ	#8 x 1-1/4" Pan Head Screw (inserted)		4




**2807 McKenzie Queen Classic Footboard Kit (x1)**  
**2811 McKenzie King Classic Footboard Kit (x1)**

Part	Description		Quantity
B	Footboard Assembly		1
U	#8 x 1-5/8" Black Screw (inserted)		4
W	#8 x 1" Black Screw (inserted)		12
ZE	Small Left Bed Bracket (attached)		2
ZF	Small Right Bed Bracket (attached)		2

**2805 McKenzie Queen Classic Bed**  
**2809 McKenzie King Classic Bed**  
**2819 McKenzie Queen Classic Storage Bed**  
**2821 McKenzie King Classic Storage Bed**  
*Parts List*






---

**2808 McKenzie Queen Classic Rail Kit (x1)**  
**2812 McKenzie King Classic Rail Kit (x1)**


Part	Description	Quantity	
		2808GAC 2808JAV 2808FST 2808SN 2808PEC	2812GAC 2812JAV 2812FST 2812SN 2812PEC
C	Side Rail 	2	2
D	Assembled Foot 	4	4
E	Queen Slat (60-5/8") 	5	0
F	King Slat (76-1/2") 	0	5
G	Footboard Support Assembly 	2	2
T	#8 x 1-1/4" Black Screw 	10	10
W	#8 x 1" Black Screw (inserted) 	24	24
ZB	1/4" T-Nut (inserted) 	5	5
ZE	Small Left Bed Bracket (attached) 	4	4
ZF	Small Right Bed Bracket (attached) 	4	4
ZK	#10 x 2" Pan Head Screw 	26 (22 inserted)	26 (22 inserted)
ZL	Adjustable Glide with Hex Nut (installed) 	4	4
ZM	5/16" x 3/4" Insert Nut (inserted) 	4	4
ZN	1/4" x 45mm Hanger Bolt (inserted) 	4	4

**2805 McKenzie Queen Classic Bed**  
**2809 McKenzie King Classic Bed**  
**2819 McKenzie Queen Classic Storage Bed**  
**2821 McKenzie King Classic Storage Bed**  
*Parts List*

**2820 McKenzie Queen Pedestal Kit (x2)**  
**2822 McKenzie King Pedestal Kit (x2)**

Part	Description	Quantity	
		2820GAC 2820JAV 2820FST 2820SN 2820PEC	2822GAC 2822JAV 2822FST 2822SN 2822PEC
H	Pedestal 	1	1
I	Drawer Box (assembled) 	3	3
J	Drawer Face (attached) 	3	3
K	Queen Trestle With T-Nuts (24-3/8") 	2	0
L	King Trestle With T-Nuts (40-1/2") 	0	2
M	Notched Deckboard (attached) 	1	1
N	Left/Right Center Deckboard 	1	1
O	Assembled Foot 	3	3
P	20" Drawer Slides (installed) 	3 sets	3 sets
Q	#6 x 3/4" Philtruss Screw (inserted) 	18	18
R	#6 x 1/2" Philtruss Screw 	22 (18 inserted)	22 (18 inserted)
S	#8 x 7/8" Black Lo-Profile Screw (inserted) 	18	18
T	#8 x 1-1/4" Black Screw 	16 (8 inserted)	16 (8 inserted)
U	#8 x 1-5/8" Black Screw (inserted) 	16	16
V	#8 x 2" Black Screw (inserted) 	12	12
W	#8 x 1" Black Screw (inserted) 	32	32
X	#8 x 1-1/2" Machine Screw Tuscan (installed) 	3	3
Y	#10 x 3/4" Pan Head Screw (inserted) 	12	12
ZA	18mm Flat Washer 	10	10

**2805 McKenzie Queen Classic Bed**  
**2809 McKenzie King Classic Bed**  
**2819 McKenzie Queen Classic Storage Bed**  
**2821 McKenzie King Classic Storage Bed**  
*Parts List*

Part	Description	Quantity	
		2820GAC 2820JAV 2820FST 2820SN 2820PEC	2822GAC 2822JAV 2822FST 2822SN 2822PEC
ZB	1/4" T-Nut (inserted) 	10	10
ZC	1/4" x 1-1/2" Hex Bolt 	10	10
ZD	Knob (attached) 	3	3
ZE	Small Left Bed Bracket (attached) 	2	2
ZF	Small Right Bed Bracket (attached) 	2	2
ZG	Foot Bracket (attached) 	3	3
ZH	Adjustable Glide (installed) 	3	3
ZI	90° Bracket 	1	1

**2805 McKenzie Queen Classic Bed**  
**2809 McKenzie King Classic Bed**  
**2819 McKenzie Queen Classic Storage Bed**  
**2821 McKenzie King Classic Storage Bed**  
*Assembly Instructions*

This assembly requires two people.

**Tool Included:** 5mm Z Hex wrench.



**Tools Required:** Phillips screwdriver, 1/2" open end or box end wrench.

**Notes:**


**Steps 1 through 12 are for the McKenzie Queen Classic Storage Bed (#2819) and McKenzie King Classic Storage Bed (#2821).**

**Steps 13 through 19 are for the McKenzie Queen Classic Bed (#2805) and McKenzie King Classic Bed (#2809).**

1. Place both Pedestals (H) approximately 63" apart for #2819 Queen Bed, or 79" apart for #2821 King Bed as shown in Figures 2 and 2a.

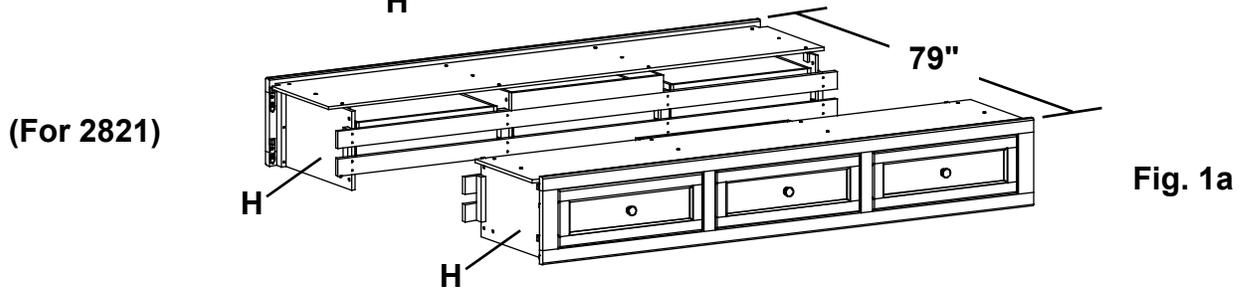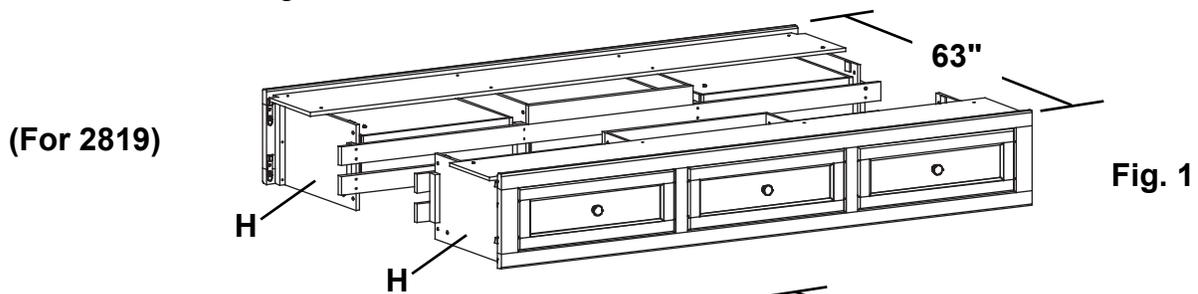

2. To attach the Footboard (B) to the Pedestal (H), align the Brackets and slide the Pedestal down on to the Footboard (B). See Figures 2 and 2a.

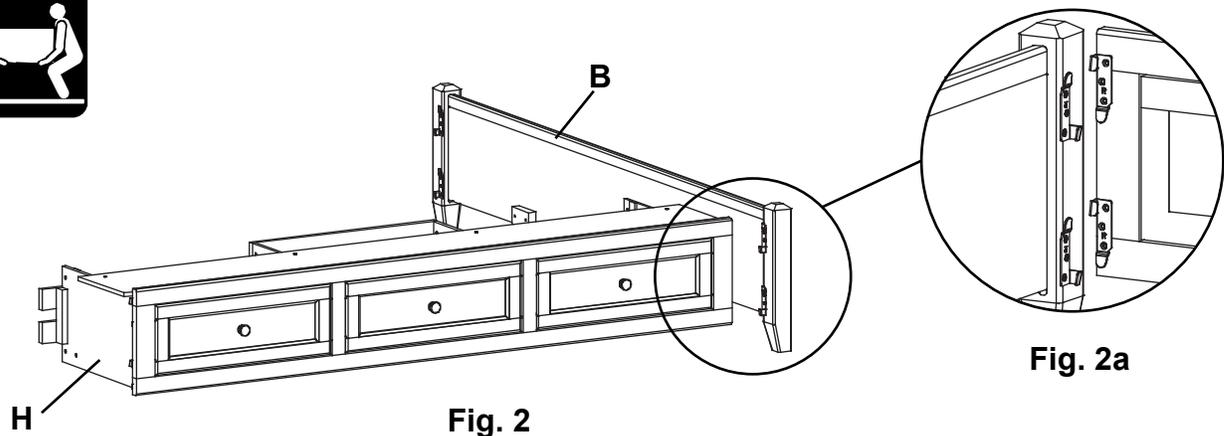

2805 McKenzie Queen Classic Bed  
2809 McKenzie King Classic Bed  
2819 McKenzie Queen Classic Storage Bed  
2821 McKenzie King Classic Storage Bed  
*Assembly Instructions*  
This assembly requires two people.

---

3. Repeat step three for the left side. See Figures 3 and 3a.

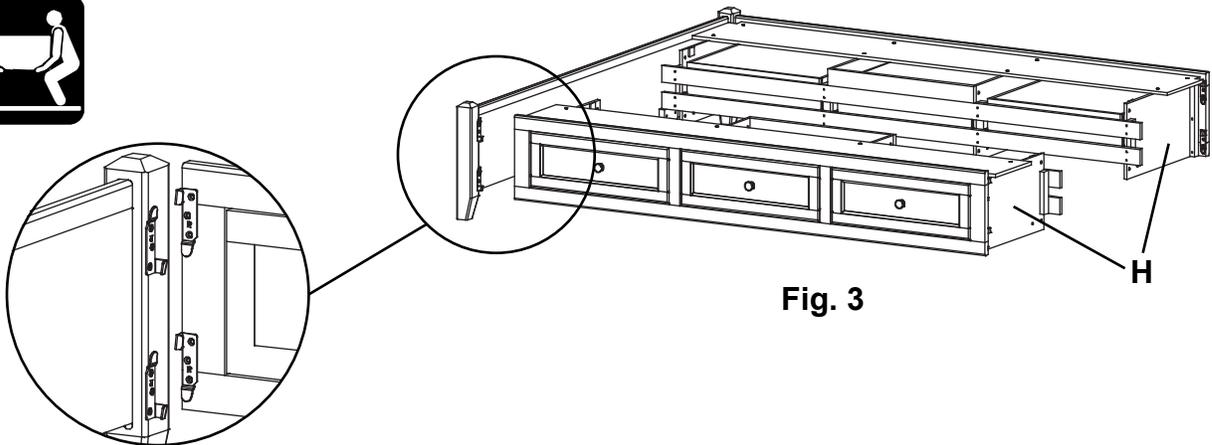


Fig. 3a

Fig. 3

4. Align the Brackets on both sides and slide the Pedestal/Footboard assembly down on to the Headboard (A). See Figure 4.

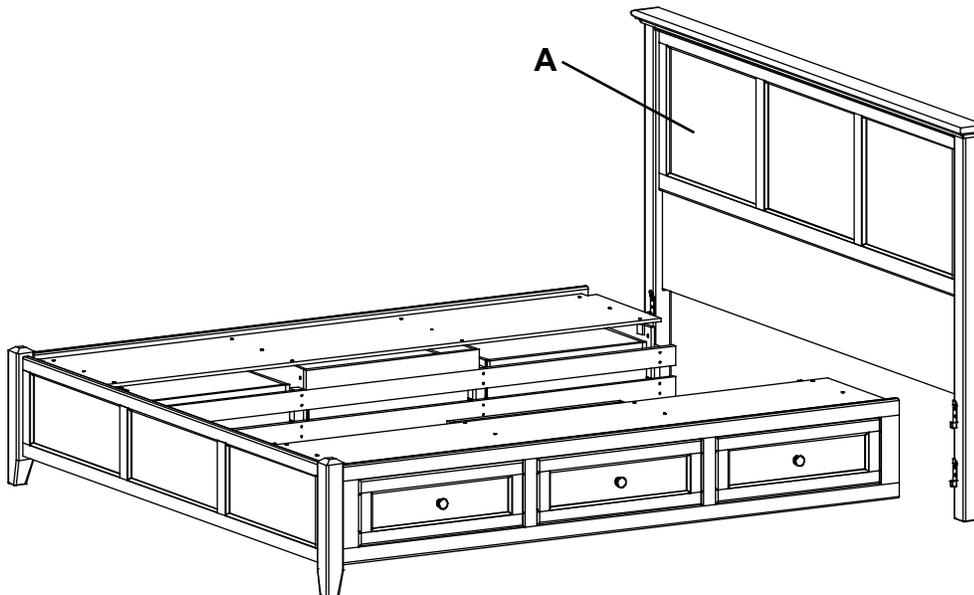




Fig. 4

2805 McKenzie Queen Classic Bed  
2809 McKenzie King Classic Bed  
2819 McKenzie Queen Classic Storage Bed  
2821 McKenzie King Classic Storage Bed  
*Assembly Instructions*

This assembly requires two people.

5. Open all six drawers and face the headboard. Place and align over the predrilled holes an assembled foot (O) on the backside of the first and second braces nearest the headboard. Attach by inserting 1/4" x 1-1/2" hex bolts (ZC) and washers (ZA). See figures 5, 5a and 5b.


**IMPORTANT: Make sure glides touch the floor and carry weight.**

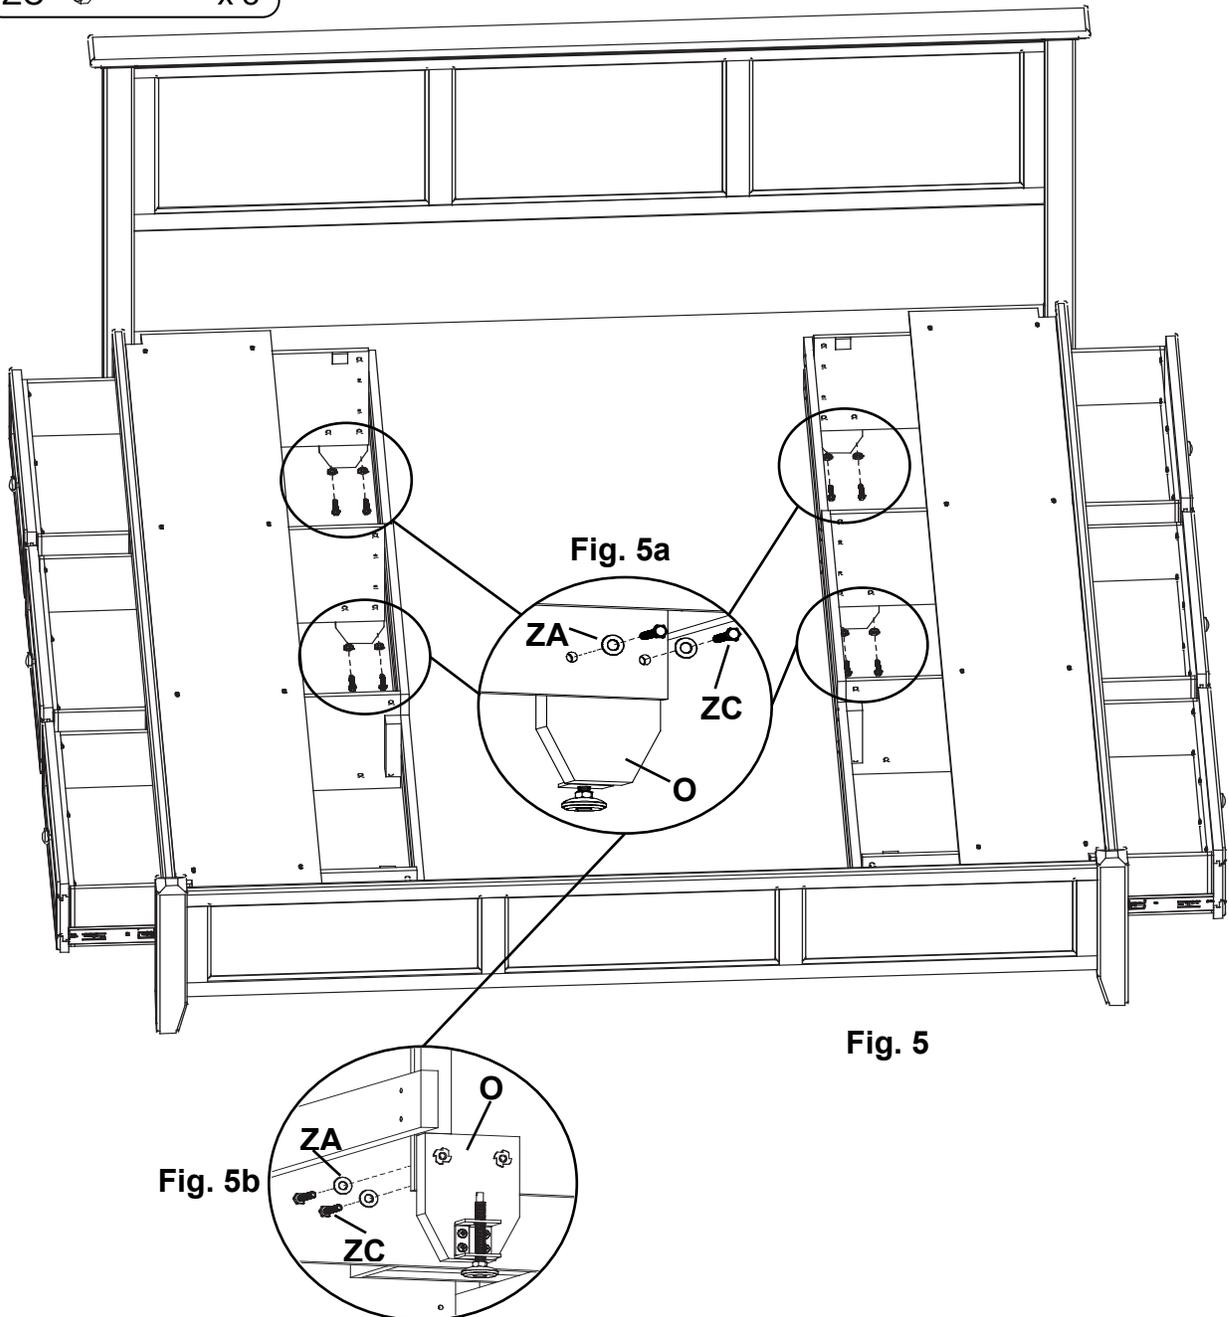

**2805 McKenzie Queen Classic Bed**  
**2809 McKenzie King Classic Bed**  
**2819 McKenzie Queen Classic Storage Bed**  
**2821 McKenzie King Classic Storage Bed**  
*Assembly Instructions*

This assembly requires two people.

6. Face the footboard. Do not attach assembled feet to the braces nearest the footboard. There are blocks on the backside of the footboard to support the drawer pedestals. Place and align over the predrilled holes in the brace an assembled foot (O) on the backside of the third brace. Attach by inserting 1/4" x 1-1/2" hex bolts (ZC) and washers (ZA). See figures 6, 6a and 6b.

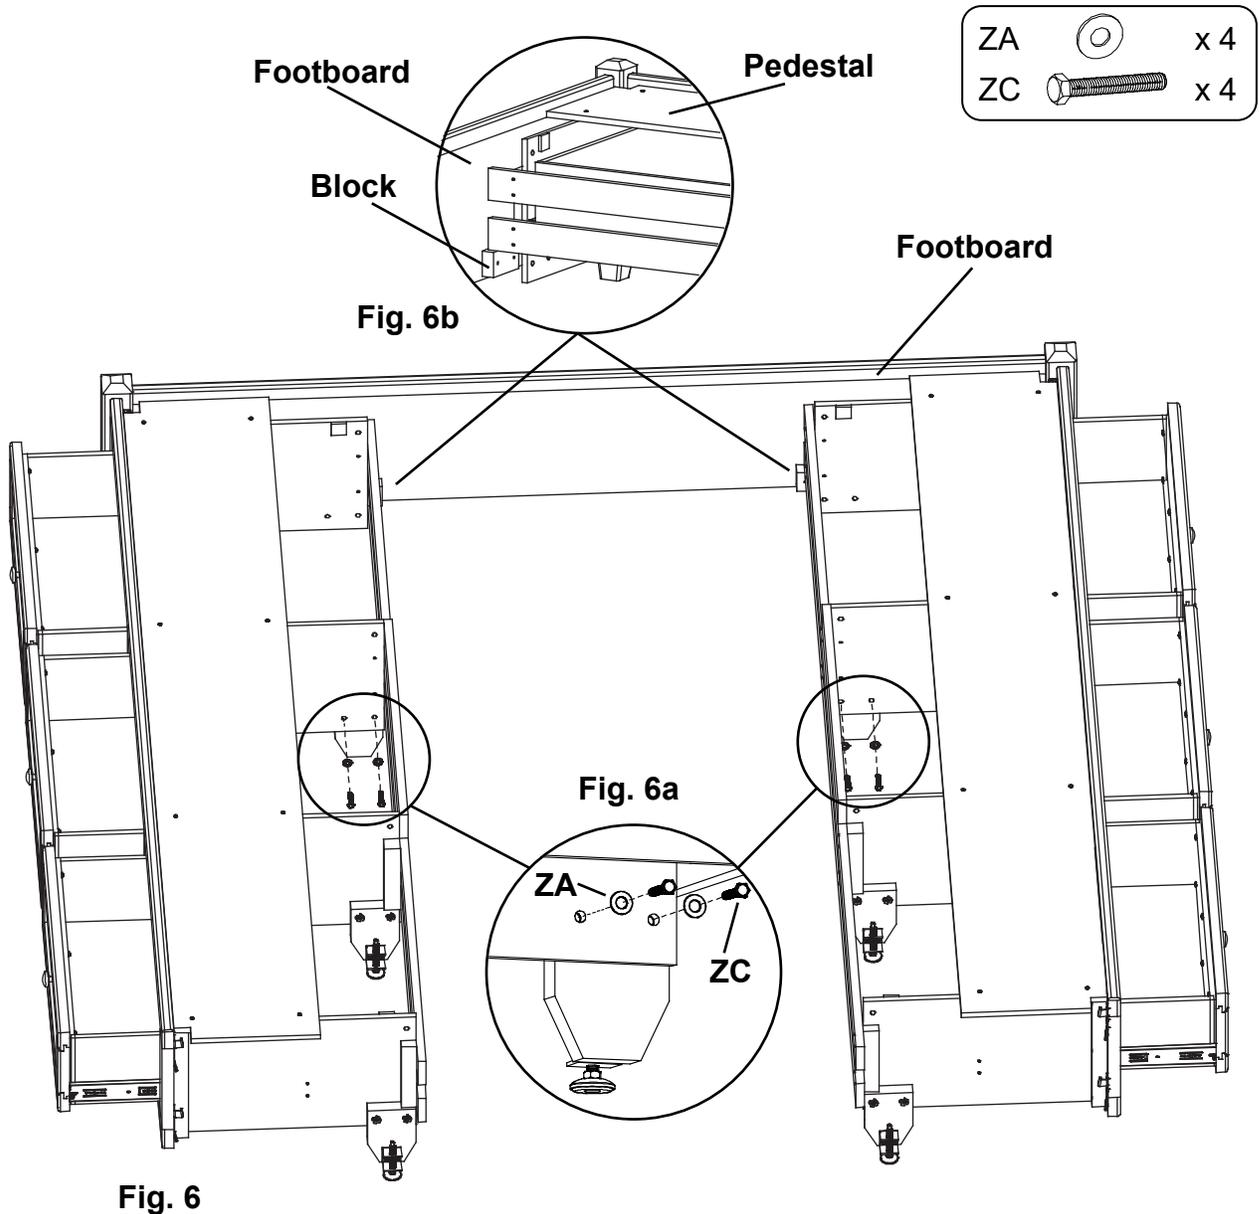


**Headboard removed for illustration purposes.**

**2805 McKenzie Queen Classic Bed  
 2809 McKenzie King Classic Bed  
 2819 McKenzie Queen Classic Storage Bed  
 2821 McKenzie King Classic Storage Bed  
 Assembly Instructions**

This assembly requires two people.

7. Open the drawers. Face the Footboard and stand in between the first and second braces. Place a Trestle with T-Nuts (K or L) on the outside surfaces of the first upper left and right braces so that the T-Nuts (ZB) sit near the top. See Figure 7a. Line up the upper edges of the trestle and braces so they are nearly flush. Insert two 1/4" x 1-1/2" Hex Bolts (ZC) and Washers (ZA) and tighten. Repeat for the second upper brace. See Figures 7 and 7a.

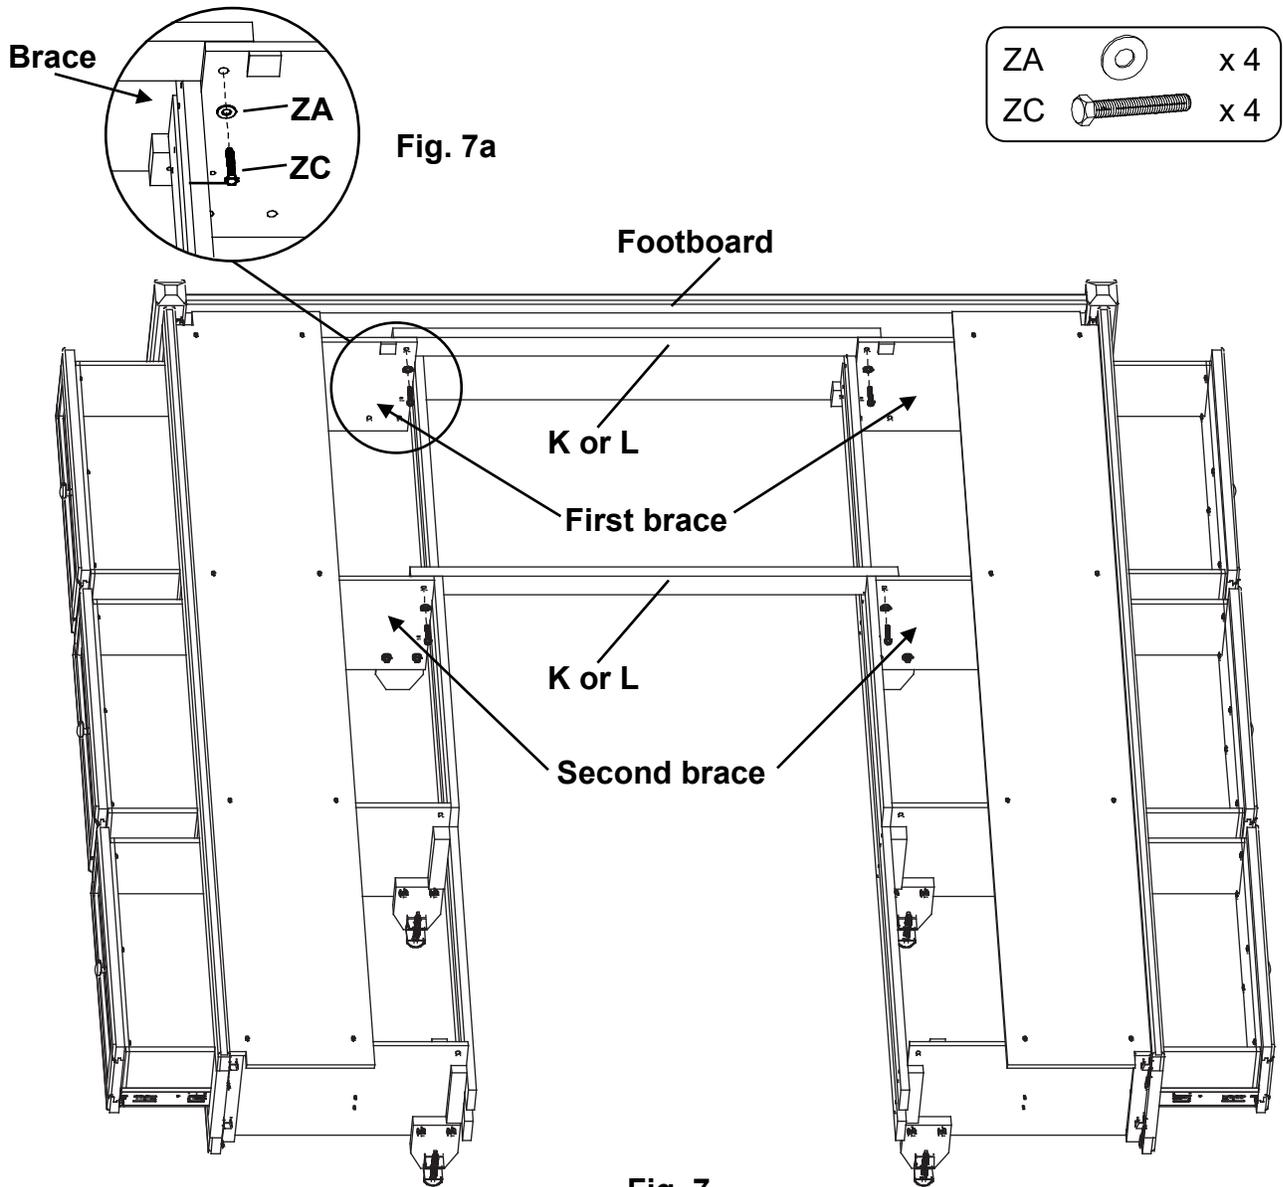

**2805 McKenzie Queen Classic Bed**  
**2809 McKenzie King Classic Bed**  
**2819 McKenzie Queen Classic Storage Bed**  
**2821 McKenzie King Classic Storage Bed**  
*Assembly Instructions*

This assembly requires two people.

8. Face the Headboard and stand in between the third and fourth braces. Place a Trestle with T-Nuts (K or L) on the outside surfaces of the third **upper** left and right braces so the T-nuts sit near the top. See Figures 8 and 8a. Line up the upper edges of the trestle and braces so they are nearly flush. Insert two 1/4" x 1-1/2" Hex Bolts (ZC) and Washers (ZA) and tighten. Repeat for the fourth braces.

ZA		x 4
ZC		x 4

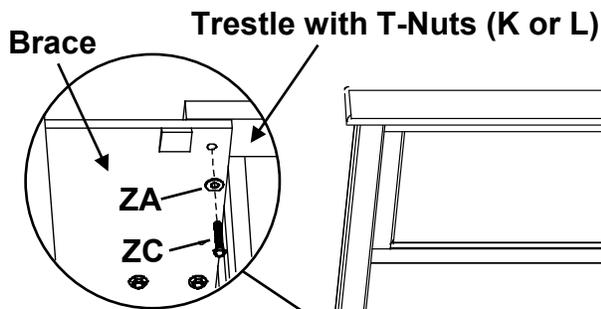


Fig. 8a

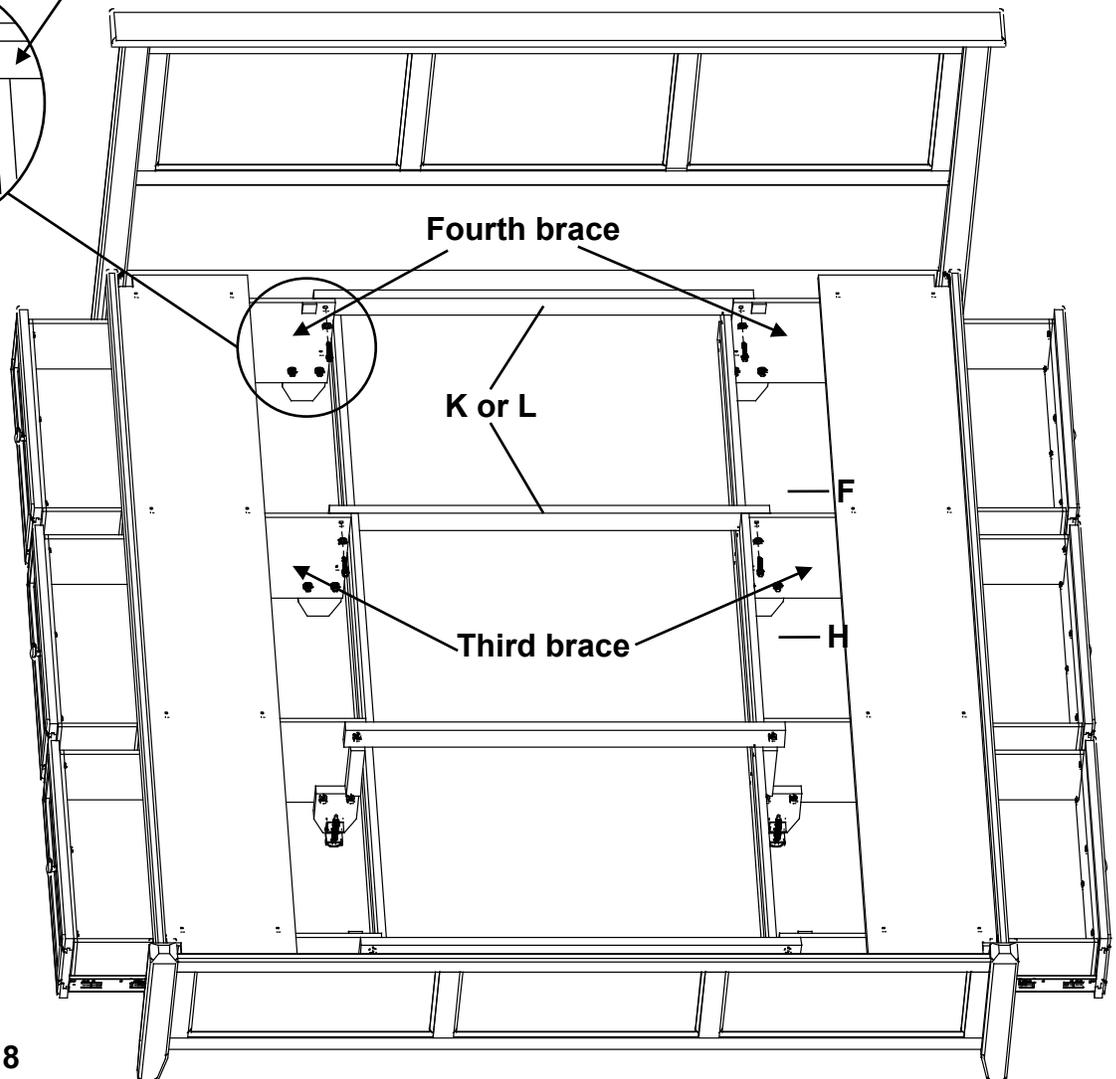


Fig. 8

2805 McKenzie Queen Classic Bed  
2809 McKenzie King Classic Bed  
2819 McKenzie Queen Classic Storage Bed  
2821 McKenzie King Classic Storage Bed  
*Assembly Instructions*  
This assembly requires two people.

9. Facing the Footboard, attach the Pedestal Assembly to the Footboard with a 90° Bracket (Z1) and four #6 x 1/2" Philtruss Screws (R). Repeat for the other side. See Figures 9 and 9a.

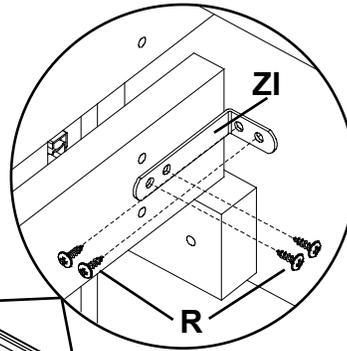
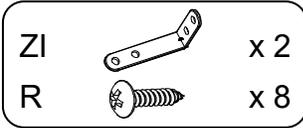


Fig. 9a

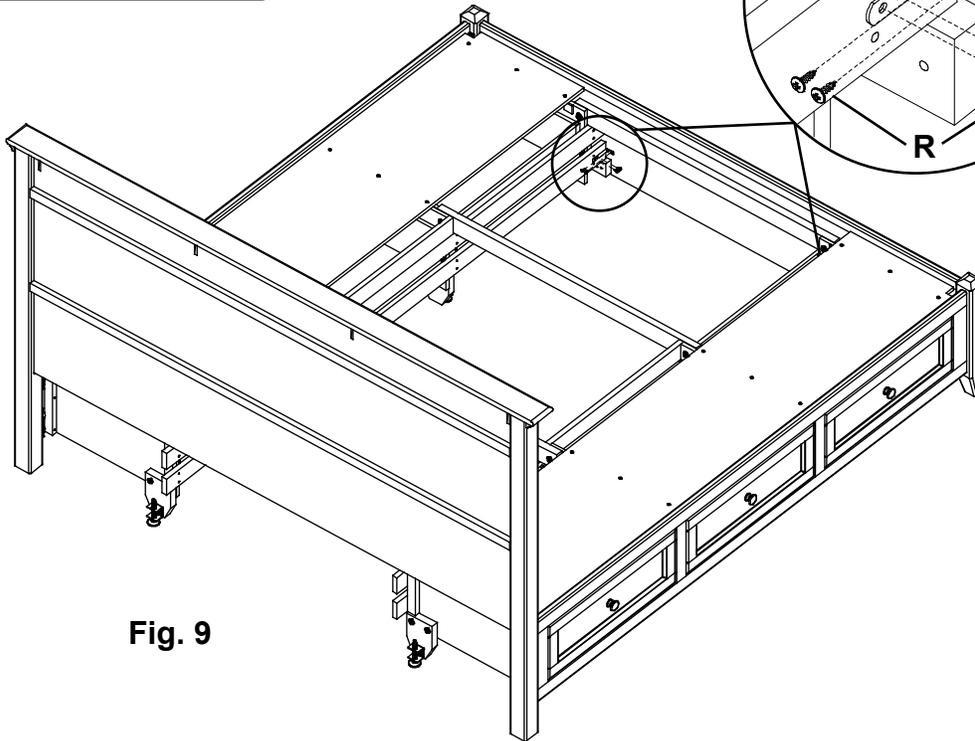
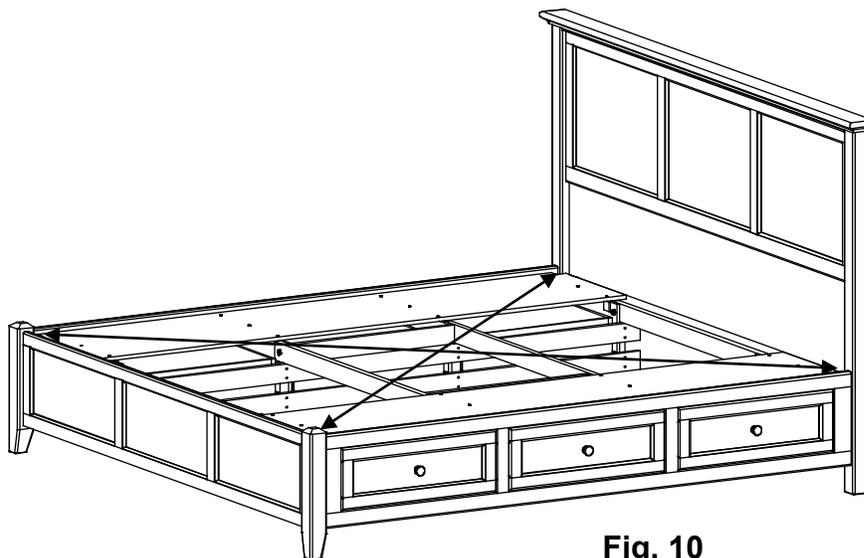


Fig. 9

**2805 McKenzie Queen Classic Bed**  
**2809 McKenzie King Classic Bed**  
**2819 McKenzie Queen Classic Storage Bed**  
**2821 McKenzie King Classic Storage Bed**  
*Assembly Instructions*  
This assembly requires two people.

---

10. To make sure the bed is square, measure the distance between opposing corners. If one of the measurements is larger, tap on a footboard leg until the measurement is equal. See Figure 10.



**Fig. 10**


*Continued on Page 14*

2805 McKenzie Queen Classic Bed  
2809 McKenzie King Classic Bed  
2819 McKenzie Queen Classic Storage Bed  
2821 McKenzie King Classic Storage Bed  
*Assembly Instructions*


This assembly requires two people.

11. Place the Left/Right Center Deckboards (N) as shown in Figures 11, 11a, 11b and 11c and secure with eight #8x1-1/4" Black Screws (T). There should be a small gap between each deckboard.

**Do not use the outer column of screw holes to attach the deck boards**

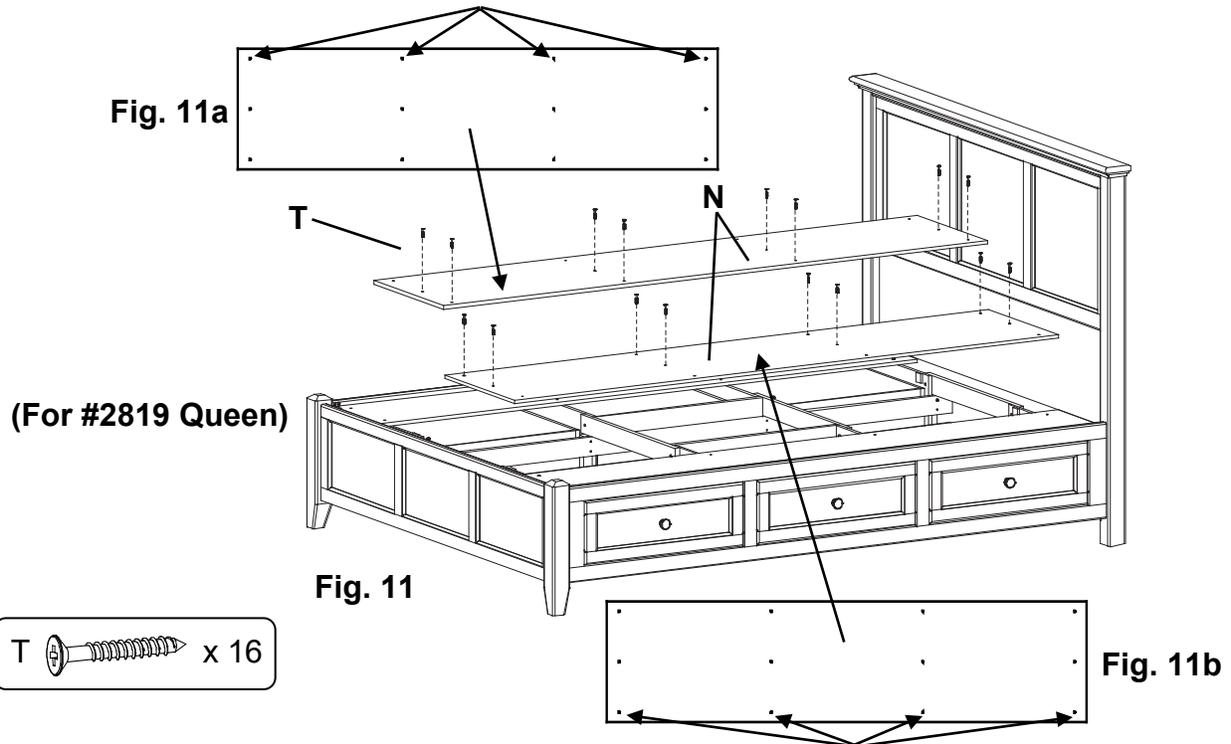

**Do not use the outer column of screw holes to attach the deck boards**

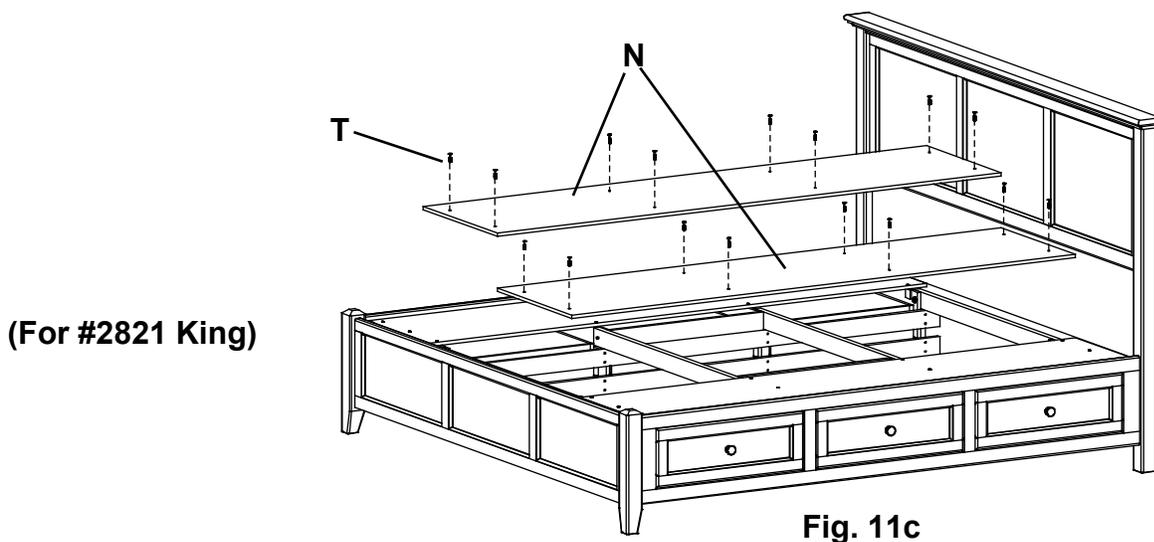


**This concludes the assembly process for McKenzie Premier Storage Bed, if you have purchased a McKenzie Premier Bed please refer to the instructions beginning on page 15.**


2805 McKenzie Queen Classic Bed  
2809 McKenzie King Classic Bed  
2819 McKenzie Queen Classic Storage Bed  
2821 McKenzie King Classic Storage Bed  
*Assembly Instructions*

This assembly requires two people.

12. Position the Footboard Supports (G) over the blocks that are mounted onto the back side of the Footboard (B) and attach with four #10 x 2" Pan Head Screws (ZK) through the pre-drilled holes in the slat supports and into the location punches on the blocks. See Figure 12.

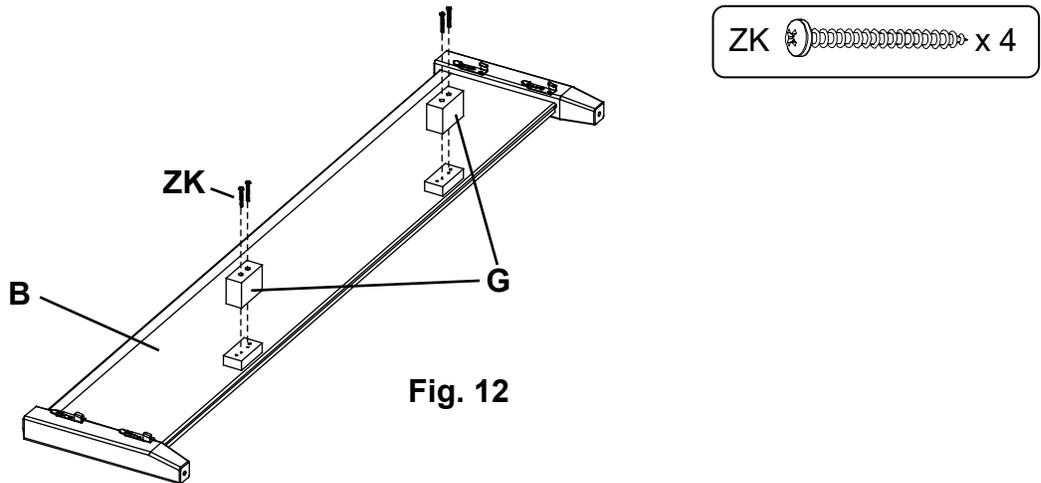


13. To attach the Footboard (B) to the Side Rail (C), align the Brackets and slide the Side Rail (C) down on to the Footboard (B). See Figures 13 and 13a.

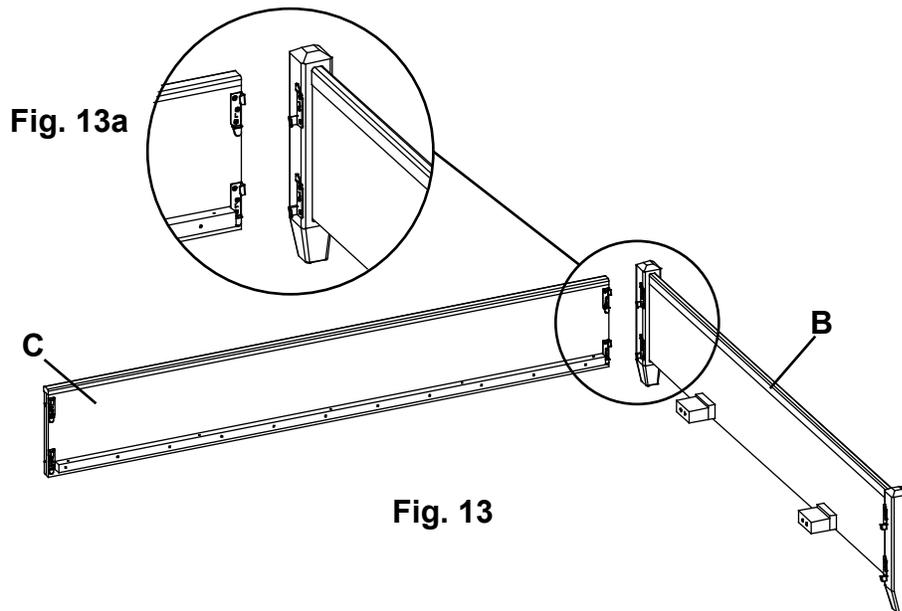


2805 McKenzie Queen Classic Bed  
2809 McKenzie King Classic Bed  
2819 McKenzie Queen Classic Storage Bed  
2821 McKenzie King Classic Storage Bed  
*Assembly Instructions*  
This assembly requires two people.

---

14. Repeat step two for the other side. See Figures 14 and 14a.

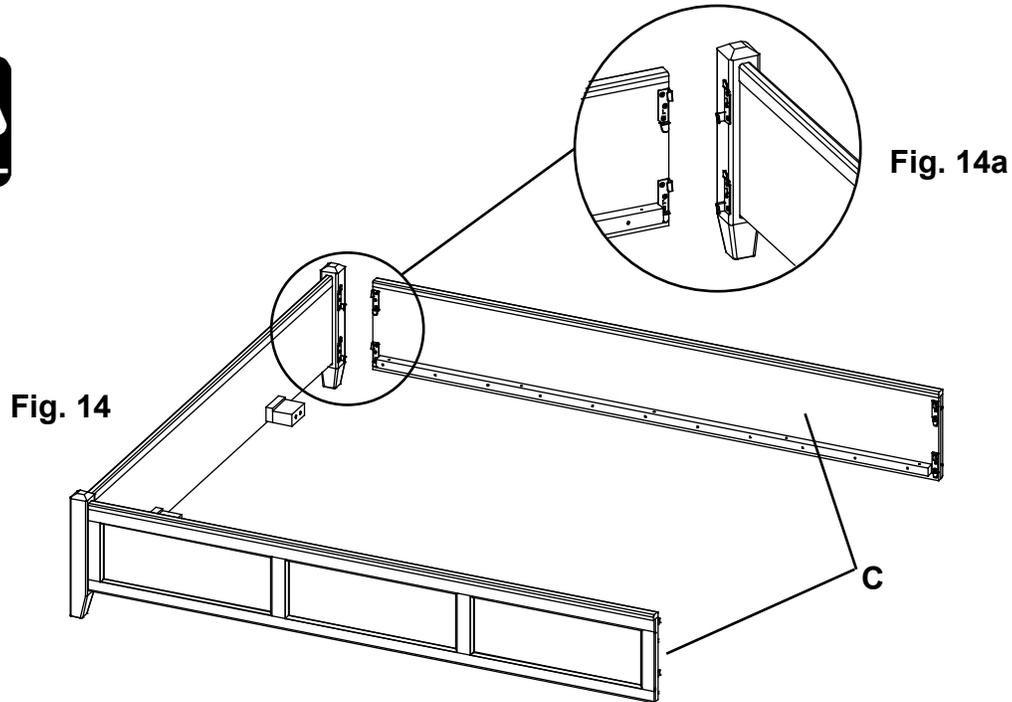


15. Align the Brackets on both sides and slide the Side Rail/Footboard assembly down on to the Headboard (A). See Figure 15.

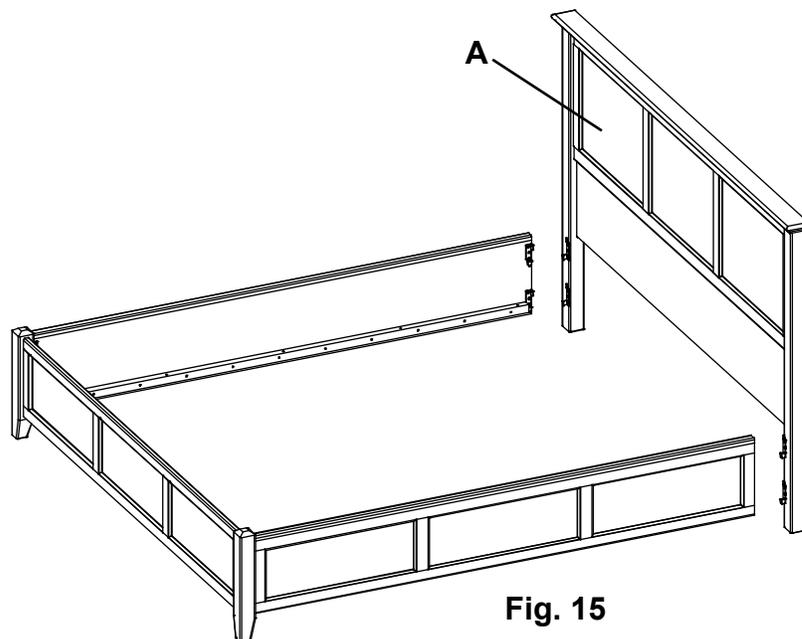


**2805 McKenzie Queen Classic Bed**  
**2809 McKenzie King Classic Bed**  
**2819 McKenzie Queen Classic Storage Bed**  
**2821 McKenzie King Classic Storage Bed**  
*Assembly Instructions*  
This assembly requires two people.

---

16. Attach an Assembled Foot (D) to four of the five Slats (E or F) as shown in Figure 16.

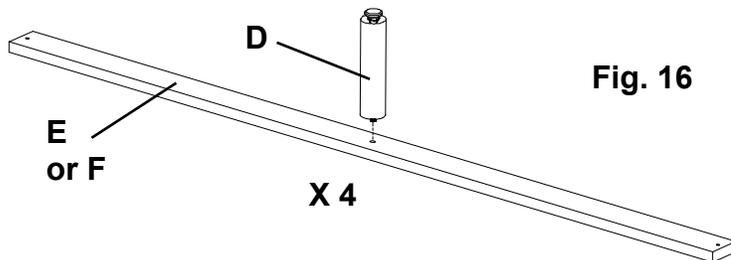

17. Move the bed assembly to its final position. Position the Slats (E or F) on the bottom edges of the rails and place the slat without the Assembled Foot nearest to the Footboard. Attach with #8 x 1-1/4" Black Screws (T). See Figure 17.

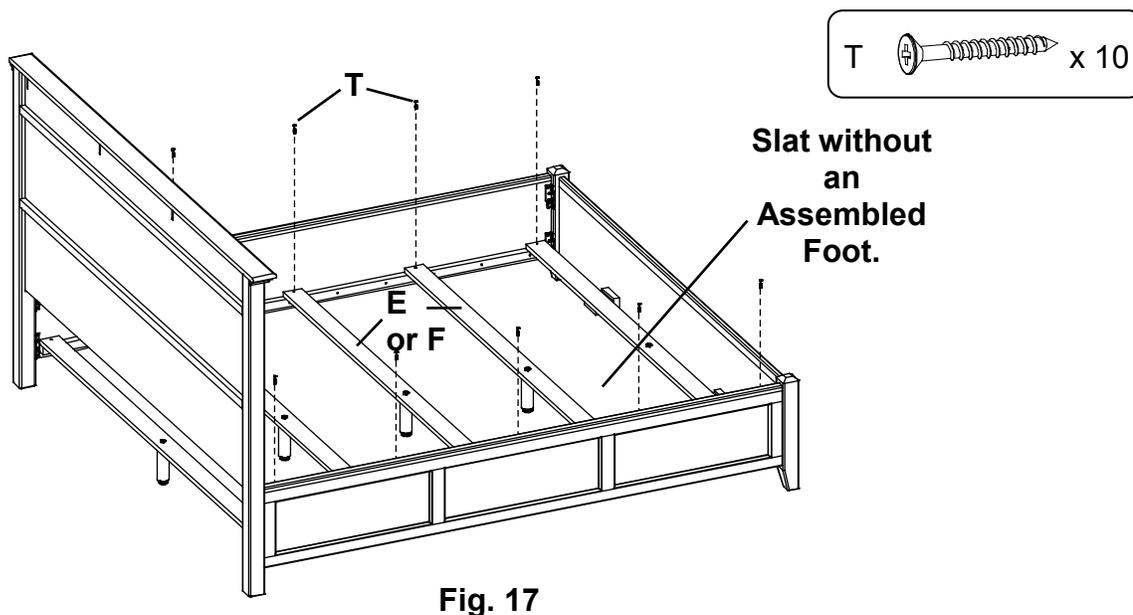

18. Adjust the Adjustable Glides with Hex Nut (ZL) on the Assembled Feet (D) so the Glides (ZL) touch the floor, making sure the Assembled Feet bear weight.

