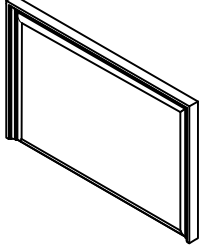








Warning:

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.



Hardware and Parts packed with the Headboard

70180 Uph Panel Headboard  (H-A) 1 pc.	Headboard Post Right 33" x 2-3/8" x 3-1/8"  (H-B) 1 pc.	Headboard Post Left 33" x 2-3/8" x 3-1/8"  (H-C) 1 pc.	Stretcher 74" x 3-1/6" x 1-3/4"  (H-D) 1 pc.
Ø5/16" x 2" Allen Head Bolt  (H-E) 14 pcs.	Ø5/16" x Ø13 Spring Washer  (H-F) 14 pcs.	Ø5/16" x Ø19 Flat Washer  (H-G) 14 pcs.	M4 x 2-1/2 Allen Key  (H-H) 1 pc.

Hardware and Parts packed with the Footboard

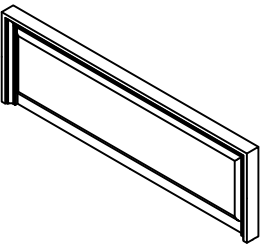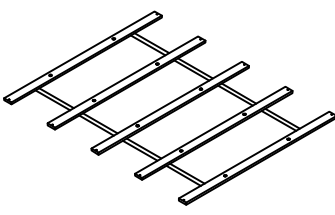70181 Uph Panel Footboard  (F-A) 1 pc.	Slat - 77" Long  (F-B) 1 Set	#4 x 30mm Wood Screw  (F-C) 10 pcs.	7-1/16" x 1-1/8" x 1-1/8" Support Leg  (F-D) 10 pcs.
---	---	---	---

Hardware and Parts packed with the Bed Rails

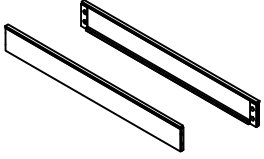
70172 - Siderails  (R-A) 2 pcs.	Ø5/16" x 3-1/2" All-Thread Bolt  (R-B) 8 pcs.	Arc Washer 37*17mm  (R-C) 8 pcs.	Ø5/16" x Ø13mm Spring Washer  (R-D) 8 pcs.	Ø5/16" x Ø16mm Flat Washer  (R-E) 8 pcs.	Ø5/16"-18mm Hex Nut  (R-F) 8 pcs.	12 mm Open Wrench  (R-G) 1 pc.
---	--	---	---	---	--	---

6/0-6/6 Uph King Bed


70180 - 6/0-6/6 Uph Panel Headboard

70181 - 6/0 Uph Panel Footboard


70172 - 5/0-6/6 Siderails

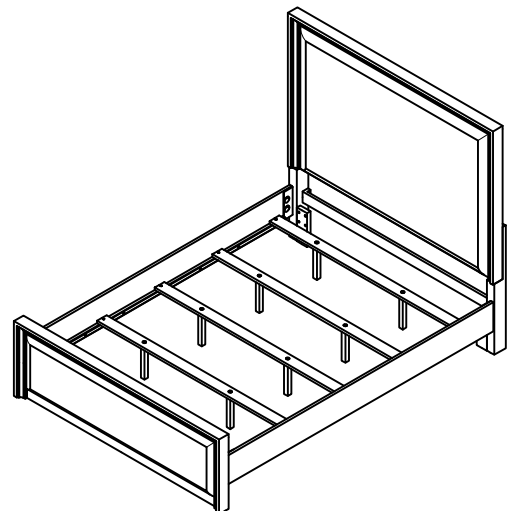


STEP 1

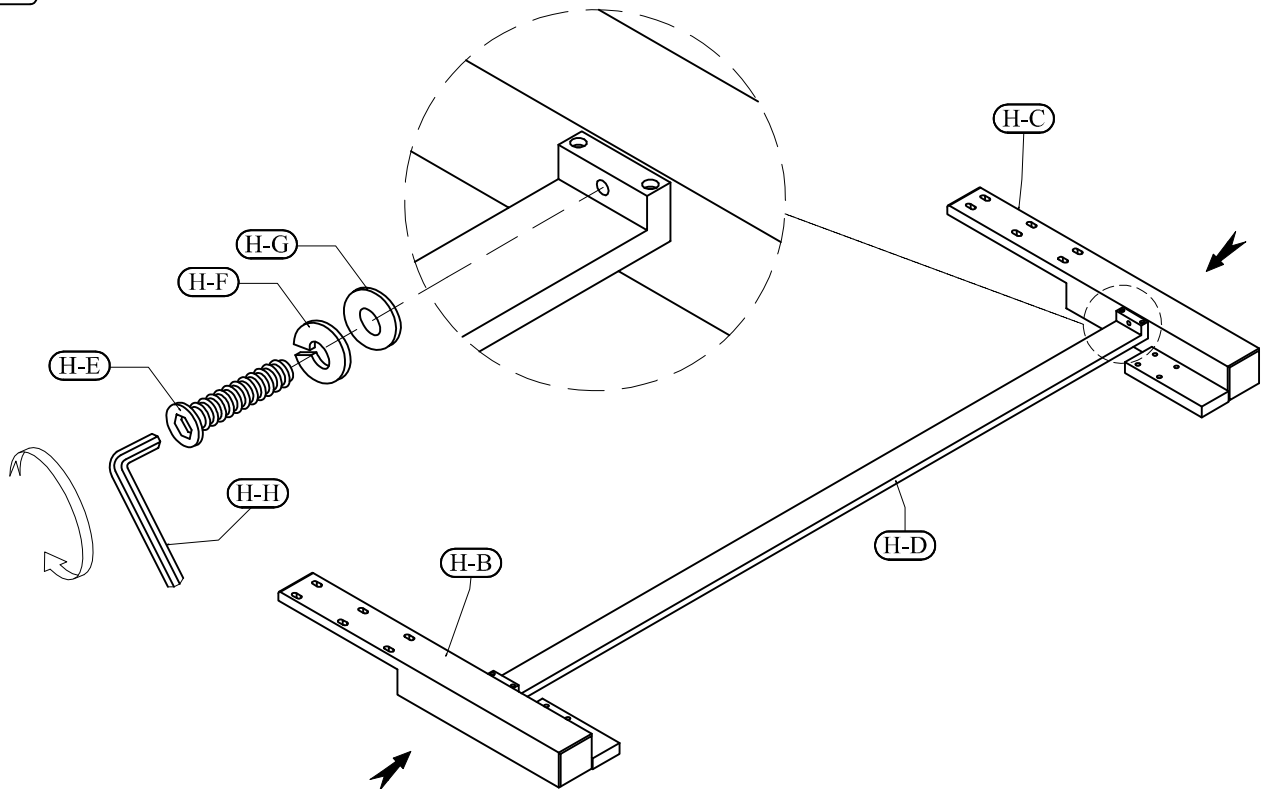


STEP 2

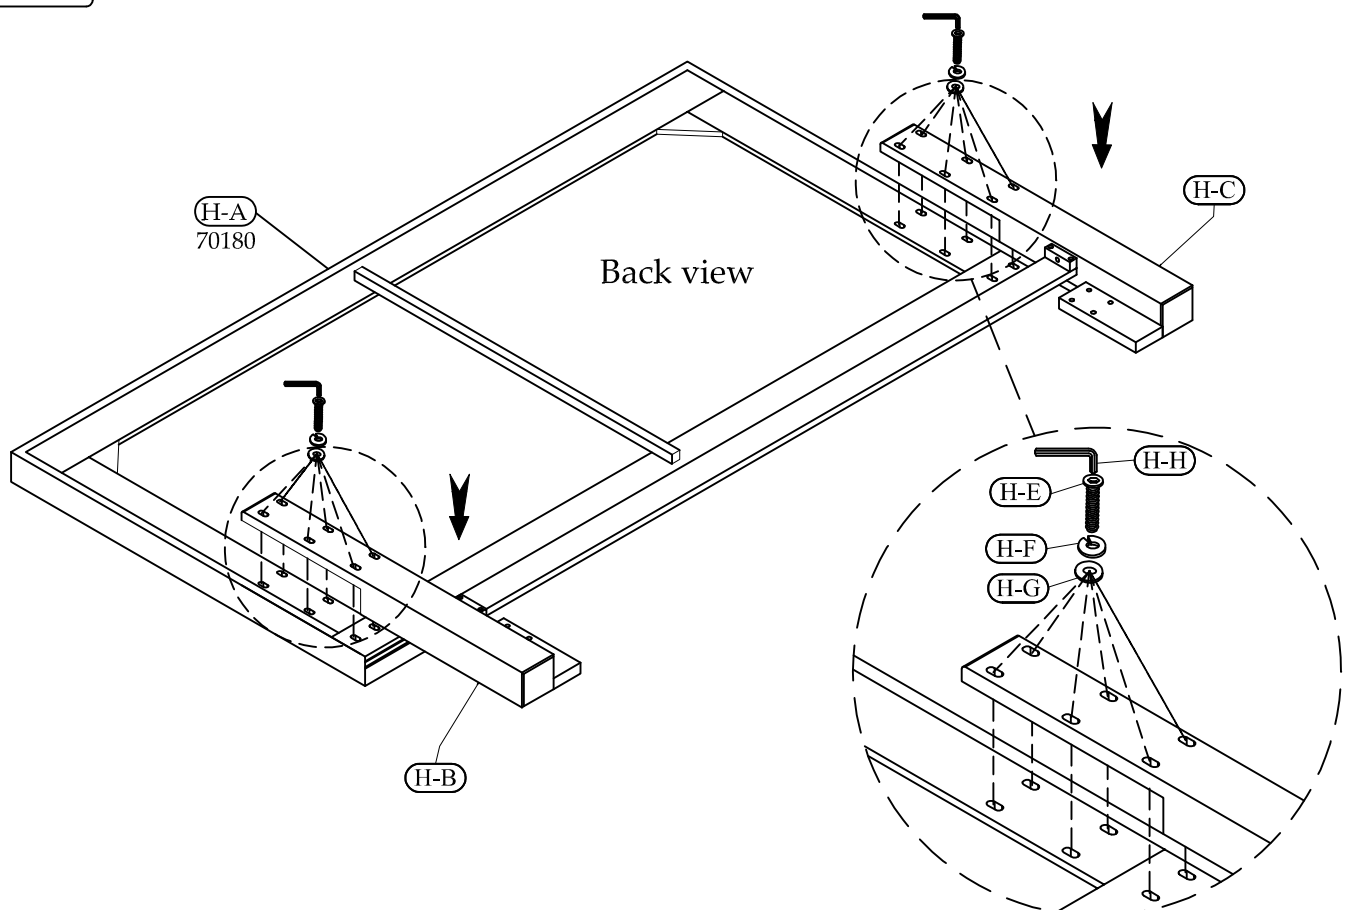


STEP 3

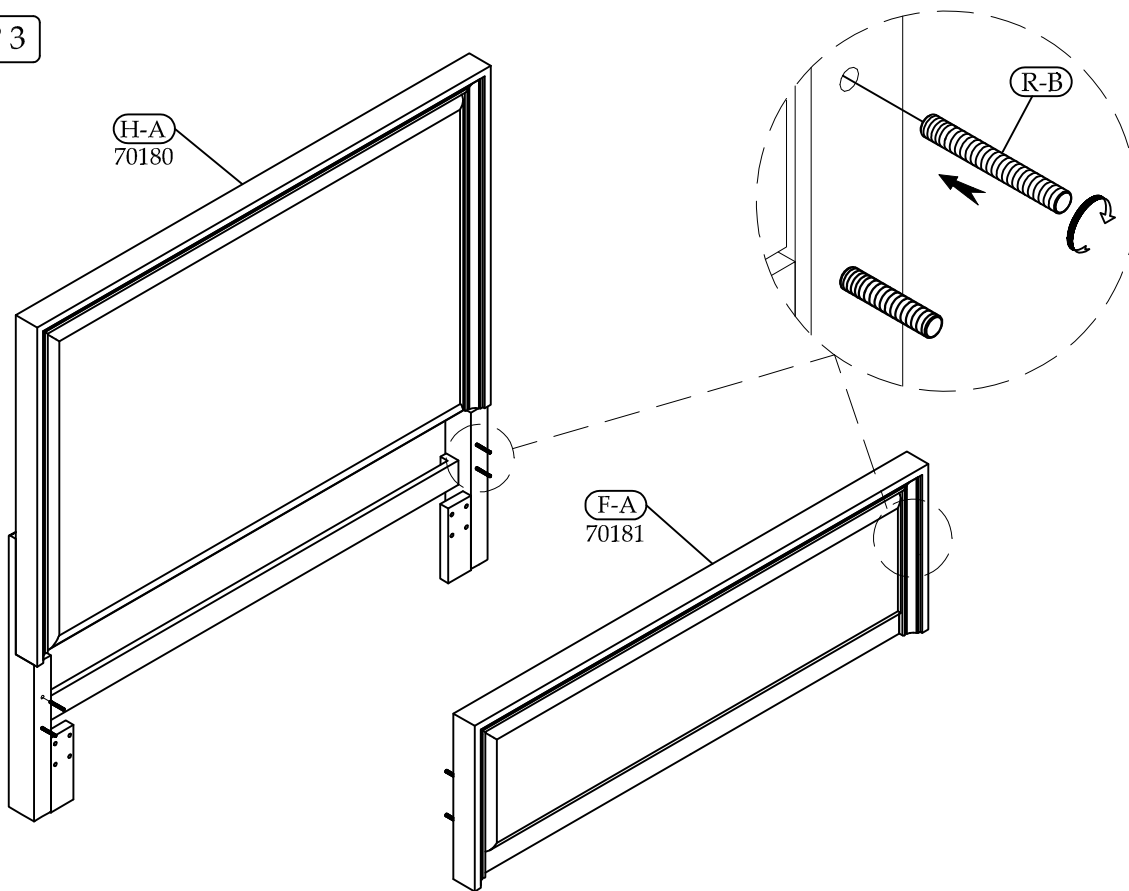


STEP 4

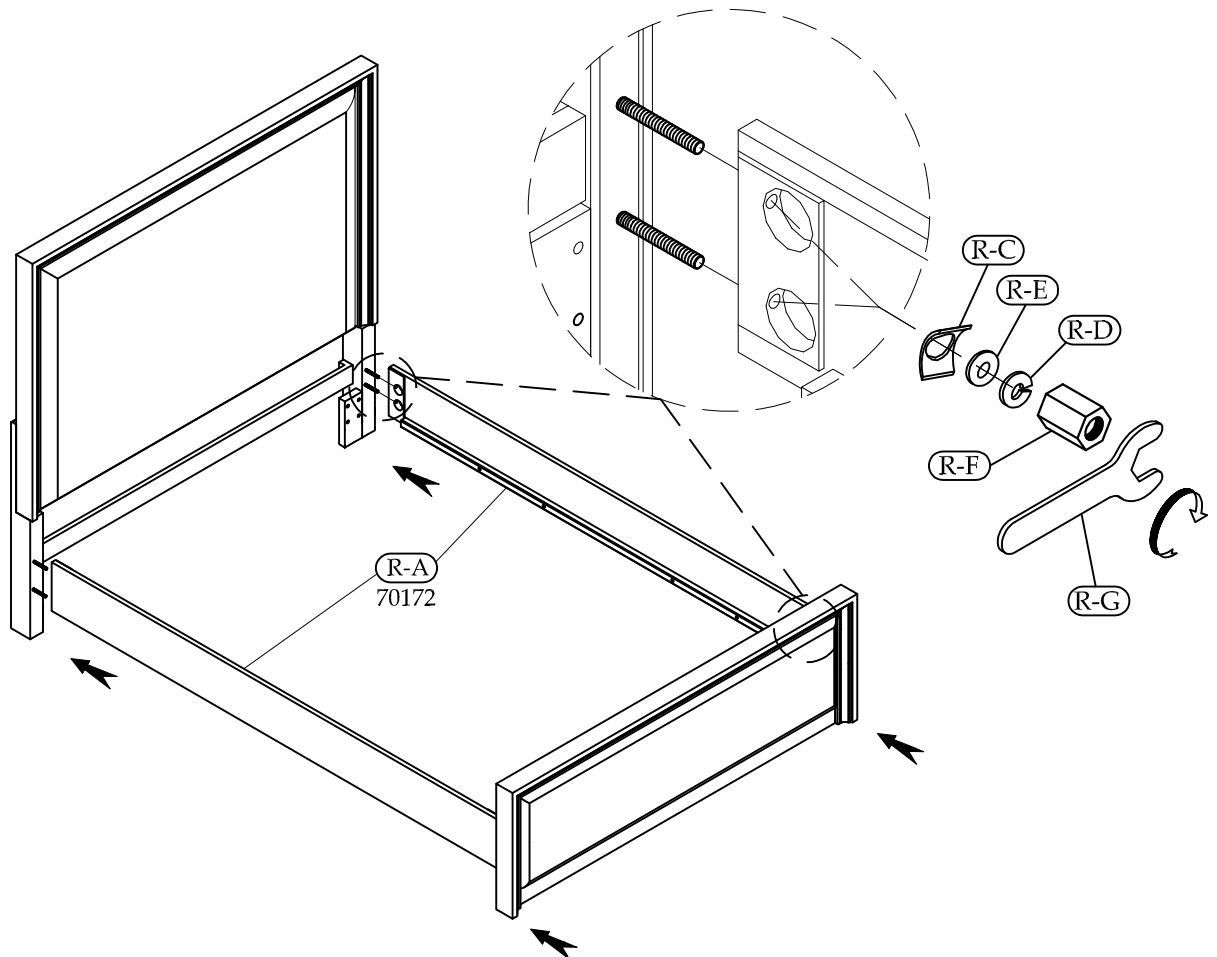

STEP 5

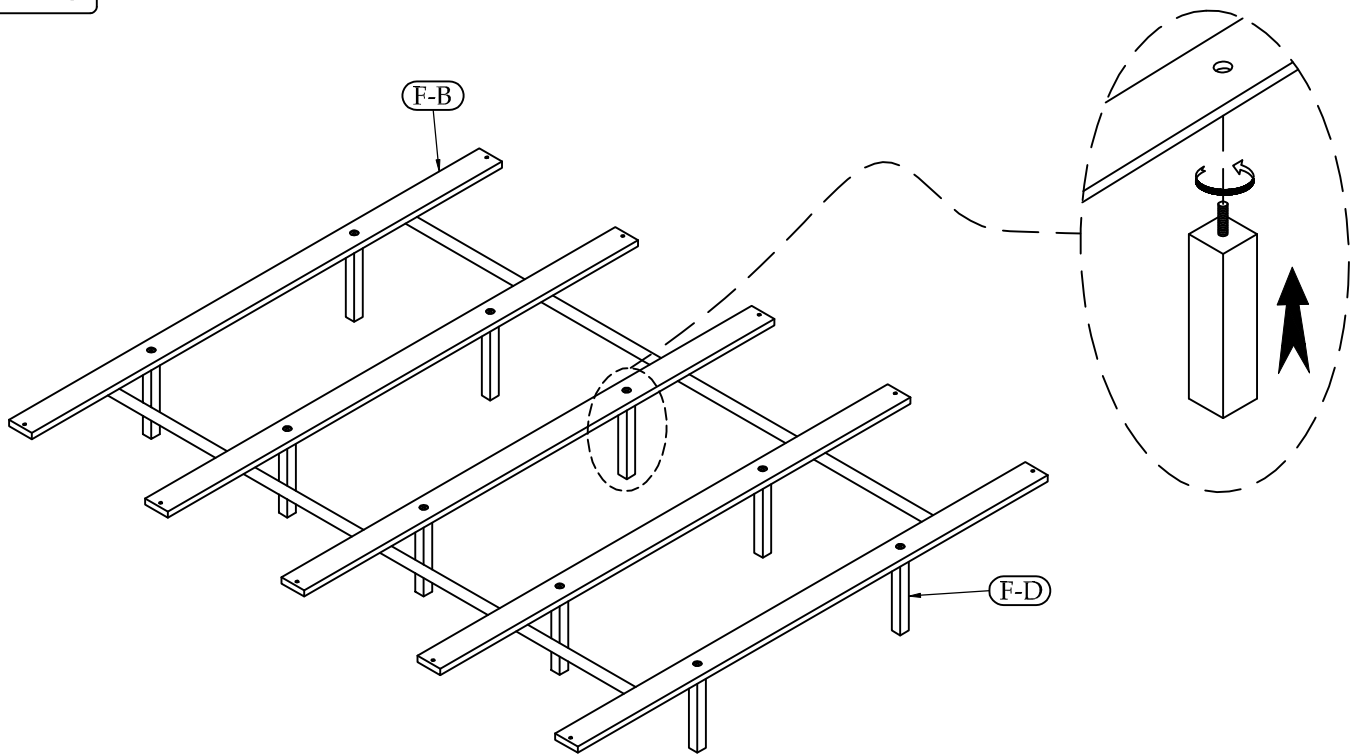


STEP 6

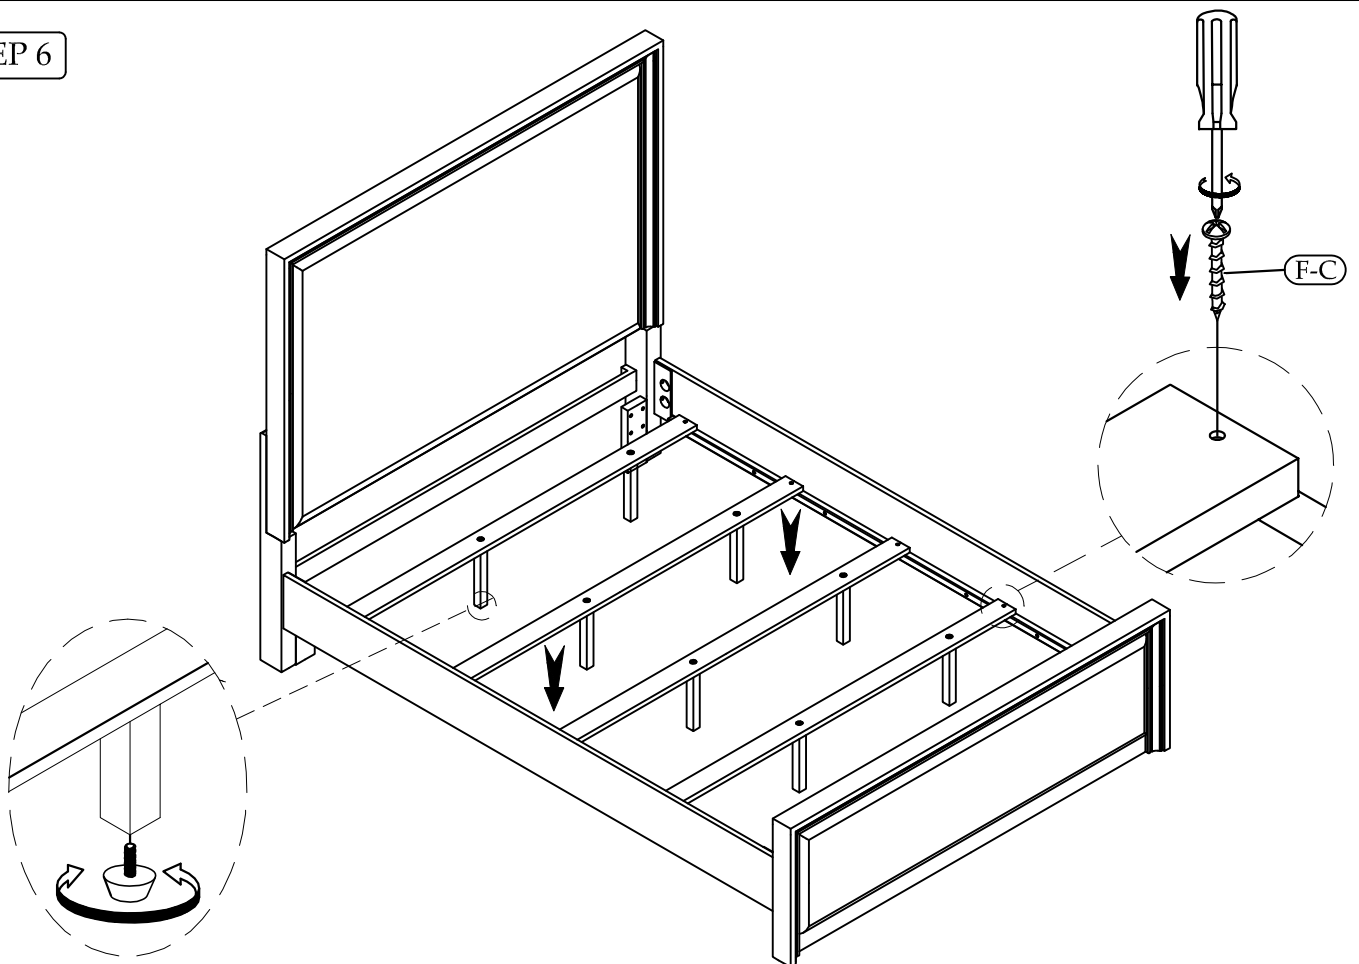

Adjustable leveler.

6/0-6/6 Uph King Bed

70180 - 6/0-6/6 Uph Panel Headboard

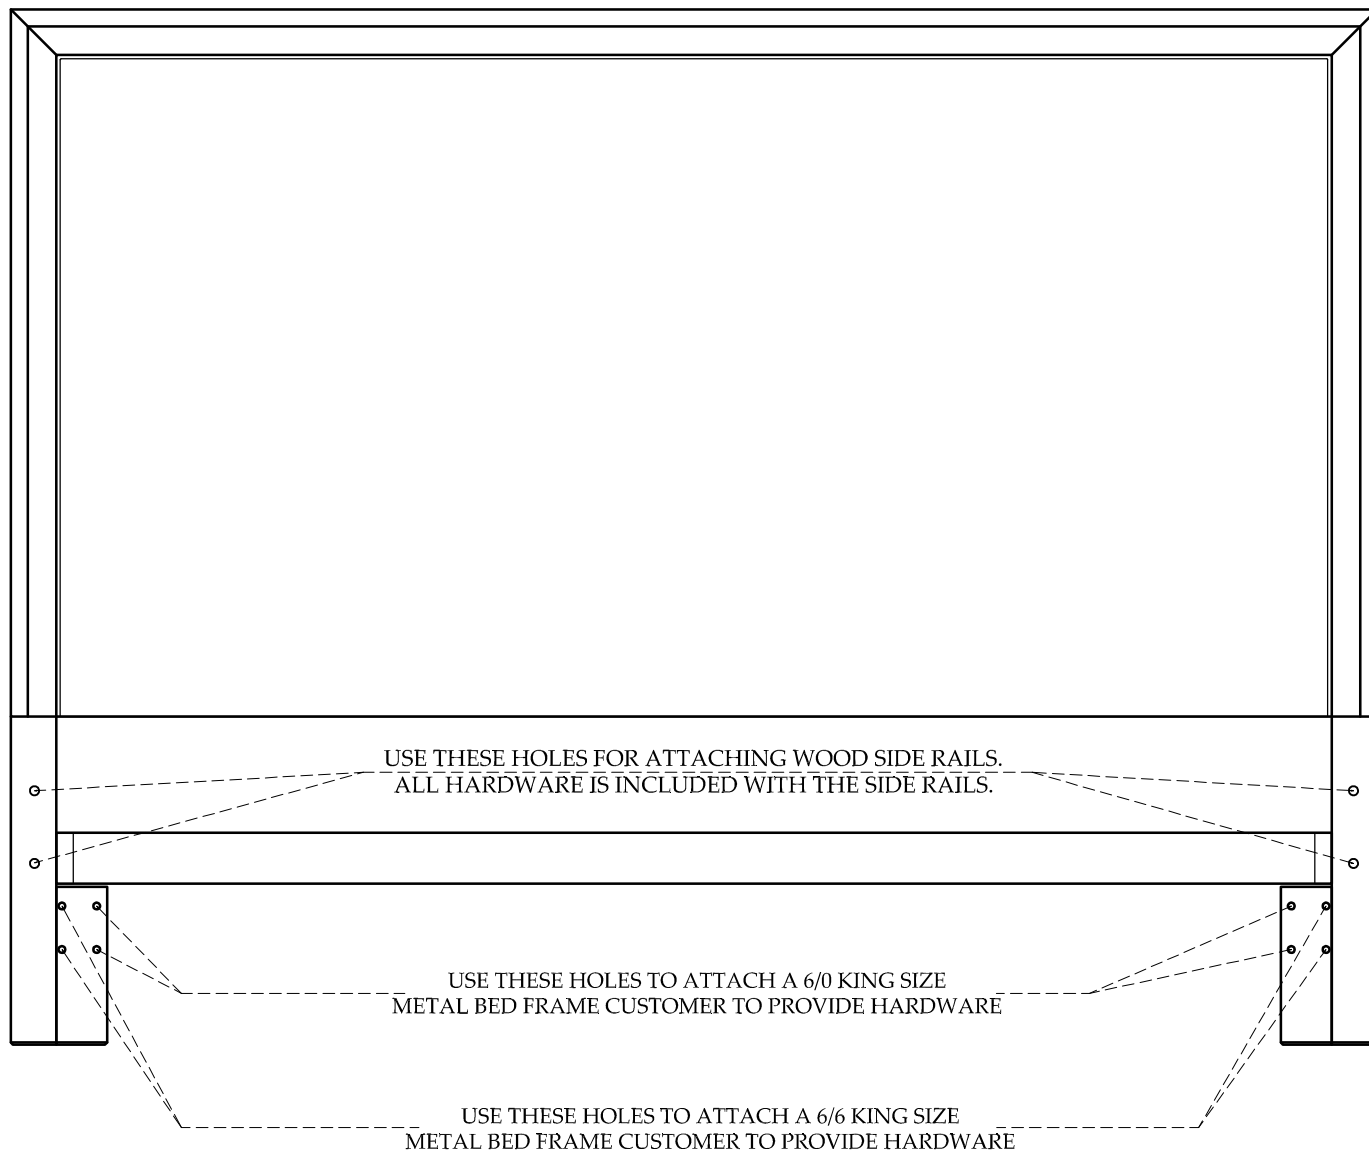

The headboard may be used alone with a Eastern King or California King size metal bed frame.