

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

224338
Vanity Mirror

ITEM: **224338**



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

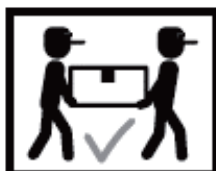

ASSEMBLY TIME

10 MINUTES


PART IDENTIFICATION

A MIRROR



1PC

B JEWELRY TRAY



1PC


C HANGING BAR



1PC

HARDWARE IDENTIFICATION

1 METAL BRACKET
(2.5 x 65 x 65mm - BLK)



2PCS

2 BOLT
(M6 x 22mm - BLK)



4PCS

3 LOCK WASHER
(1.6 x 14mm - BLK)



4PCS

4 FLAT WASHER
(1 x 18mm - BLK)



4PCS

5 ALLEN WRENCH
(M4 x 65mm - BLK)



1PC

6 PAN HEAD SCREW
(8 x 2" - BLK)



6PCS

7 PLASTIC ANCHOR
(S8 - GREY)




6PCS

ITEM: **224338**

ASSEMBLY INSTRUCTIONS




STEP 1

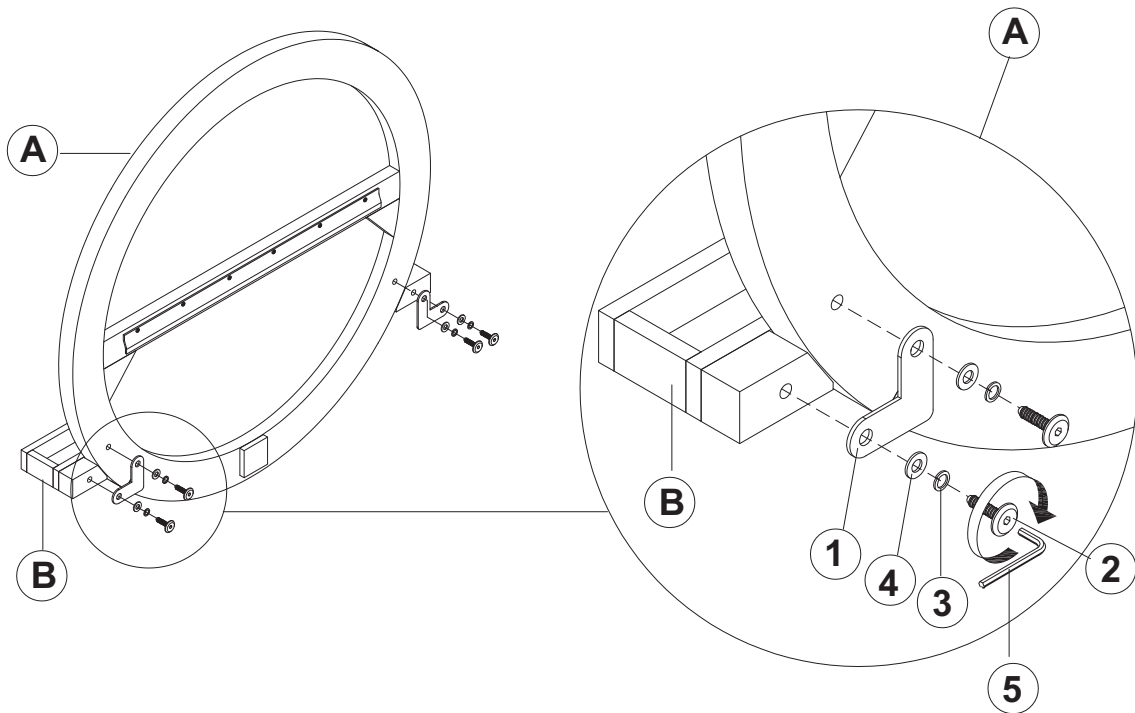

BACK VIEW

STEP 2

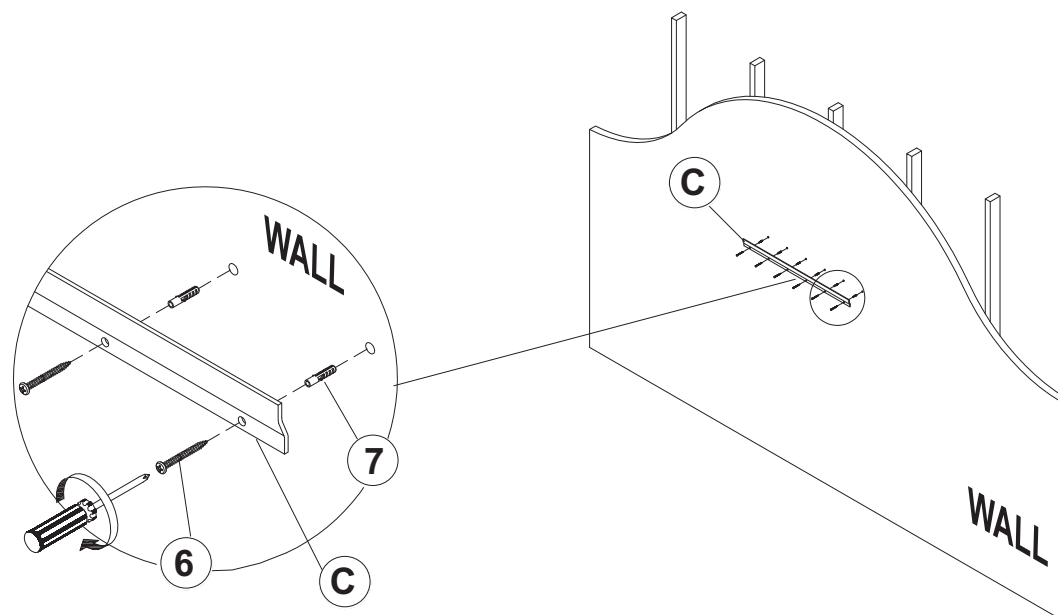


ITEM: **224338**


ASSEMBLY INSTRUCTIONS




STEP 3

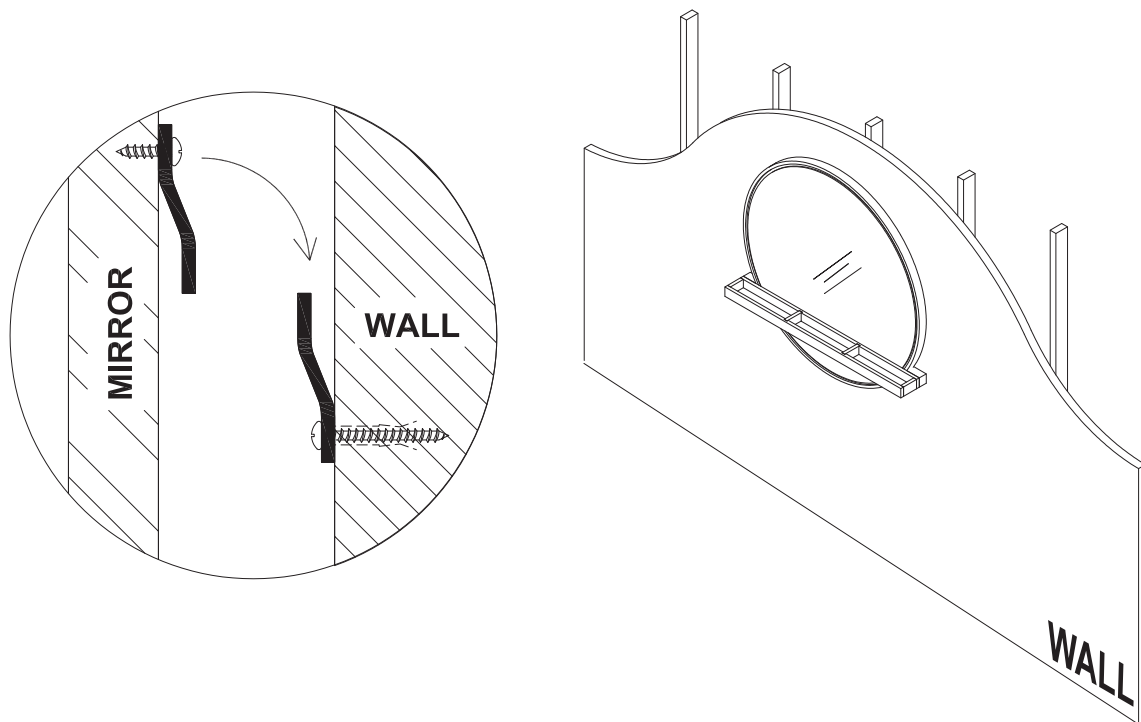

STEP 4 COMPLETE

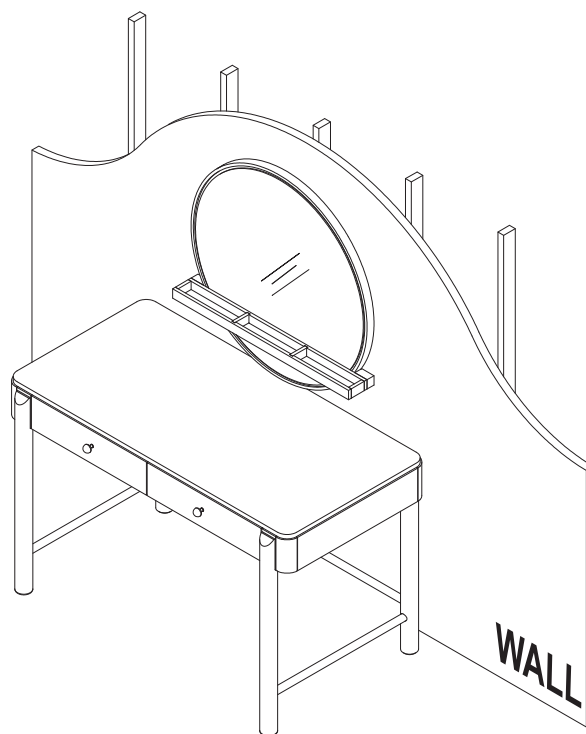

ITEM: **224338**

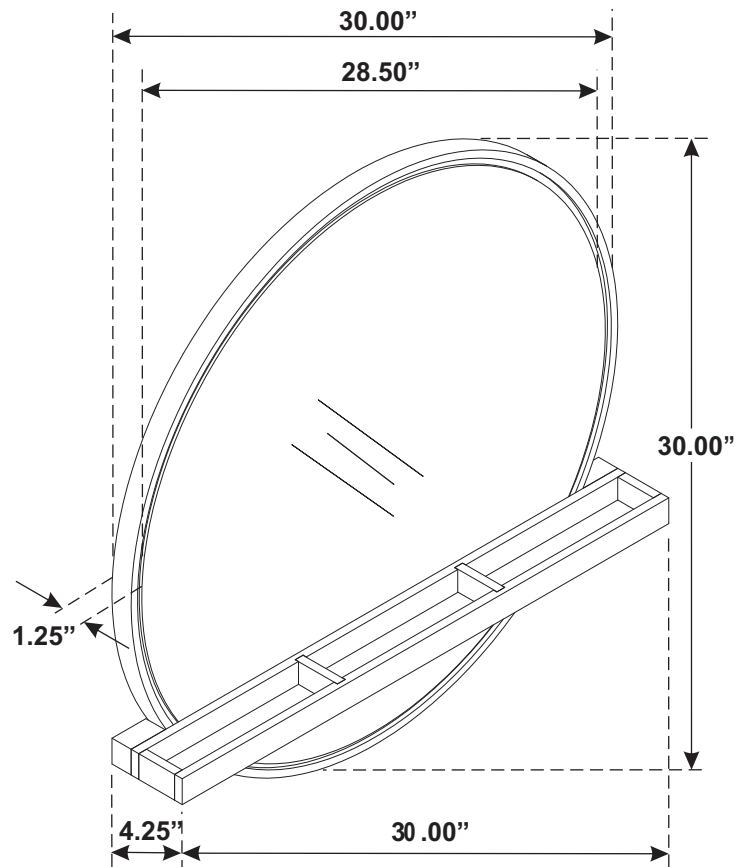

Note: Dimension tolerance $\pm 5\%$