

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

222801KE(B1-B3)
Eastern King Bed

ITEM: 222801KE(B1-B3)



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



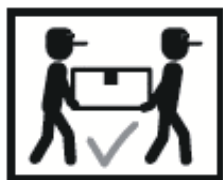


ASSEMBLY TIME


30 MINUTES

PART IDENTIFICATION






B1 (BOX 1)

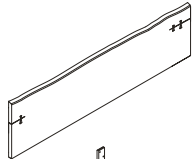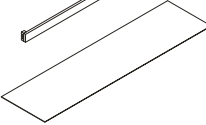A	HEADBOARD PANEL		1PC
B	LEFT HEADBOARD LEG		1PC
C	RIGHT HEADBOARD LEG		1PC
D	HEADBOARD BOTTOM RAIL		1PC
E	CONCEAL PANEL		4PCS

B2 (BOX 2)

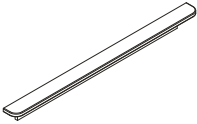F	FOOTBOARD		1PC
---	-----------	--	-----

B3 (BOX 3)

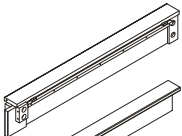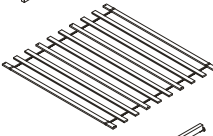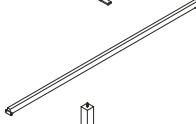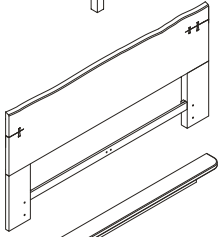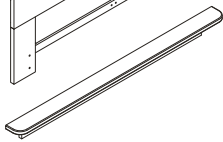G	LEFT BED RAIL		1PC
H	RIGHT BED RAIL		1PC
I	ROLL SLAT (10 PCS)		1SET
J	CENTER RAIL		1PC
K	CENTER RAIL SUPPORT WITH LEVELER		3PCS
HB	222801KE(B1) FROM BOX 1 HEADBOARD COMPLETE		1PC
F	222801KE(B2) FROM BOX 2 FOOTBOARD		1PC

ITEM: 222801KE(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 222801KE(B1)

1	LONG BOLT (5/16" x 50mm - BLK)		8PCS
2	LOCK WASHER (1.6 x 14mm - BLK)		8PCS
3	FLAT WASHER (2 x 19mm - BLK)		8PCS
4	ALLEN WRENCH (M5 x 75mm - BLK)		1PC
5	WOOD DOWEL (10 x 40mm - BRW)		8PCS

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 222801KE(B3)

2	LOCK WASHER (1.6 x 14mm - BLK)		4PCS
3	FLAT WASHER (2 x 19mm - BLK)		4PCS
6	SHORT BOLT (5/16" x 19mm - BLK)		4PCS
7	FLAT HEAD SCREW (8 x 32mm - BLK)		8PCS
8	THREADED BOLT (5/16" x 80mm - WHT)		8PCS
9	HEX NUT (5/16" x 13mm - WHT)		8PCS
10	HALF ROUND NUT (22 x 17 x 10mm - WHT)		8PCS
11	WRENCH (13mm - WHT)		1PC

NOTE :


Philips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 222801KE(B1-B3)


ASSEMBLY INSTRUCTIONS



STEP 1

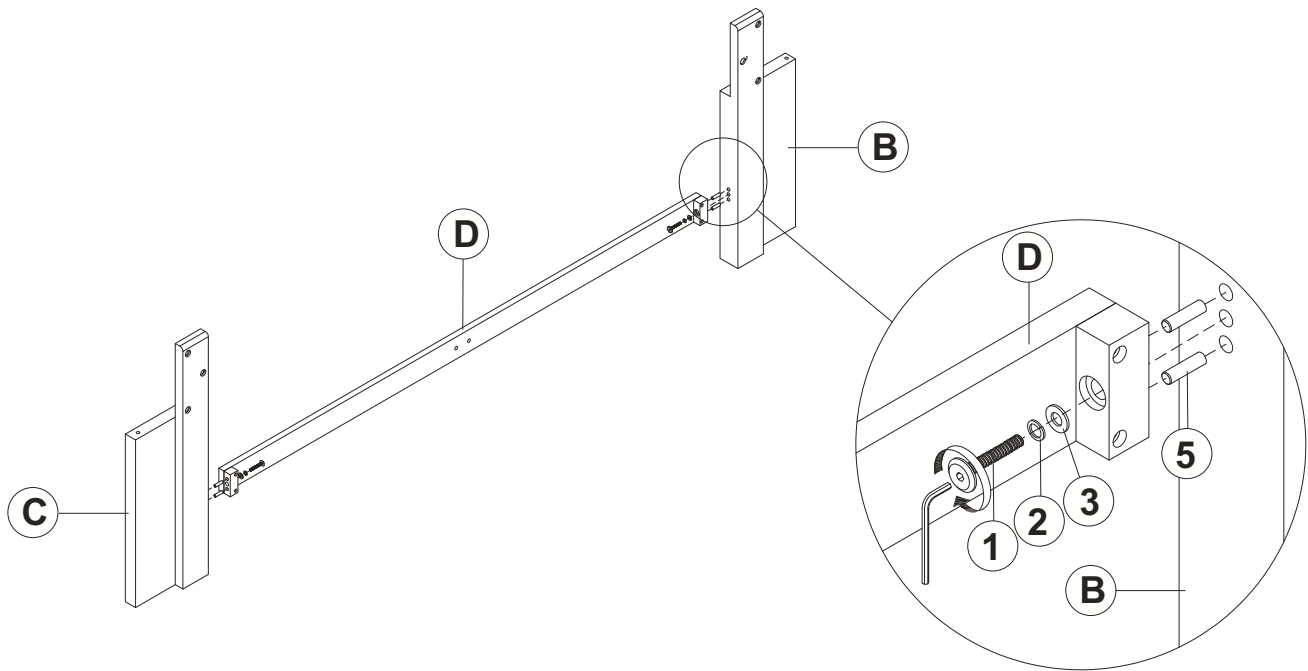

STEP 2

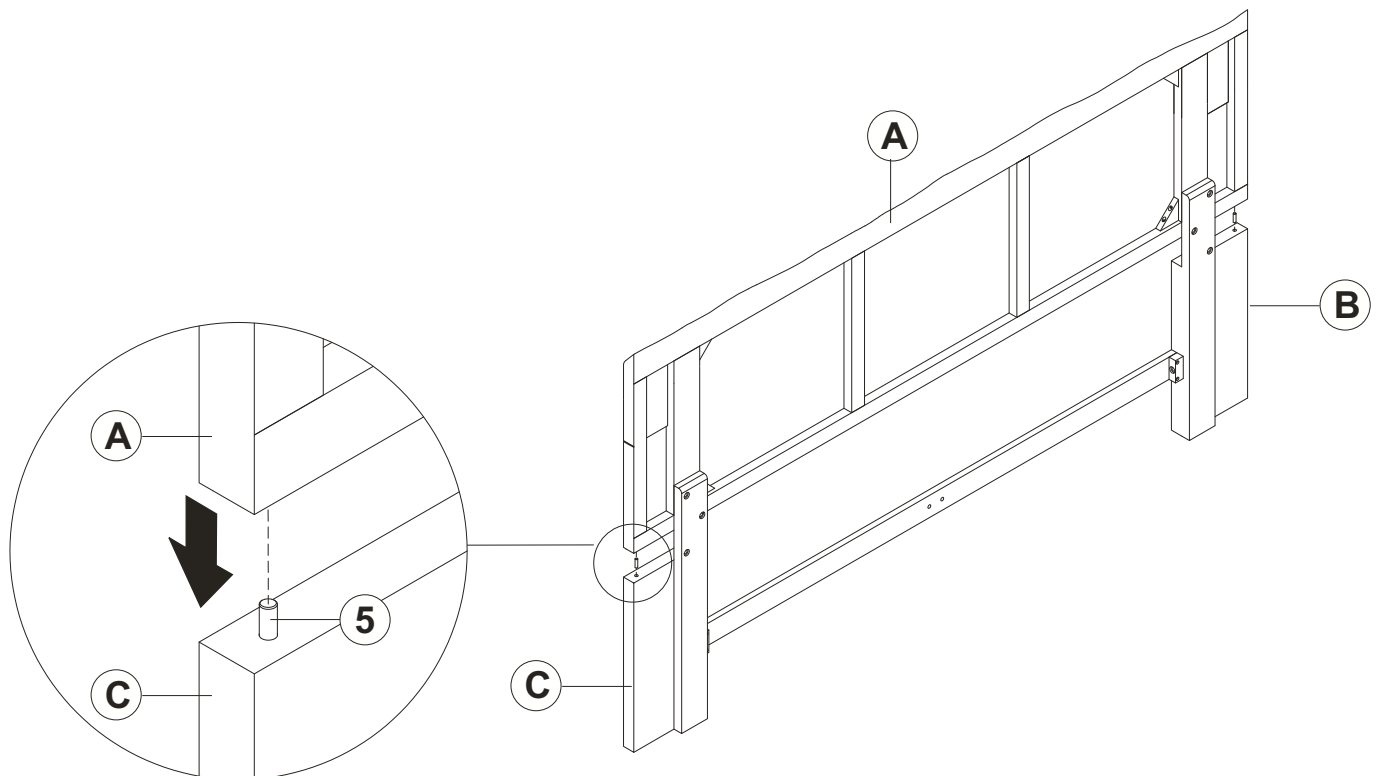


ITEM: 222801KE(B1-B3)


ASSEMBLY INSTRUCTIONS



STEP 3

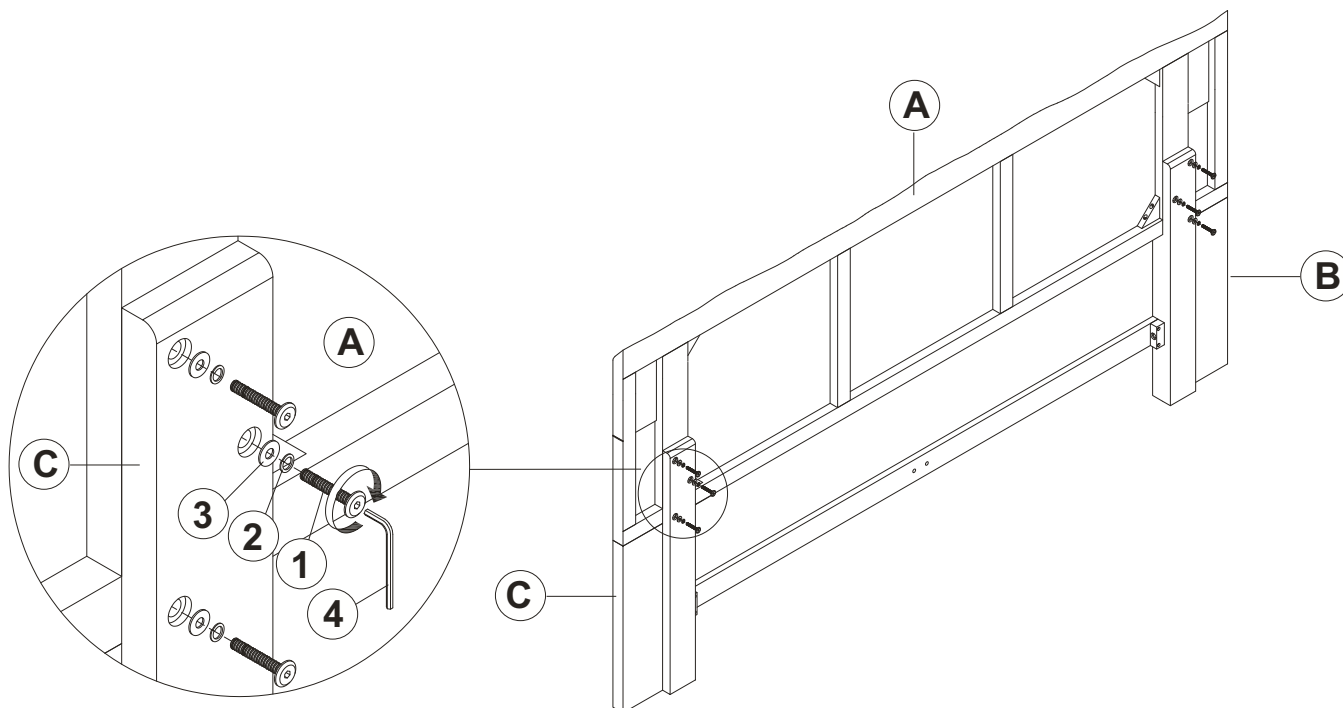


STEP 4

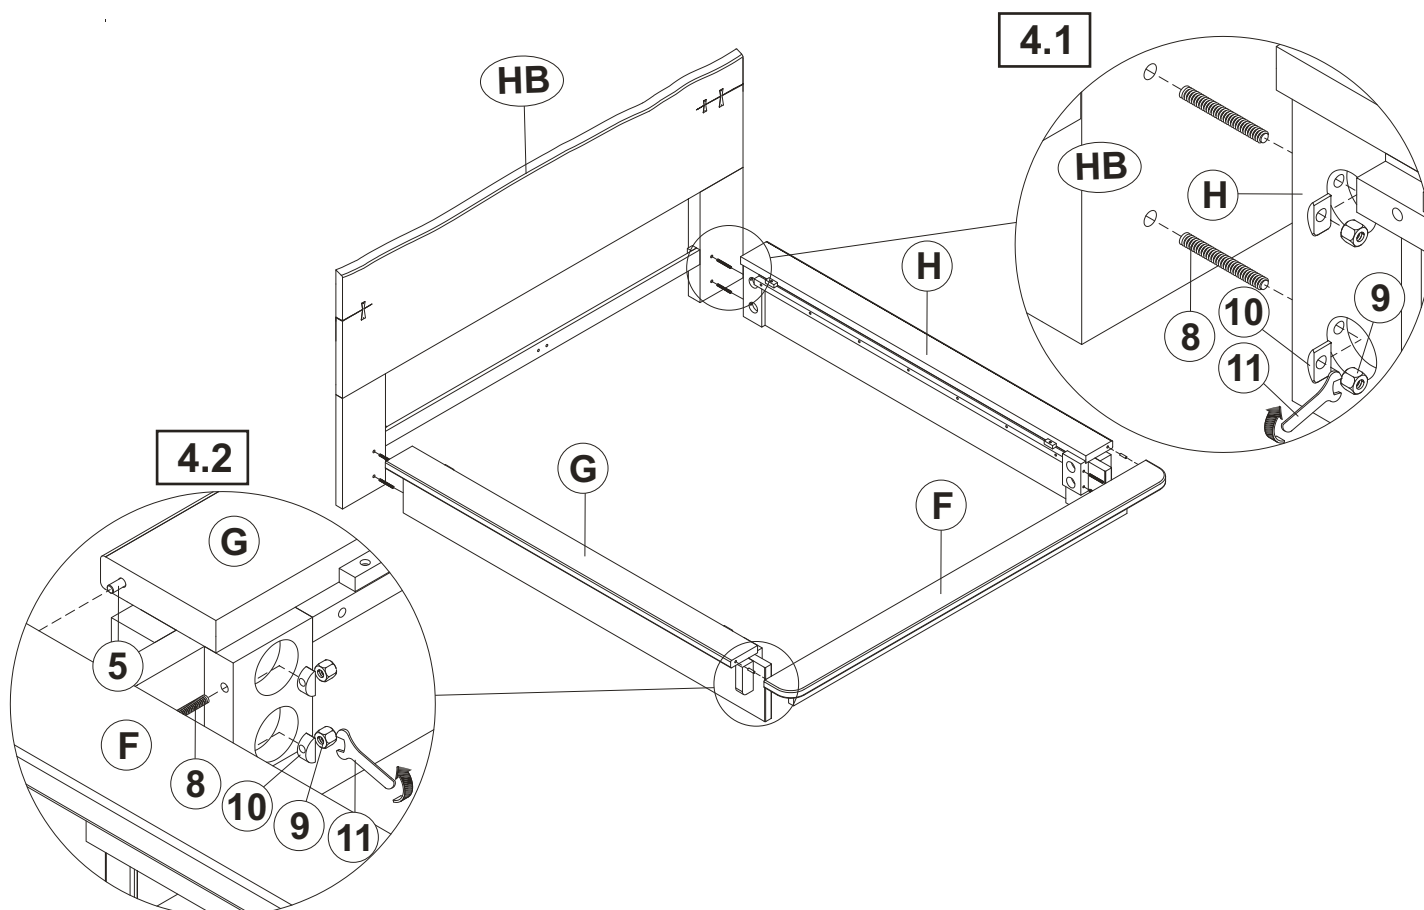


ITEM: 222801KE(B1-B3)

ASSEMBLY INSTRUCTIONS

STEP 5

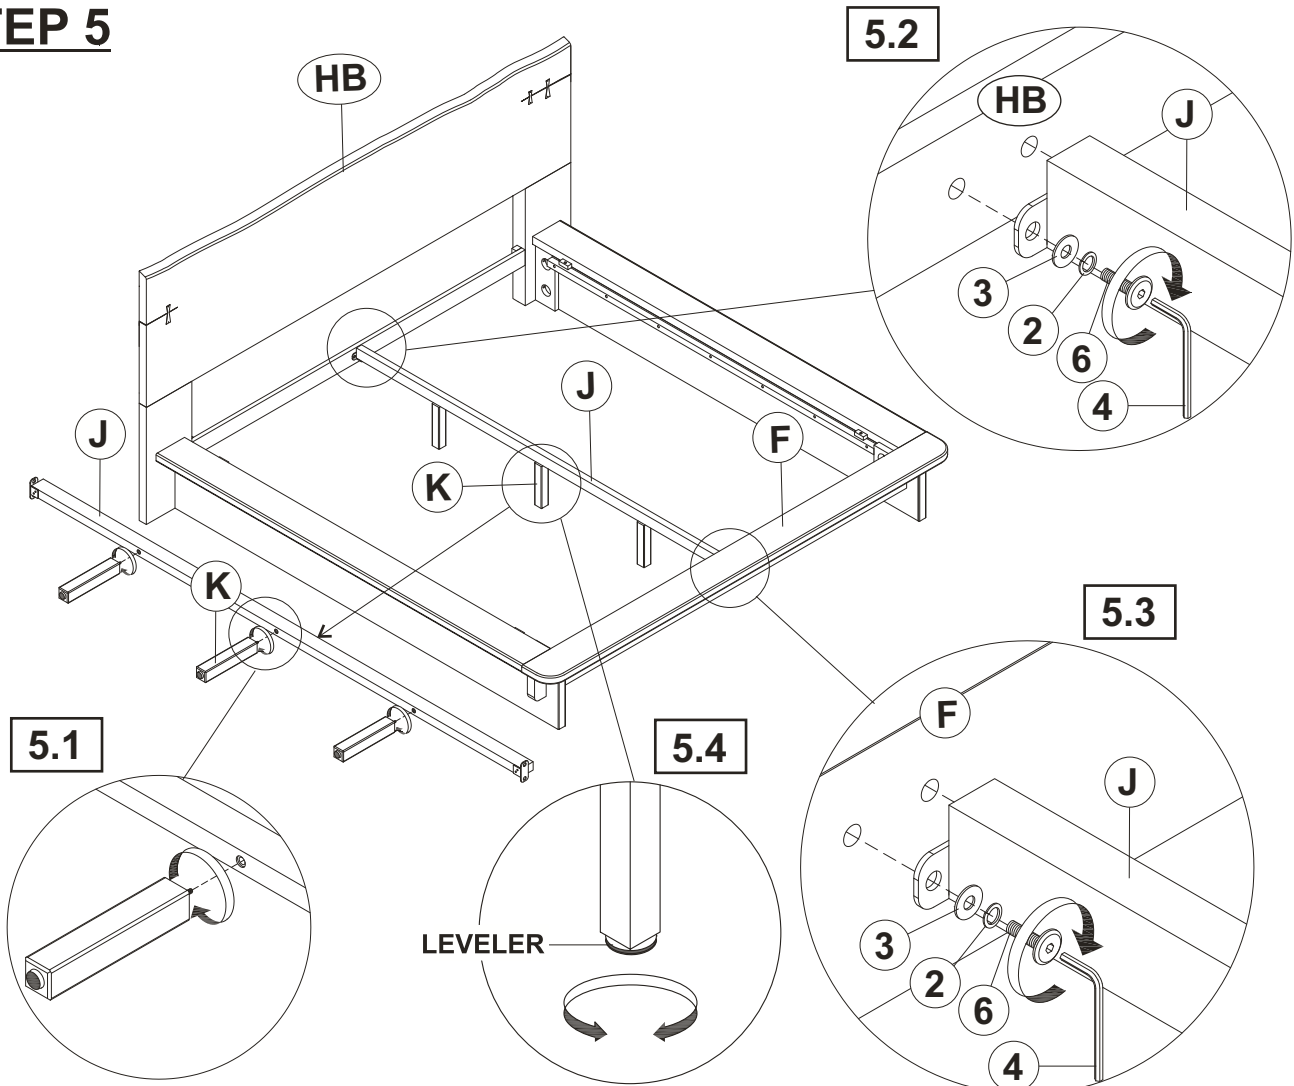

STEP 6

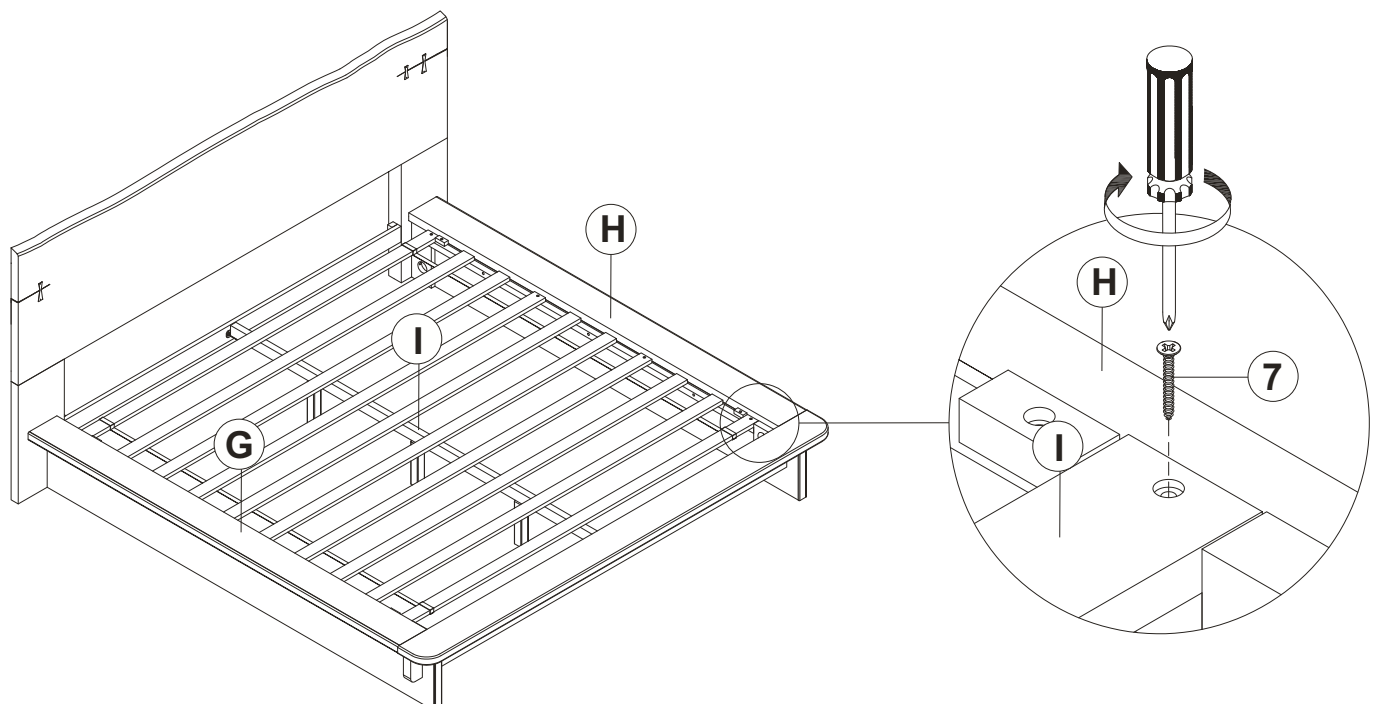


ITEM: **222801KE(B1-B3)**



ASSEMBLY INSTRUCTIONS



STEP 7

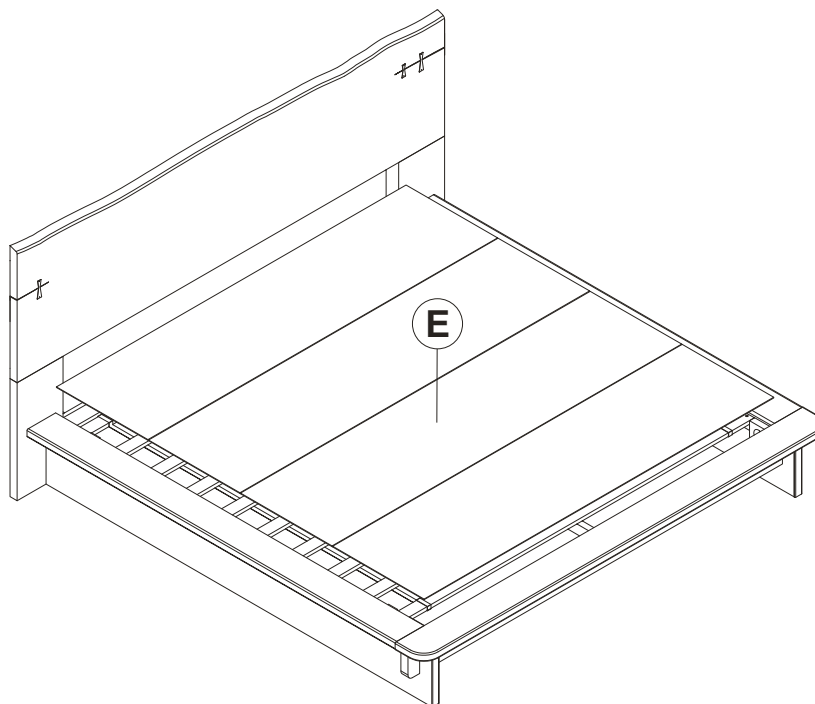


STEP 8 COMPLETE

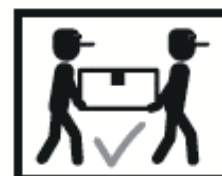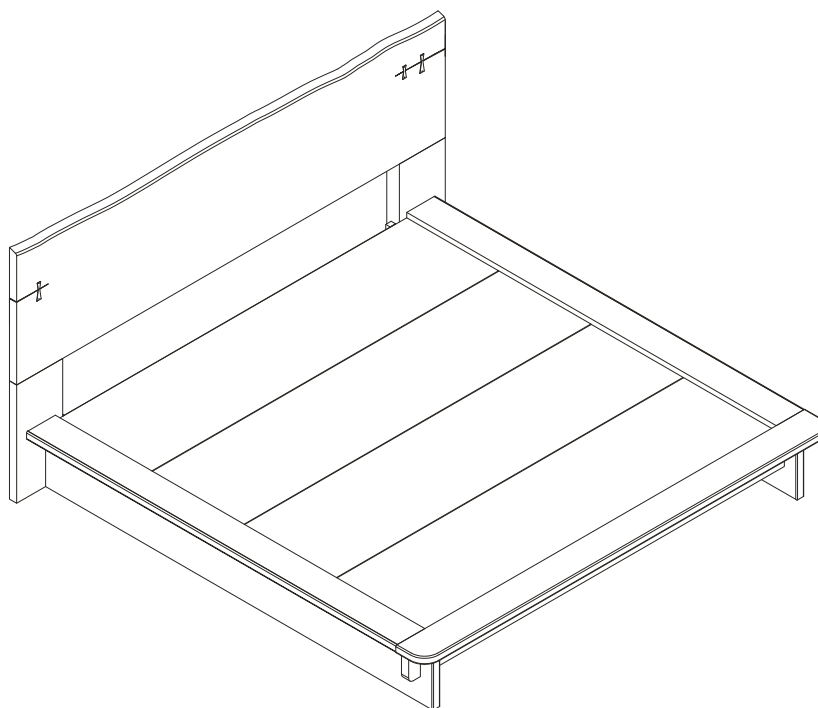

ITEM: **222801KE(B1-B3)**



Inner Size : 77.00"W x 81.00"D

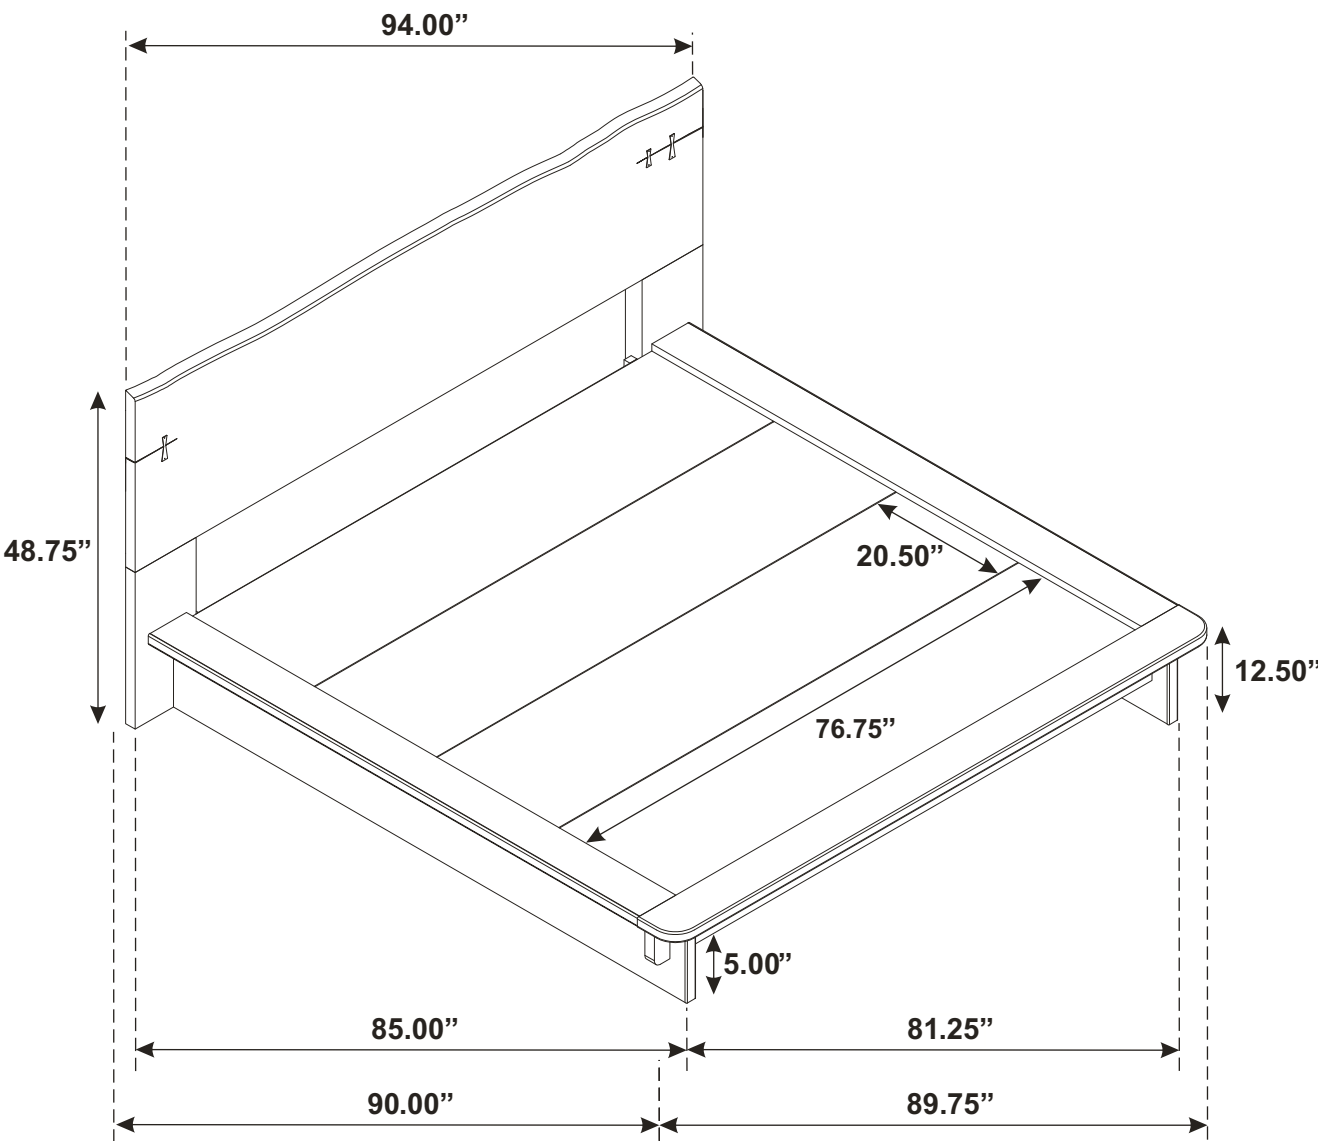

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

222802
Nightstand

ITEM: **222802**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES


PART IDENTIFICATION

A NIGHTSTAND

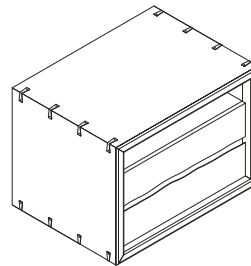


1PC

B FRONT FRAME RAIL




1PC

C LEFT SIDE FRAME



1PC


D RIGHT SIDE FRAME



1PC

HARDWARE IDENTIFICATION

1 BOLT
(5/16 x 60mm - BLK)



7PCS

2 LOCK WASHER
(1.6 x 14mm - BLK)



7PCS

3 FLAT WASHER
(2 x 18mm - BLK)



7PCS

4 ALLEN WRENCH
(M5 x 75mm - BLK)



1PC

5 WOOD DOWEL
(10 x 40mm)




6PCS


ITEM: **222802**

ASSEMBLY INSTRUCTIONS


STEP 1

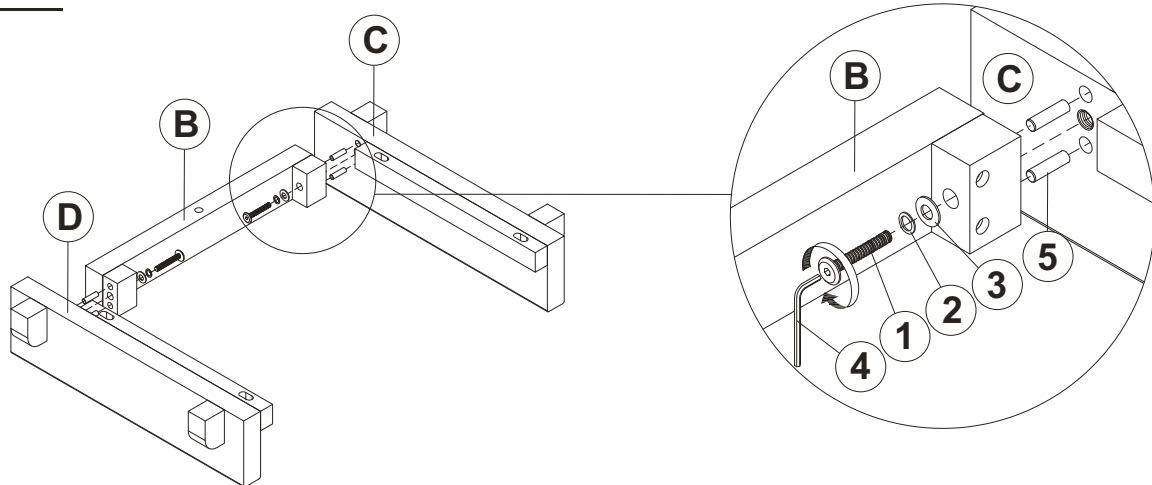

STEP 2

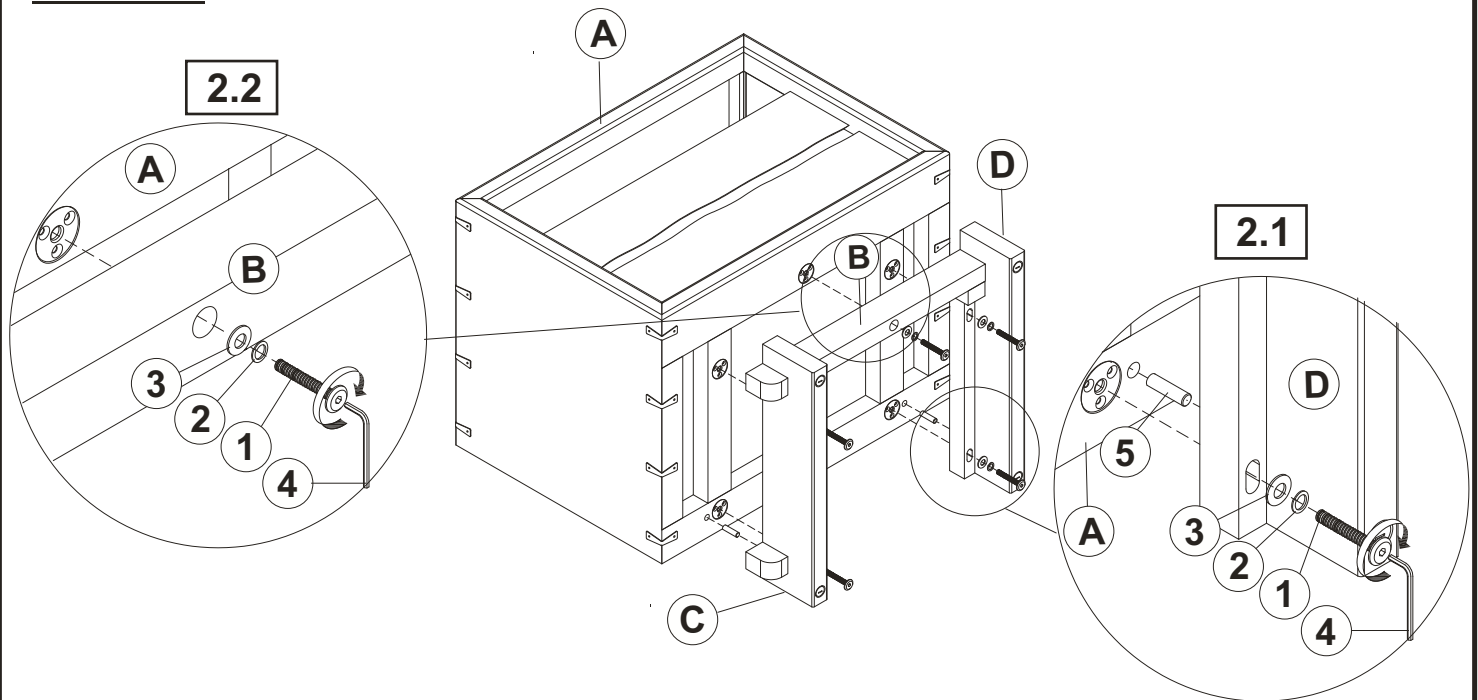


STEP 3 **COMPLETE**

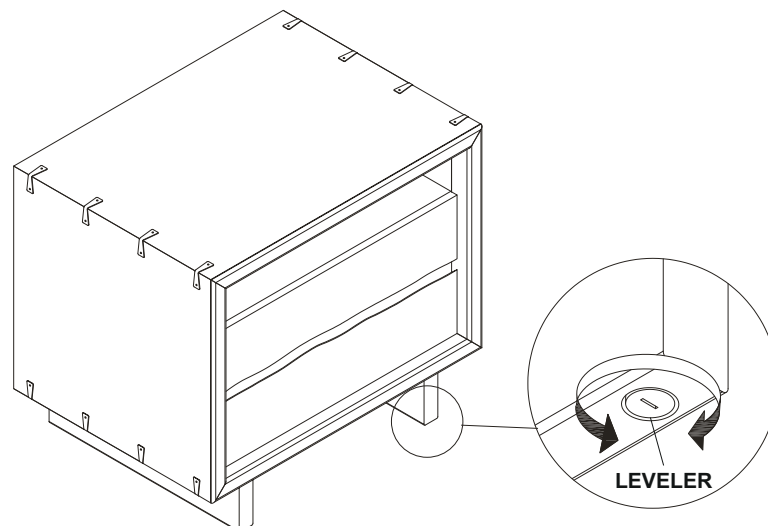

ITEM: **222802**



Inner Size of Drawer A : 22.00"W x 13.75"D x 2.50"H x 0.50"T
Inner Size of Drawer B : 22.00"W x 13.75"D x 3.25"H x 0.50"T

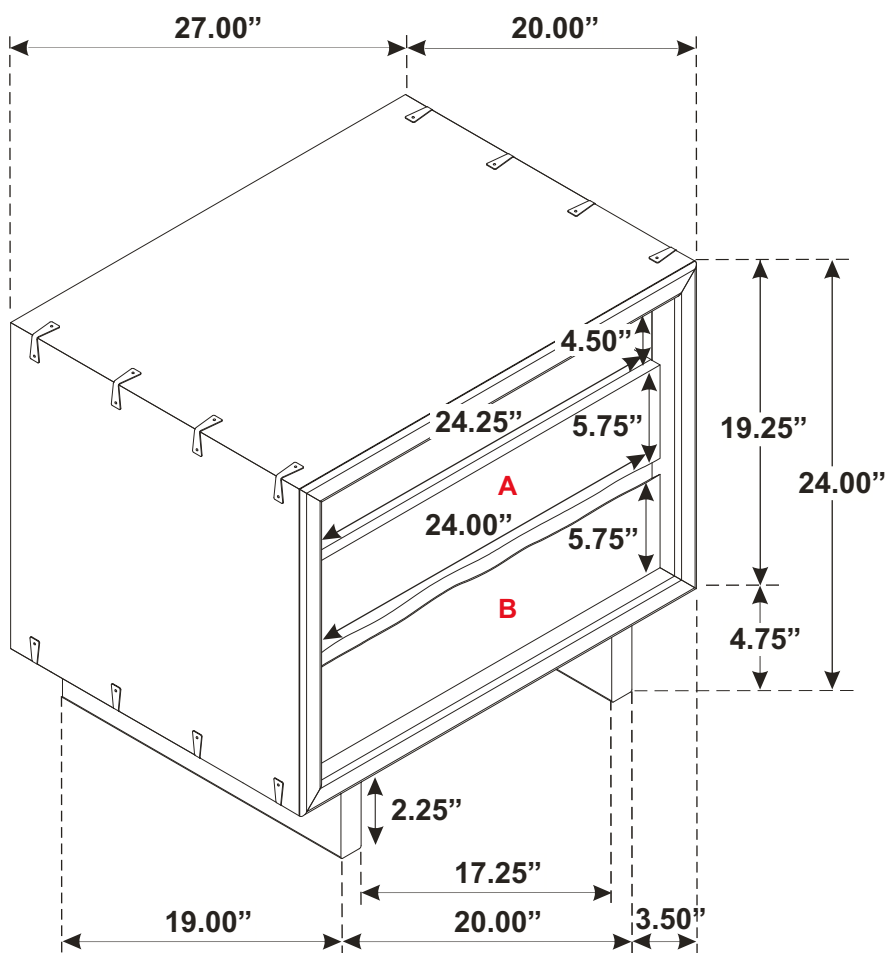

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

222803
Dresser

ITEM: **222803**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

PART IDENTIFICATION

A **DRESSER**

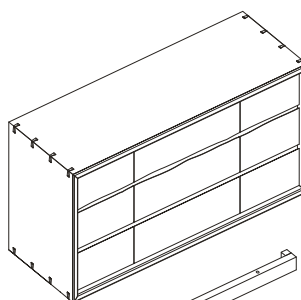

1PC

B **FRONT FRAME RAIL**



1PC

C **LEFT SIDE FRAME**



1PC

D **RIGHT SIDE FRAME**



1PC

E **CENTER SUPPORT LEG WITH LEVELER**



1PC

HARDWARE IDENTIFICATION

1 **BOLT**
(5/16 x 60mm - BLK)



8PCS

2 **LOCK WASHER**
(1.6 x 14mm - BLK)



8PCS

3 **FLAT WASHER**
(2 x 18mm - BLK)



8PCS

4 **ALLEN WRENCH**
(M5 x 75mm - BLK)



1PC

5 **WOOD DOWEL**
(10 x 40mm)




6PCS

ITEM: **222803**


ASSEMBLY INSTRUCTIONS




STEP 1

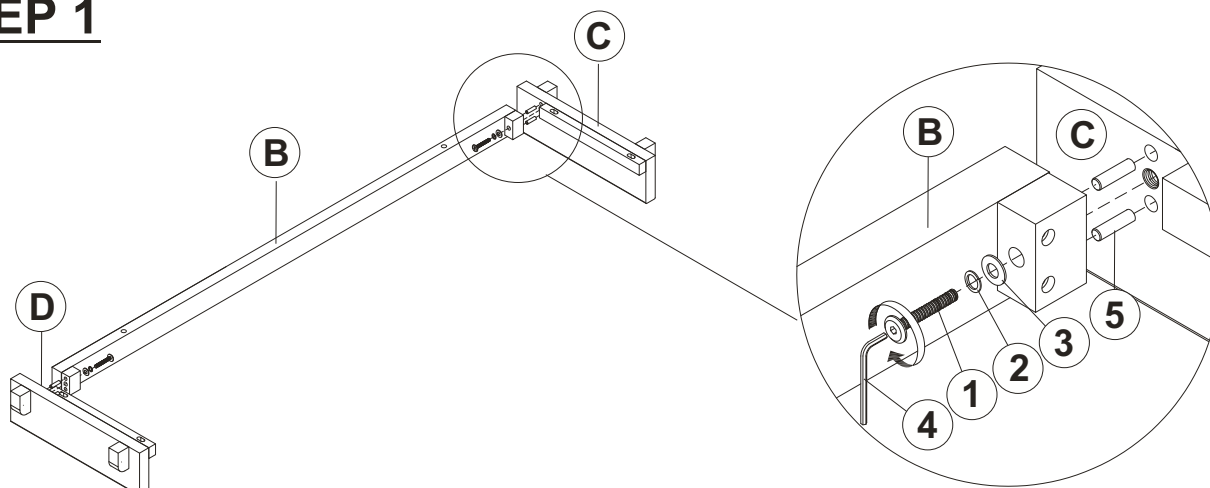

STEP 2

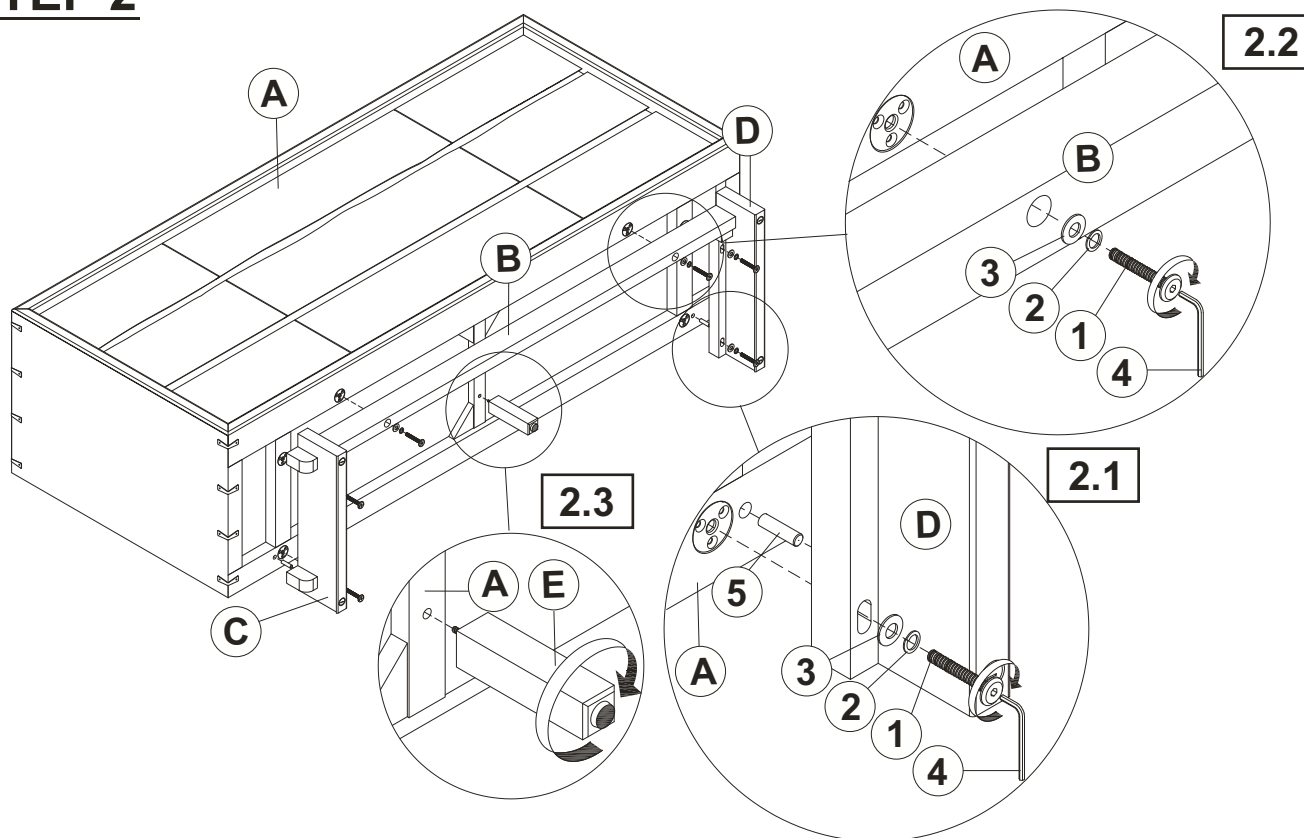

STEP 3 **COMPLETE**

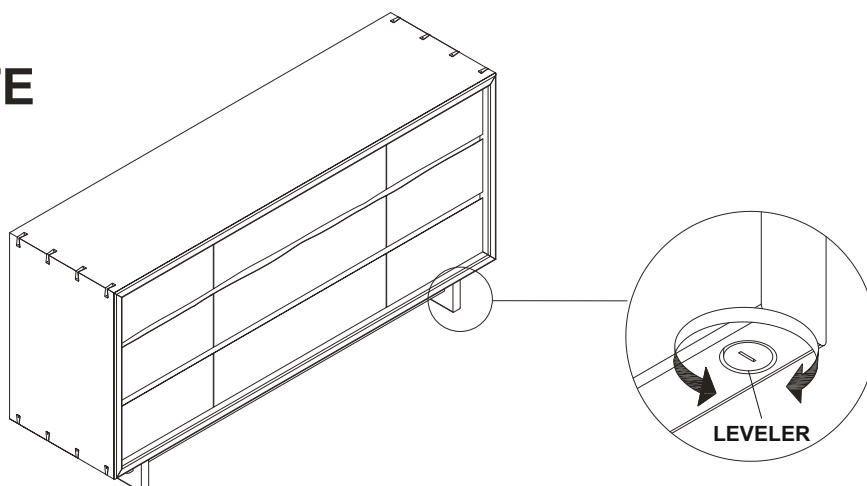

ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

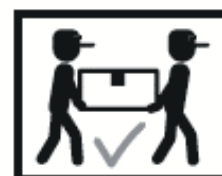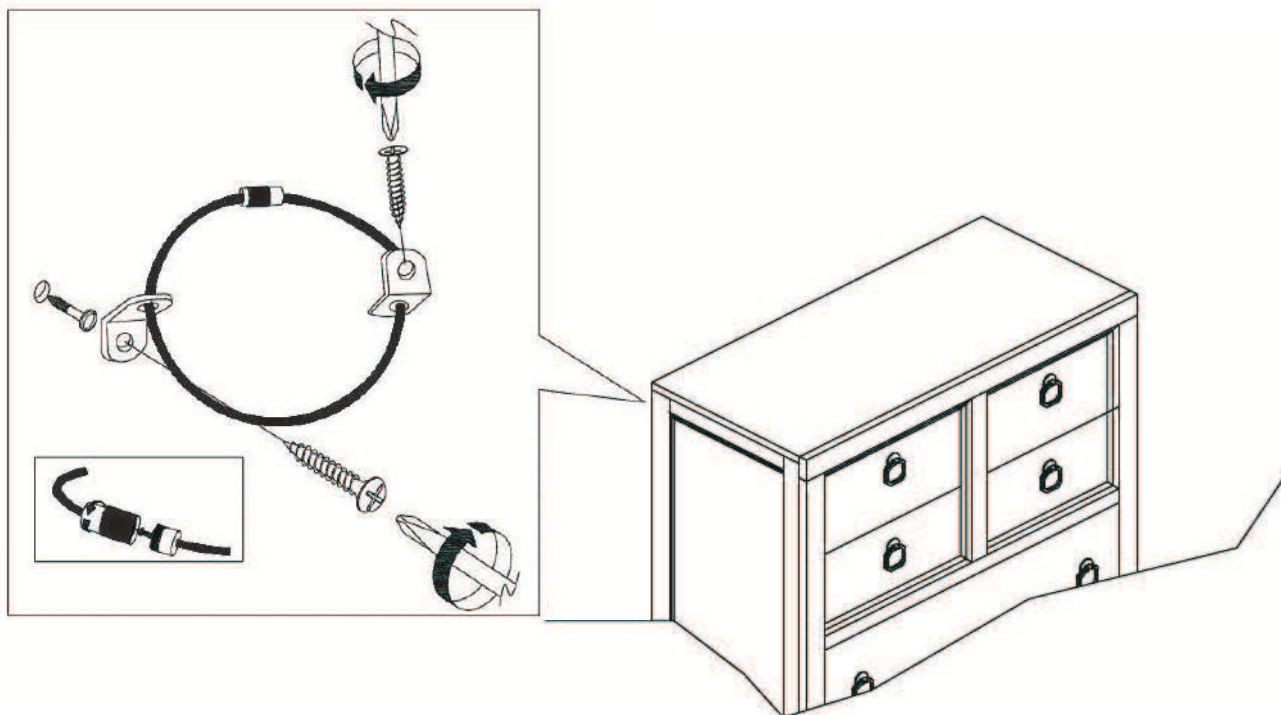

ITEM: **222803**



Inner Size of Drawer A : 15.75"W x 13.75"D x 5.25"H x 0.50"T
Inner Size of Drawer B : 29.75"W x 13.75"D x 5.25"H x 0.50"T
Inner Size of Drawer C : 15.75"W x 13.75"D x 5.25"H x 0.50"T
Inner Size of Drawer D : 15.75"W x 13.75"D x 6.75"H x 0.50"T
Inner Size of Drawer E : 29.75"W x 13.75"D x 6.75"H x 0.50"T

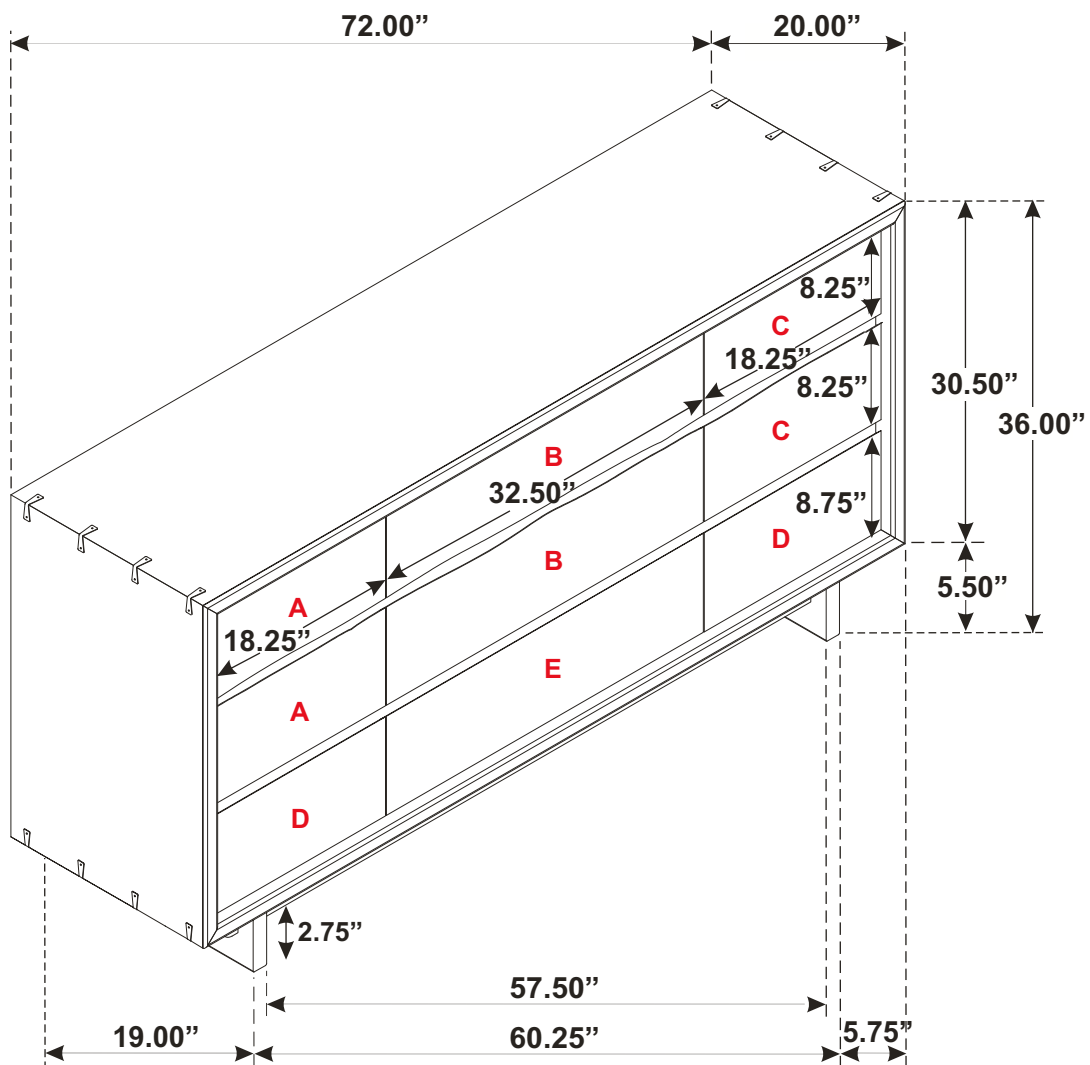

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

222804
Mirror

ITEM: **222804**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES


PART IDENTIFICATION

A **DRESSER**
FROM BOX ITEM 222803

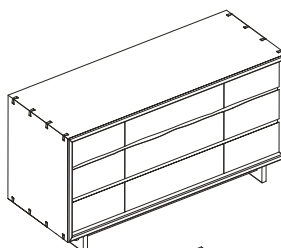


1PC

B **MIRROR**

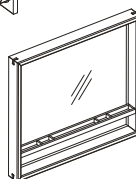

1PC


C **MIRROR SUPPORT**
(PACKED WITH MIRROR)



2PCS

HARDWARE IDENTIFICATION

1 **BOLT**
(5/16" x 45mm - BLK)



8PCS

2 **LOCK WASHER**
(1.6 x 14mm - BLK)



8PCS

3 **FLAT WASHER**
(2 x 19mm - BLK)



8PCS

4 **ALLEN WRENCH**
(M5 x 75mm - BLK)




1PC

ITEM: **222804**


ASSEMBLY INSTRUCTIONS




STEP 1

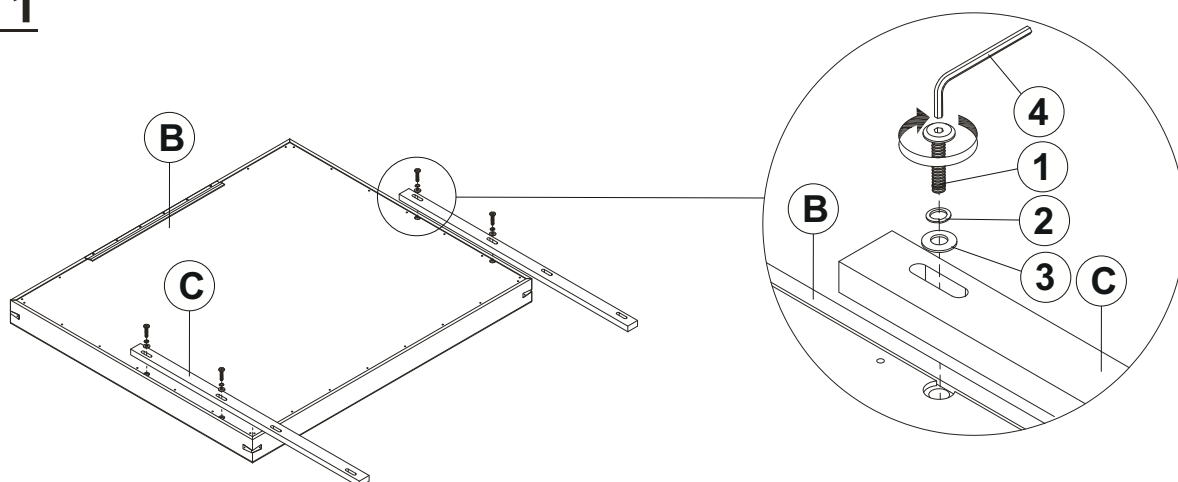

STEP 2

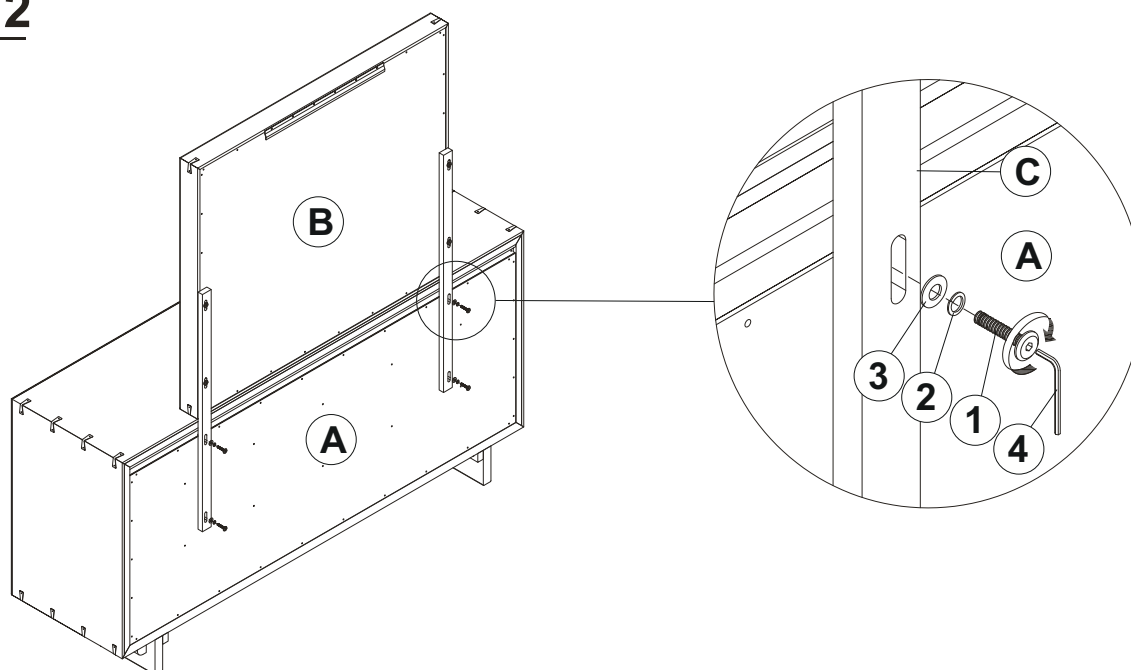

STEP 3 **COMPLETE**

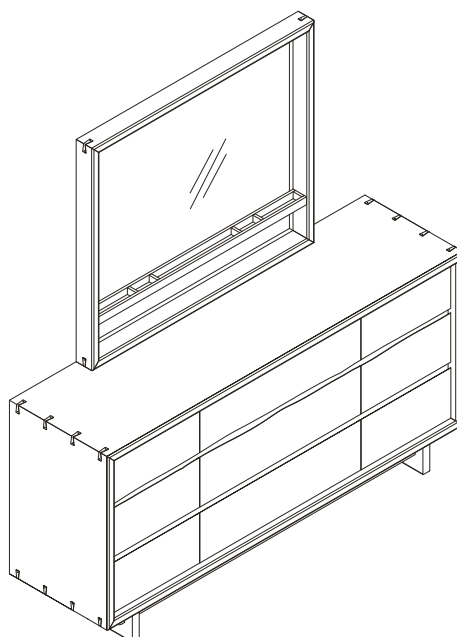

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

15 MINUTES


PART IDENTIFICATION

B MIRROR

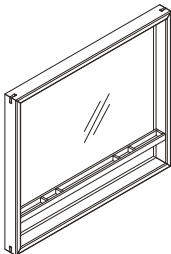

1PC

**D HANGING BAR
(PACKED WITH MIRROR)**



1PC

HARDWARE IDENTIFICATION

**6 PAN HEAD SCREW
(8 x 2" - BLK)**



6PCS

**7 PLASTIC ANCHOR
(S8 - GREY)**




6PCS

ITEM: **222804**


ASSEMBLY INSTRUCTIONS




STEP 1 FOR HANGING MIRROR

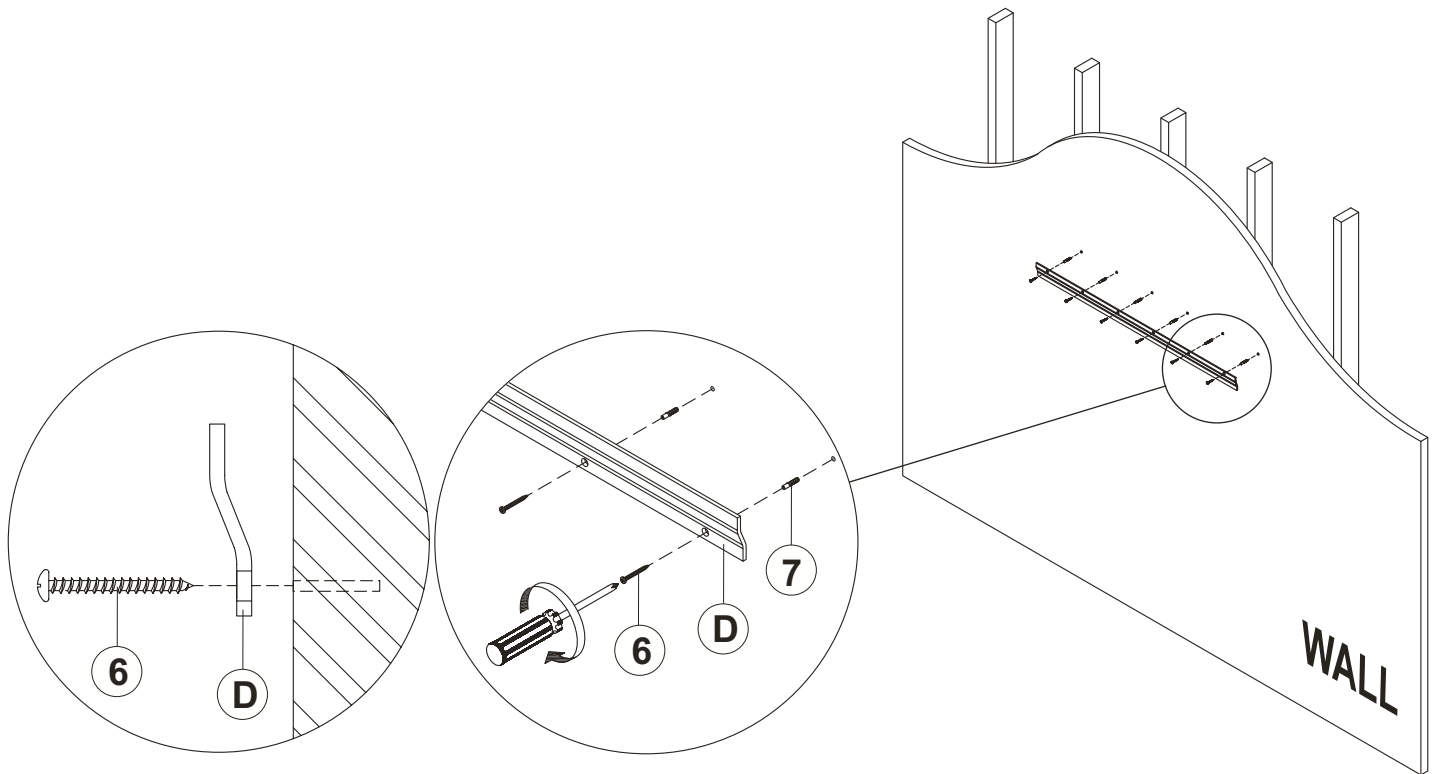

STEP 2 FOR HANGING MIRROR COMPLETE

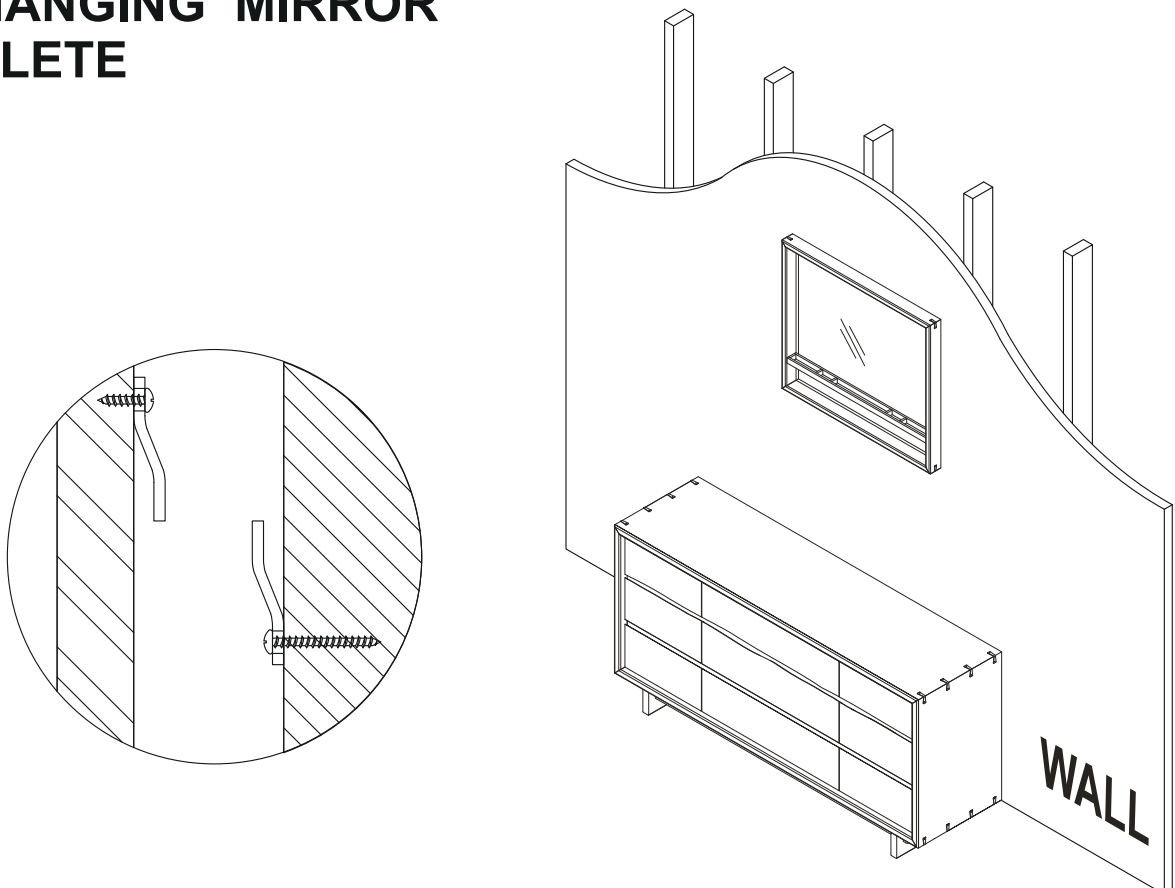

ITEM: **222804**

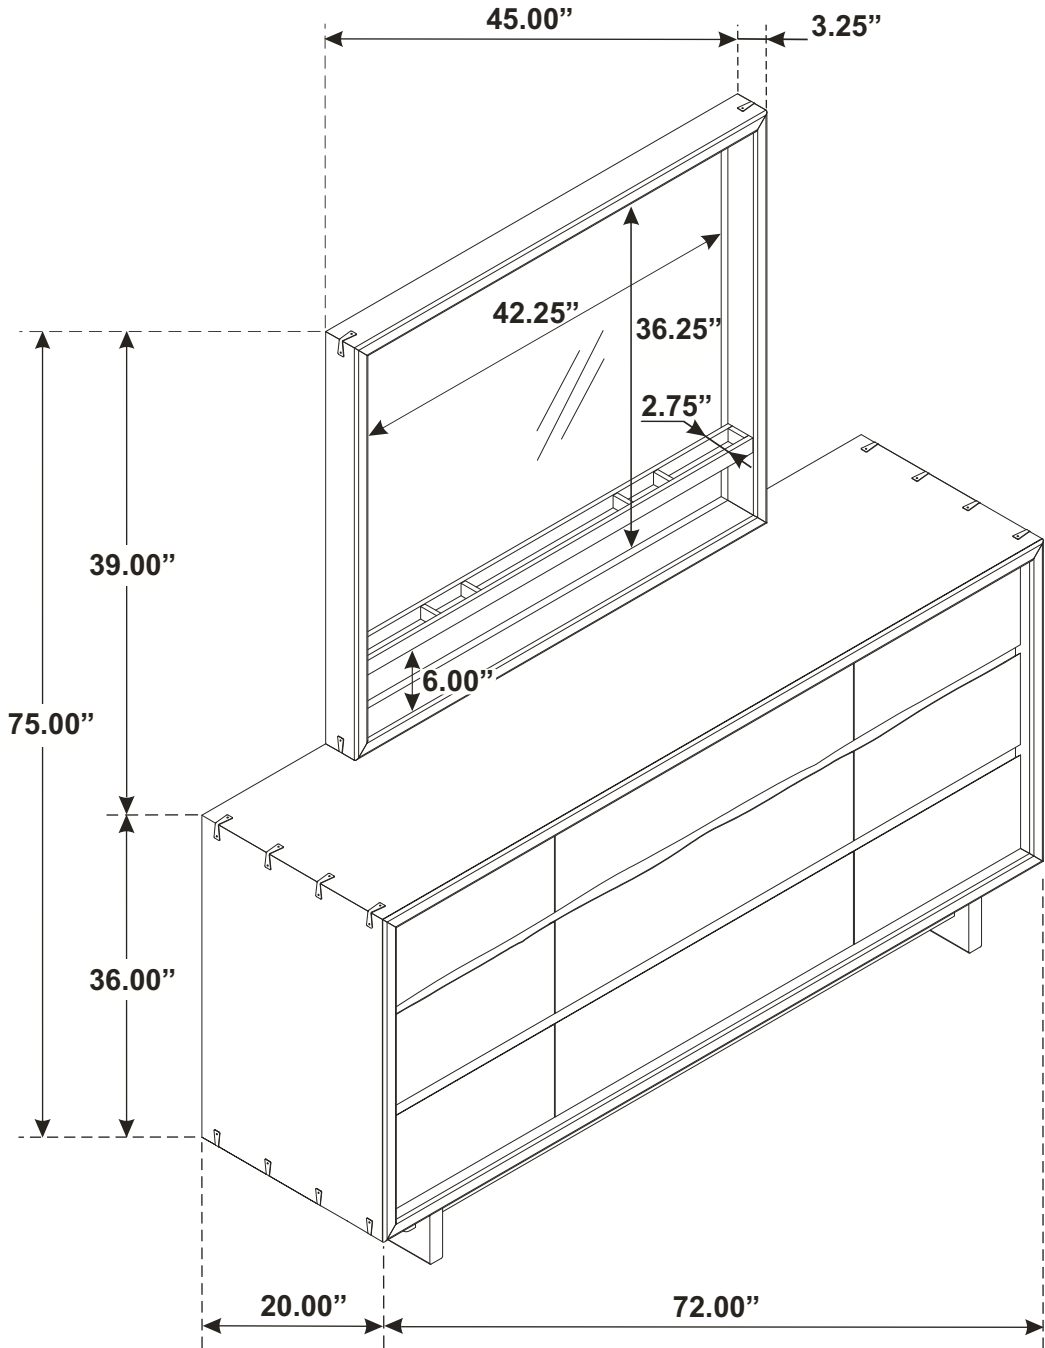

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

222805
Chest

ITEM: **222805**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

PART IDENTIFICATION


A CHEST

1PC

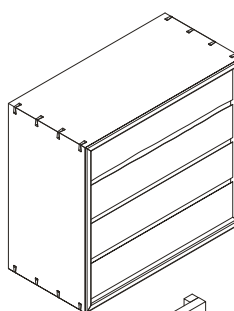


B FRONT FRAME RAIL

1PC




C LEFT SIDE FRAME

1PC



D RIGHT SIDE FRAME

1PC



HARDWARE IDENTIFICATION

1 BOLT
(5/16 x 60mm - BLK)

7PCS



2 LOCK WASHER
(1.6 x 14mm - BLK)

7PCS



3 FLAT WASHER
(2 x 18mm - BLK)

7PCS



4 ALLEN WRENCH
(M5 x 75mm - BLK)

1PC



5 WOOD DOWEL
(10 x 40mm - BRW)


6PCS




ITEM: **222805**

ASSEMBLY INSTRUCTIONS


STEP 1

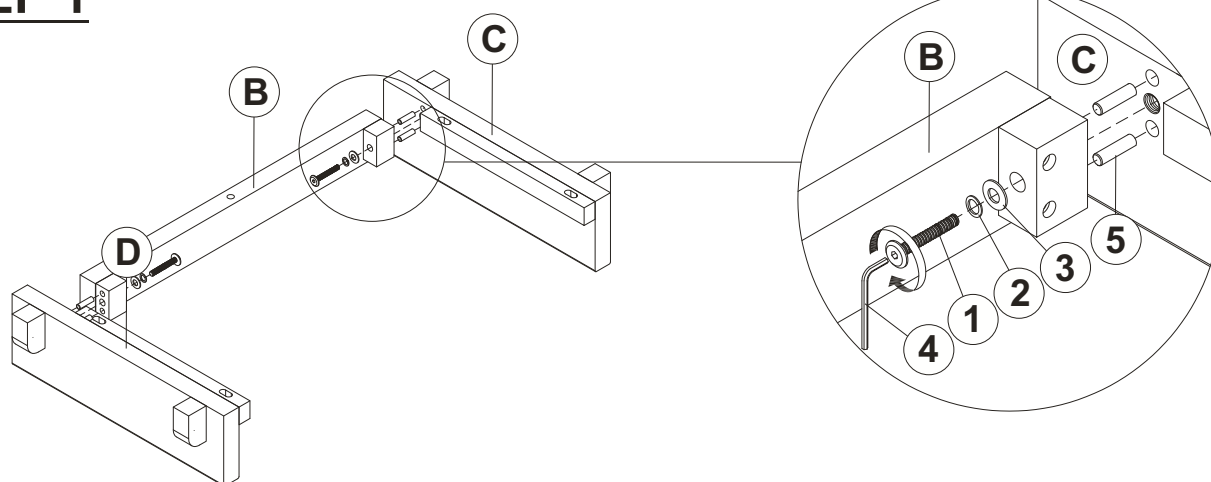

STEP 2

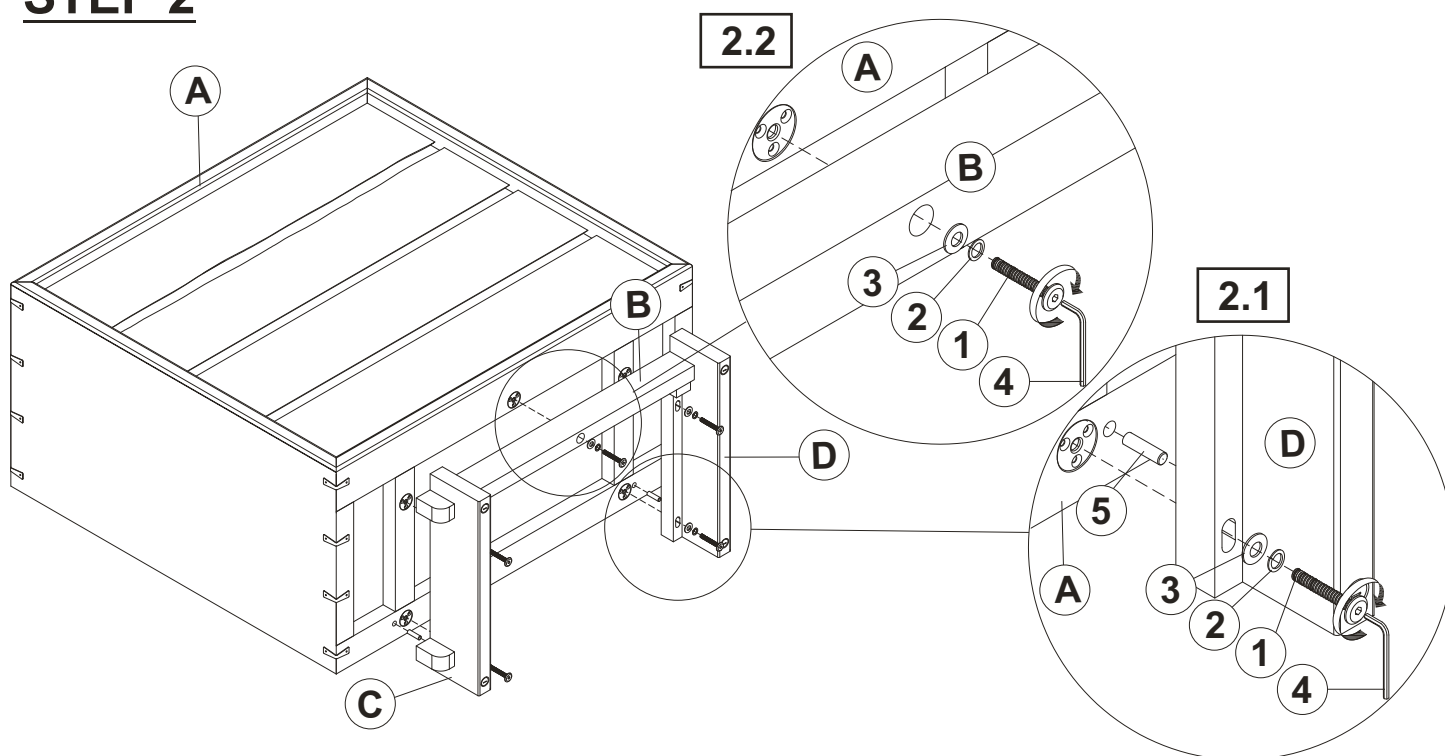

STEP 3 **COMPLETE**

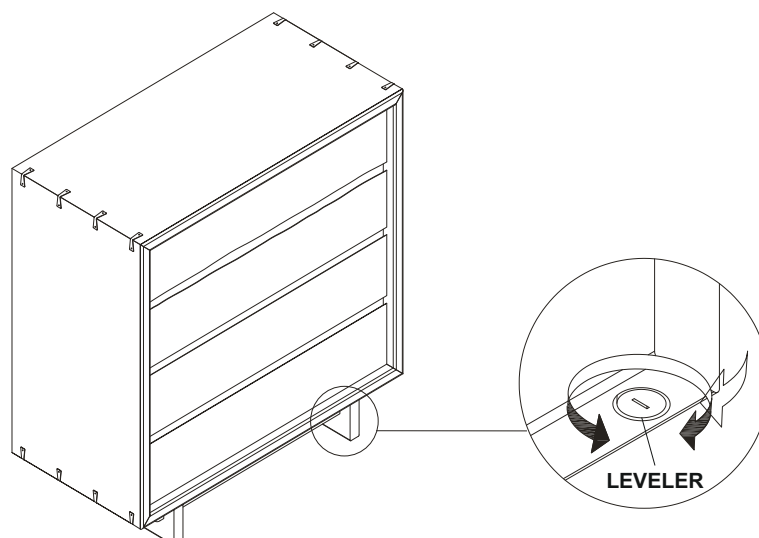

ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.


Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

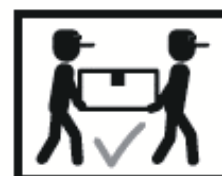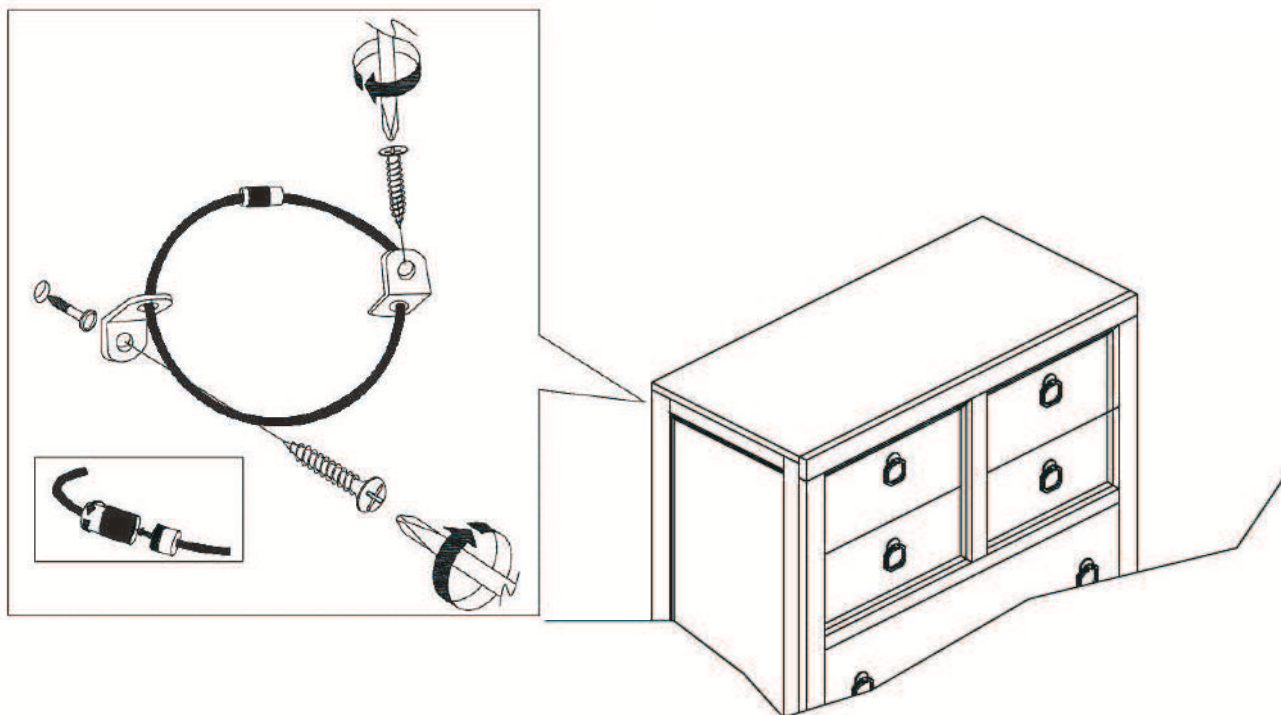

ITEM: **222805**

Inner Size of Drawer A : 35.25"W x 13.75"D x 4.75"H x 0.50"T
Inner Size of Drawer B : 35.25"W x 13.75"D x 5.00"H x 0.50"T
Inner Size of Drawer C : 35.25"W x 13.75"D x 6.00"H x 0.50"T

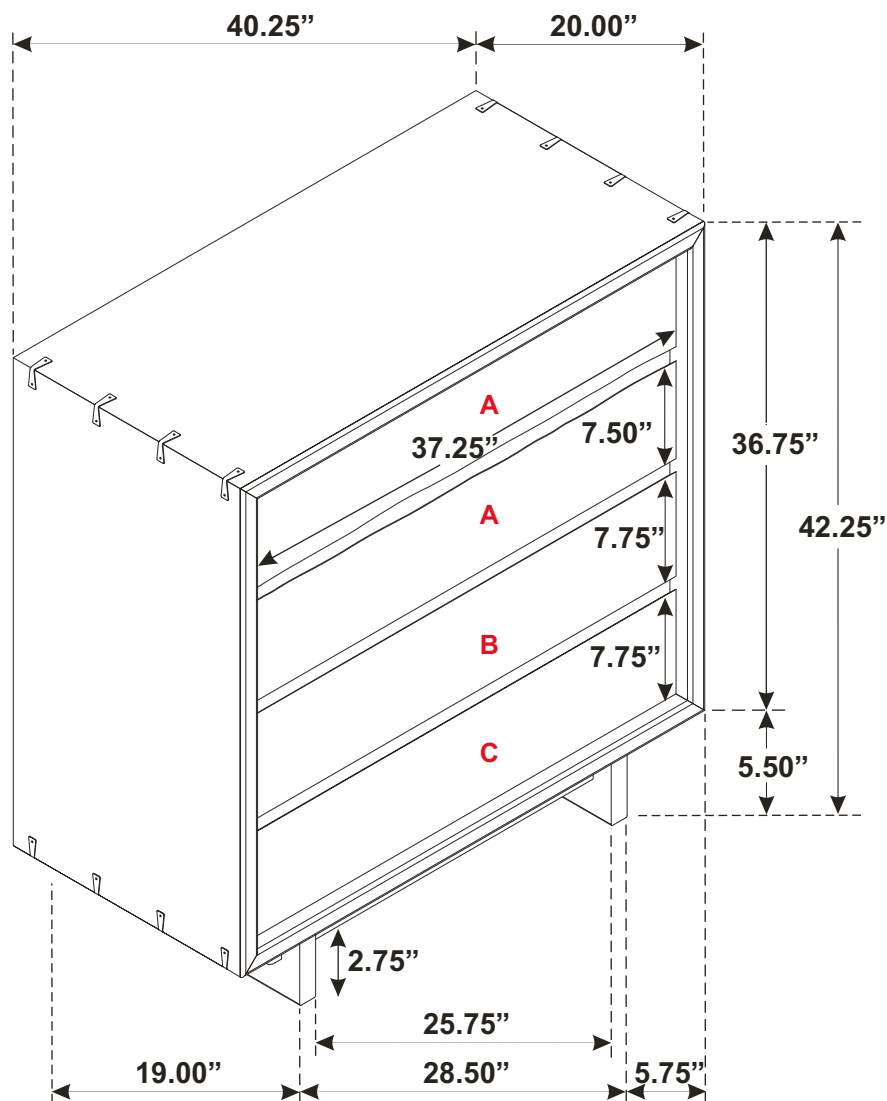

Note: Dimension tolerance $\pm 5\%$