


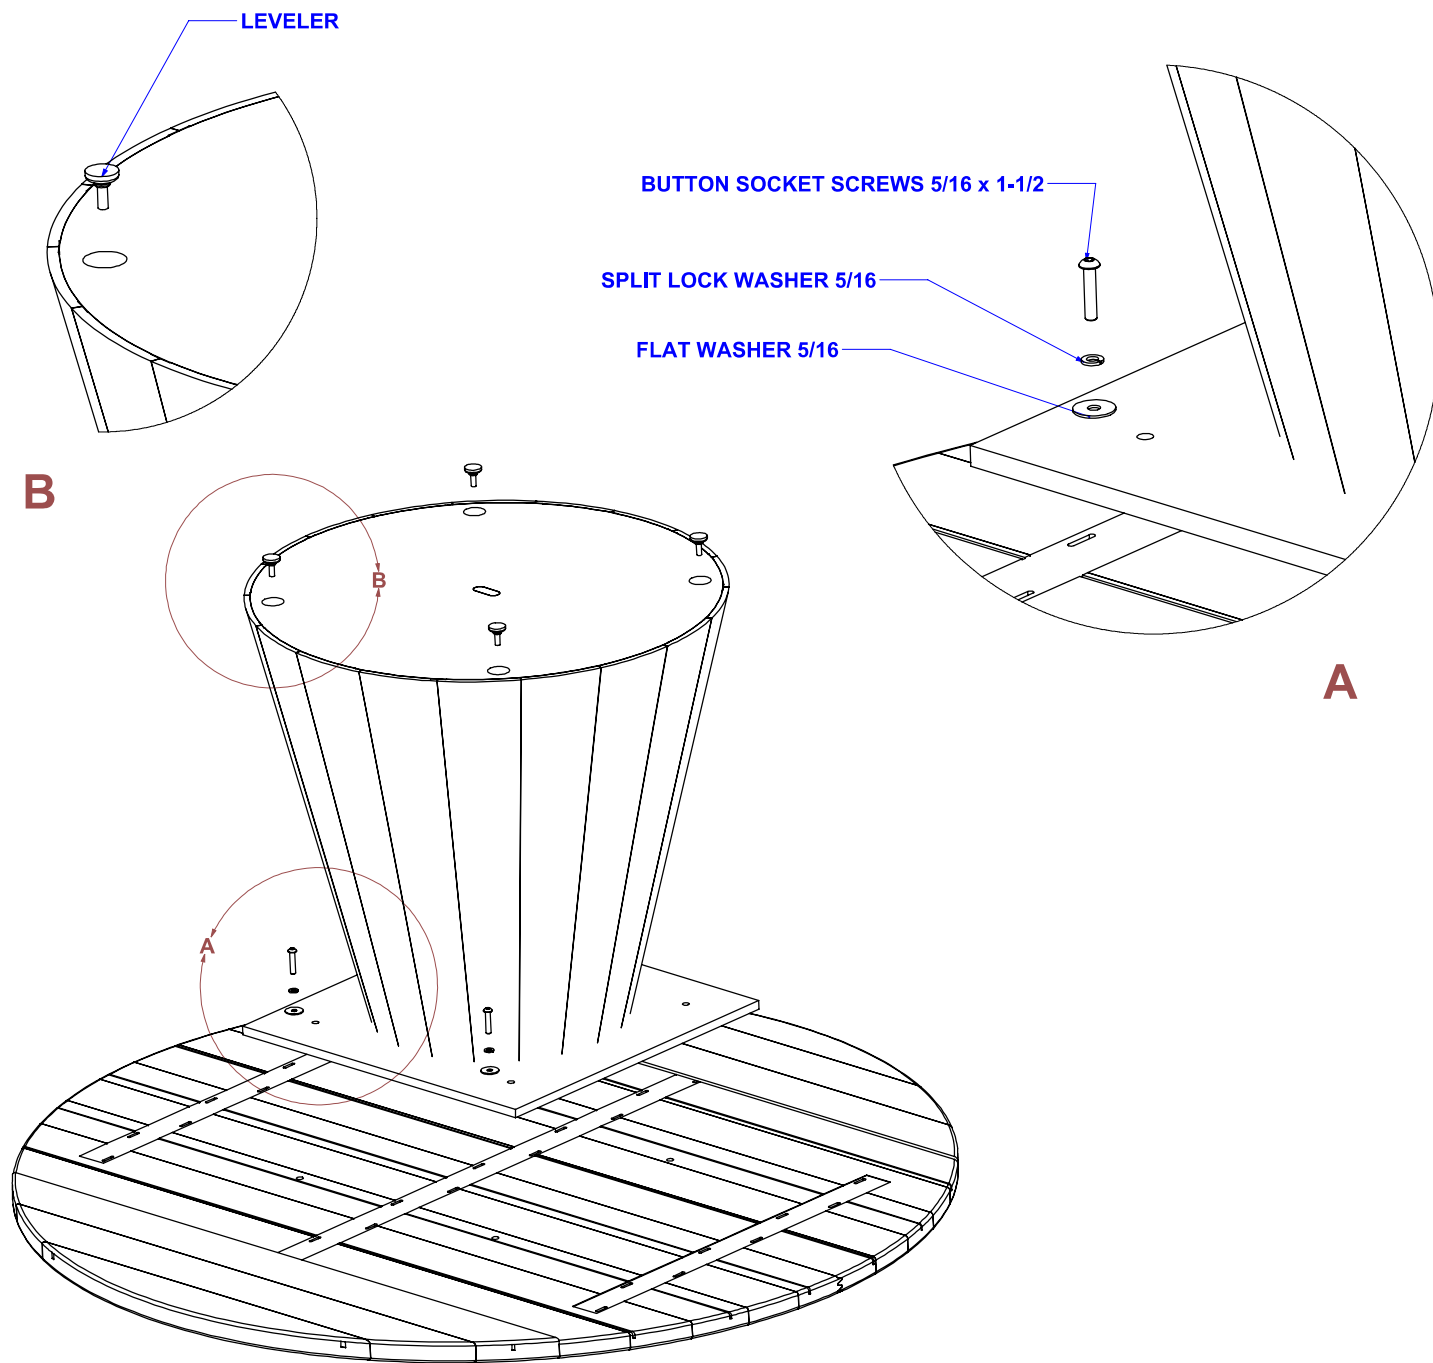

1. PLACE THE COVER AND BASE ON A FLAT SURFACE AS SHOWN IN THE PICTURE.
2. ALIGN THE BASE WITH THE HOLES AND INSERT THE SCREWS AS SHOWN IN THE PICTURE "A"
3. INSERT THE FURNITURE LEVELERS IN THE BASE AS SHOWN IN PICTURE
4. WITH HELP, TURN THE TABLE 180°



INTERNATIONAL
FURNITURE DIRECT, LLC

ASSEMBLING INSTRUCTIONS

I-RNDTP-E003

DESCRIPTION	#
SOCKET BUTTOM HEAD 5/16 X 1-1/2"	4
FLAT WASHER 5/16	4
LOCK WASHER	4
LEVELER	4
ALLEN KEY 3/16	1

ITEM	DESCRIPTION	#
1TOR005	TORNILLO ALLEN CABEZA BOLA 5/16 X 1-1/2"	4
1RON003	RONDANA PLANA 5/16	4
1RON011	RONDANA DE PRESION 5/16	4
1HER001	NIVELADORES 5/16 DIAMETRO 50MM	4
1HER251	LLAVE ALLEN 3/16	1



INTERNATIONAL
FURNITURE DIRECT, LLC

ASSEMBLING INSTRUCTIONS

I-RNDTP-E003