


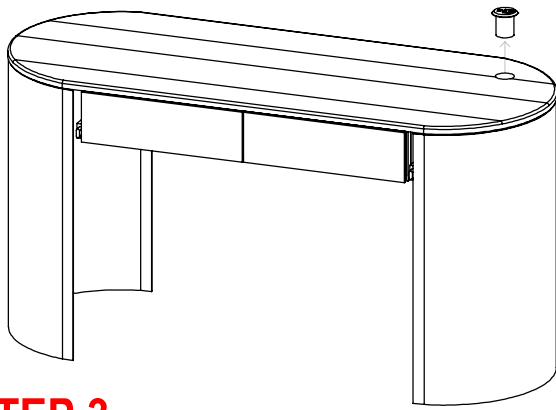

## STEP 1



1. REMOVE THE CONTACT FROM THE COVER

## STEP 2

2. WITH SOMEONE ELSE'S HELP, PLACE THE TOP UPSIDE DOWN ON A CLEAN SURFACE



## STEP 3

3. ALIGN THE LEGS WITH THE HOLES IN THE BOTTOM OF THE COVER AND FIX IT USING THE DOWEL 1/2 X 1-1/2"

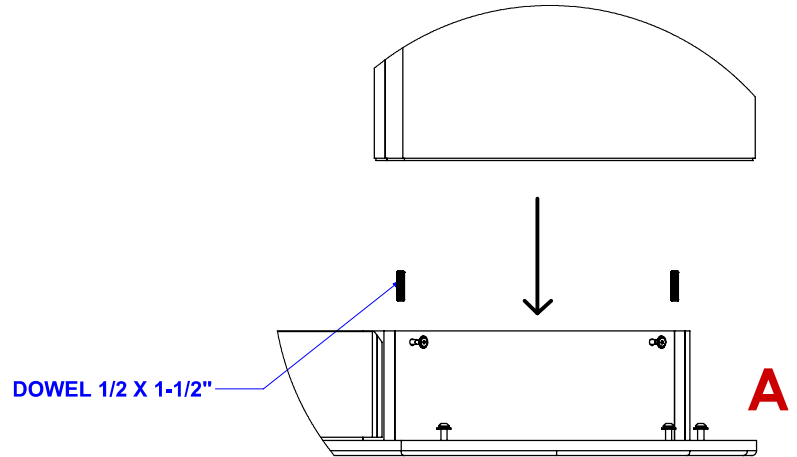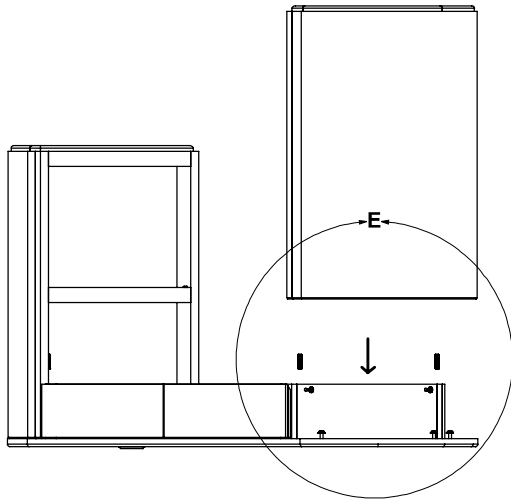

## STEP 4

4. ONCE'S THE LEGS ARE IN PLACE, INSERT THE SOCKET ALLEN BUTTON HEAD 5/16 x 1-1/4" AS SHOWN IN PICTURE B.

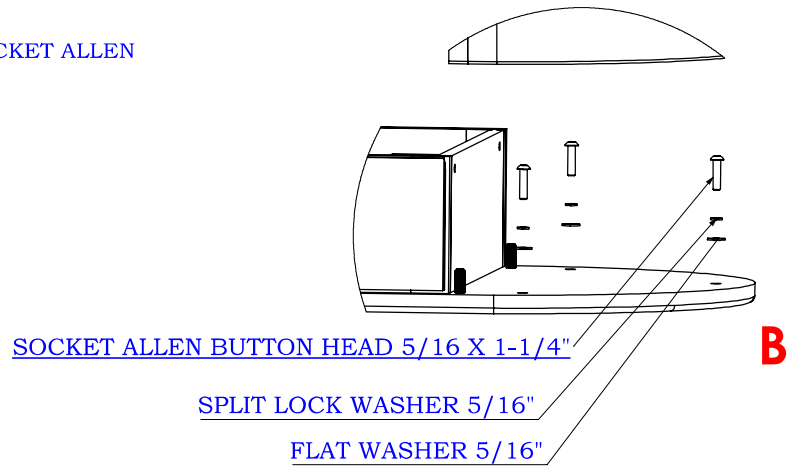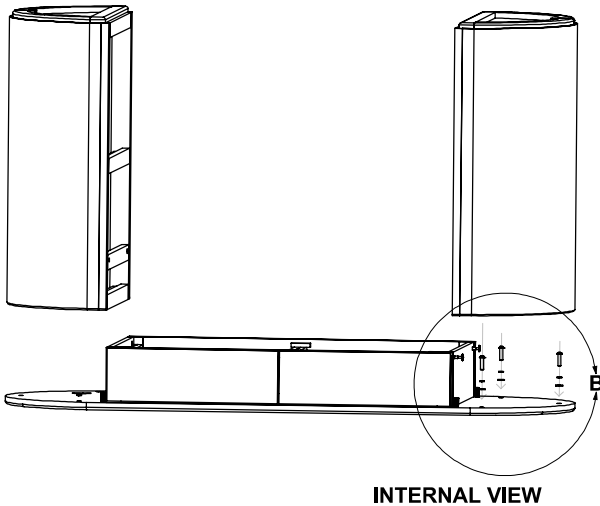

SOCKET ALLEN BUTTON HEAD 5/16 X 1-1/4"

SPLIT LOCK WASHER 5/16"

FLAT WASHER 5/16"

INTERNAL VIEW




ASSEMBLING  
INSTRUCTIONS

I-DSK-E018

| DESCRIPCION                            | # |
|----------------------------------------|---|
| FLAT WASHER 5/16"                      | 6 |
| SPLIT LOCK WASHER 5/16"                | 6 |
| SOCKET ALLEN BUTTON HEAD 5/16 X 1-1/4" | 6 |
| DOWEL 1/2 X 1-1/2"                     | 4 |
| JOIN CONNECTOR BOLT 1/4 X 1-1/2"       | 4 |
| ALLEN KEY 3/16"                        | 1 |


STEP 5

POSITION YOURSELF ON THE INNER SIDE OF THE PANEL. INSERT THE 1/4 X 1-1/2" CONNECTOR BOLT, ALIGNING IT WITH THE HOLES. REPEAT THE SAME ACTION ON THE OTHER SIDE.

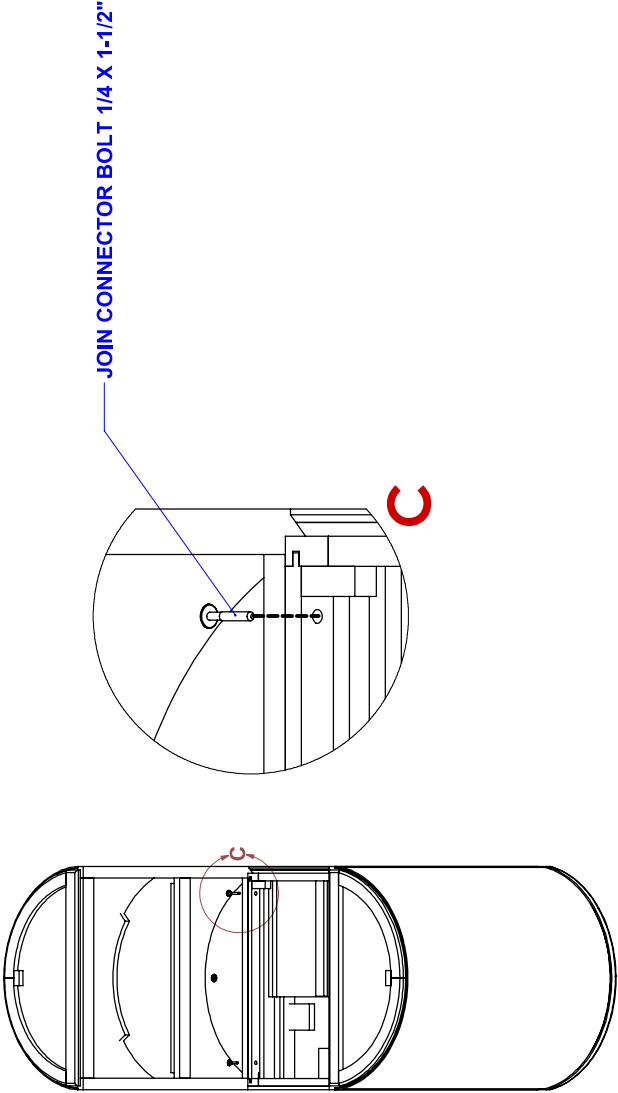

STEP 6

6. FINALLY, PUT THE CONTACT TOOTH BACK IN PLACE

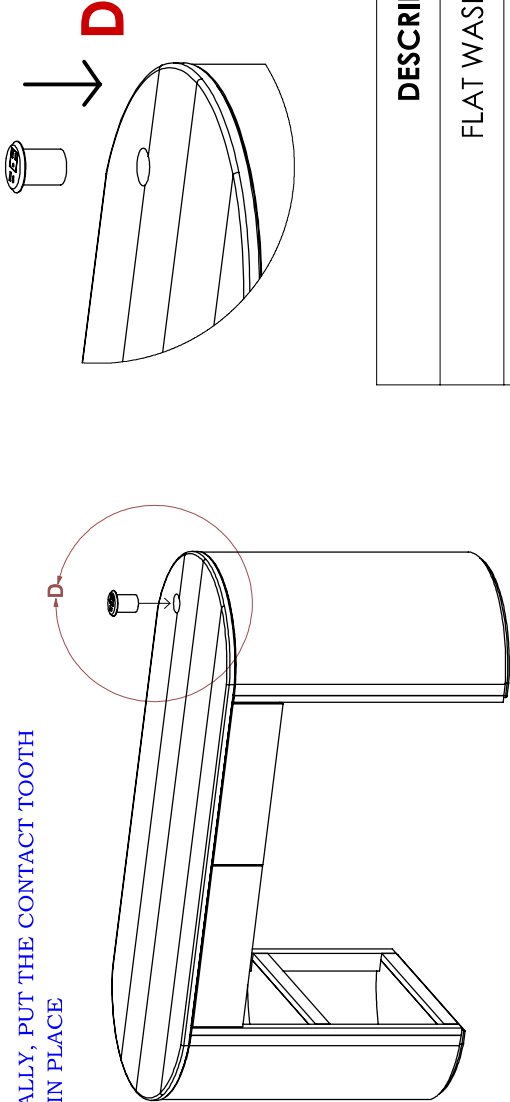

| DESCRIPCION                            | # |
|----------------------------------------|---|
| FLAT WASHER 5/16"                      | 6 |
| SPLIT LOCK WASHER 5/16"                | 6 |
| SOCKET ALLEN BUTTON HEAD 5/16 X 1-1/4" | 6 |
| DOWEL 1/2 X 1-1/2"                     | 4 |
| JOIN CONNECTOR BOLT 1/4 X 1-1/2"       | 4 |
| ALLEN KEY 3/16"                        | 1 |

|                                                                                       |                         |
|---------------------------------------------------------------------------------------|-------------------------|
|  | ASSEMBLING INSTRUCTIONS |
|                                                                                       | I-DSK-E018              |

| DESCRIPCION                                                              | # |
|--------------------------------------------------------------------------|---|
| RONDANA PLANA 5/16"                                                      | 6 |
| RONDANA DE PRECION 5/16"                                                 | 6 |
| TORNILLO ALLEN CABEZA BOLA 5/16 X 1-1/4"                                 | 6 |
| PERNO DE MADERA 10 X 40 mm                                               | 4 |
| TORNILLO PERNO UNION DE 1/4" X 40MM                                      | 4 |
| LLAVE ALLEN 3/16"                                                        | 1 |
| EL TORNILLO PERNO UNION NO ES NECESARIO PINTARLO VA POR LA PARTA INTERNA |   |



## ASSEMBLING INSTRUCTIONS

I-DSK-E018