

**ASSEMBLY INSTRUCTIONS**  
**COASTER FINE FURNITURE**



*Fine Furniture for every stage of life*

**707727**  
**END TABLE**

# ITEM: 707727

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.











### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME

50 MINUTES




## PARTS IDENTIFICATION

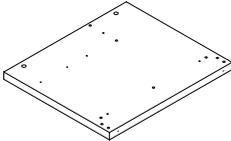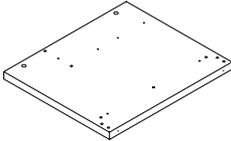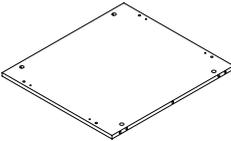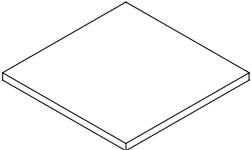A	LEFT SIDE PANEL		1 PC	G	DRAWER FRONT PANEL		1 PC
B	RIGHT SIDE PANEL		1 PC	H	DRAWER BACK PANEL		1 PC
C	LOWER CROSS BRACE		2 PCS	I	DRAWER BOTTOM PANEL		1 PC
D	BOTTOM PANEL		1 PC	J	DRAWER LEFT SIDE PANEL		1 PC
E	BACK PANEL		1 PC	K	DRAWER RIGHT SIDE PANEL		1 PC
F	TOP PANEL		1 PC	L	DRAWER BOTTOM SUPPORT		1 PC

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

## HARDWARE IDENTIFICATION

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	7	RAIL L = 350mm BLK		1 SET
2	WOODEN DOWEL Ø8x30mm		34 PCS	8	SCREW Ø3x12mm BLK		12 PCS
3	CAM BOLT Ø7x35.5mm SR		19 PCS	9	HANDLE BLK		1 PC
4	CAM LOCK Ø15x12mm SR		19 PCS	10	HANDLE BOLT M5x25mm BLK		2 PCS
5	SCREW Ø4.3x35mm SR		5 PCS	11	NUT M5		2 PCS
6	PLASTIC FEET Ø15mm		4 PCS	12	STICKER Ø20mm		4 PCS

Z7,Z9,Z10,Z11 not included in blister packaging.

**NOTE:**


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 707727


# COASTER

FINE FURNITURE

## STEP 1

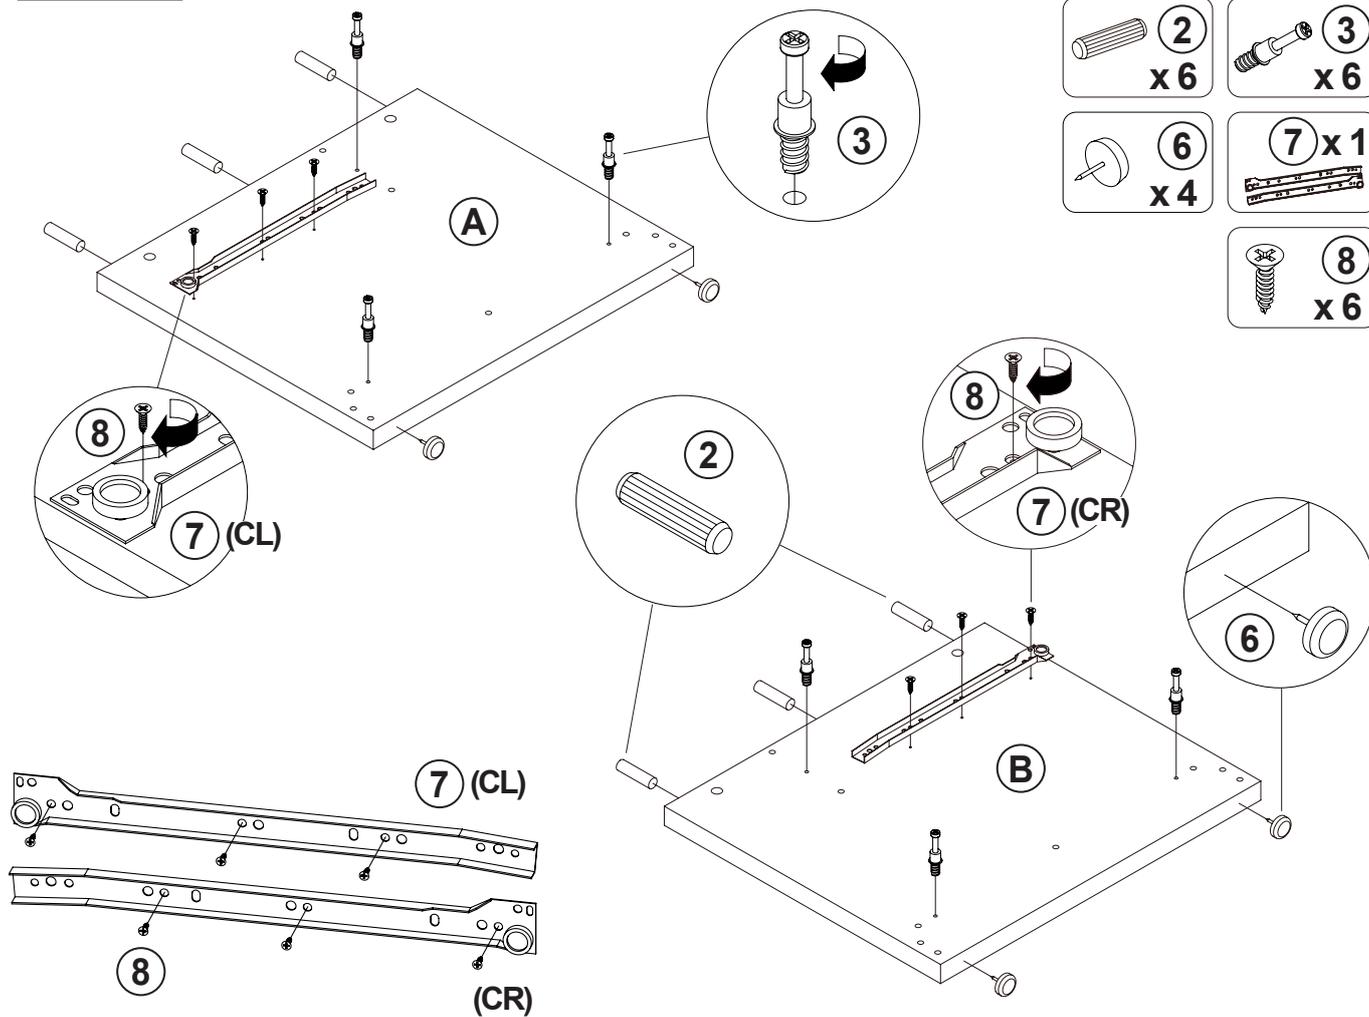


## STEP 2

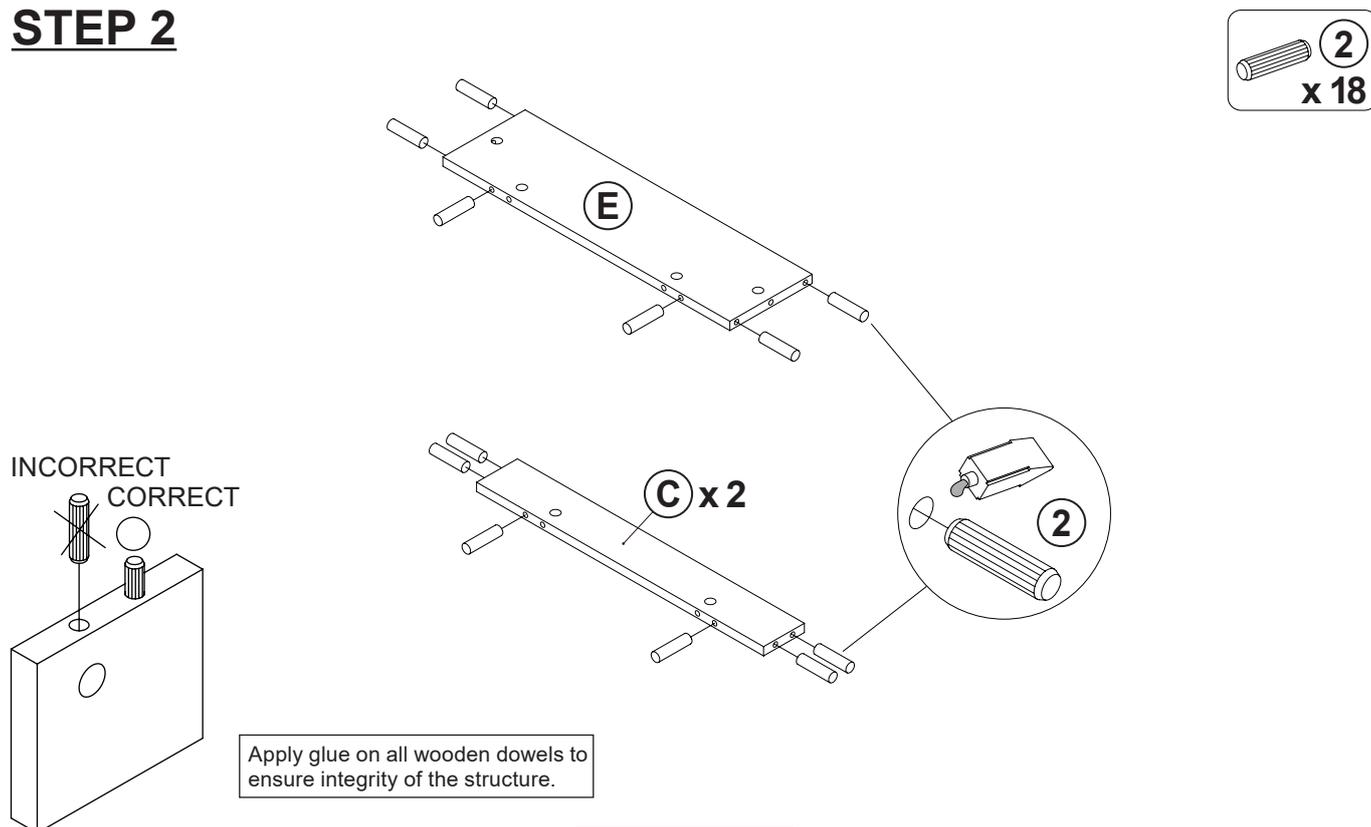

ITEM: 707727


**COASTER**  
FINE FURNITURE

**STEP 3**

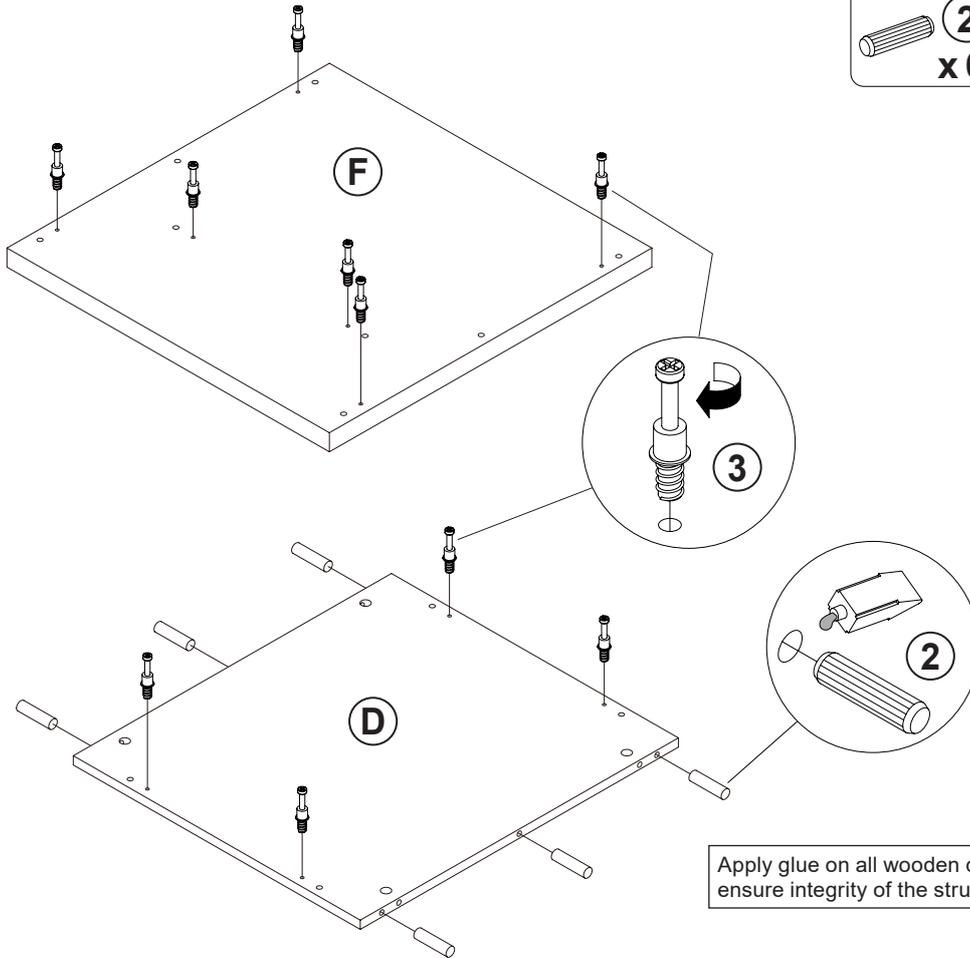

Apply glue on all wooden dowels to ensure integrity of the structure.



**STEP 4**

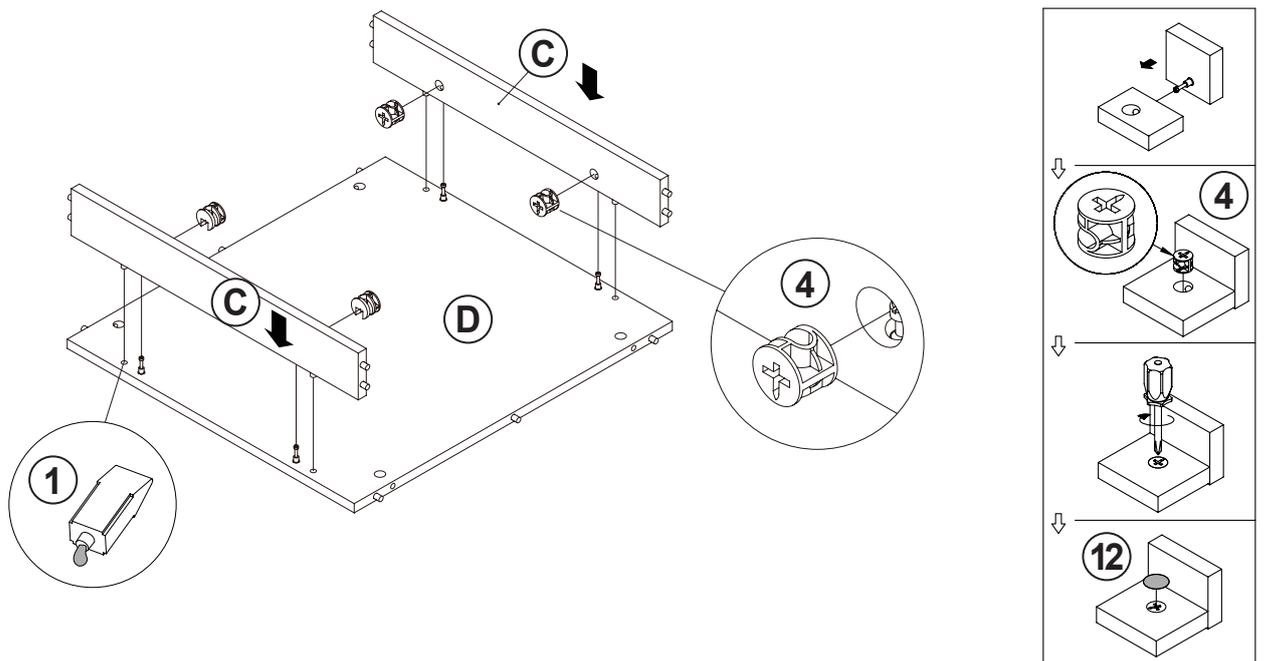



ITEM: 707727

**COASTER**  
FINE FURNITURE

**STEP 5**

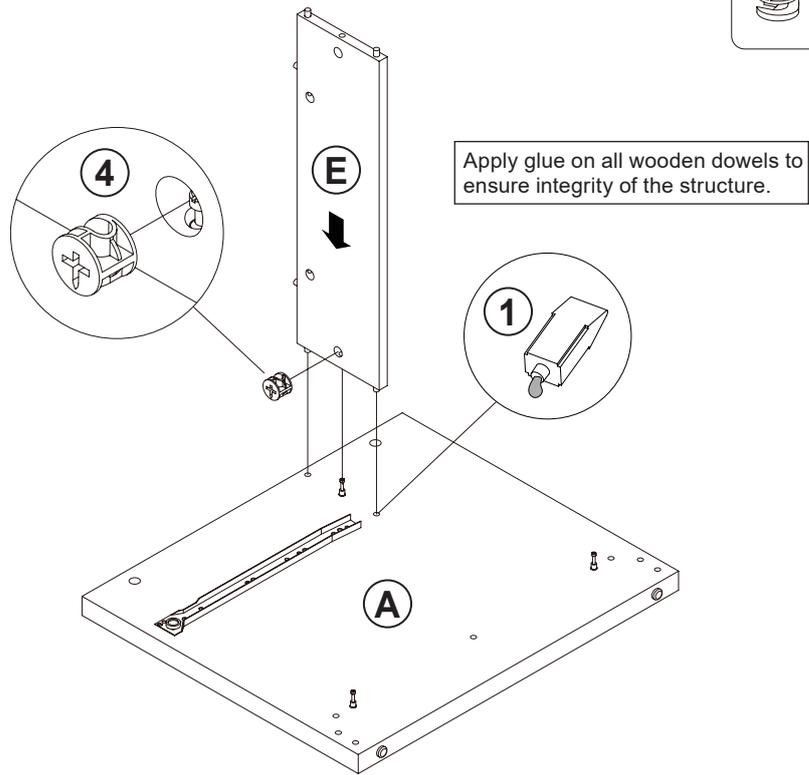



**STEP 6**

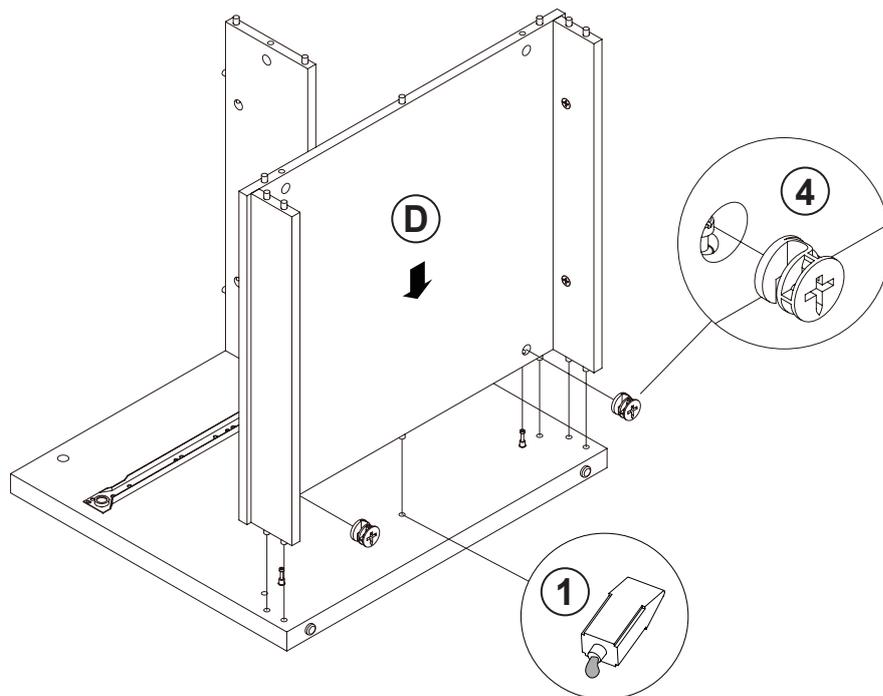



ITEM: 707727

**COASTER**  
FINE FURNITURE

**STEP 7**

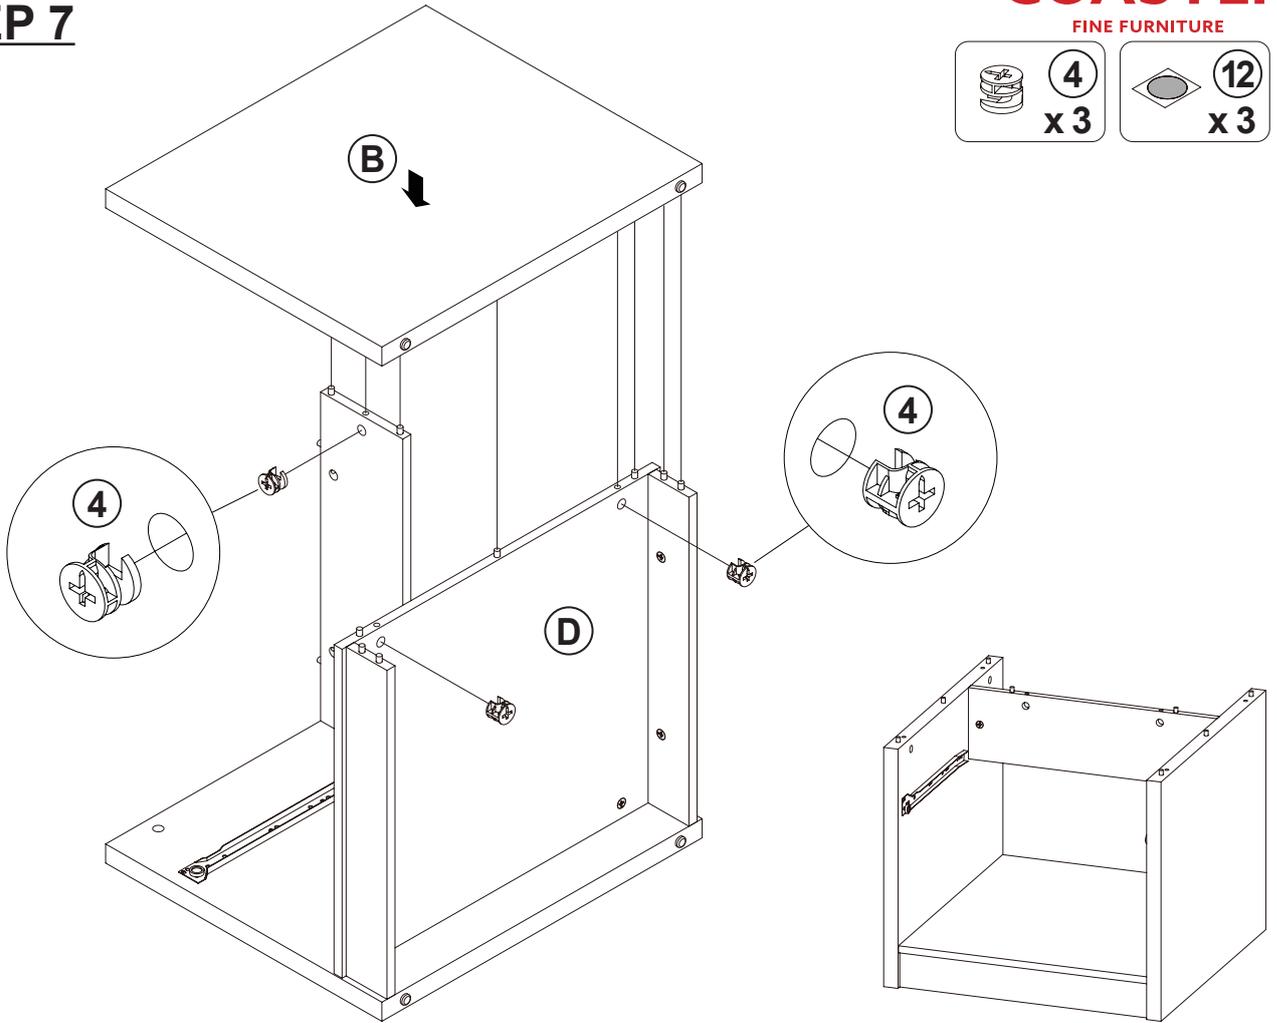


**STEP 8**

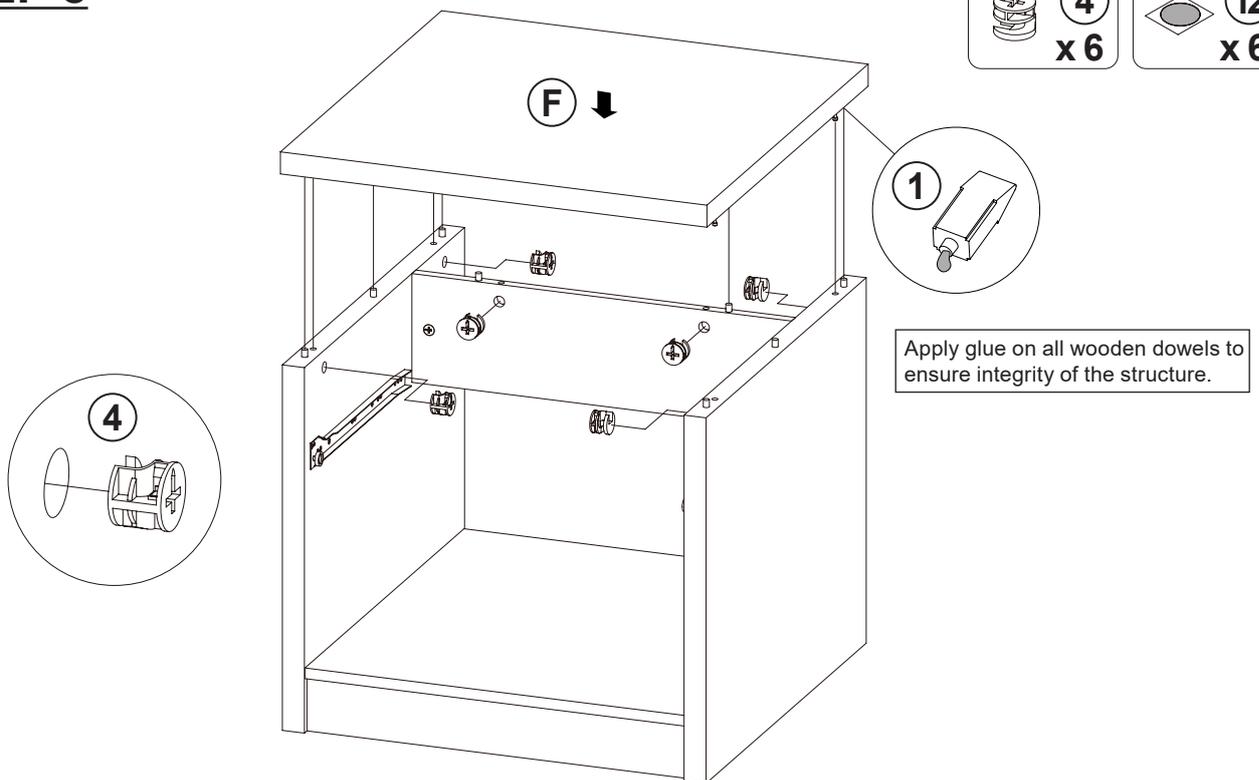



ITEM: 707727

**COASTER**  
FINE FURNITURE


**STEP 9**

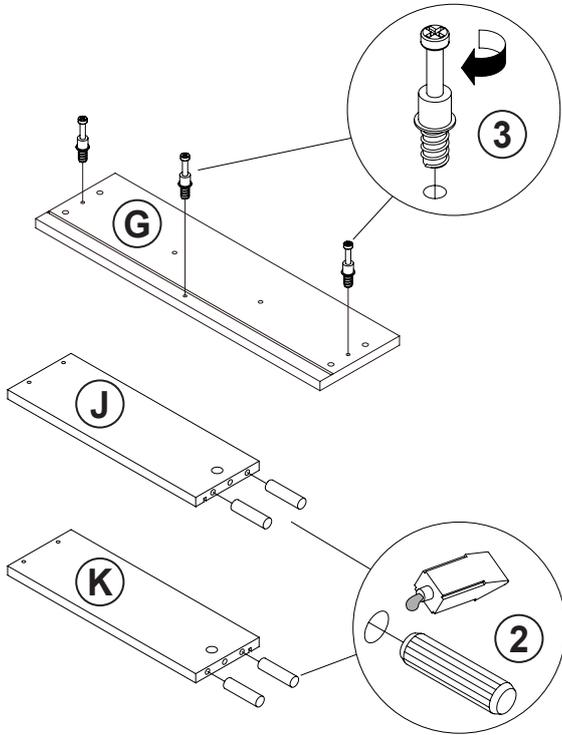



**STEP 10**

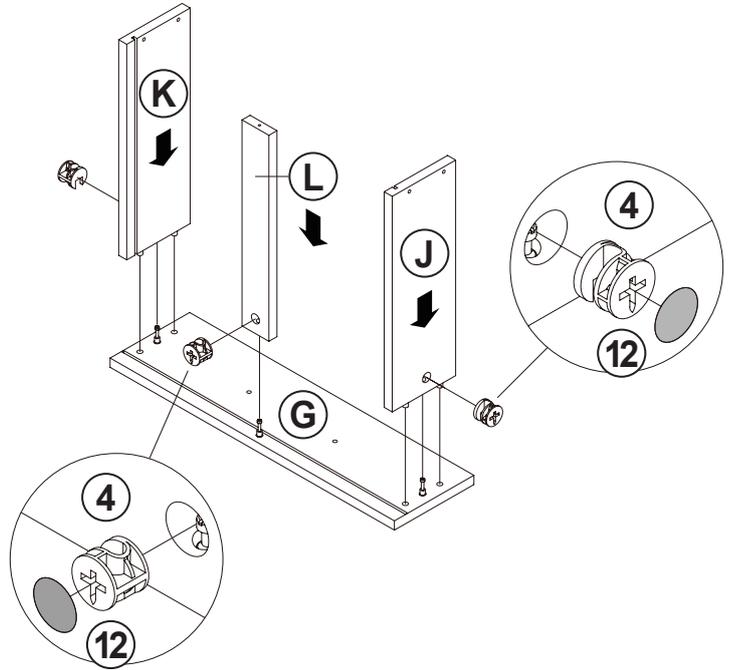

**STEP 11**


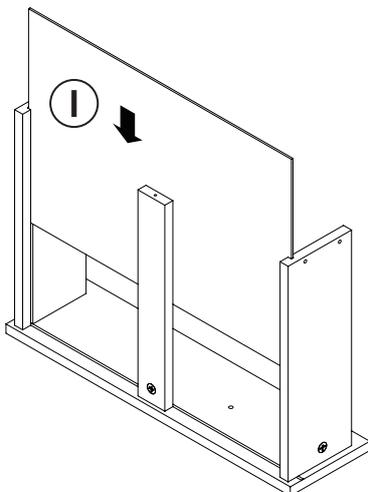


**STEP 12**

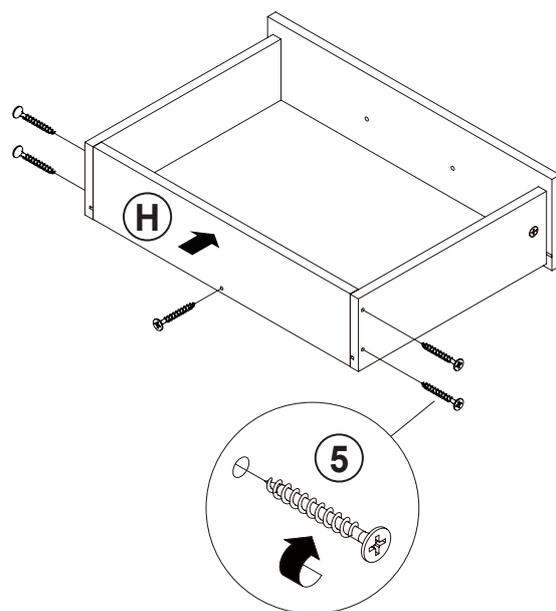


ITEM: 707727



**STEP 13**

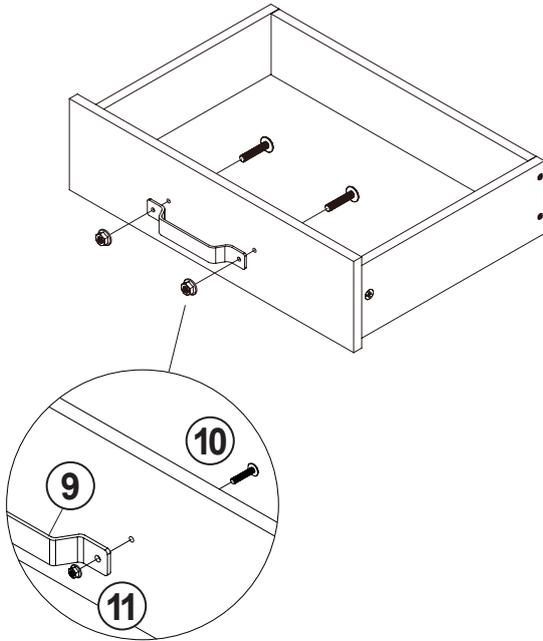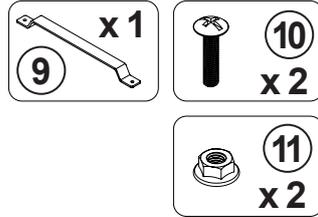



**STEP 14**

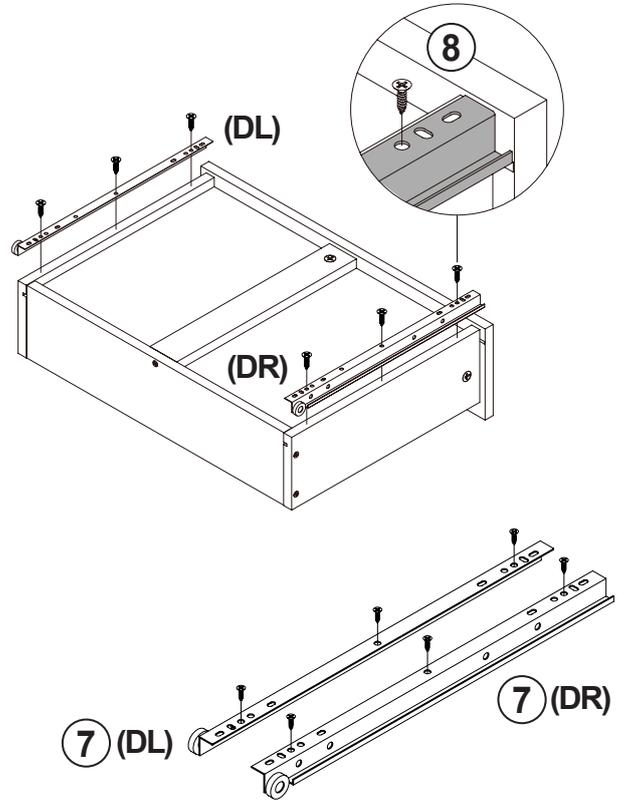

**STEP 15**

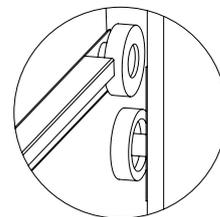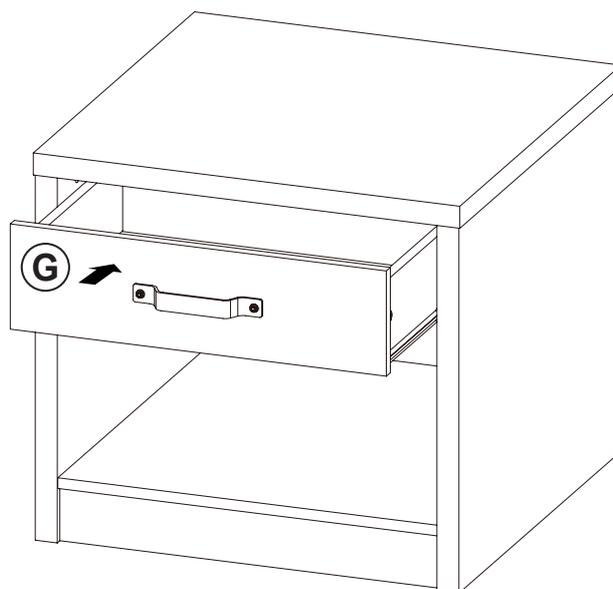

ITEM:707727

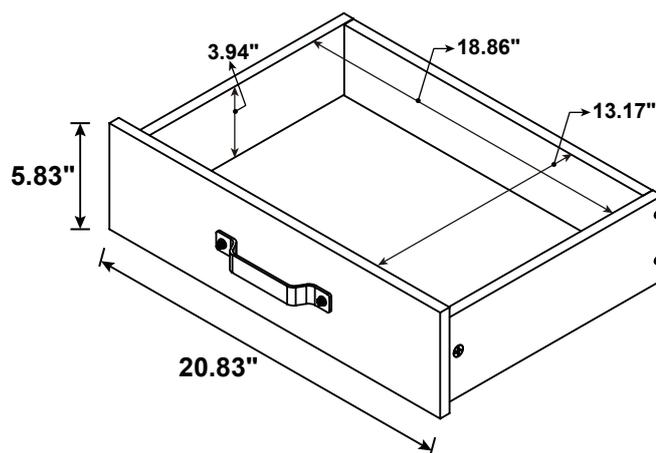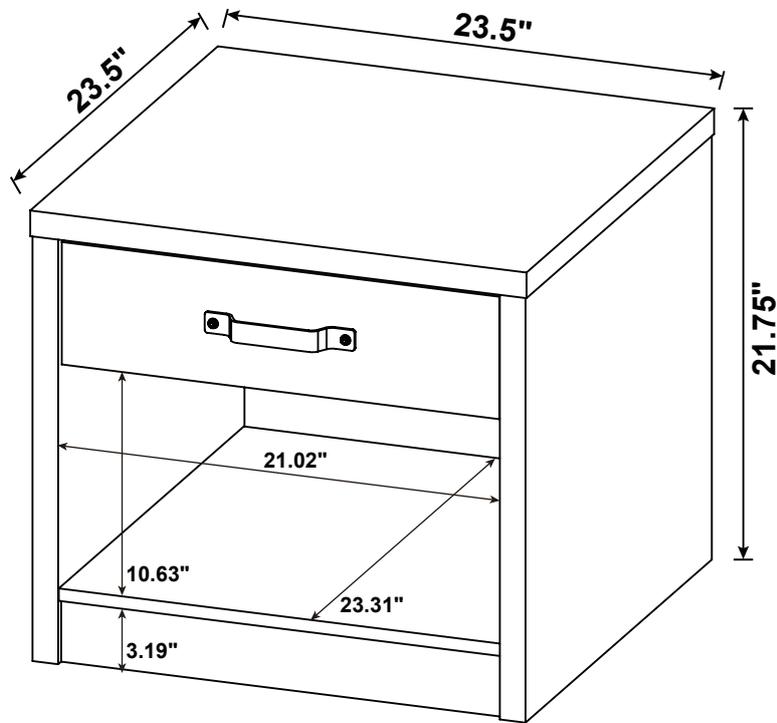

Note : Dimension tolerance  $\pm 5\%$