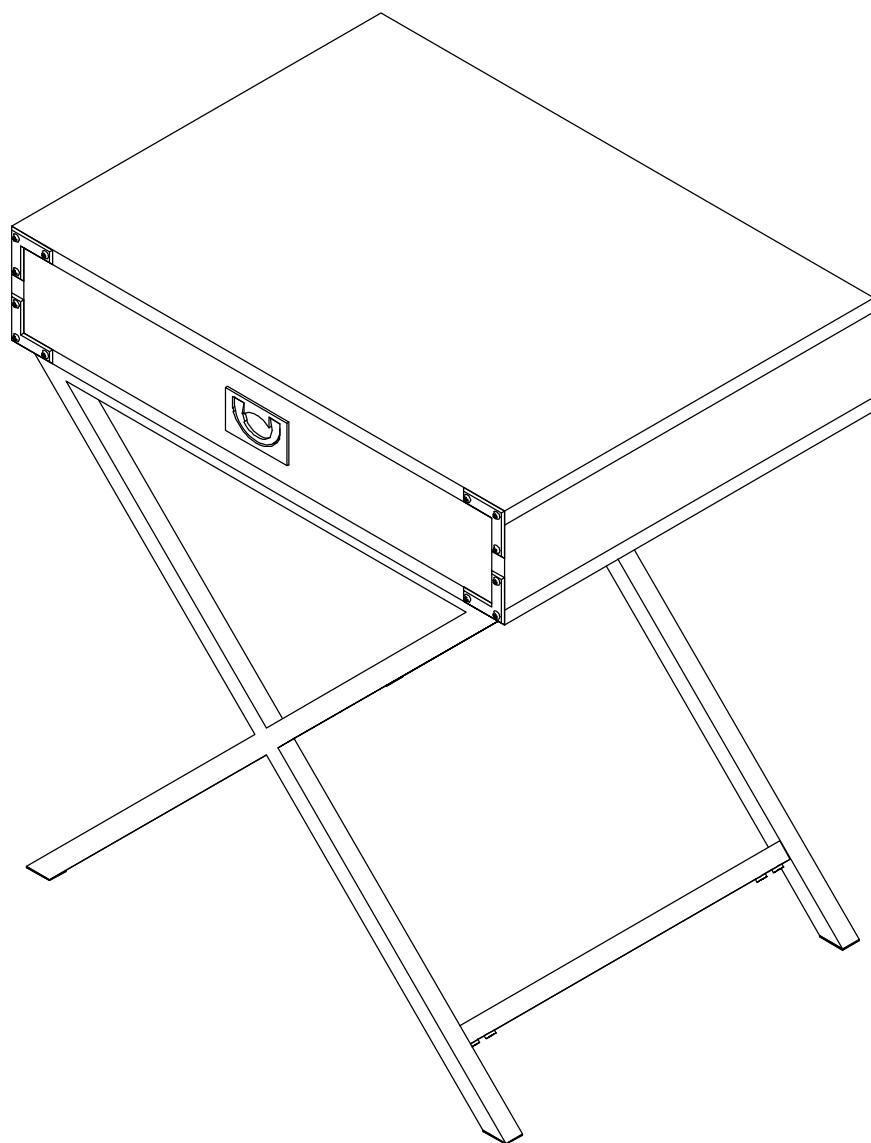







Evie Night Stand White
Item #: A.4967.NS
ASSEMBLY INSTRUCTIONS









ASSEMBLY INSTRUCTIONS





Item #: A.4967.NS

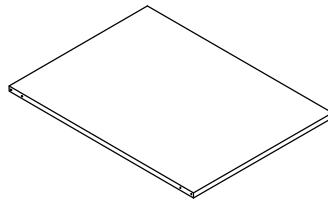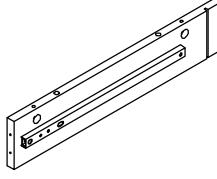
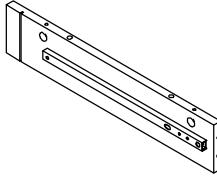
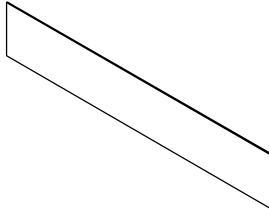
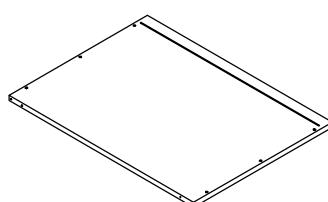
Please identify and locate all assembly parts (see parts list) before discarding any packing materials.
Some parts may have become loose during transit.

PARTS LIST			
NO.	SKETCH	DESCRIPTION	QTY
1		TOP PANEL	1PC
2		LEFT PANEL	1PC
3		RIGHT PANEL	1PC
4		BACK PANEL	1PC
5		BOTTOM PANEL	1PC

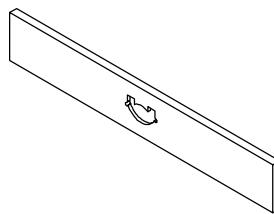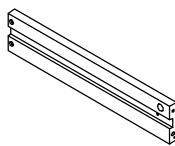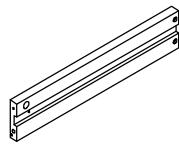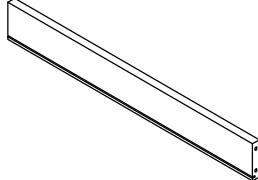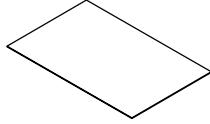NO.	SKETCH	DESCRIPTION	QTY
6		DRAWER FRONT PANEL	1PC
7		DRAWER LEFT PANEL	1PC
8		DRAWER RIGHT PANEL	1PC
9		DRAWER BACK PANEL	1PC
10		DRAWER BOTTOM PANEL	1PC
11		HANDLE	1PC

NO.	SKETCH	DESCRIPTION	QTY
12		FRONT AND BACK FRAME	2PCS
13		CROSSBAR	4PCS
14		L SHAPE PLATE	4PCS
15		SHORT BOLT 1/4" x 12mm	16PCS
16		LONG BOLT 1/4" x 28mm	4PCS
17		SMALL SCREW 3 x 10mm	12PCS

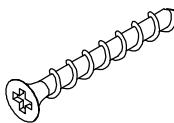
NO.	SKETCH	DESCRIPTION	QTY
18		SCREW 8# x 38mm	10PCS
19		SLIDE BOLT 5/32" x 12mm	4PCS
20		CAM-BOLT 38mm	6PCS
21		LARGE CAM-LOCK ø15mm	4PCS
22		SMALL CAM-LOCK ø12mm	2PCS
23		LARGE WOOD DOWEL 8 x 30mm	4PCS

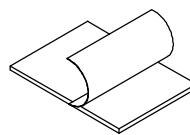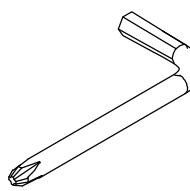NO.	SKETCH	DESCRIPTION	QTY
24		SMALL WOOD DOWEL 6 x 30mm	2PCS
25		ADHESIVE	4PCS
26		GLUE	1PC
27		ALLEN KEY 4mm	1PC


NOTE: Do not tighten until each step is completed or instructed.

Step 1: 1. Apply Glue (26) on Wood Dowel (23).

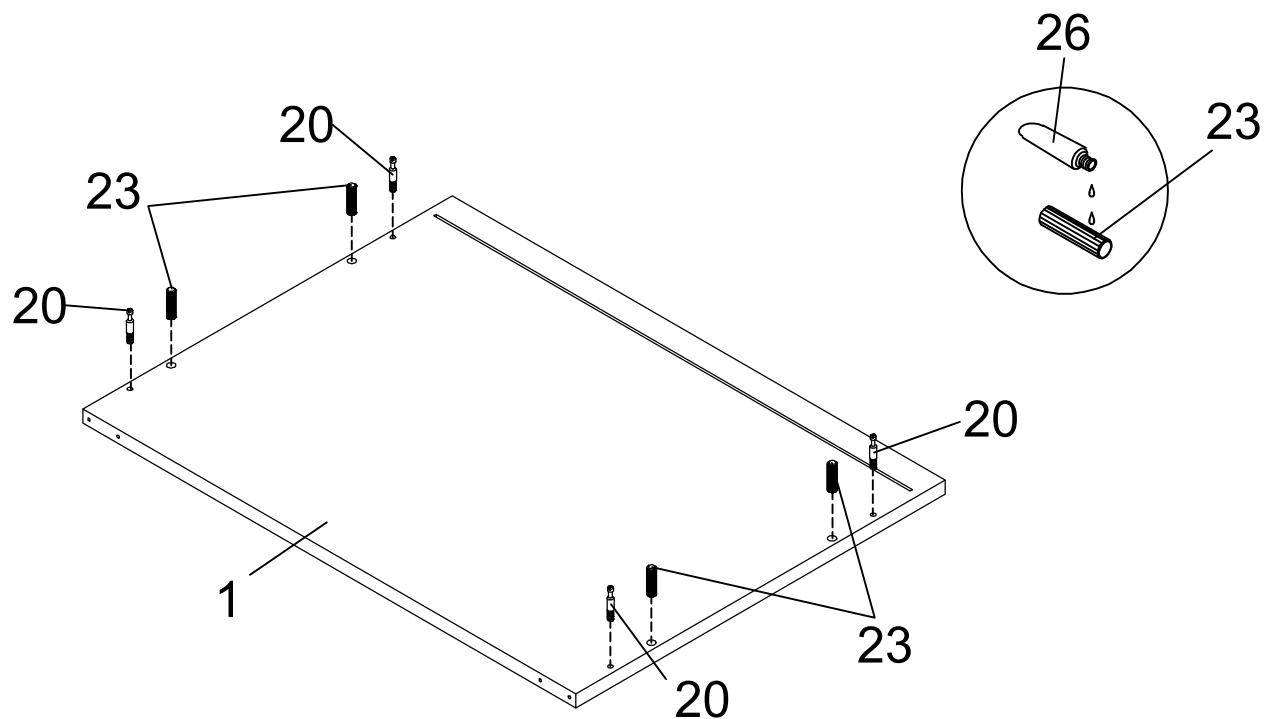
2. Install Cam-Bolt (20) and Large Wood Dowel (23) on the Top Panel (1).



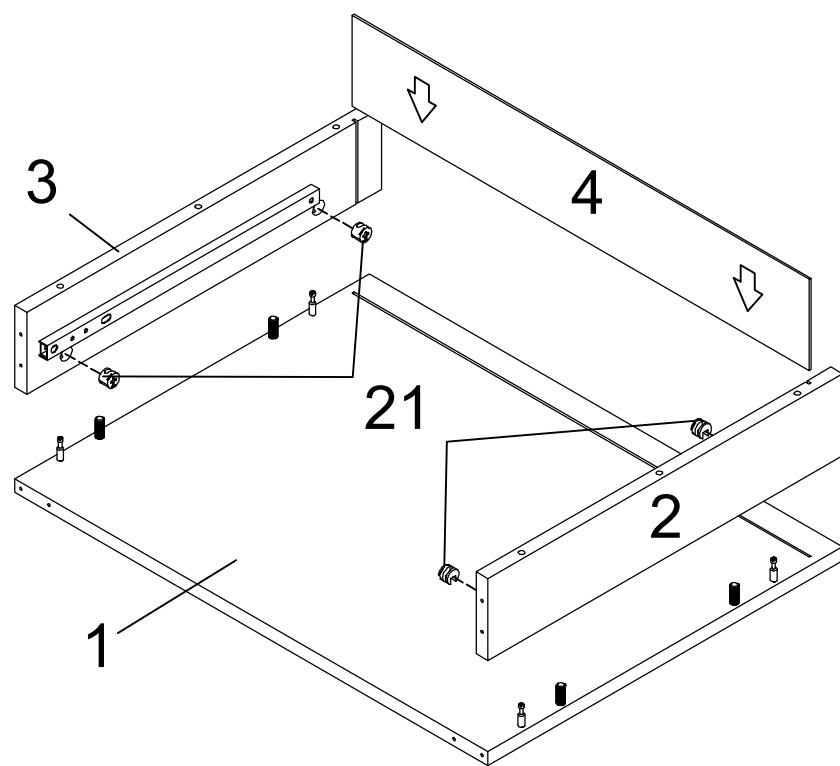
Step 2: 1. Attach Left Panel (2) and Right Panel (3) to Top Panel (1) using Large Cam-Lock (21)
2. Align and insert the Back Panel (4) between Left Panel (2) and Right Panel (3).



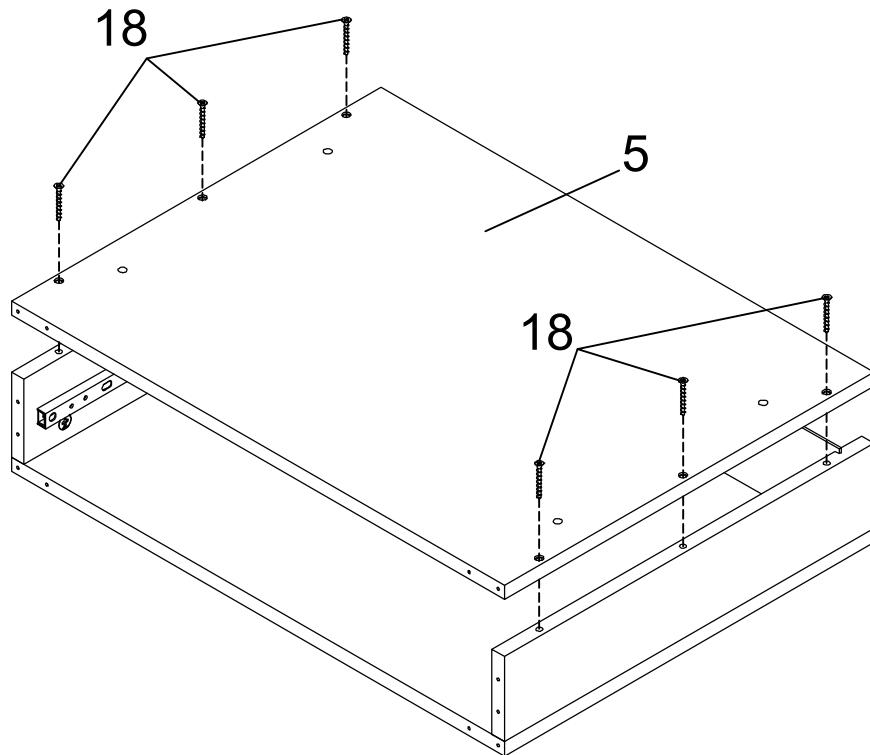Step 3: Attach Bottom Panel (5) to Step 2 by using Screw (18).




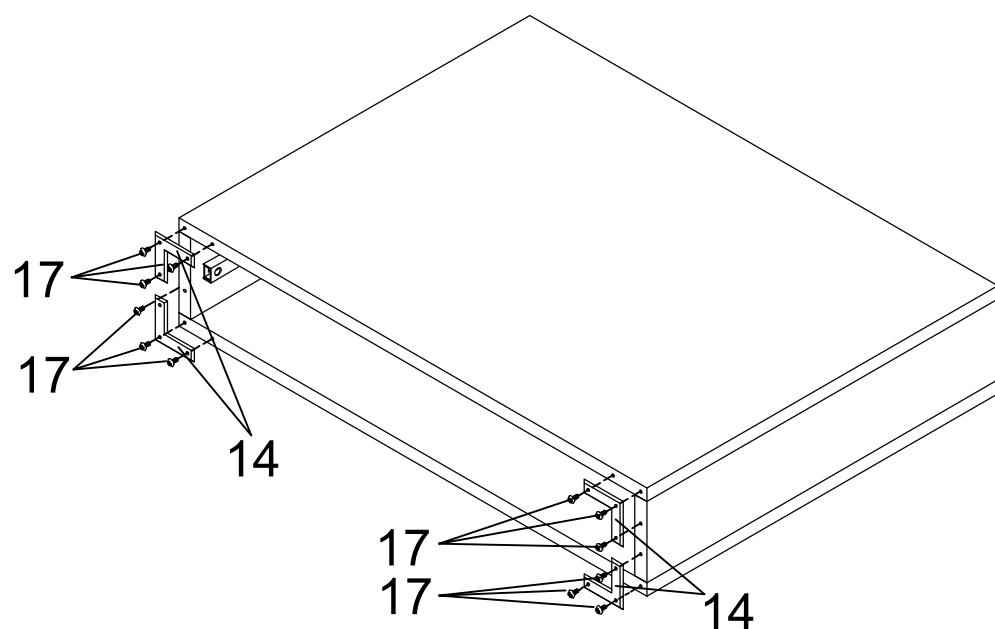Step 4: Attach L Shape Plate (14) to Step 3 by usnig Small Screw (17).



Step 5: 1. Attach Drawer Left Panel (7) and Drawer Right Panel (8) to Drawer Back Panel (9) using Screw (18).

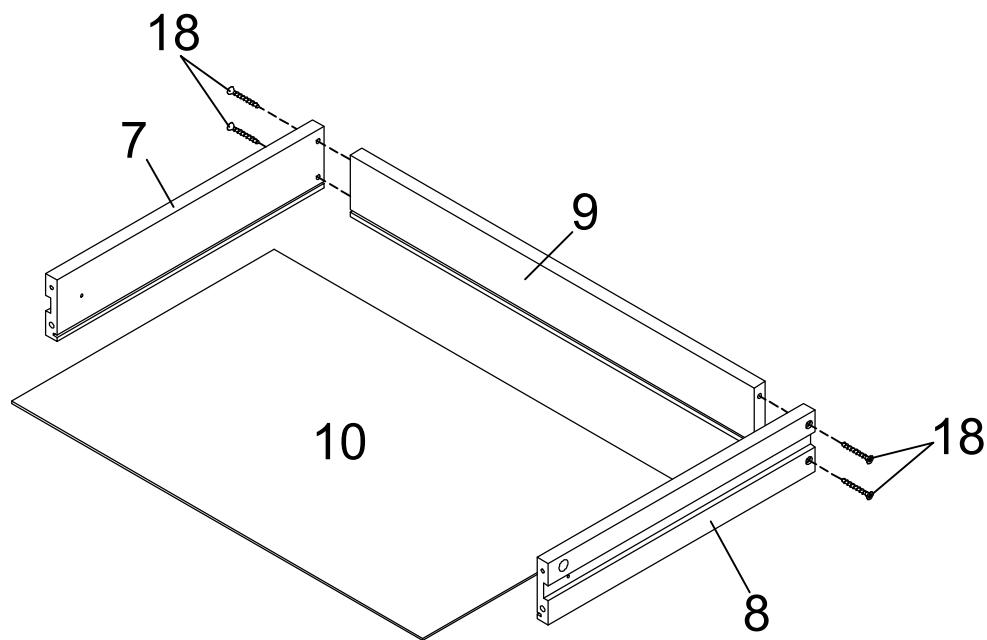2. Attach Drawer Bottom Panel (10) to Step 5-1.




Step 6: 1. Apply Glue (26) on Wood Dowel (24).


2. Install Cam-Bolt (20) and Small Wood Dowel (24) on the Drawer Front Panel (6).

3. Install Handle (15) to Drawer Front Panel (6) by using Slide Bolt (19).

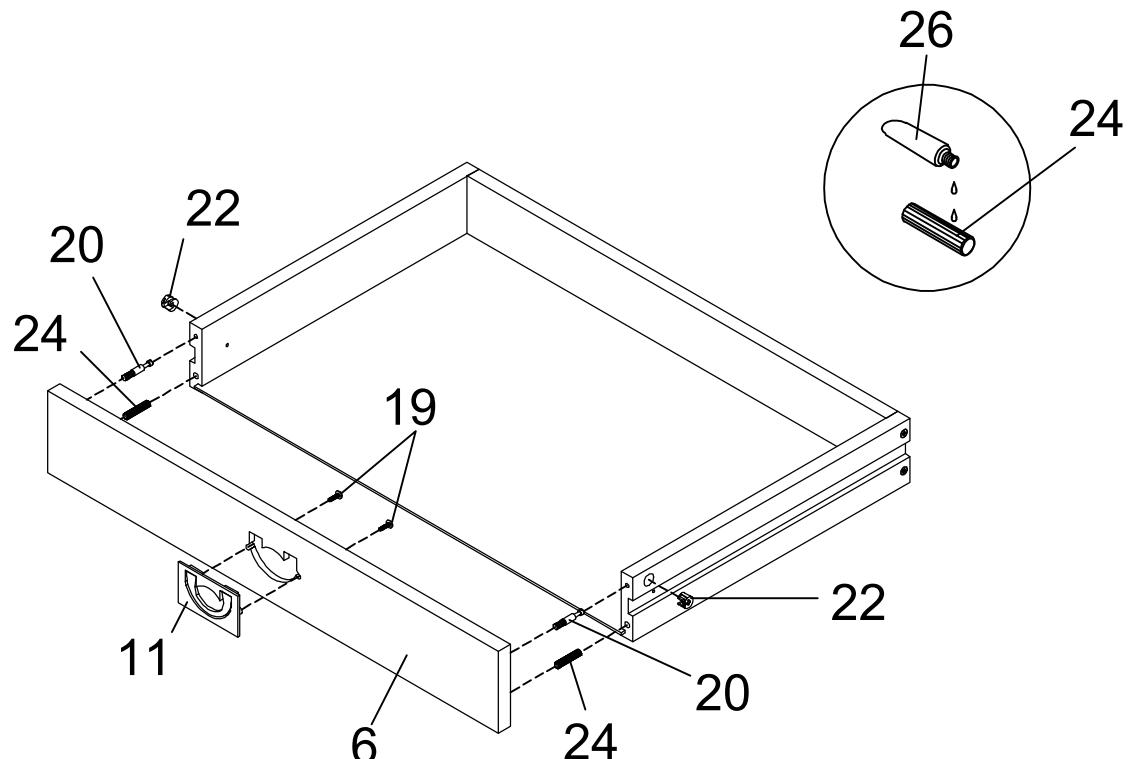
4. Attach the Drawer Front Panel (6) to the Step 5 by using Small Cam-Lock (22).




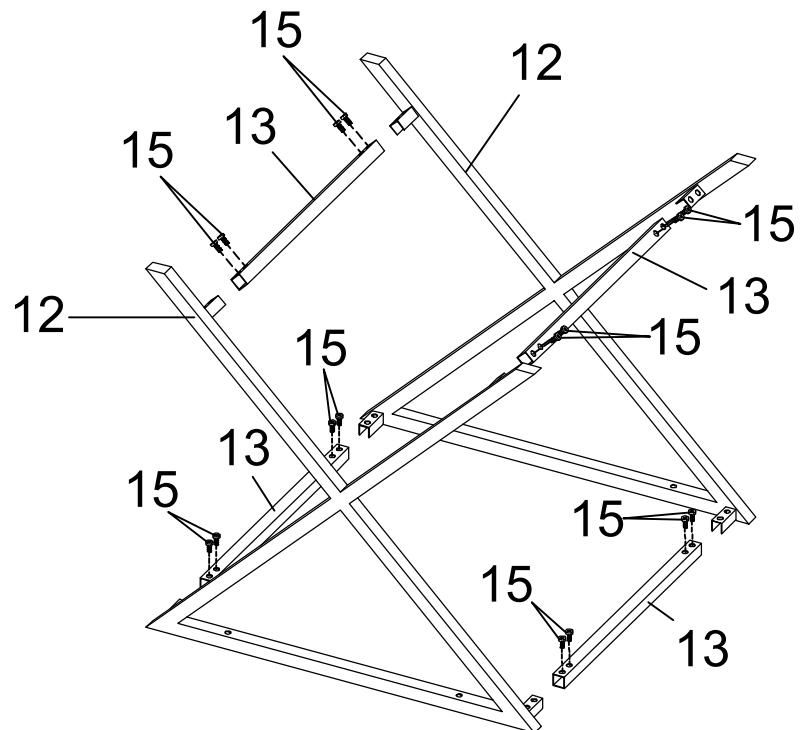
Step 7: Attach Crossbar (13) to Front and Back Frame (12) by using Short Bolt (15).



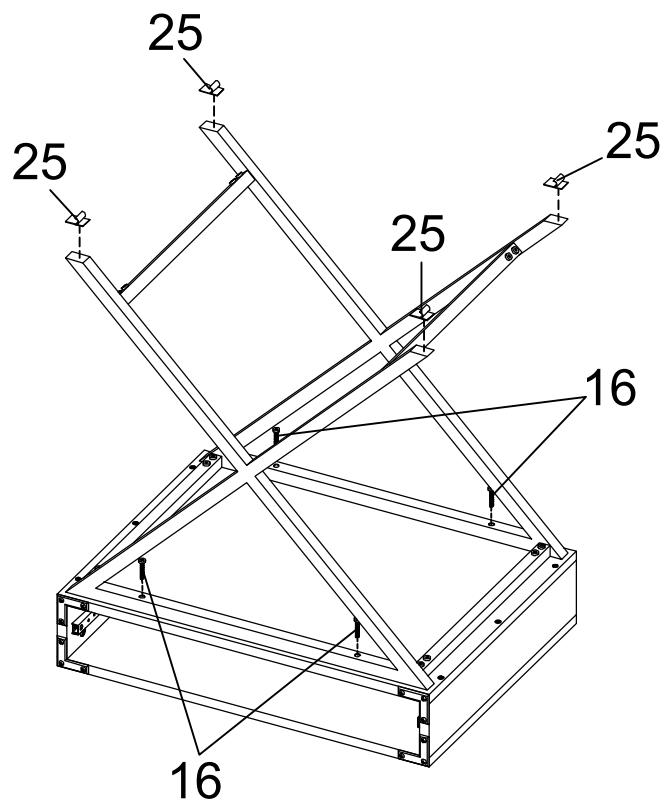Step 8: 1. Insert Adhesive (25) on the Front and Back Frame (12).
2. Attach Step 7 to Step 4 by using Long Bolt (16).



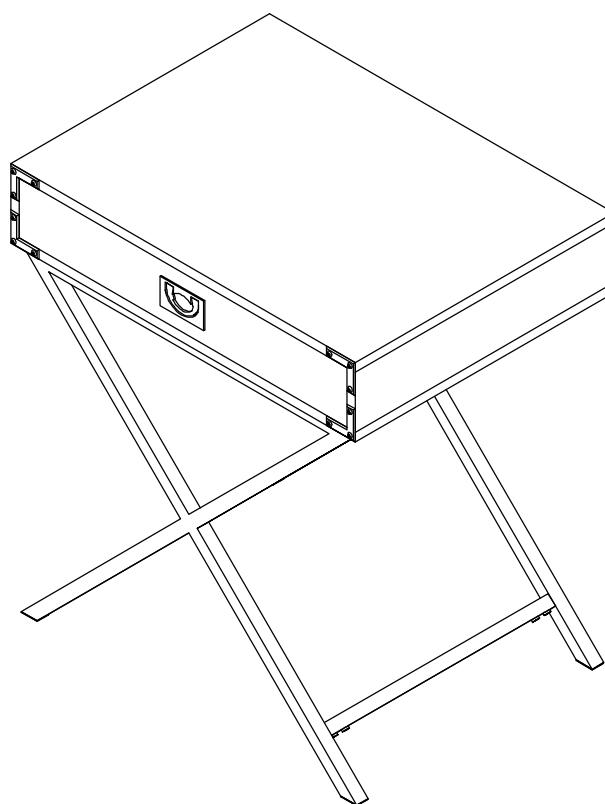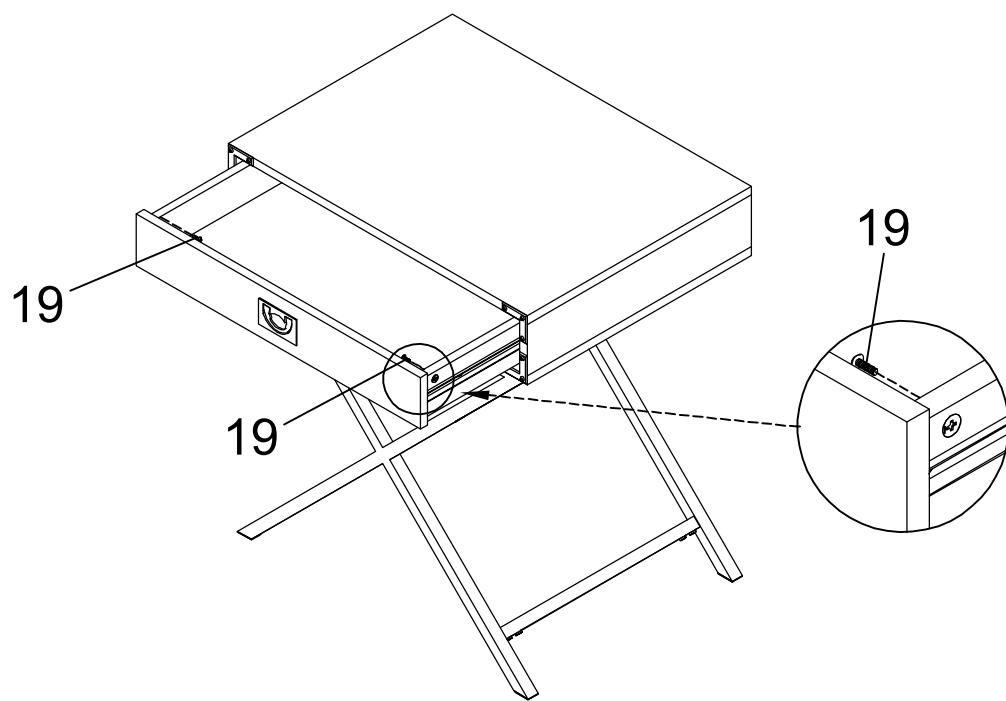Step 9: Align and insert the drawer into the drawer slides. Use the Slide Bolt (19) and Allen Key (27) to attach the drawer to the drawer slides.



Complete. Congratulations on your assemble success.