
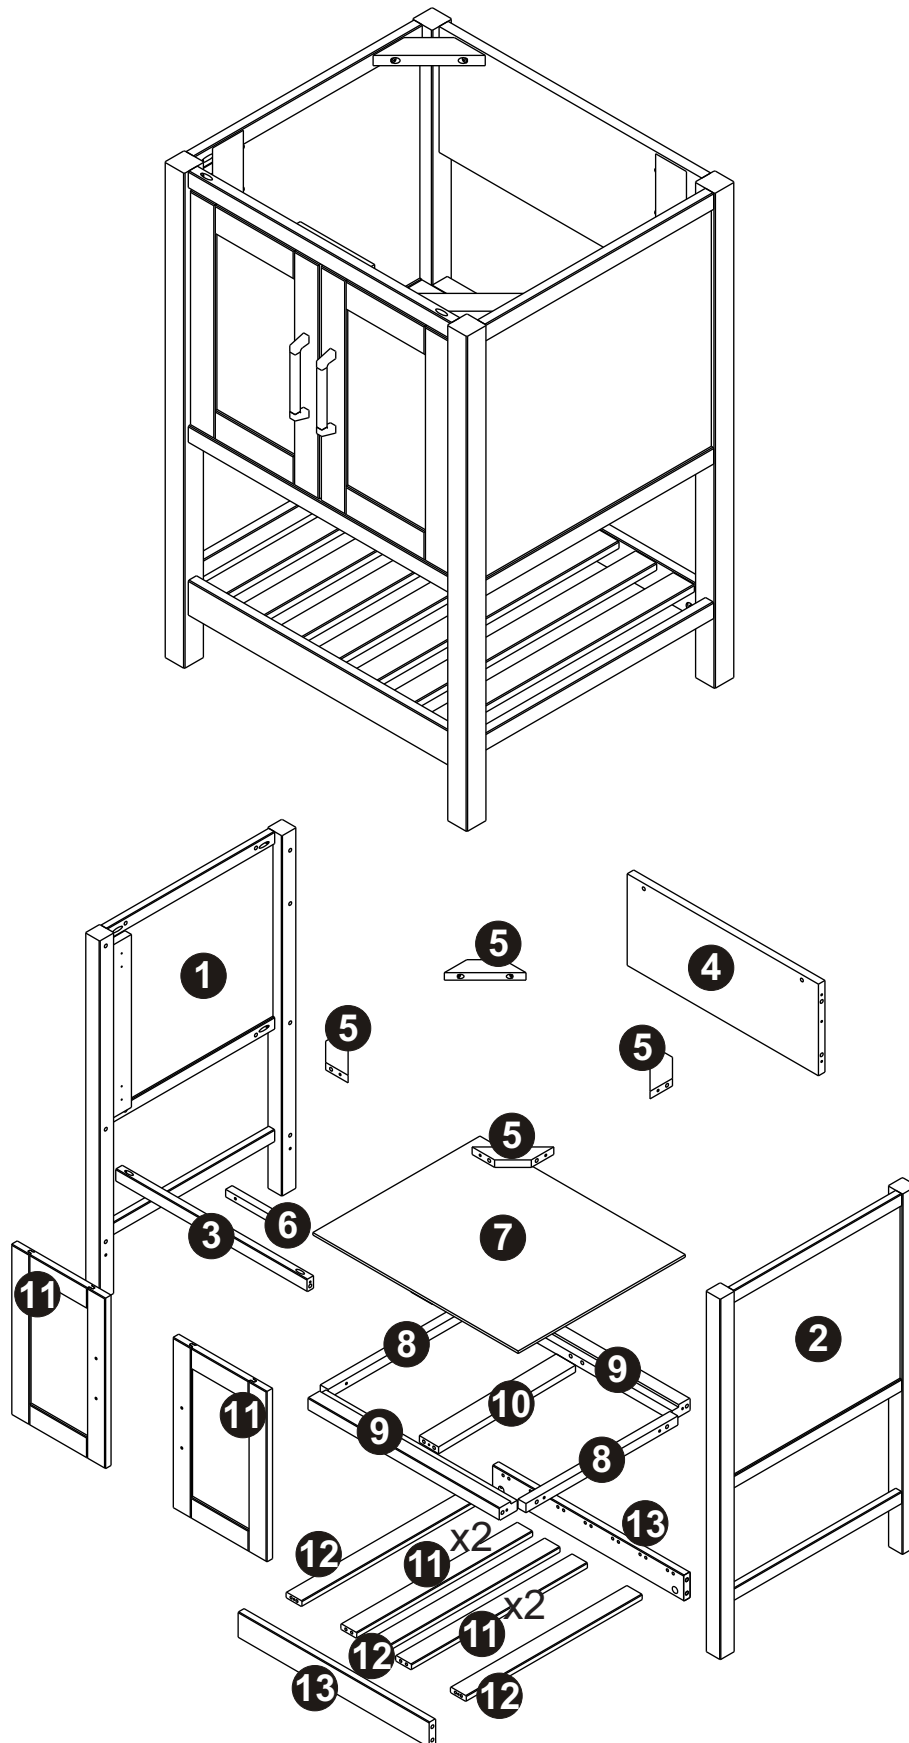




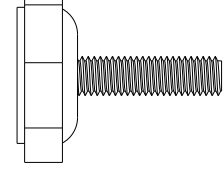


ASSEMBLY INSTRUCTIONS

BENNET 24" VANITY




A	 Ø8x30mm	26
B	 Ø8x20mm	04
C	 Ø3,5x30mm	30
D	 Ø4x25mm	04
E	 Ø3,5x14mm	16
F	 Ø3,5x14mm	02
G	 Ø4x25mm	04
H		02

I		04
J		04
K		02
L	 27x23mm	04
M	 Ø4x25mm	06
N	 Ø6x30mm	28


REPLACEMENT PARTS


Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at “www.boltonfurniture.com”.

Tools Required




Hammer
* These tools are not
supplied by the
manufacturer


01 

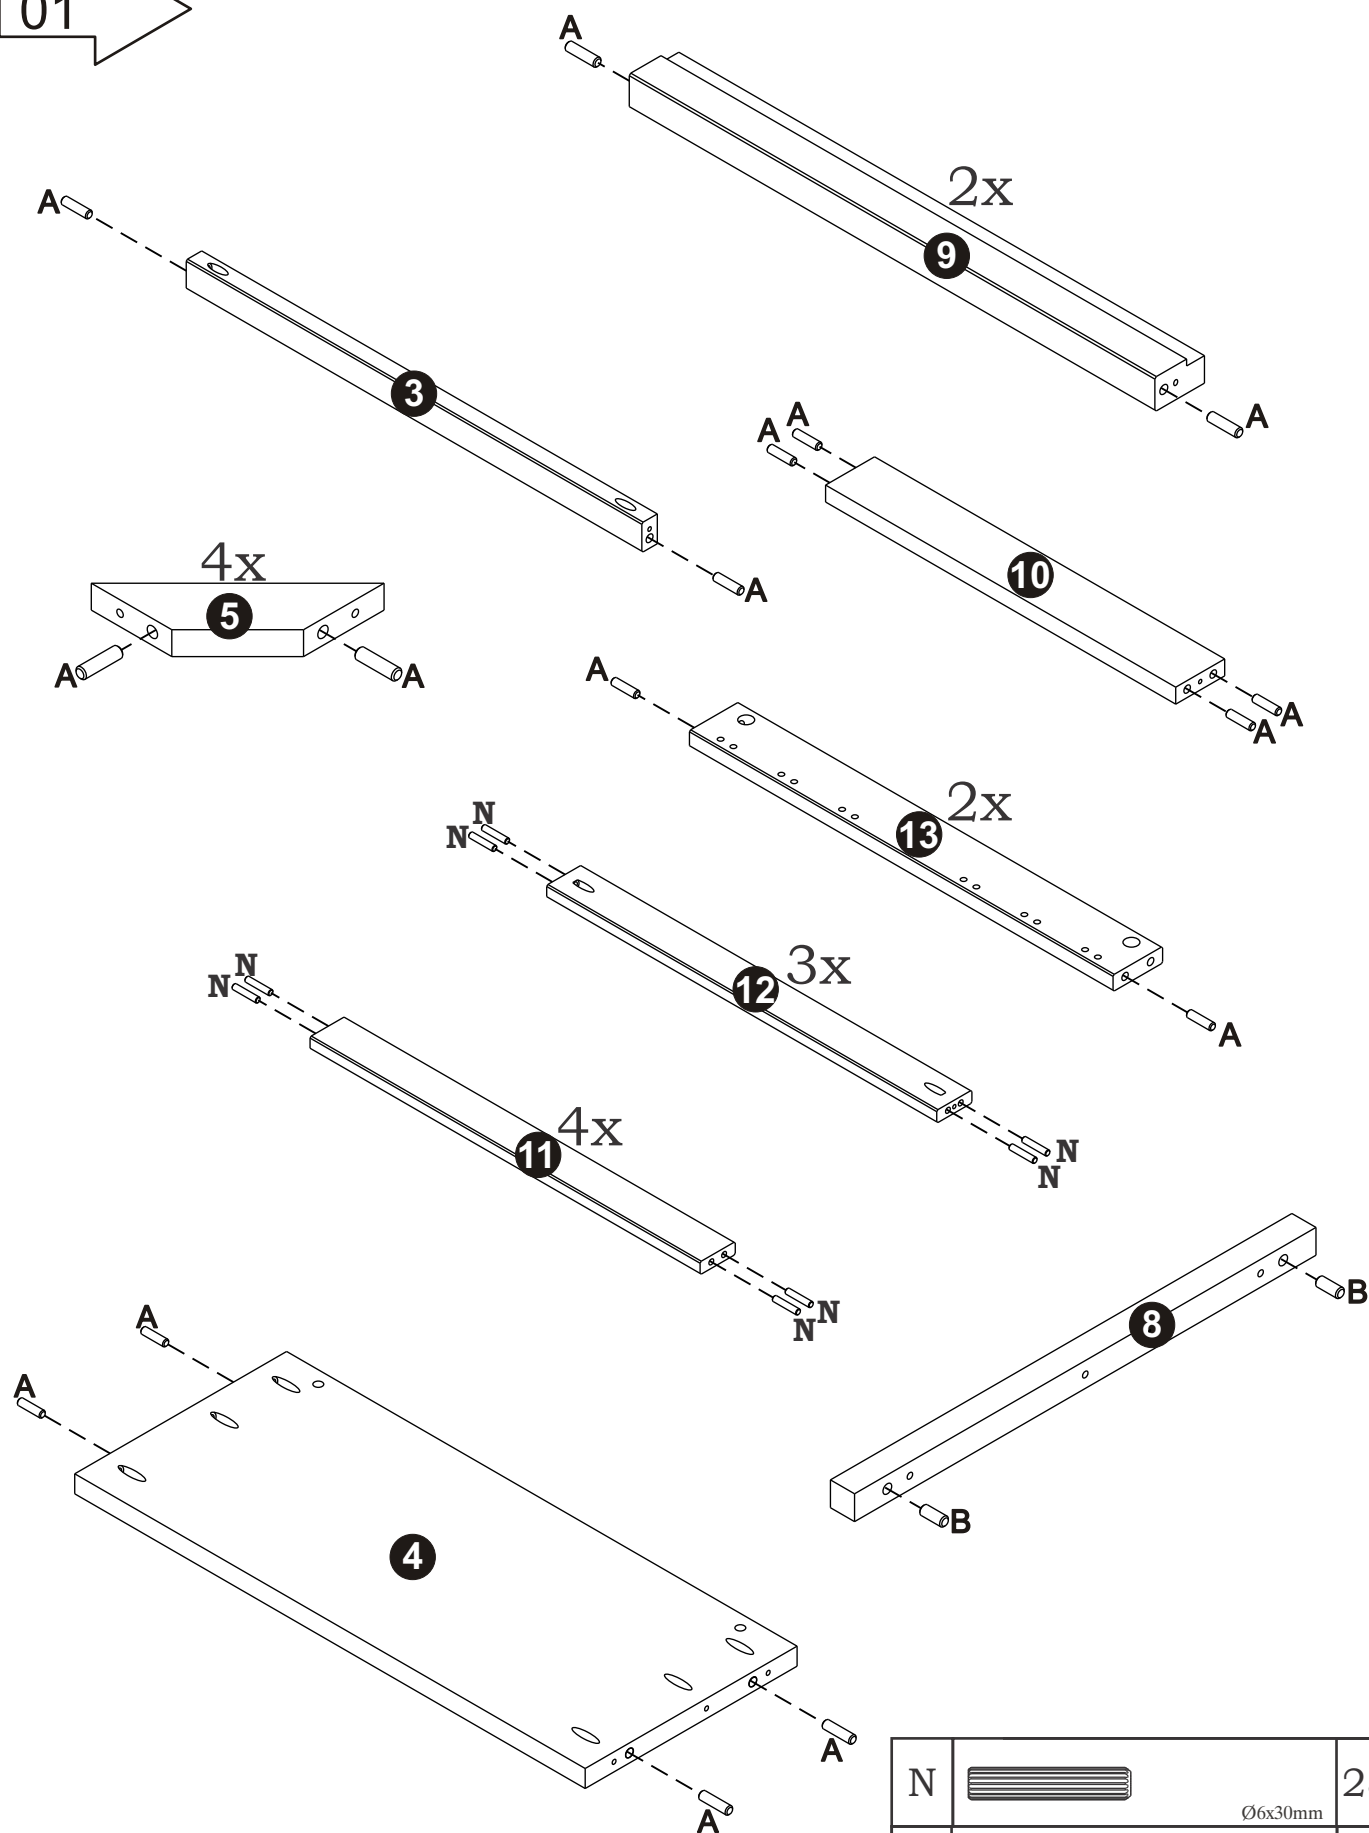


N	 Ø6x30mm	28
A	 Ø8x30mm	26
B	 Ø8x20mm	04


02

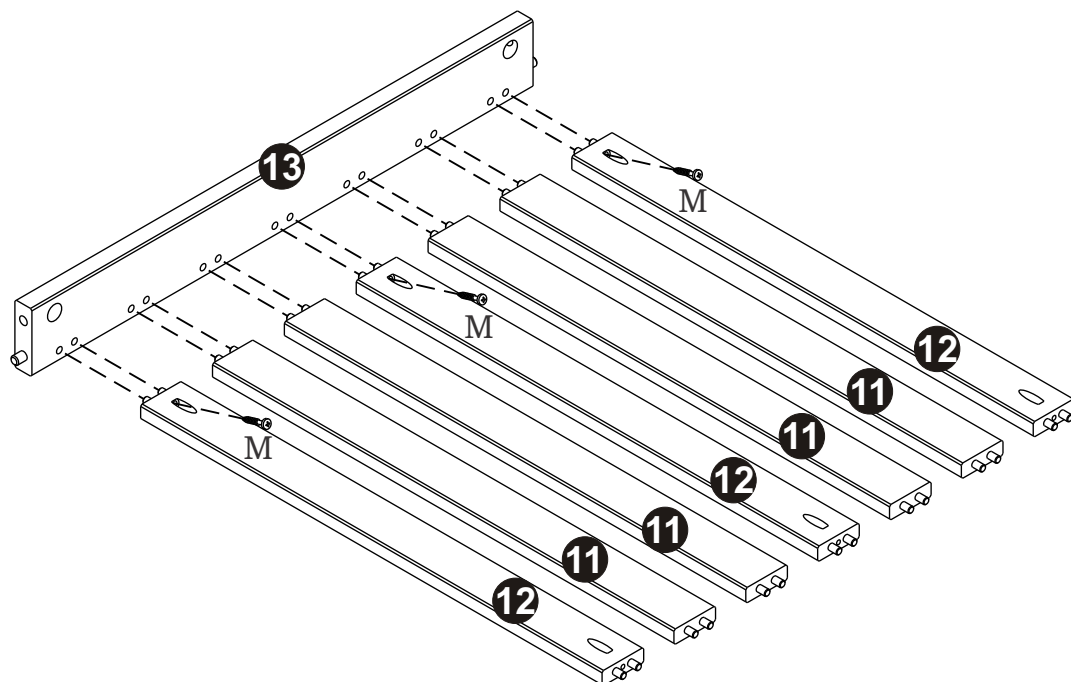


M		03
Ø4x25mm		

03

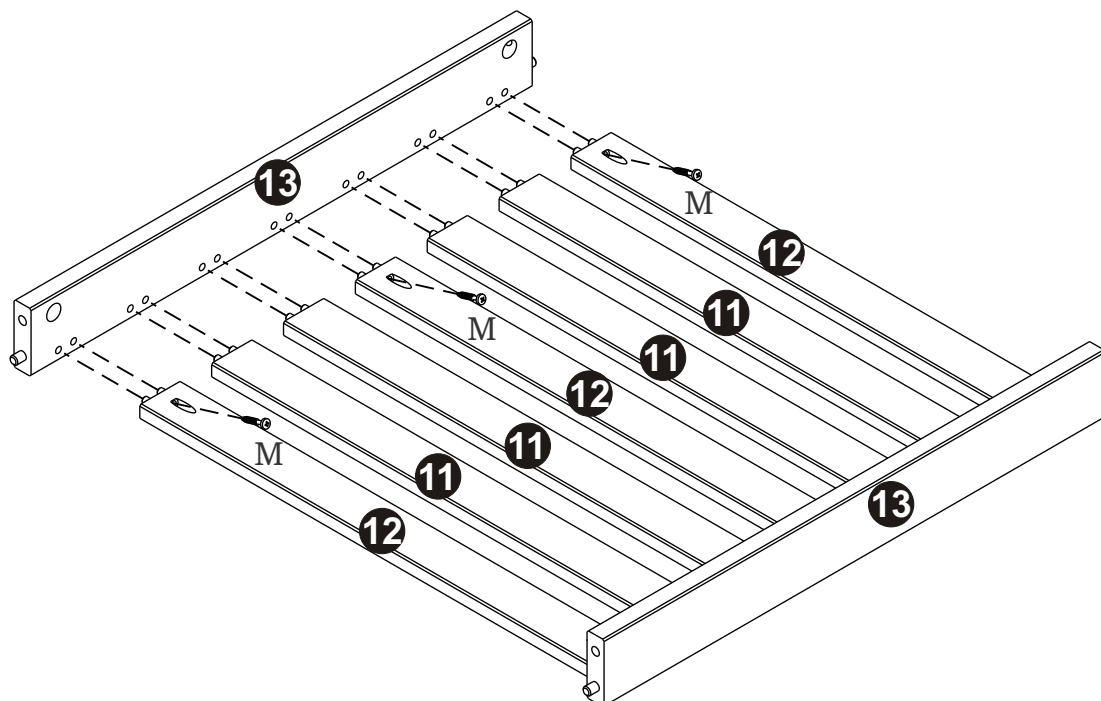


M		03
Ø4x25mm		

04

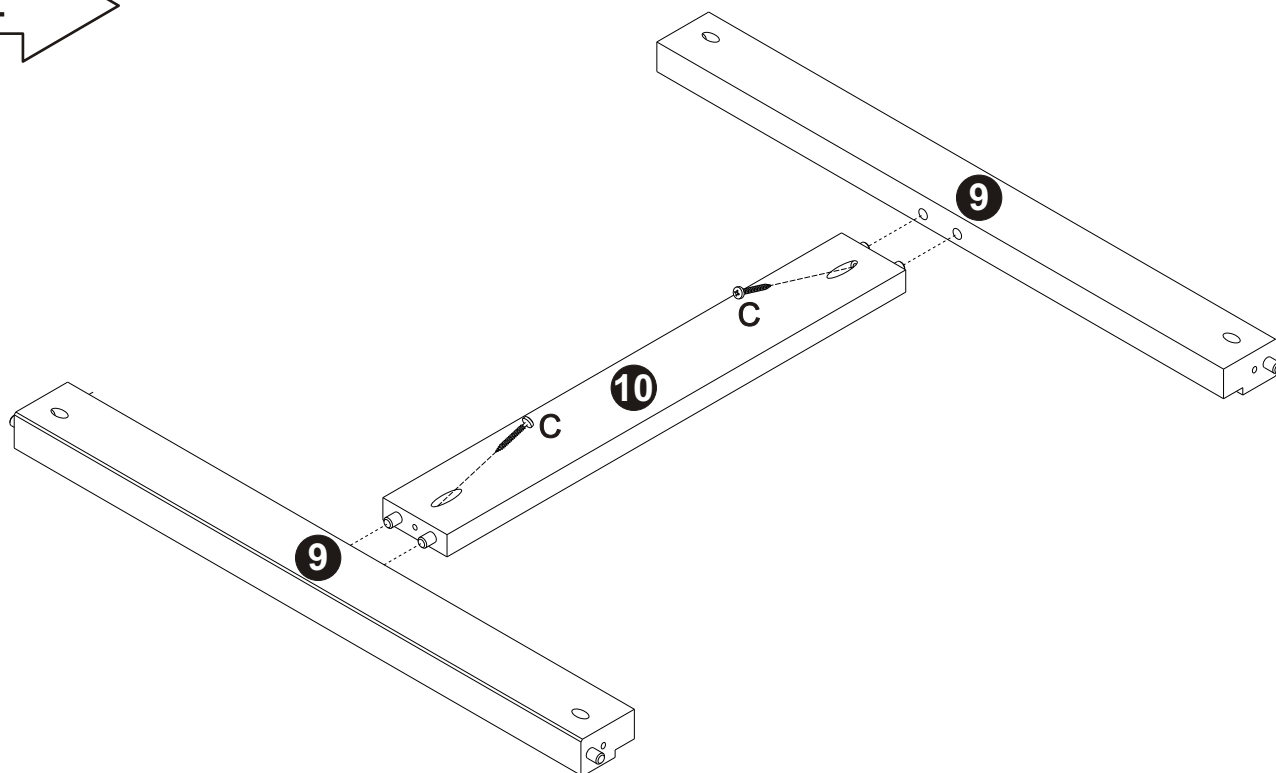


C		02
Ø3,5x30mm		



05

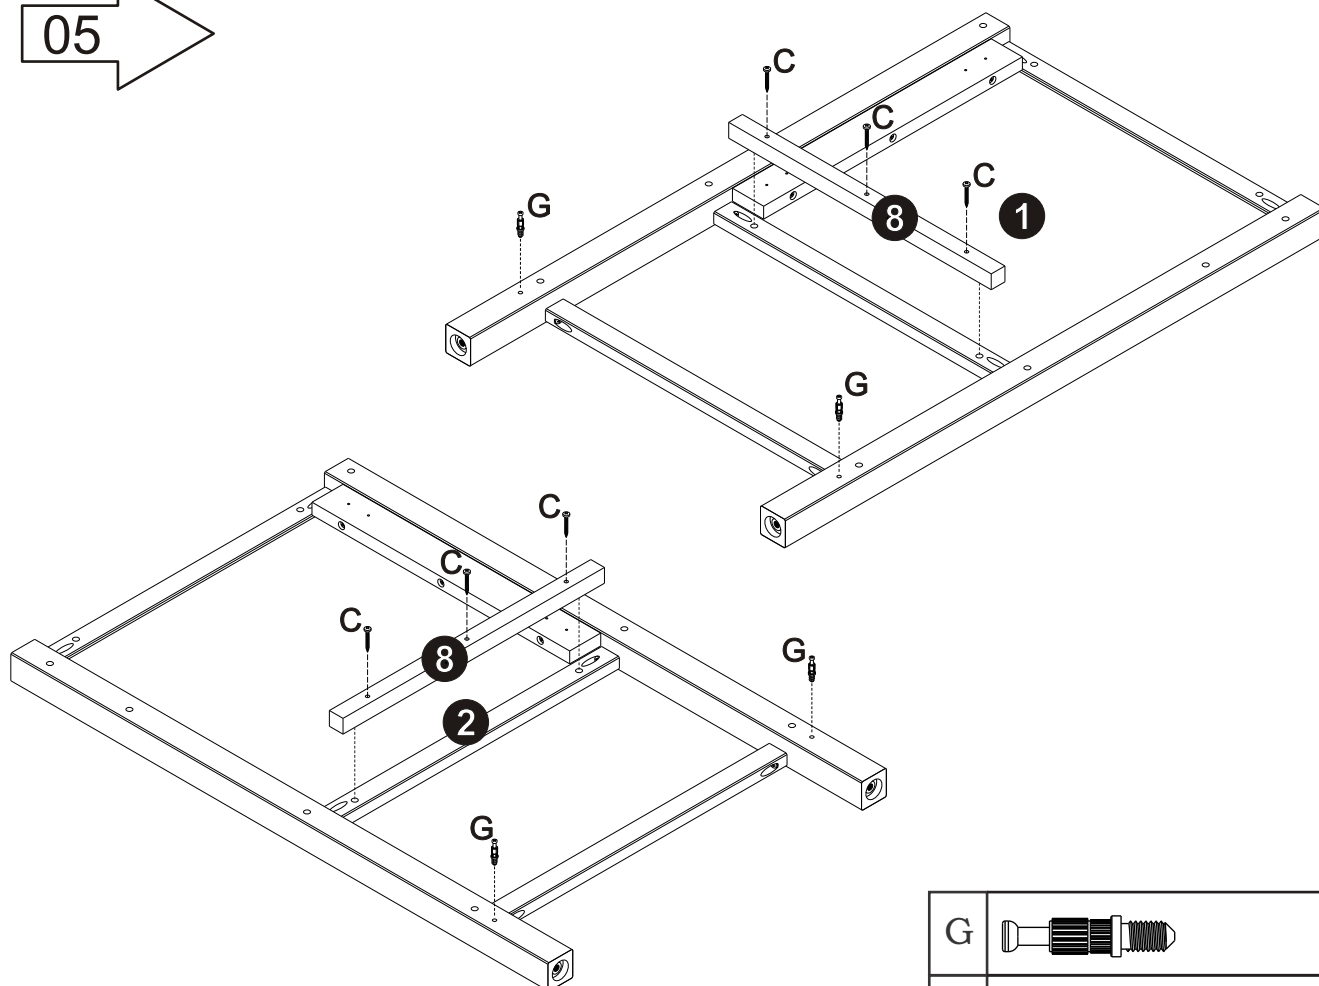

G		04
C		06
Ø3,5x30mm		

06

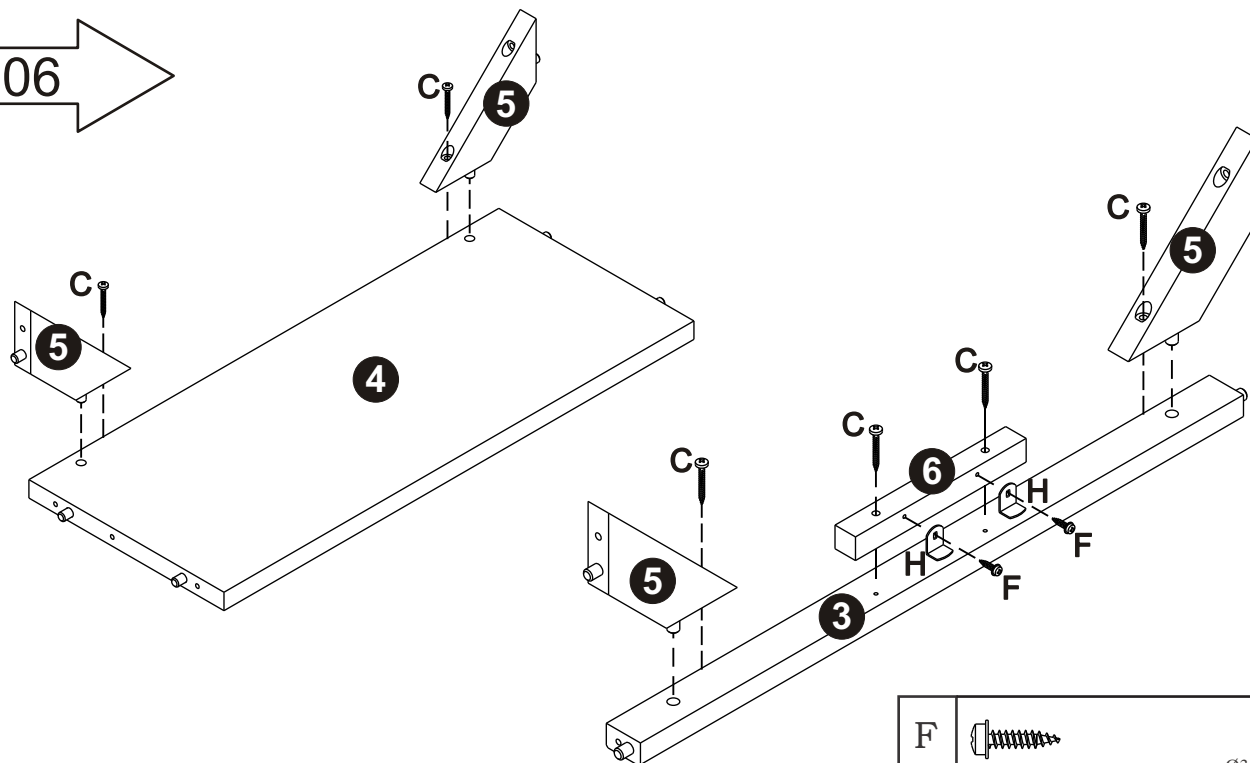



F		02
H		02
C		06

Ø3,5x14mm

Ø3,5x30mm



07

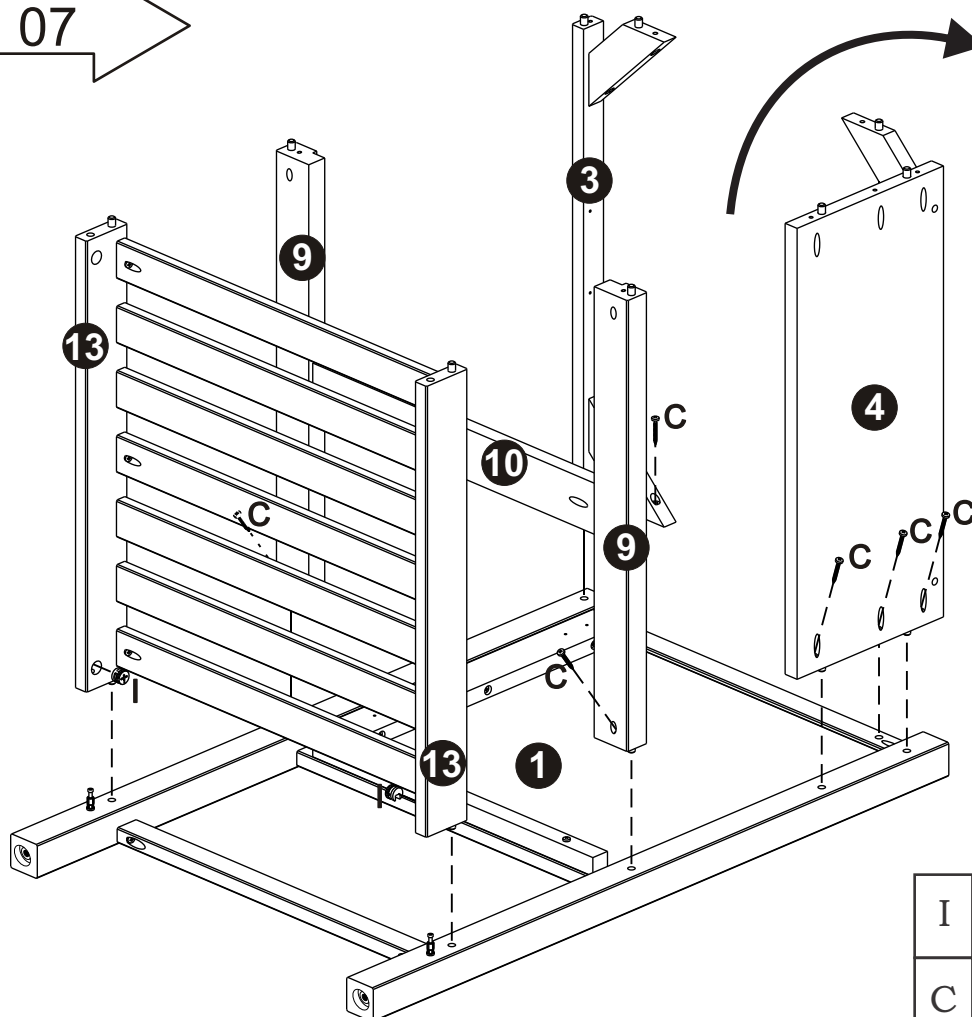


I		02
C		08

Ø3,5x30mm


08

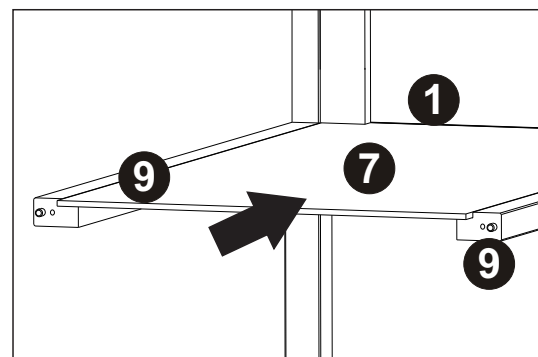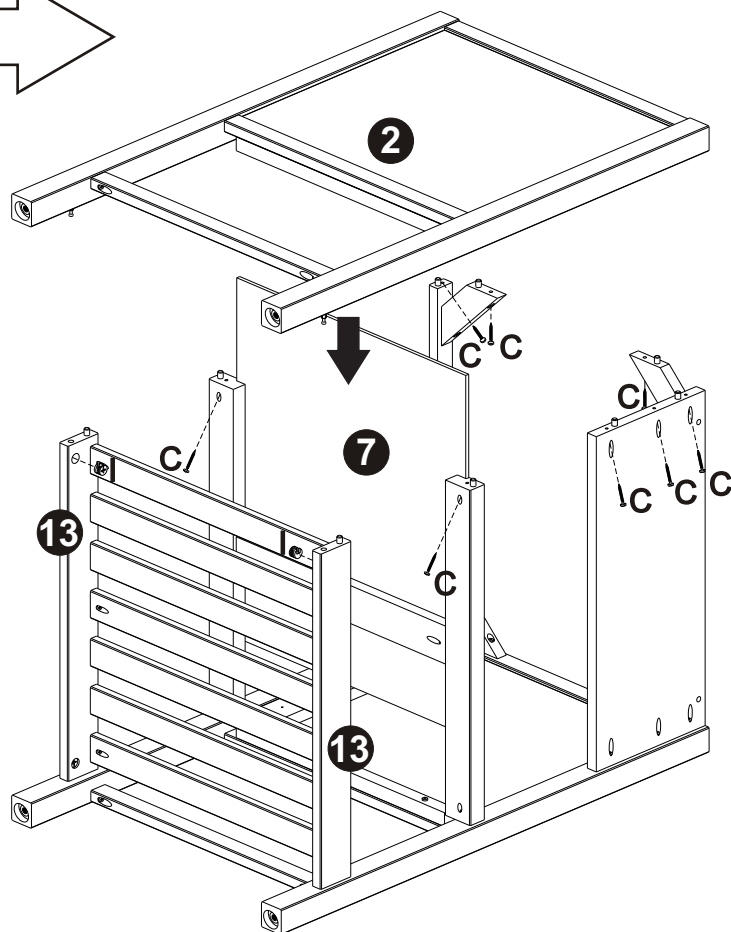

I		02
C		08

Ø3,5x30mm



09

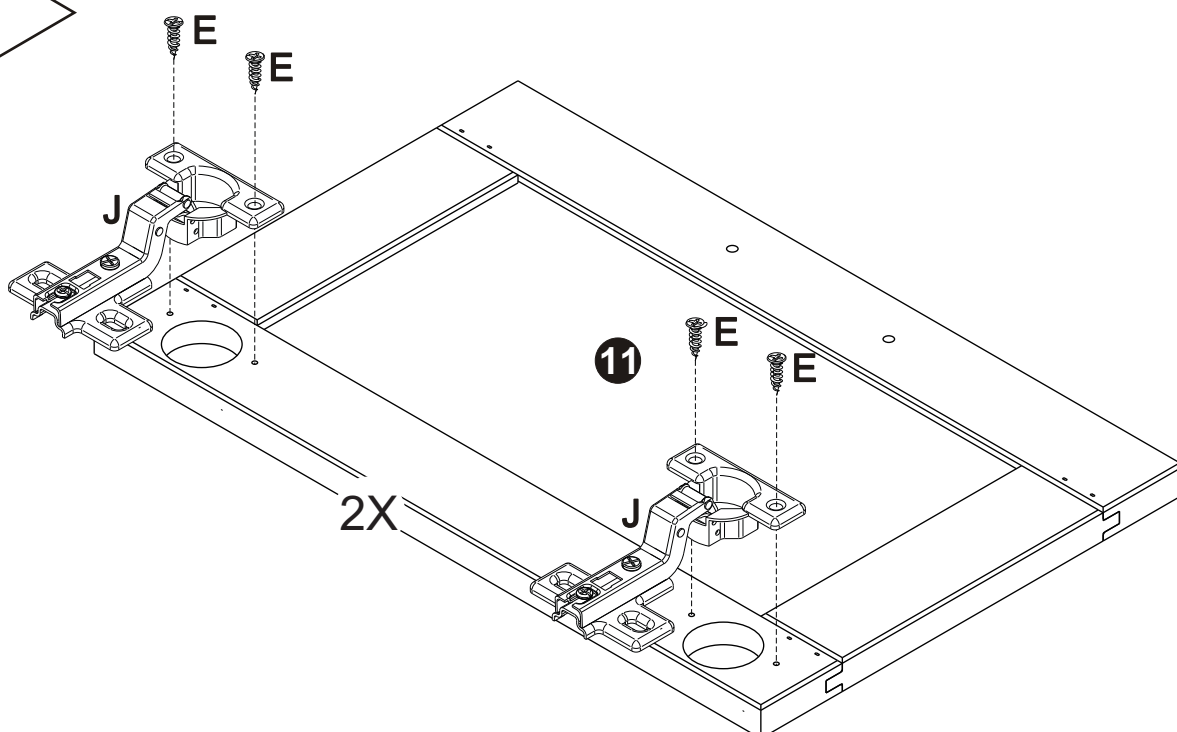



E		8
J		04

Ø3,5x14mm



10

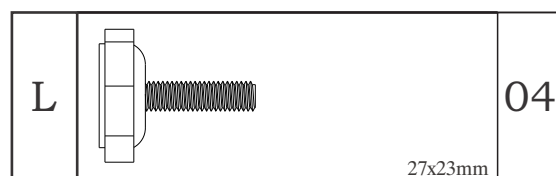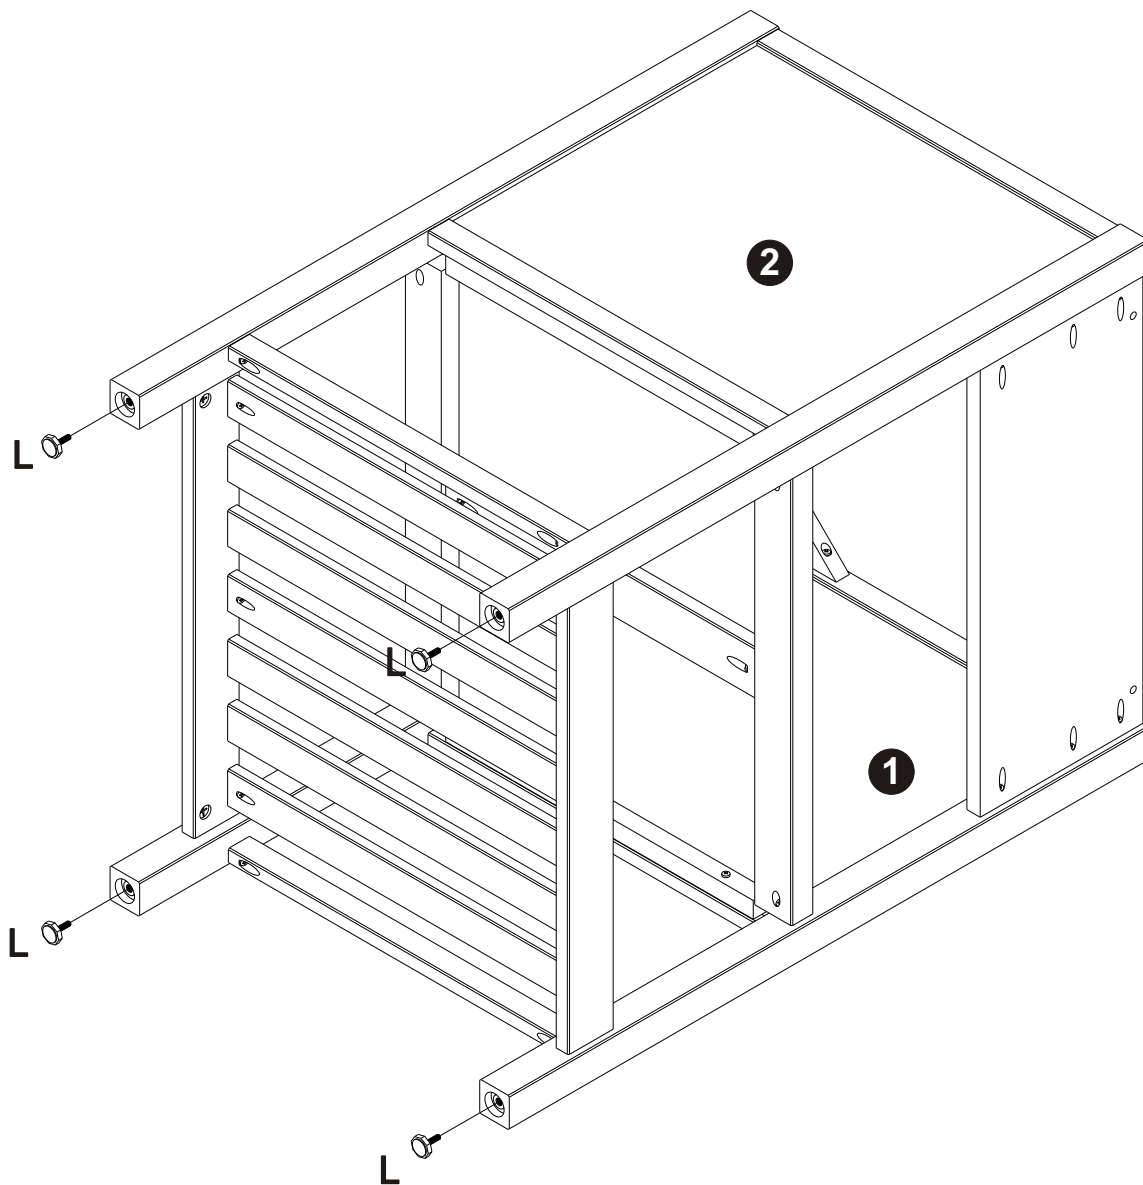

11

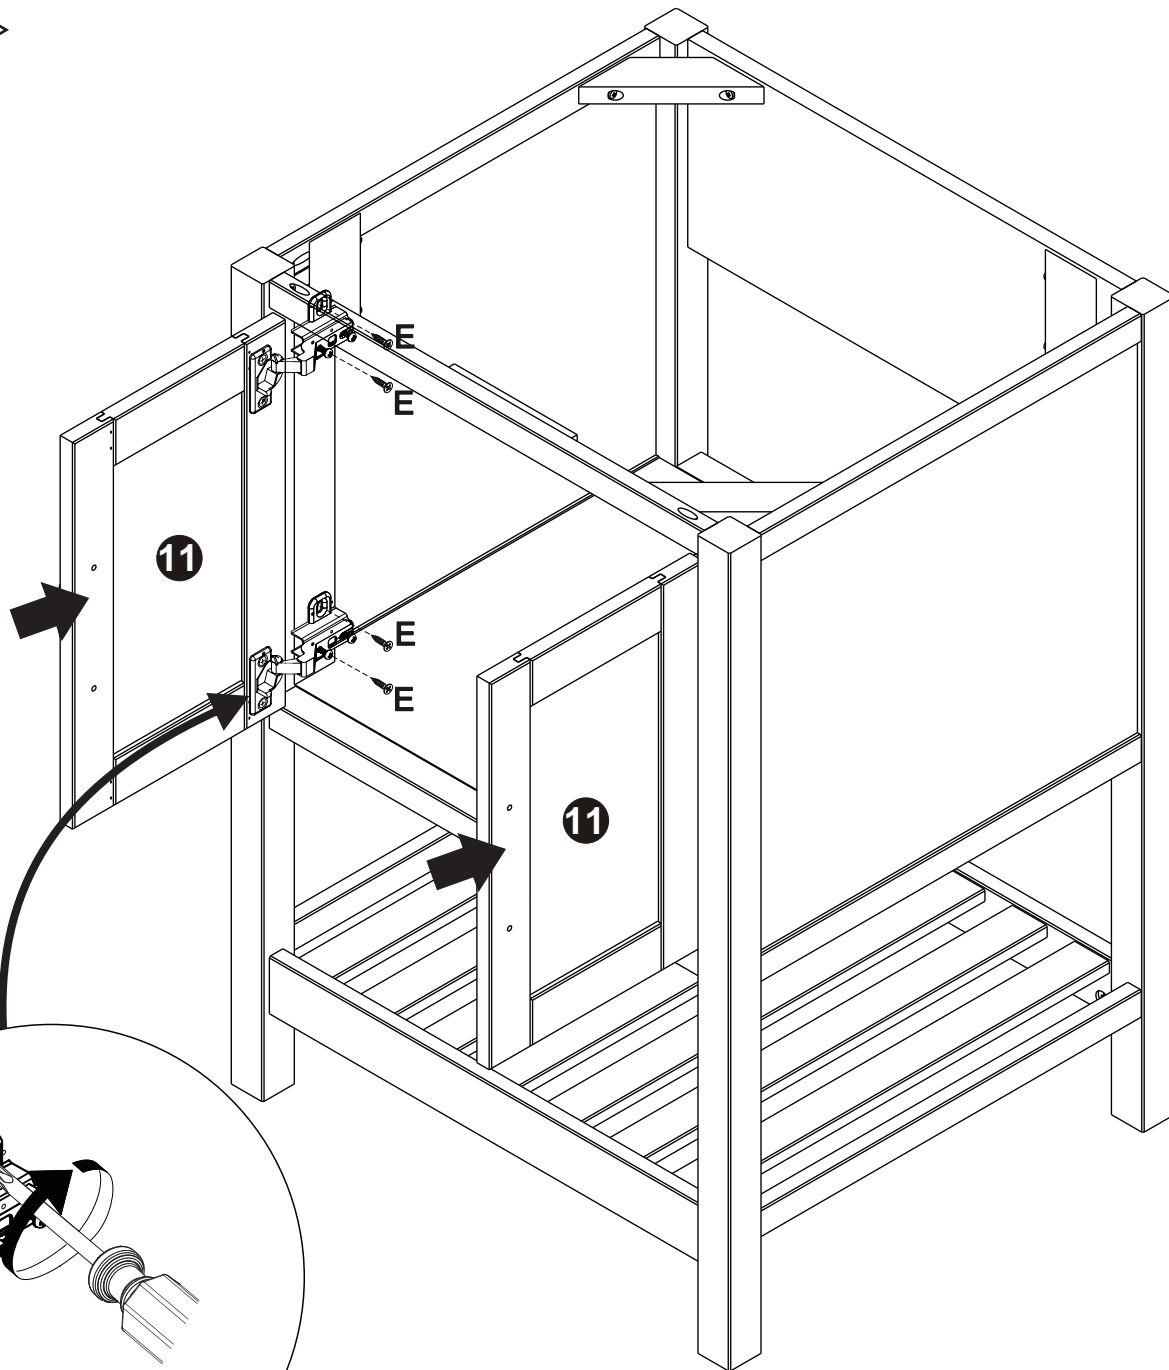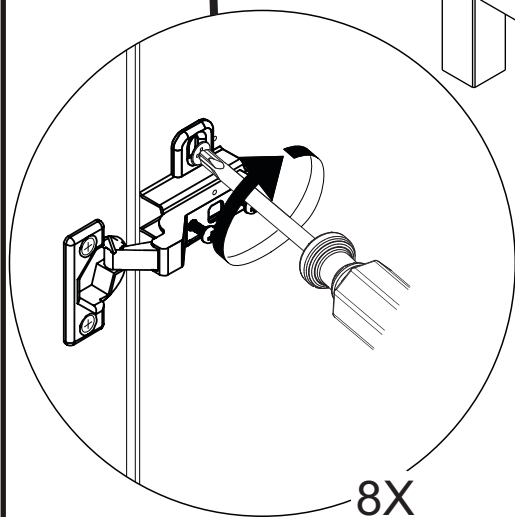

12

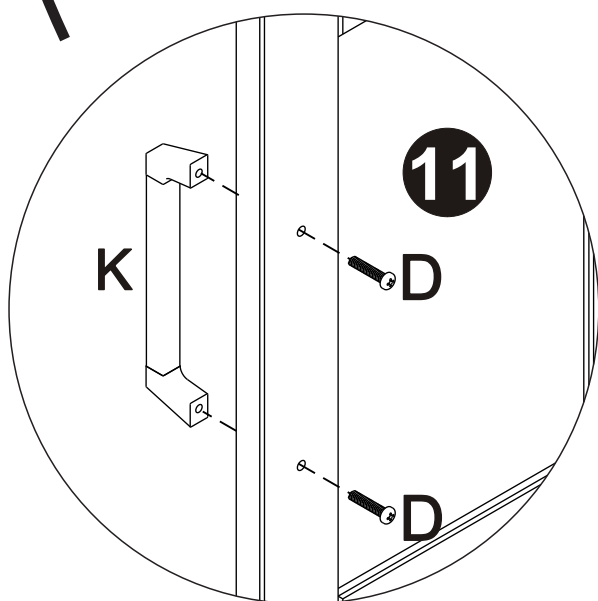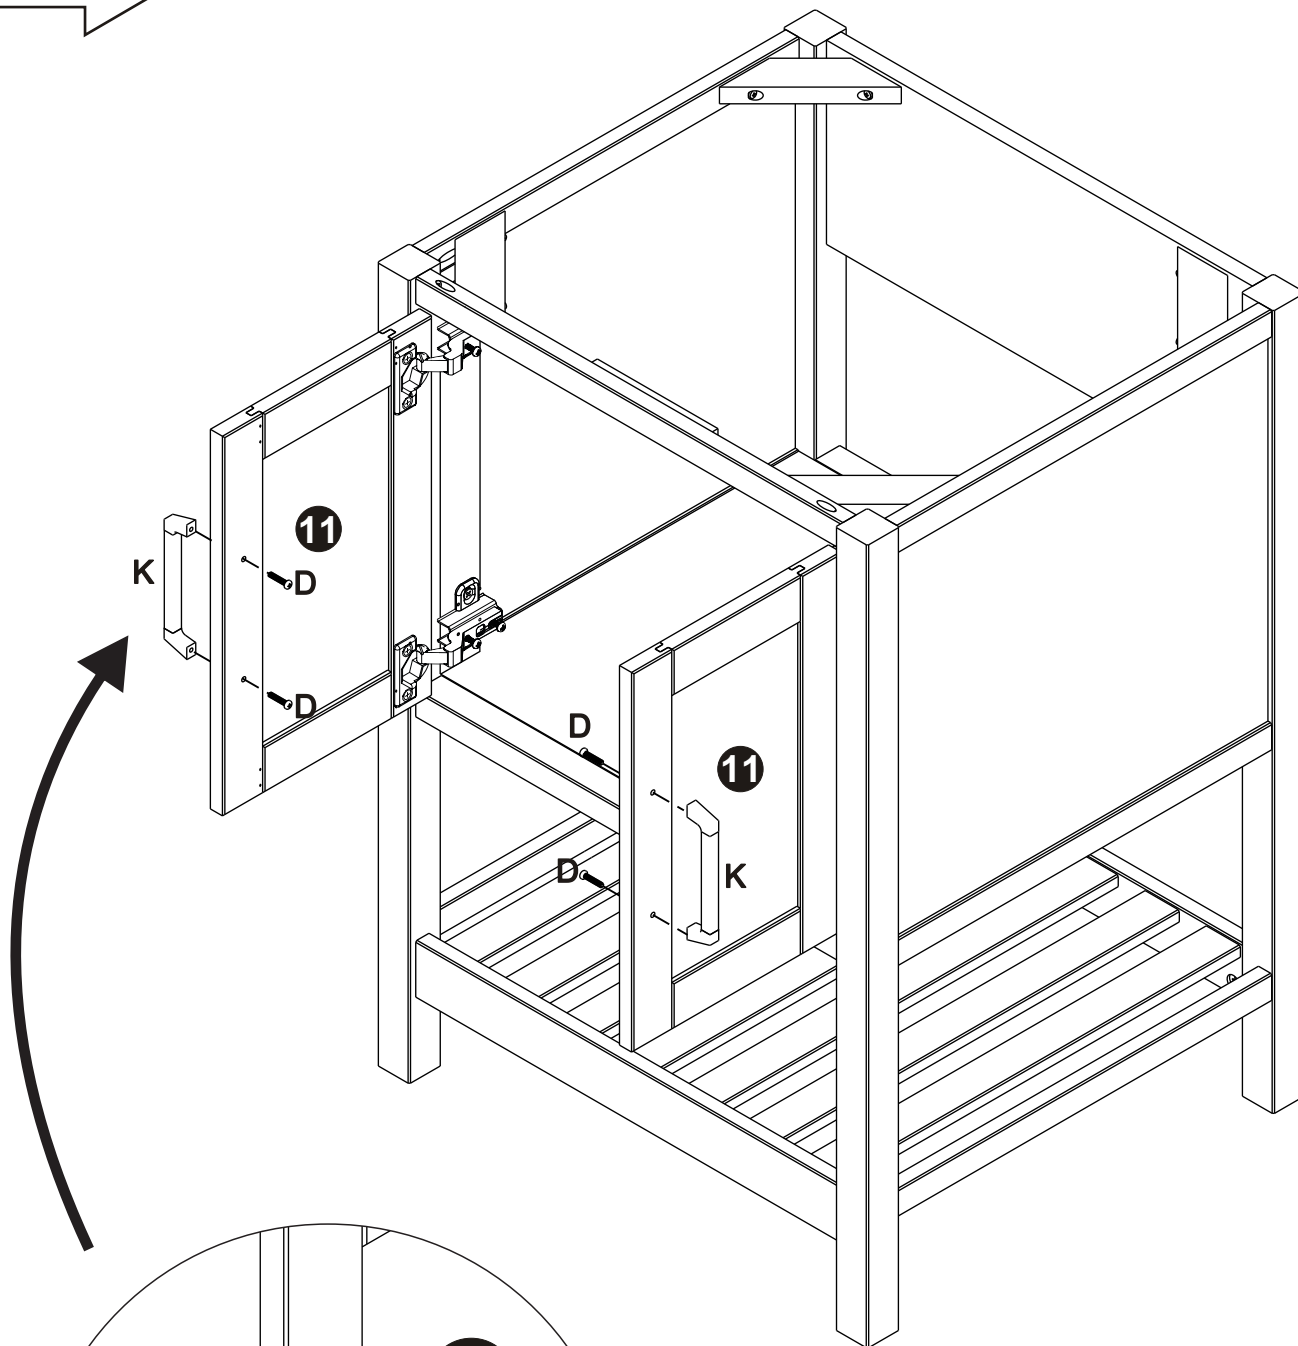

K		02
D		04

Ø4x25mm

13

