


ASSEMBLY INSTRUCTIONS

COAT HOOKS

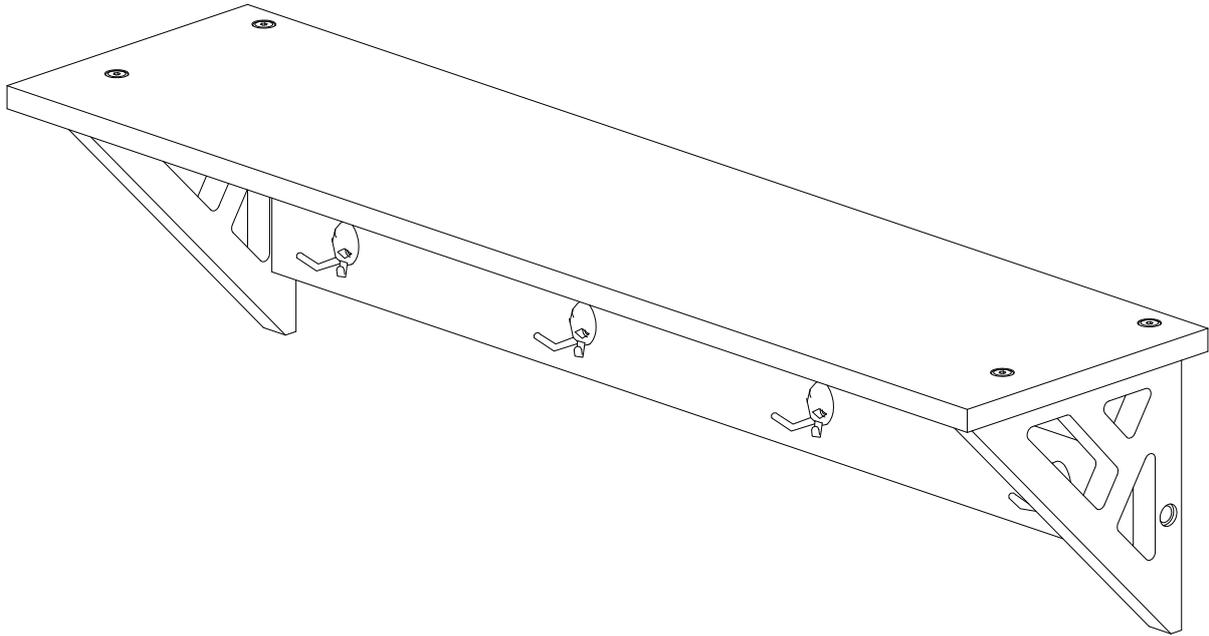


REPLACEMENT PARTS

Please do not contact the company purchased from as we can help you faster.

Order replacement parts and hardware at "boltonfurniture.com"





. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe!!!
. Please assemble on a clean soft surface to avoid damage.

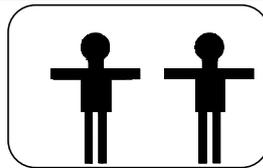

+




Tool Required

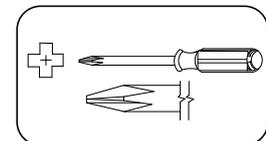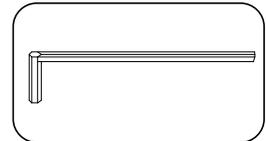




(Not included)

www.boltonfurniture.com

Part List- Coat Hooks

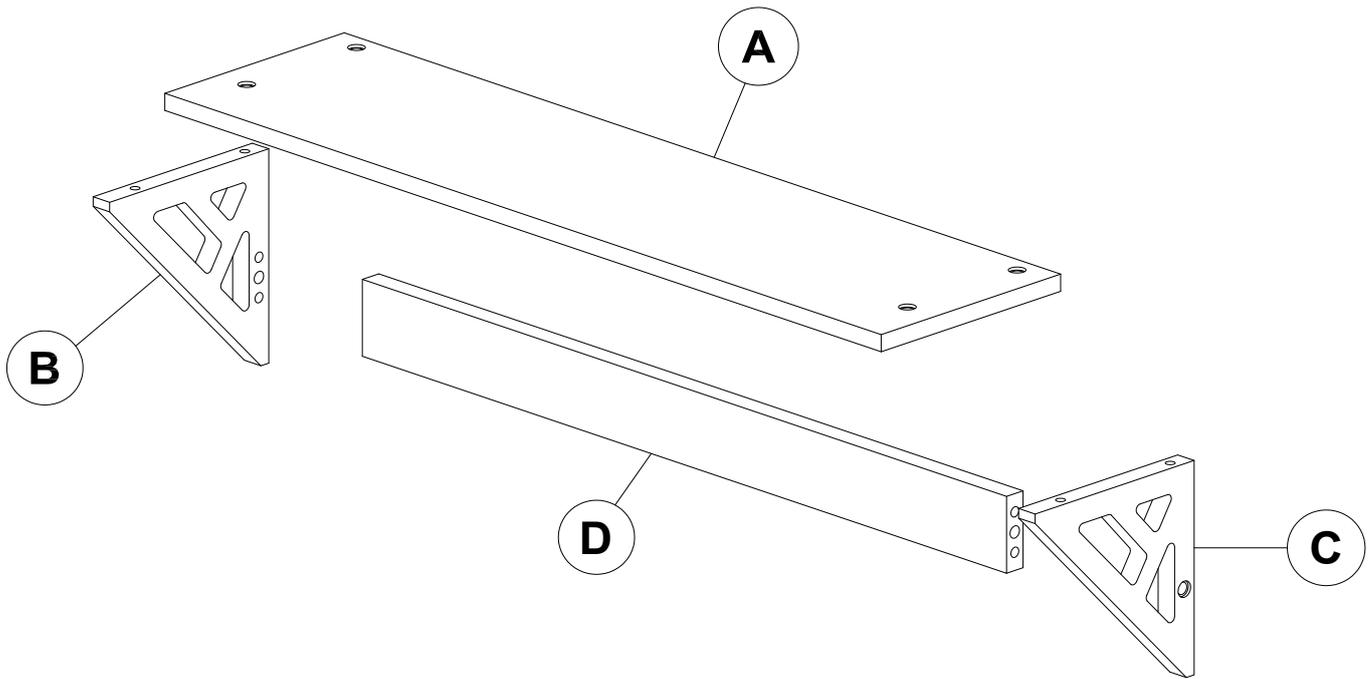


Identifying the hardware-Identify the hardware using the illustrations below.



www.boltonfurniture.com

STEP 1

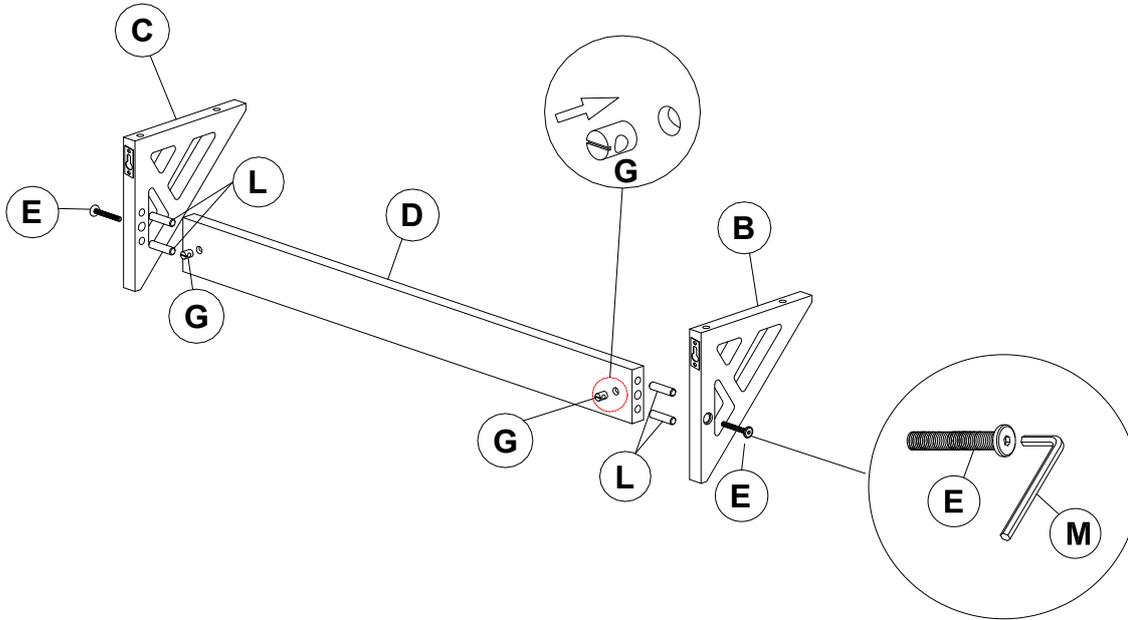


E  **02**
M6x60MM BOLT

G  **02**

L  **04**
10x40MM DOWEL

M  **01**


STEP 2

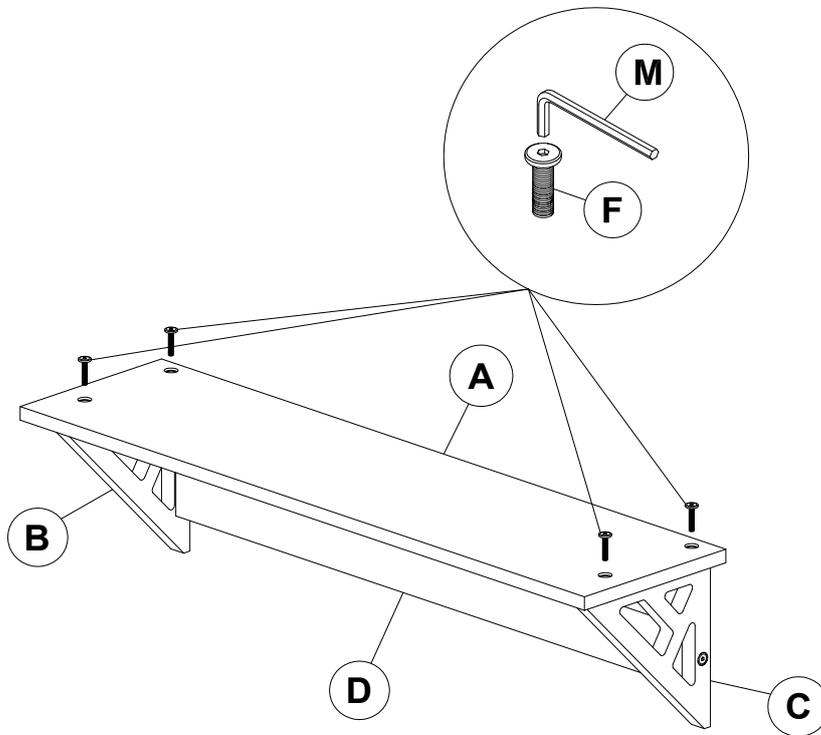

F  **04**
M6x30MM BOLT


M  **01**

STEP 3

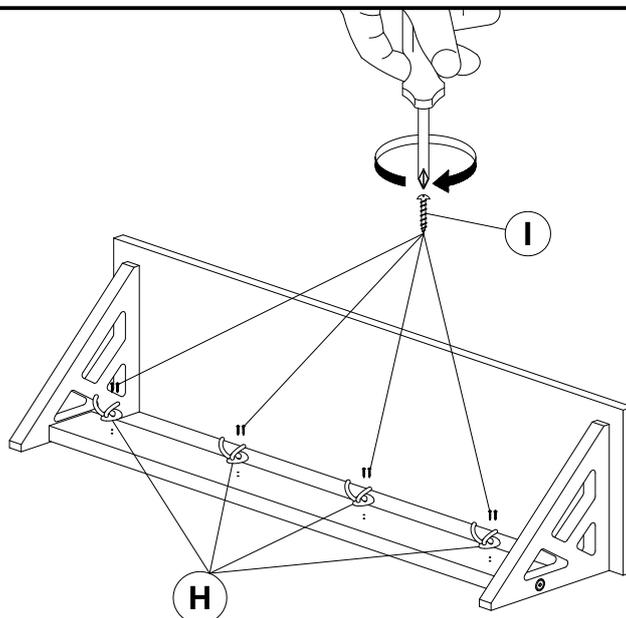

H  **04**

I  **08**
3x15MM SCREW





(Not included)

STEP 4



J 4x60MM SCREW 02

K DRYWALL EZ ANCHOR 02


(Not included)

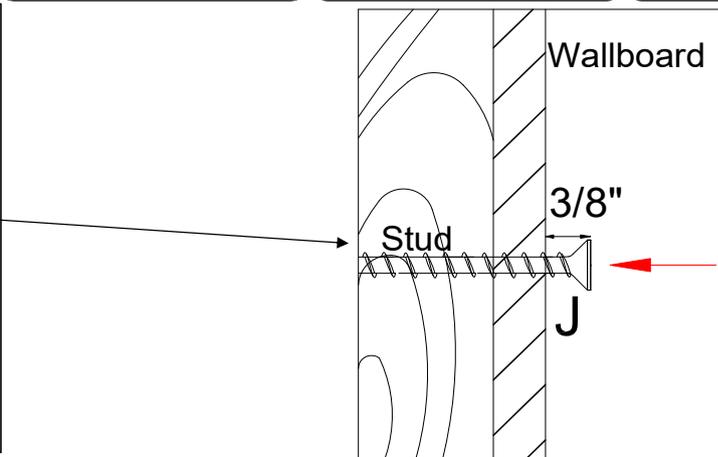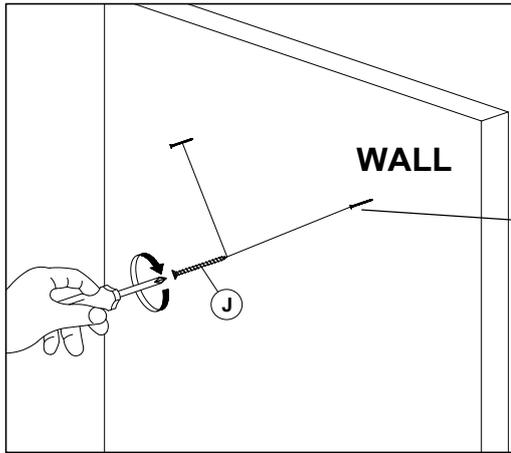

If you are not able to secure Screw(J) to studs in wall, use the EZ anchor(K) provided. Mark location on wall where EZ Anchor(K) is to be. Install EZ anchor(K) by tapping in up the thread, and screwing them securely into the dry wall. Secure Screws(J) into EZ Anchor(K).
NOTE: DO NOT DRIVE SCREW ALL THE WAY IN, HAVE HEAD OF SCREW OUT ABOUT 3/8" .

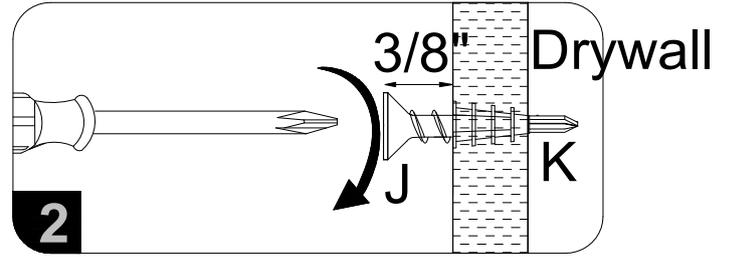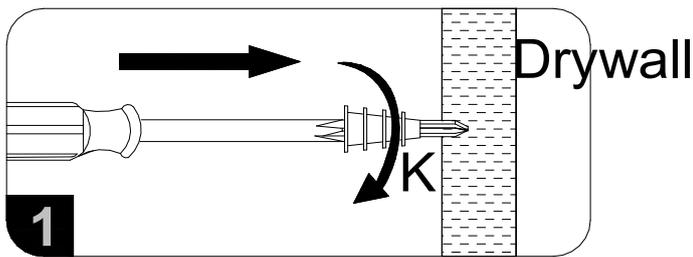

STEP 5

