


5405-072

ASSEMBLY INSTRUCTION

Page
1/3

PACKING LIST:

ITEM PARTS	Q'ty	U/M
P1. Center top	1	Pcs
P2. Leaves Top	4	Pcs
P3. Base	1	Pcs
P4. Legs	4	Pcs
P5. Plywood support	1	Pcs
HARDWARES	Q'ty	U/M
A. Steel Allen open wrench	1	Pcs
B. steel Allen bolt & Washer	4	Pcs

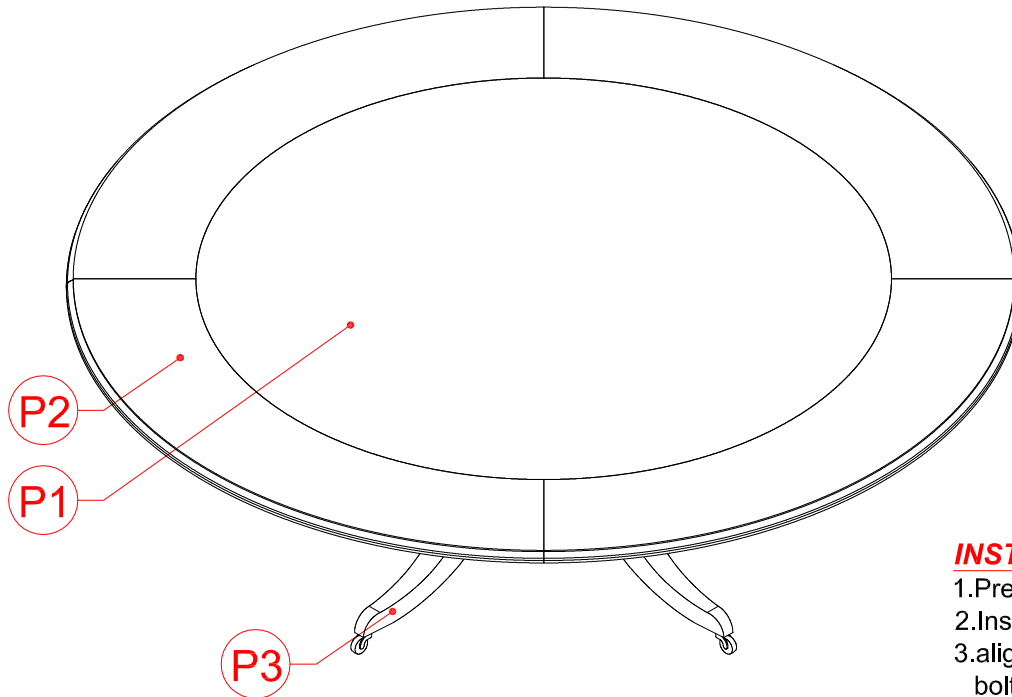



INSTRUCTIONS :

- 1.Prepare carton sheet of soft material sheet.
- 2.Insert the legs (P4) to the base (P3) refer sketch 1 and secure it to tighten refer detail A
- 3.align the plywood support (P5) to the base with the legs refer sketch 2, insert steel allen bolt & washer (B) to the hole on it. Then use steel allen open wrench (A) to turn the it clock wise derrection tightly. refer detail B
- 3.Turn upside down the center top (P1) on sheet of carton refer sketch 3
- 4.Insert steel allen bolt (B) to the support panel on the base (P3) then use steel allen open wrench (A) to turn the it clock wise derrection tightly. refer detail C
- 4.Turn upside down the item refer sketch 4, assemble the leaves top (P2) together by tenon as per sketch 5
5. Pull the slide handle out, then assemble the leaves on it refer sketch 4
- 6.Clock the the leaves together by brass clock (detail D)
- 7.Contrary to insert the leaves top step for removal it refer sketch 6


5405-072

ASSEMBLY INSTRUCTION



Page
2/2

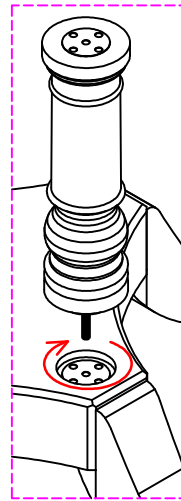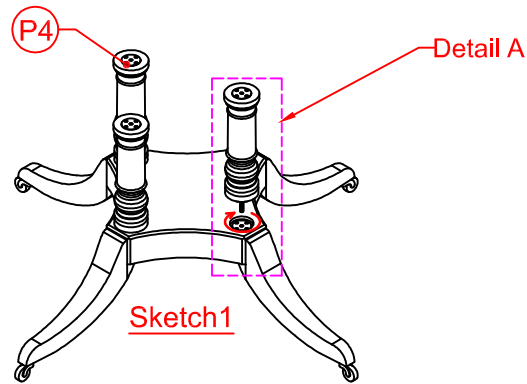

Detail A

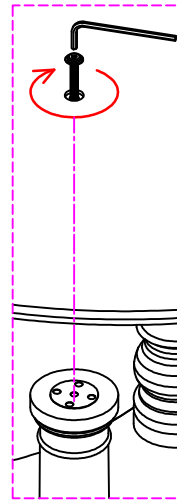


Detail B

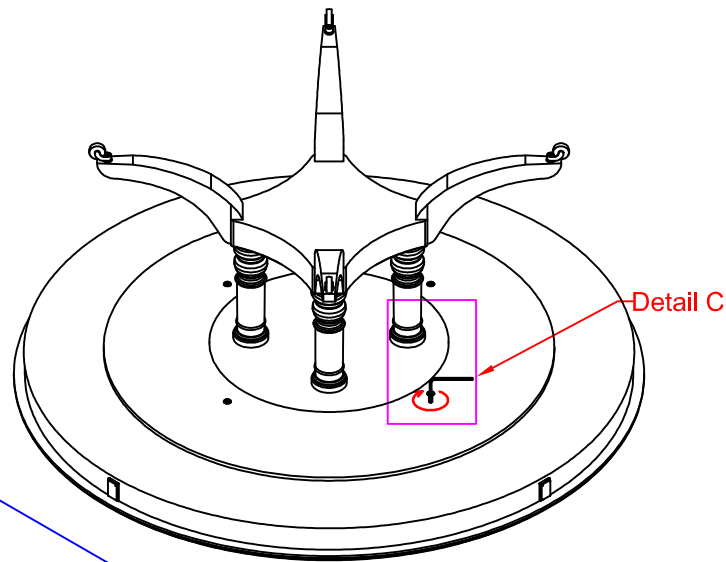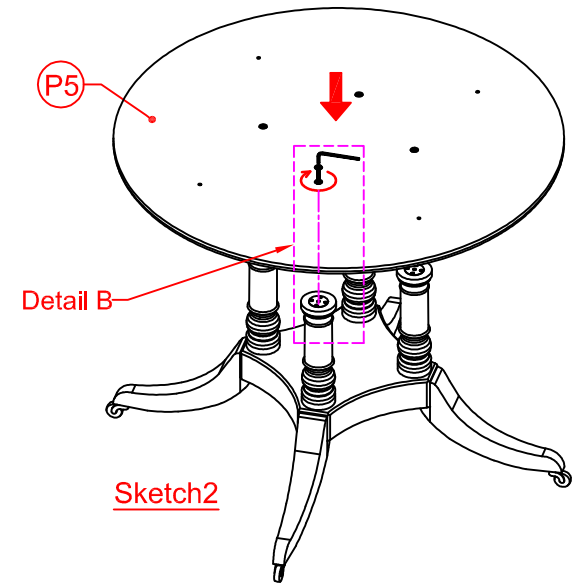


Sketch3

Carton sheet

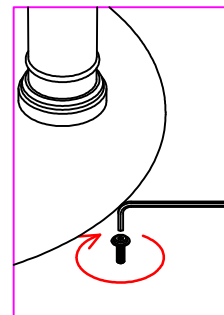

Detail C

Note: When insert leaves top
Please take a look the numbers that were stamp:
- Underneath the leaves top (P2).
- On slide handle.
Both of them have to be correlatively together.

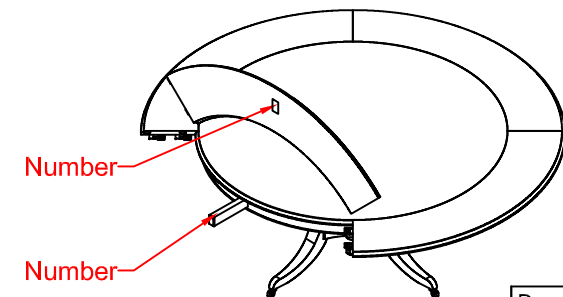




Drawn by : T.Binh
Date: Oct-25,2013

5405-072




ASSEMBLY INSTRUCTION

Page
3/3

Insert the
leaves top

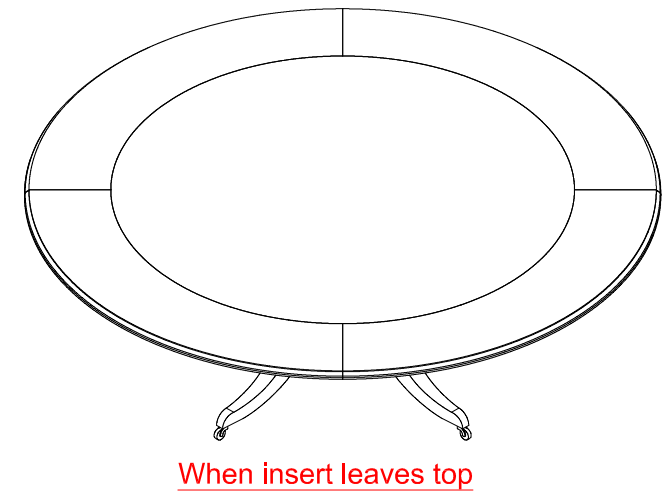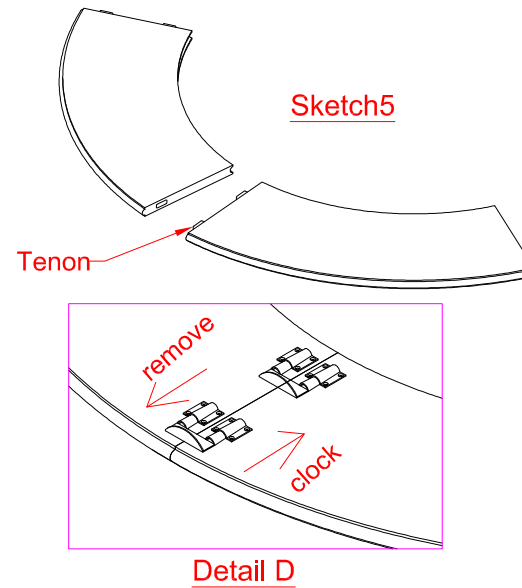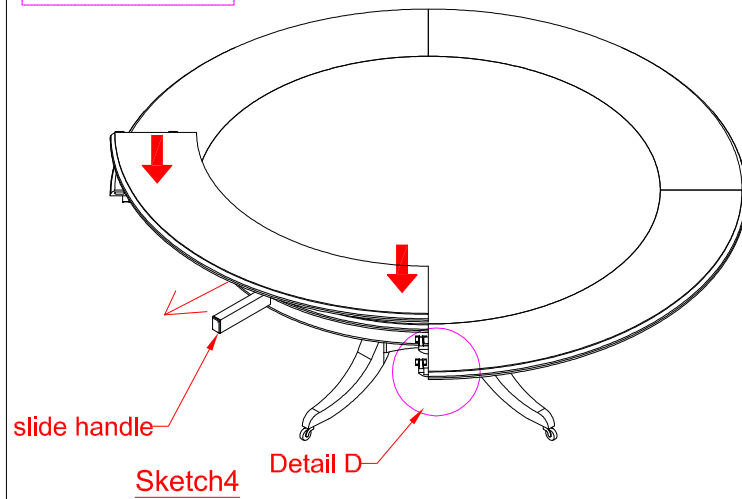

Remove the
leaves top

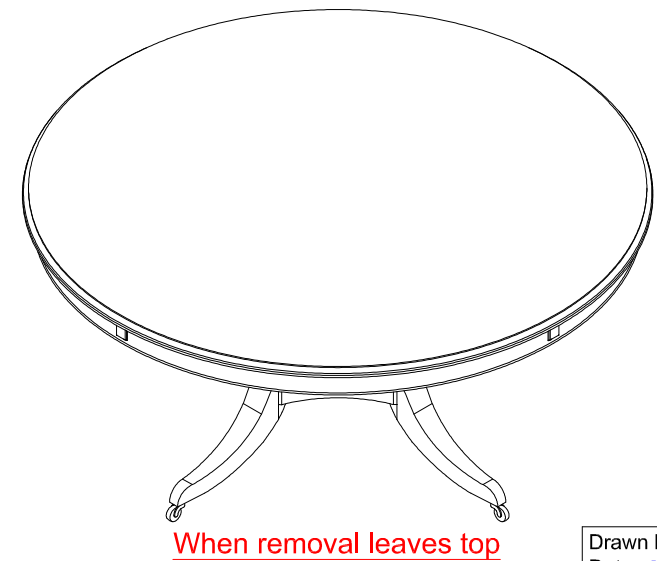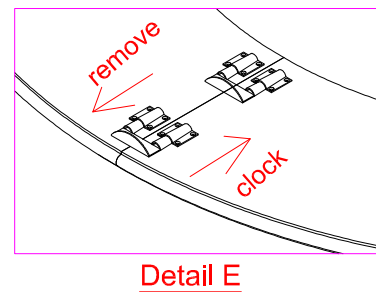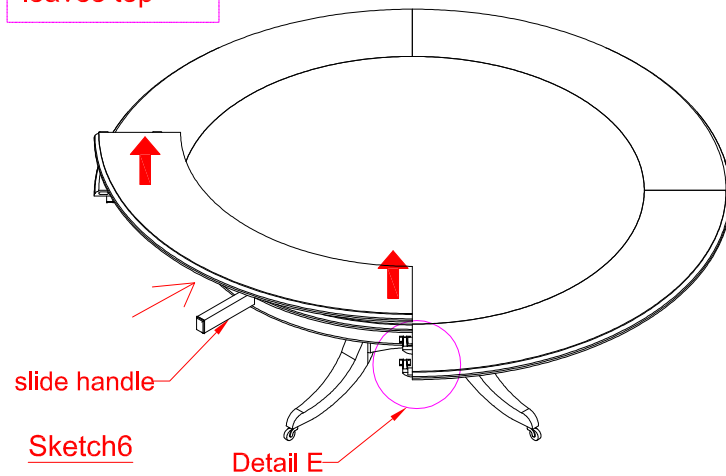

Drawn by : T.Binh
Date: Oct-25,2013